

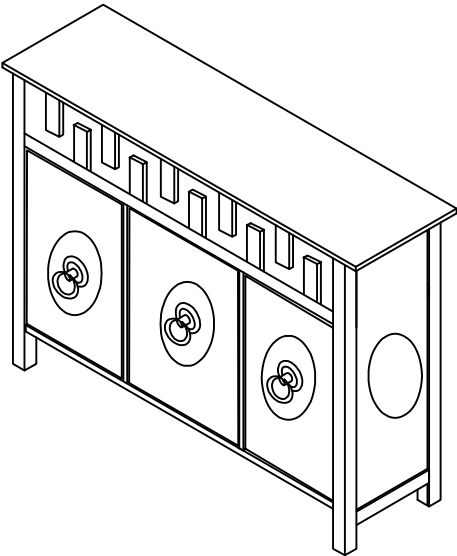







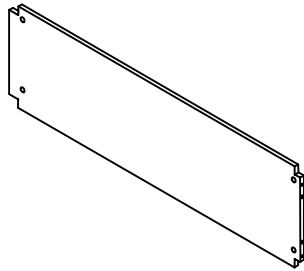
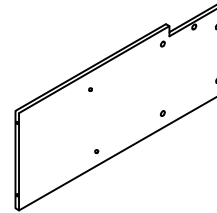


Assembly Instructions	Tools Required	Hardware Provided
 <p data-bbox="181 1321 902 1417">It is recommended that this item should be assembled by two adults.</p>	<div data-bbox="992 475 1373 598">  <p data-bbox="1088 566 1321 598">Phillips screwdriver</p> </div> <div data-bbox="1010 911 1346 1062">  <p data-bbox="947 1161 1364 1321">Note: Please don't over tighten the cam screws. Assure the cam screws properly fits into the plastic threaded insert. Otherwise the cam nut might not be able to catch the cam screws.</p> </div>	<div data-bbox="1424 339 1939 387"> <p data-bbox="1424 339 1469 387">B1</p>  <p data-bbox="1854 339 1939 371">20SETS</p> </div> <div data-bbox="1424 419 1939 467"> <p data-bbox="1424 419 1469 467">B2</p>  <p data-bbox="1854 419 1939 451">28PCS</p> </div> <div data-bbox="1424 499 1939 547"> <p data-bbox="1424 499 1469 547">B3</p>  <p data-bbox="1854 499 1939 531">12PCS</p> </div> <div data-bbox="1424 611 1939 659"> <p data-bbox="1424 611 1469 659">B4</p>  <p data-bbox="1854 611 1939 643">6PCS</p> </div> <div data-bbox="1424 707 1939 786"> <p data-bbox="1424 707 1469 786">B5</p>  <p data-bbox="1854 707 1939 754">3SETS</p> </div> <div data-bbox="1424 818 1939 882"> <p data-bbox="1424 818 1469 882">B6</p>  <p data-bbox="1854 818 1939 850">12PCS</p> </div> <div data-bbox="1395 1106 2078 1201">  <p data-bbox="1877 1129 1921 1161">1PC</p> <p data-bbox="1395 1169 2078 1201">Apply a little glue into the wood dowel holes when inserting wood dowels.</p> </div>


## Furniture Parts

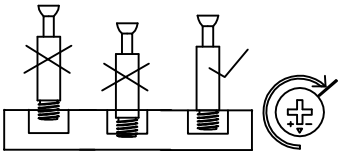


A1 1PC-Bottom panel




A2 (L,R) 2PCS-Middle divider

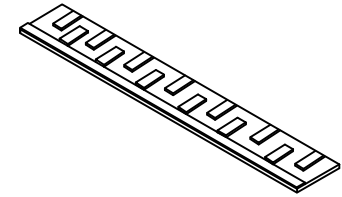


A3 1PC-Apron panel

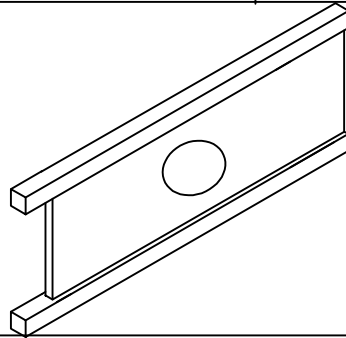


A4(L&R) 2PC-Side panel

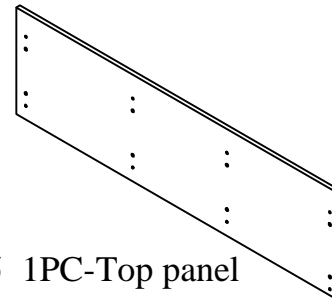


A5 1PC-Top panel

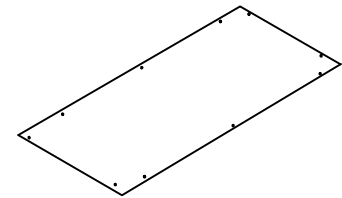


A6 1PC-Middle back panel

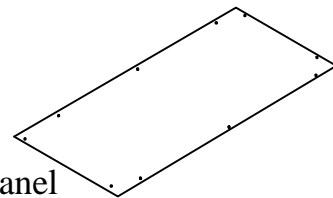


A7 1PCS-Side back panel

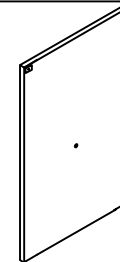


A8 2PCS-Left door

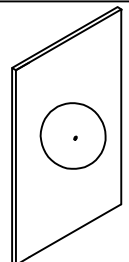

A9 1PC-Right door

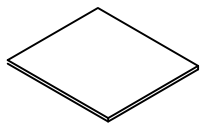


A10 1PC-- Middle Removable shelf

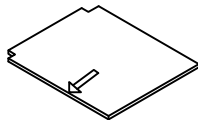

A11 2PCS Side Removable shelf


## Step 1


B1 :  4sets

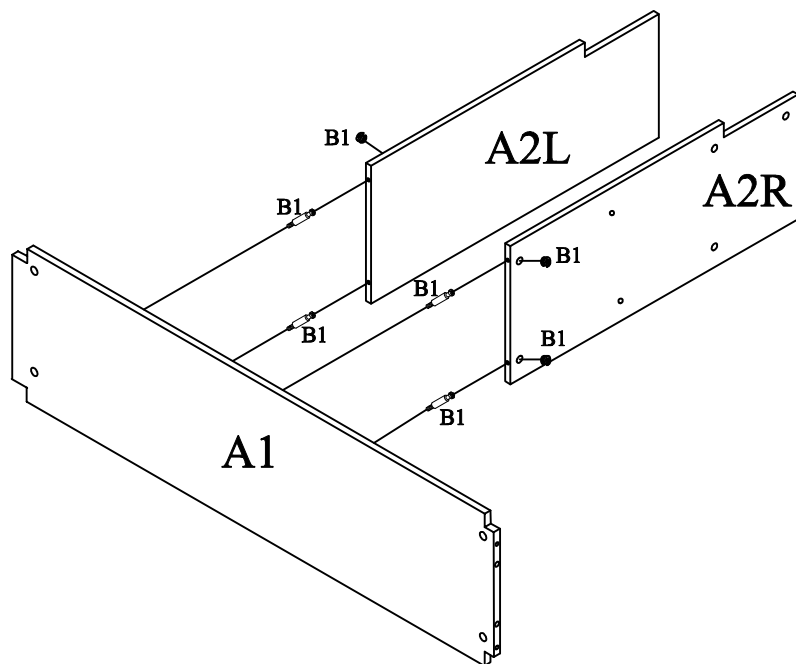

Assemble the Middle dividers A2(L&R) to the bottom panel A1 using camlock B1.


## Step 2

B1 :  2sets

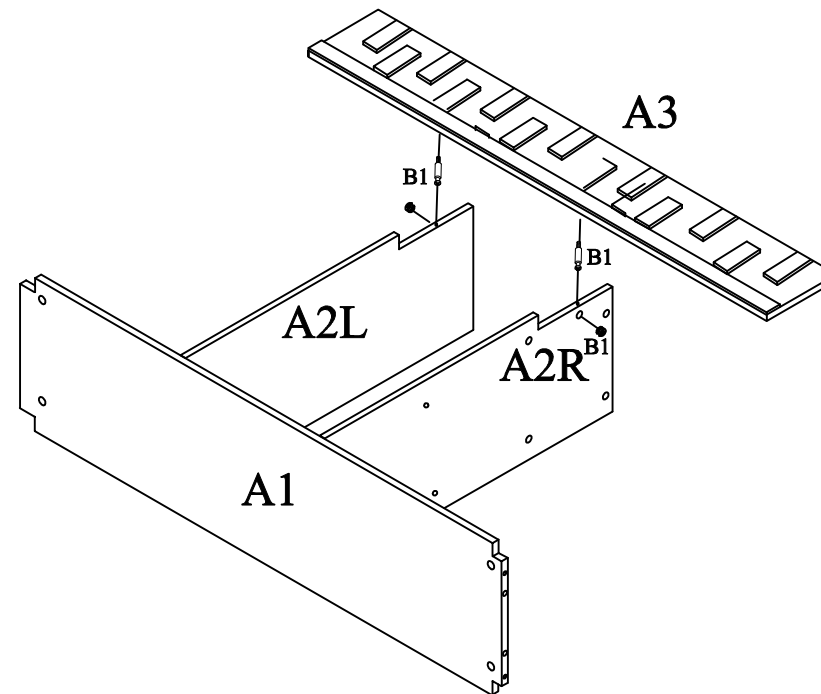


Assemble the apron panel A3 to the middle divider panels A2(L&R) using camlock B1.

## Step 3

B1 :  6sets


B4 :  6pcs

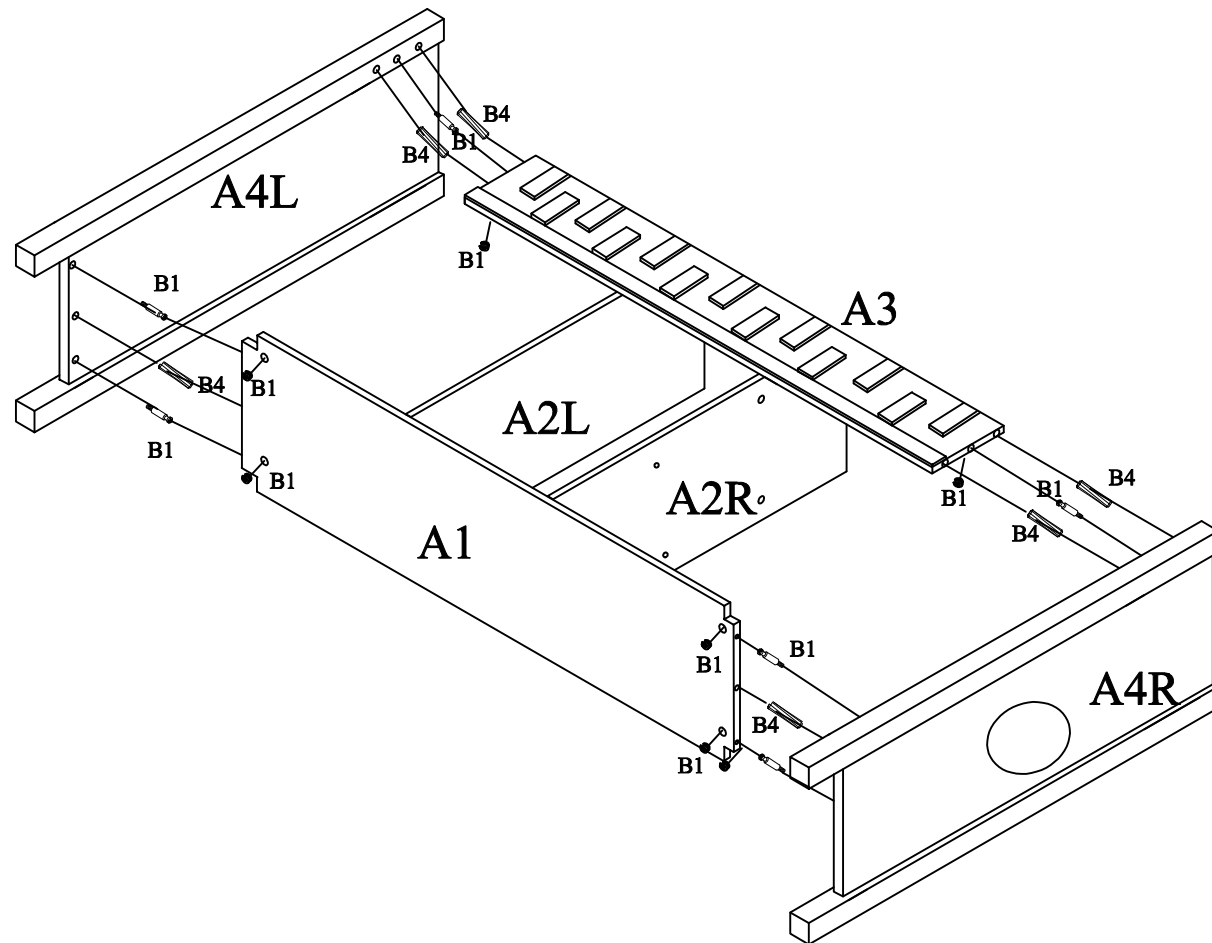

Assemble the side panels A4 (L&R) to the apron panel A3 and bottom panel A1 using camlocks B1 & wood dowels B4.


## Step 4

B1 :  8sets

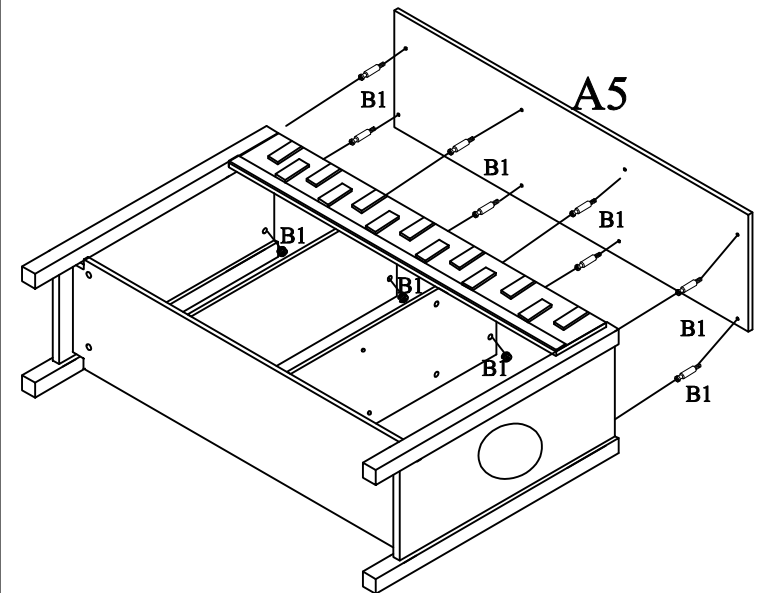


Assemble the top panel A5 to the middle divider panels A2(L&R) and side panels A4(L&R) using camlocks B1.

## Step 5

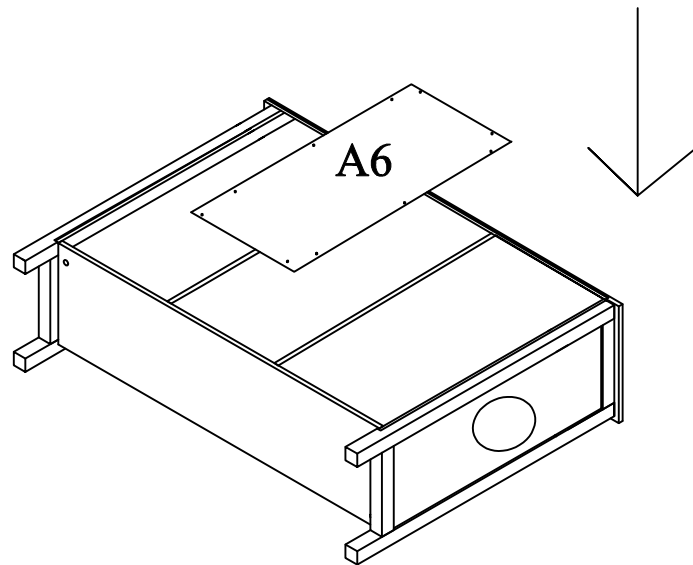

## Step 6


B2 :  28pcs

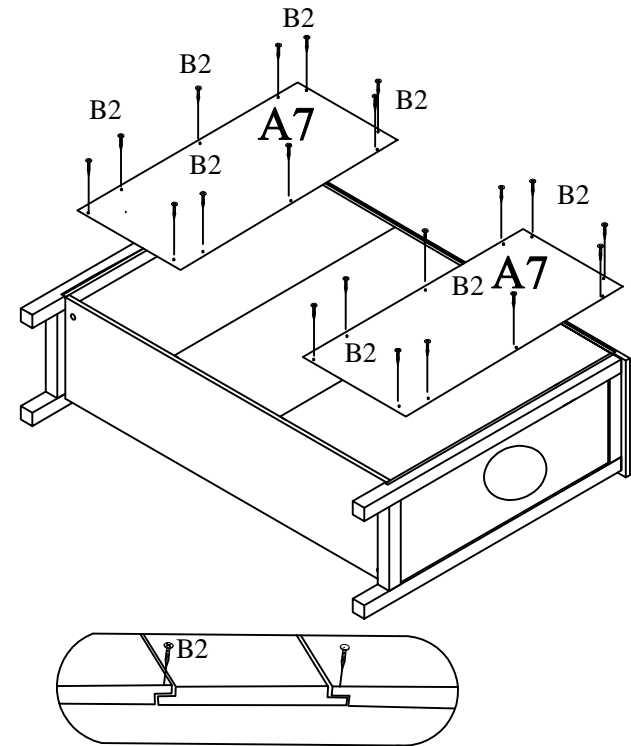

Screw the back panels A7 & A6 using screws B2 as shown above.

## Step 7


B3 :  12pcs

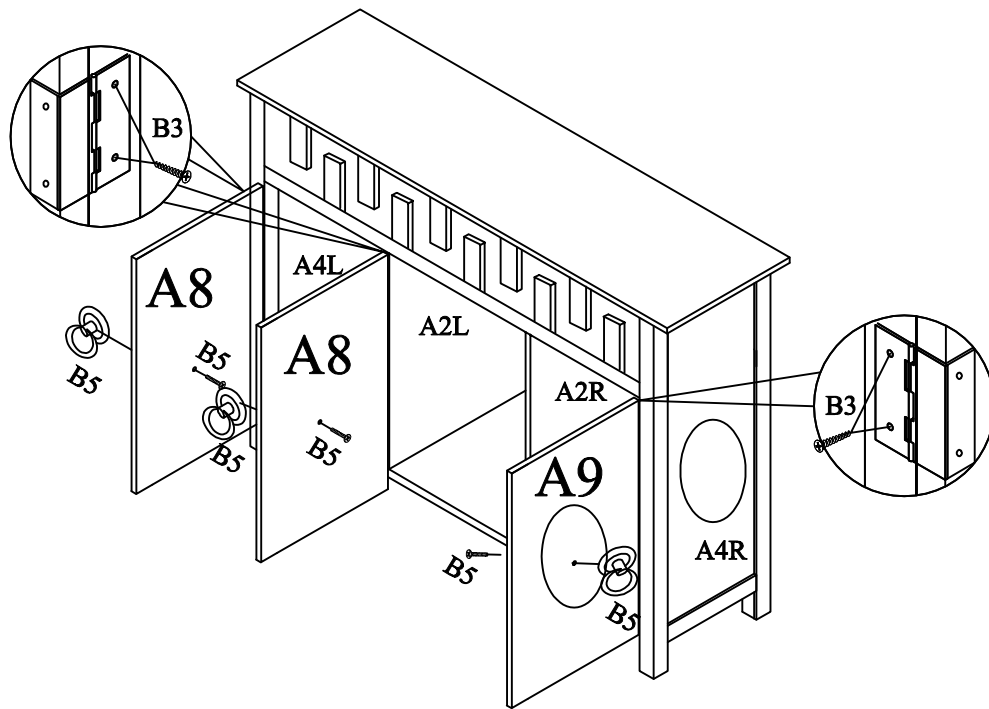

- 1). Attach the left door A8 to the left side panel A4L using screws B3.
- 2). Then screw the left door A8 to the middle divider A2L using screws B3 and screw the right door A9 to the right side panel A4R using screws B3.
- 3). Assemble the handle B5 to the doors A8 and A9 using the included screws .

## Step 8

B6 :  12pcs

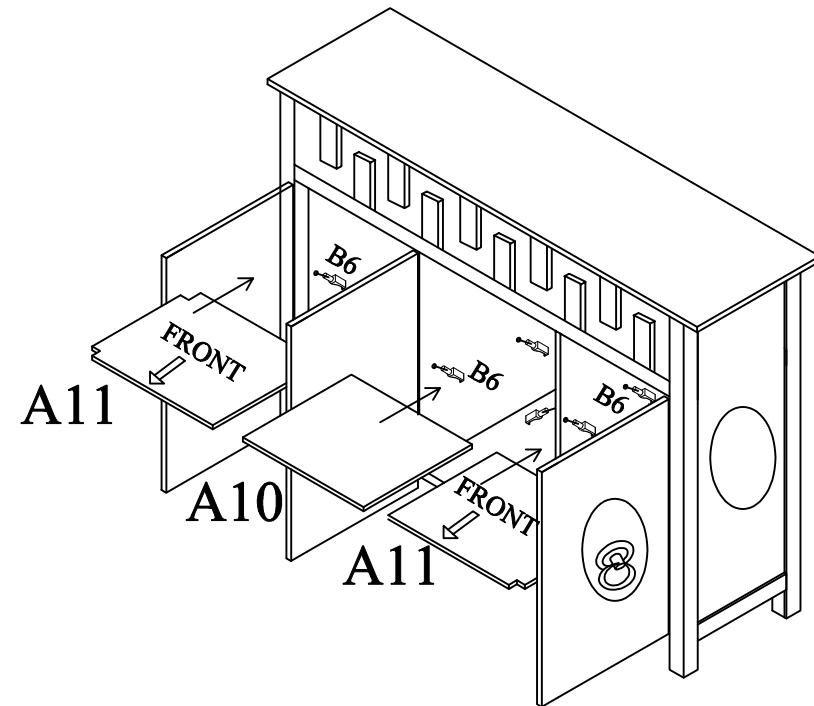

Inset the shelf supports B6 into the holes on the side panel A4(L&R) and middle divider panel A2 (L&R), then put the removable panels A10 & A11 onto the shelf supports B6.