


# Reno Chrome Finish Ceiling Mount Shower Head Set with 6 Body Massage Shower Jets

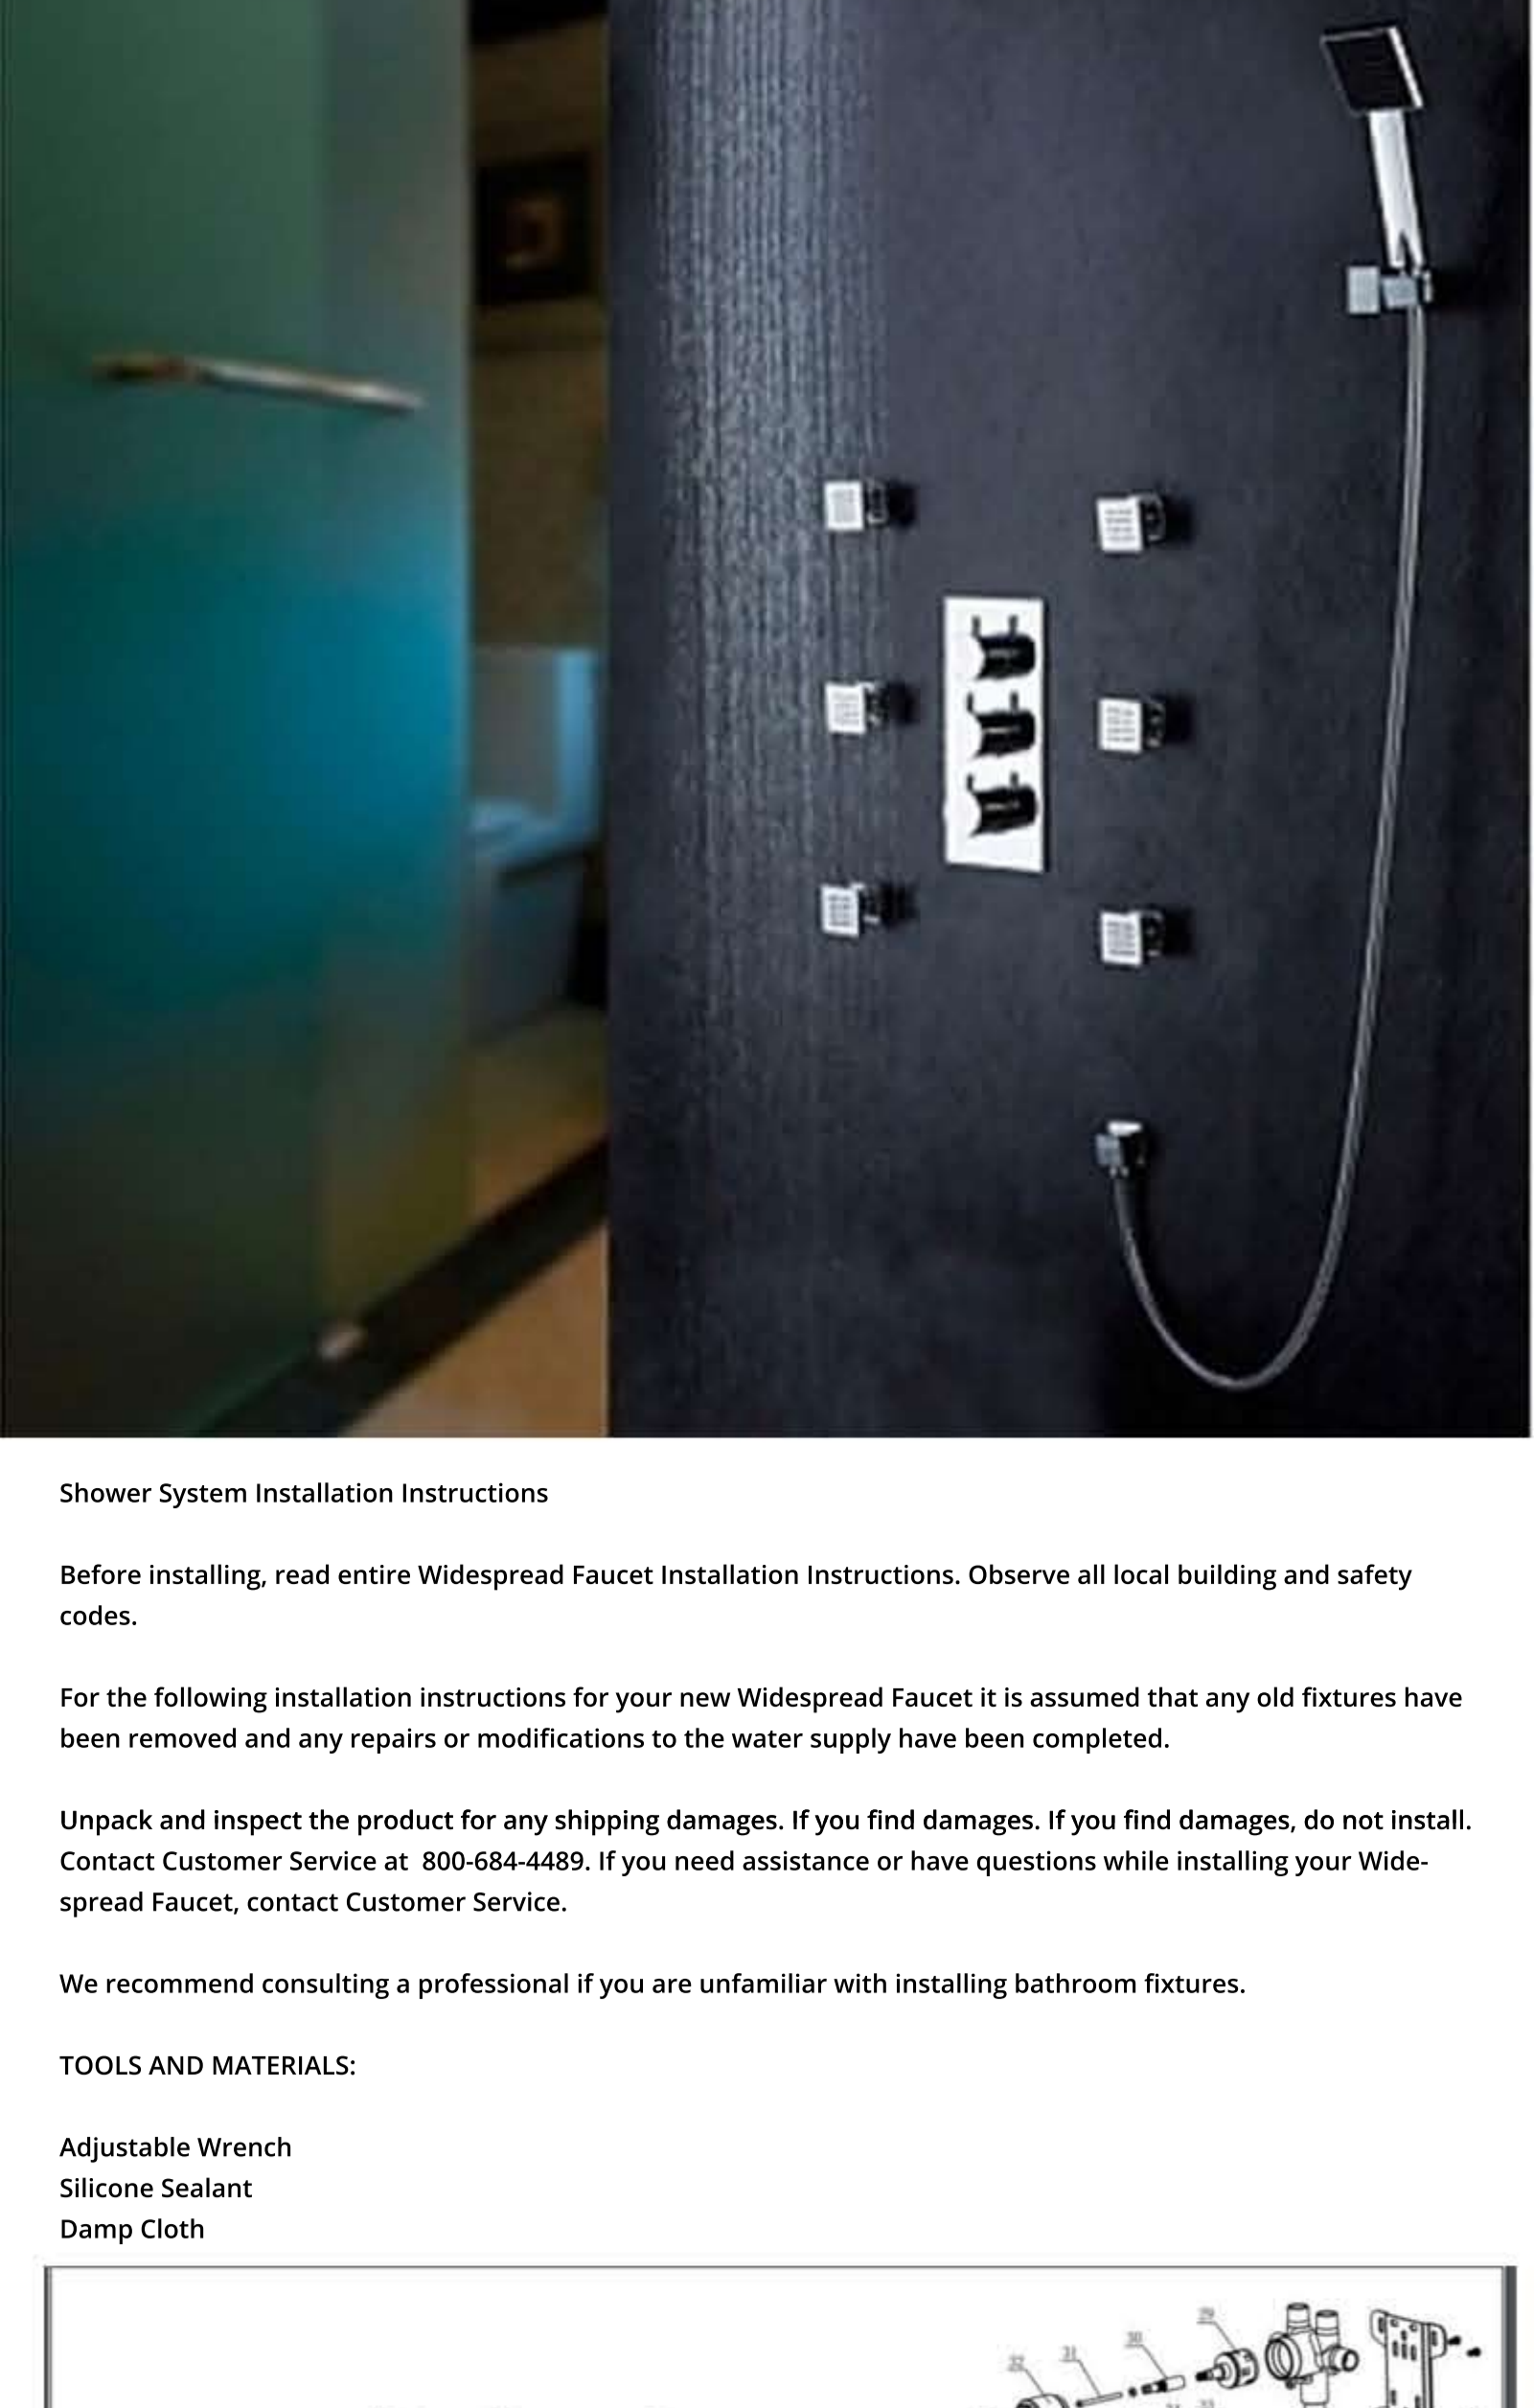

## Shower System Installation Instructions

Before installing, read entire Widespread Faucet Installation Instructions. Observe all local building and safety codes.

For the following installation instructions for your new Widespread Faucet it is assumed that any old fixtures have been removed and any repairs or modifications to the water supply have been completed.

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 800-684-4489. If you need assistance or have questions while installing your Widespread Faucet, contact Customer Service.

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures.

### TOOLS AND MATERIALS:

- Adjustable Wrench
- Silicone Sealant
- Damp Cloth



## Body Jet


### Fitting Instructions & Content list




### BODY JET INSTALLATION



### INSTALLATION DIAGRAM

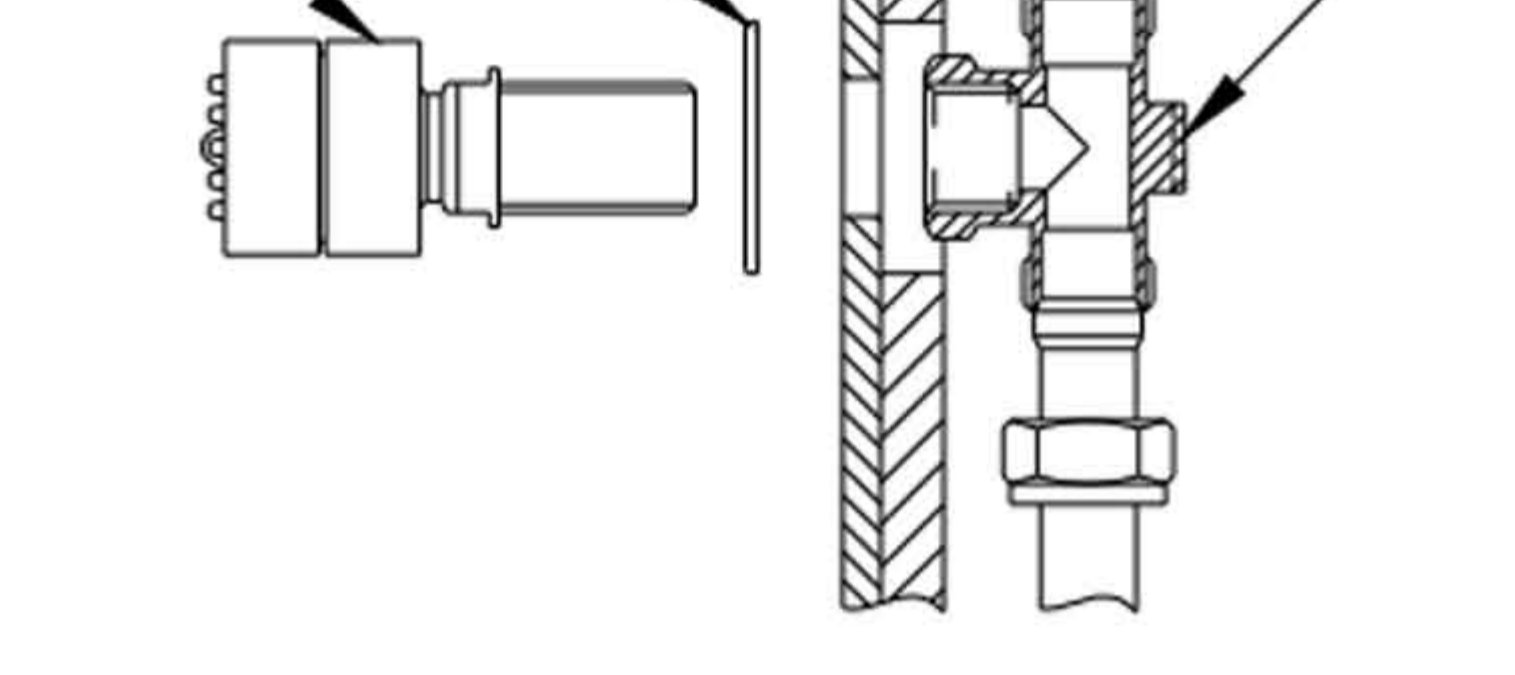

Multiple body jets will require installation in parallel using a pressure-balancing loop, as shown below:

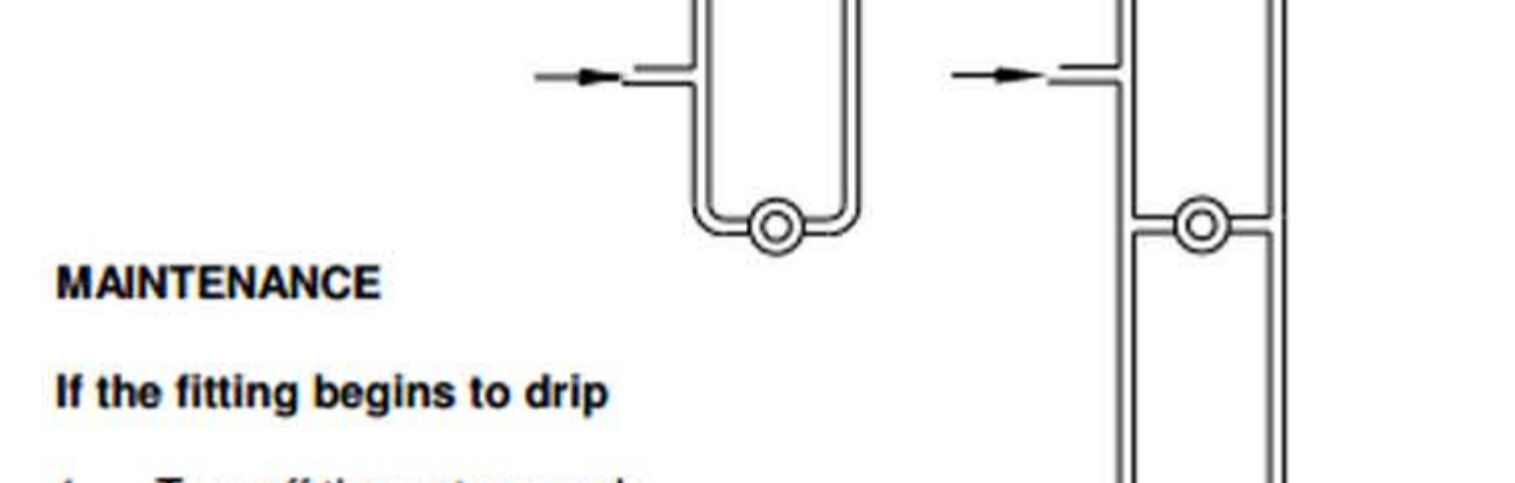


### MAINTENANCE


If the fitting begins to drip

- Turn off the water supply.
- Unscrew face plate and remove nozzle.

### BODY JET INSTALLATION

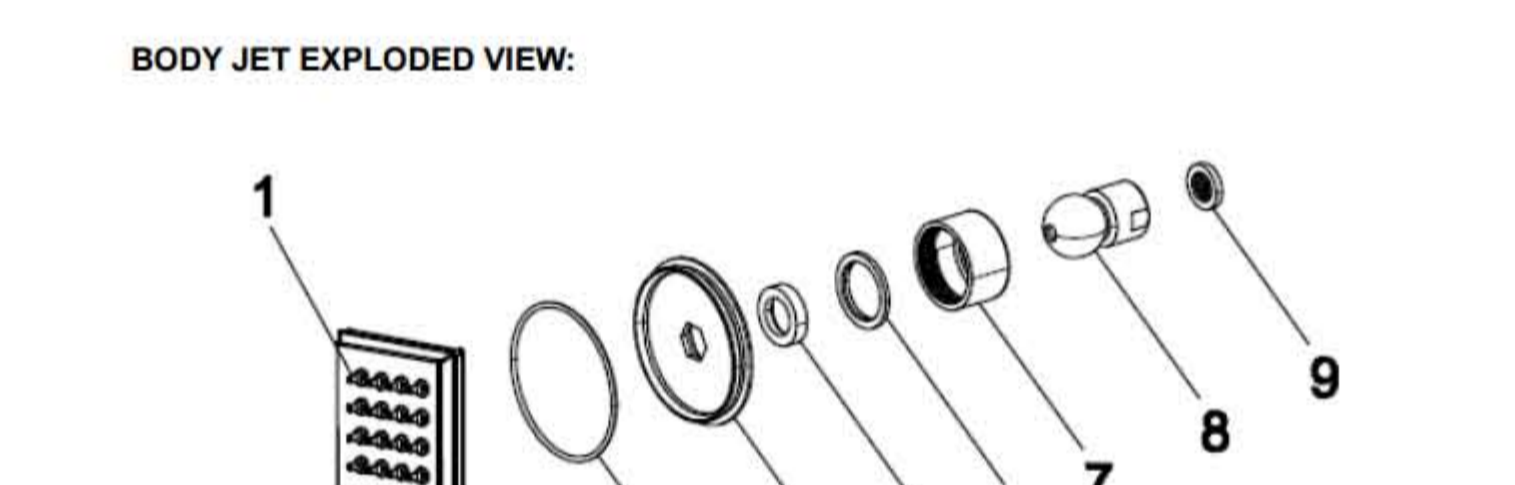

### BODY JET EXPLODED VIEW:

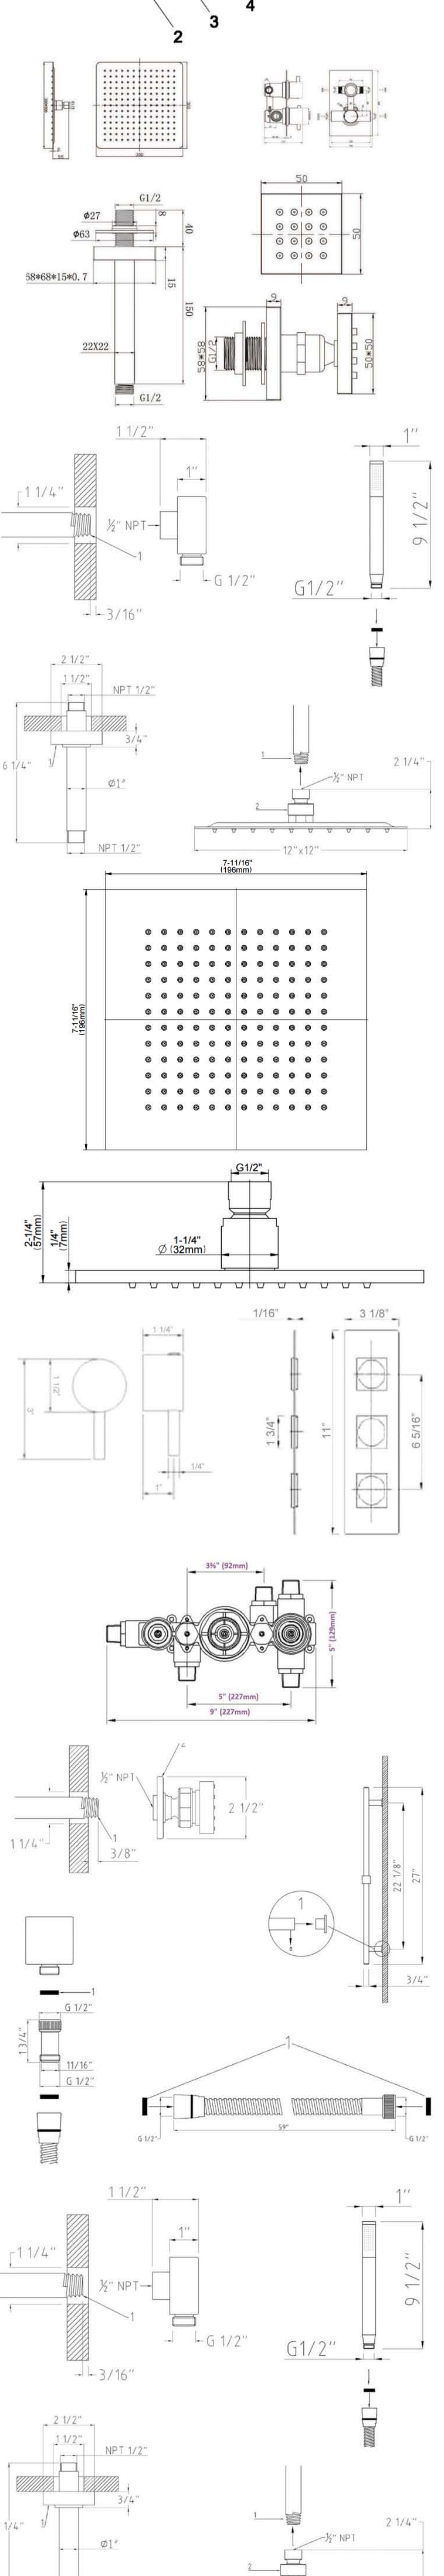

This General diagram and installation instructions are not intended for any specific model, but is presented as a general guideline for installations!