

ASSEMBLY INSTRUCTION



Sunpan Product Name: **AMBROSE MODULAR BOOKCASE - LARGE**

Please visit our website www.sunpan.com for more great products

For assembly questions please call **1-800-787-1019 (or +1-416-736-0094)** outside North America or email to info@sunpan.com

PARTS LIST

Before you begin, please layout all parts and ensure you have the correct count.

PARTS	DESCRIPTION	QUANTITY	ILLUSTRATION
A	Right Leg	1	
B	Left Leg	1	
C	Top	1	
D	Cabinet with Drawers	1	
E	Cabinet with Doors	1	
F	Backpanel	1	
G	Screw Ø8x1 1/4"	4	
H	Screw Ø8x5/8"	40	



ASSEMBLY INSTRUCTIONS

STEPS	DESCRIPTION	ILLUSTRATION
1	<p>Install backpanel (F) to right leg (A) and left leg (B). Use screw Ø8x5/8" (H) to assemble by following the screw holes on bottom of backpanel (F), and tighten with screw driver.</p>	
2	<p>Attach cabinet with drawers (D) to frame legs, with front side up position.</p> <p>Use screw Ø8x5/8" (H) to assemble by following the screw holes on bottom of cabinet, and tighten with screw driver. Fixing screw is only on one side first.</p>	

3

Attach cabinet with doors (E) to frame leg, with front side up position.


Use screw Ø8x5/8" (H) to assemble by following the screw holes on bottom of cabinet, and tighten with screw driver. Fixing screw is only on one side first.


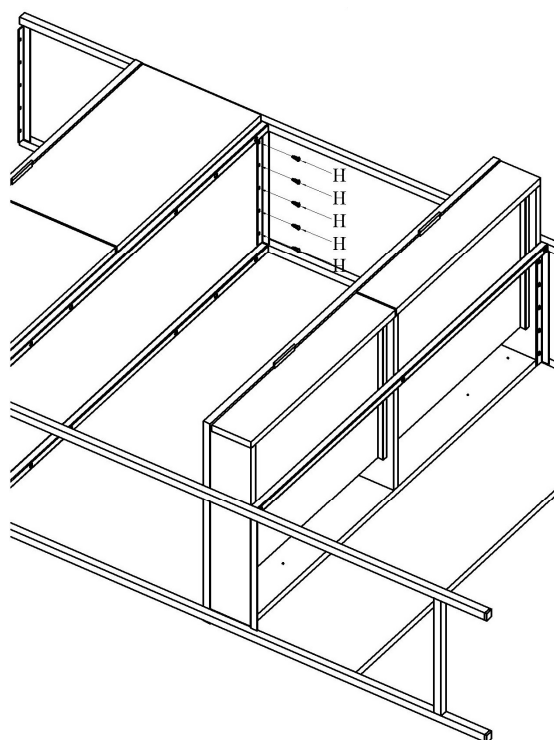
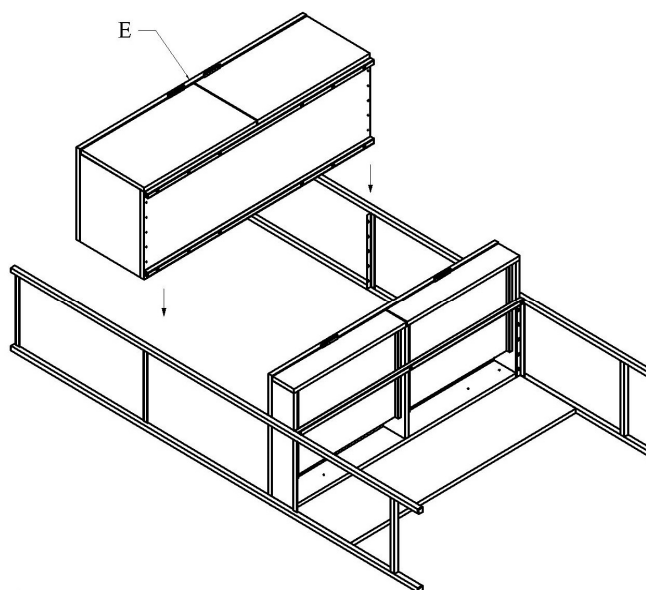


4

Attach top (C) to frame legs, with front side up position.

Use screw $\varnothing 8 \times 5/8"$ (H) to assemble by following the screw holes on bottom of top, and tighten with screw driver. Fixing screw is only on one side first.

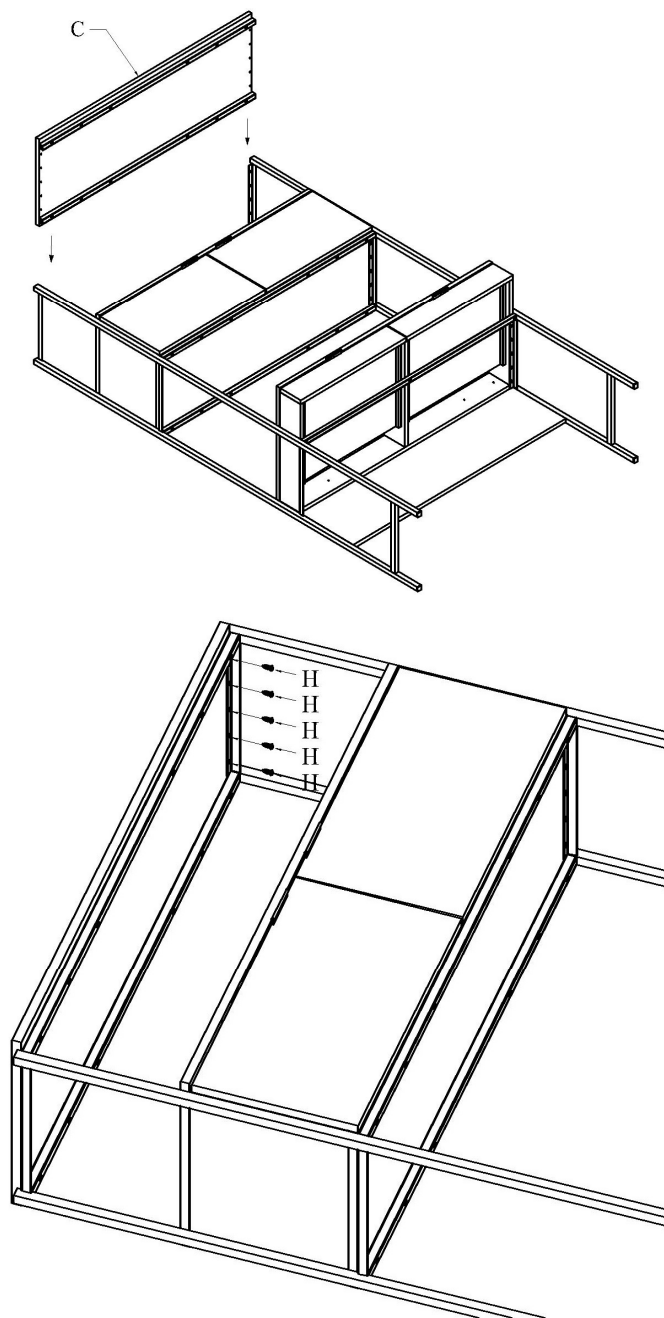

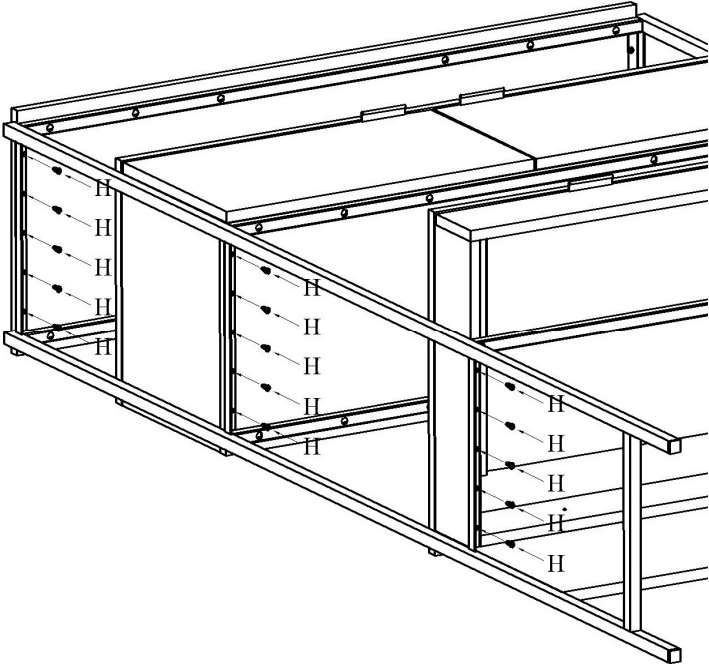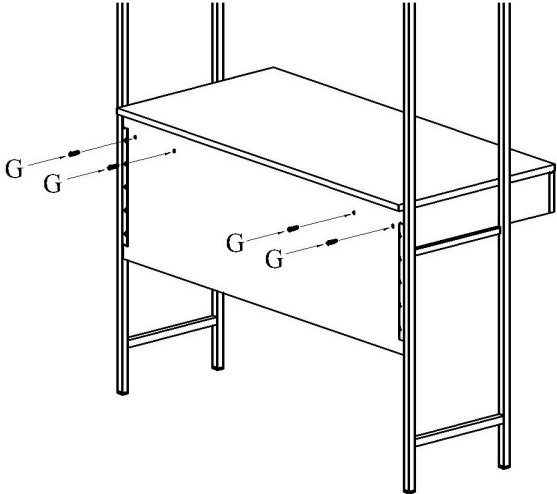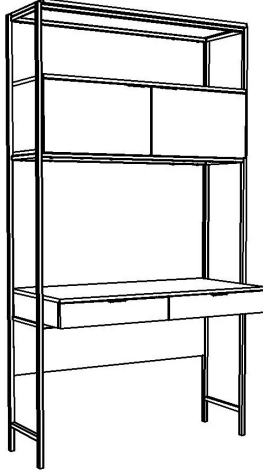5	<p>Fix screw Ø8x5/8" (H) on the other side by following the screw holes and tighten with screw driver.</p>	
6	<p>Stand up the bookcase, and fix screw Ø8x1 1/4" (G) into holes on backpanel, and tighten with screw driver.</p>	
7	<p>Assembly completed.</p>	

ASSEMBLY TIPS:

Please check parts and hardware before assembling. Follow each instruction step by step.

Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.

Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.

Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING:

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement.

Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basic steps will help to ensure that you enjoy your furniture for a long time:

Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.

Excessive exposure to sunlight may cause fading.

Excessive temperature and humidity or cold may cause cracking or splitting.

Dust with a clean, damp, lint free cloth.

Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.

Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.

ANTI TIPPING-KIT
INSTALLATION INSTRUCTION



Please visit our website www.sunpan.com for more great products.
For assembly questions please call 1-800-787-1019 (or +1-416-736-0094) outside North America or email to info@sunpan.com


PARTS LIST			
Before you begin, please layout all parts and ensure you have the correct count.			
PARTS	DESCRIPTION	QUANTITY	ILLUSTRATION
A	Anti Tipping Kit	1 set	

ANTI TIPPING - KIT INSTALLATION INSTRUCTIONS


READ INSTRUCTION BEFORE INSTALLING

Caution : This product is not a substitute for parental supervision.
Manufacturer assumes no responsibility or liability for improper installation
or excessive loads placed on any of the supplied components.

EXAMPLES FOR SECURING

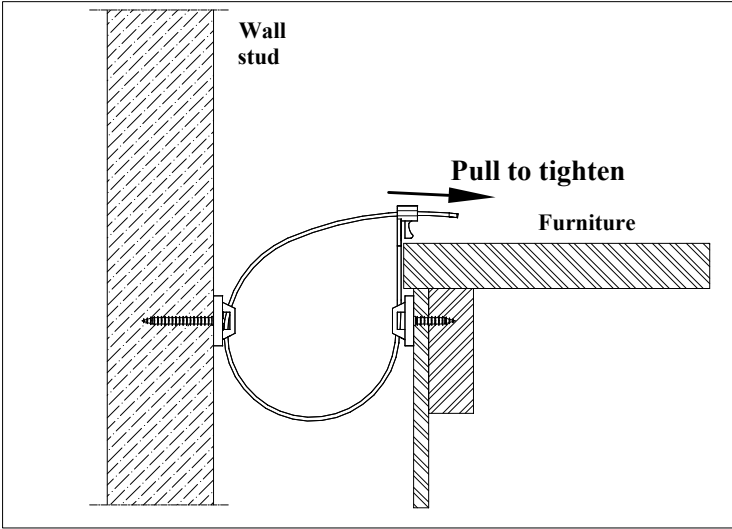

Attach to top back frame of cabinet
Ideal installation for Dressers & Chests

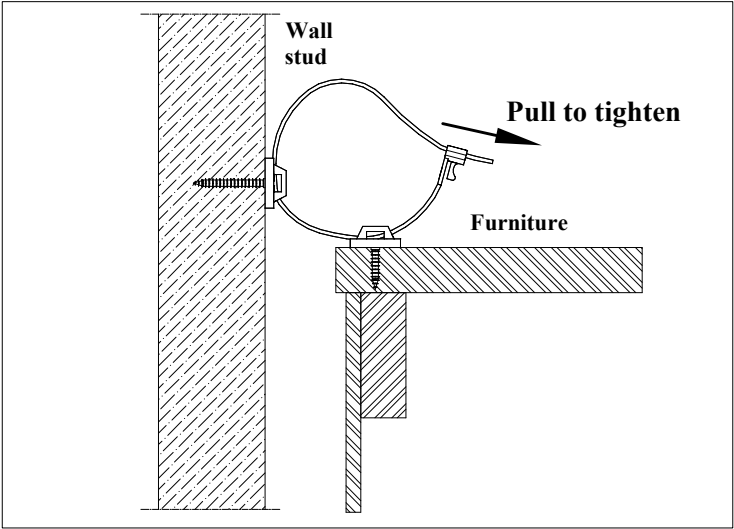

Attach to top of tall furniture
like curios

NOTES :

Always mount to solid wood. Do not attach to plywood back panels.
Always locate and attach to stud, do not depend on wall anchors.