


CONVENIENCE CONCEPTS

125747

NEWPORT LAUREL DESK

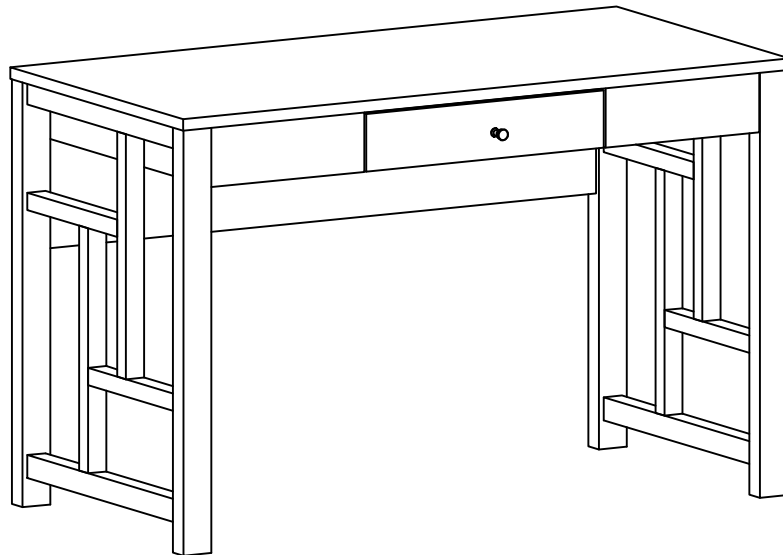

Assembly instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give you years of enjoyment.



Please do not return to the store

Broken or missing Hardware?


Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at

parts@convenience-concepts.com

PARTS IDENTIFICATION

ITEM#:125747

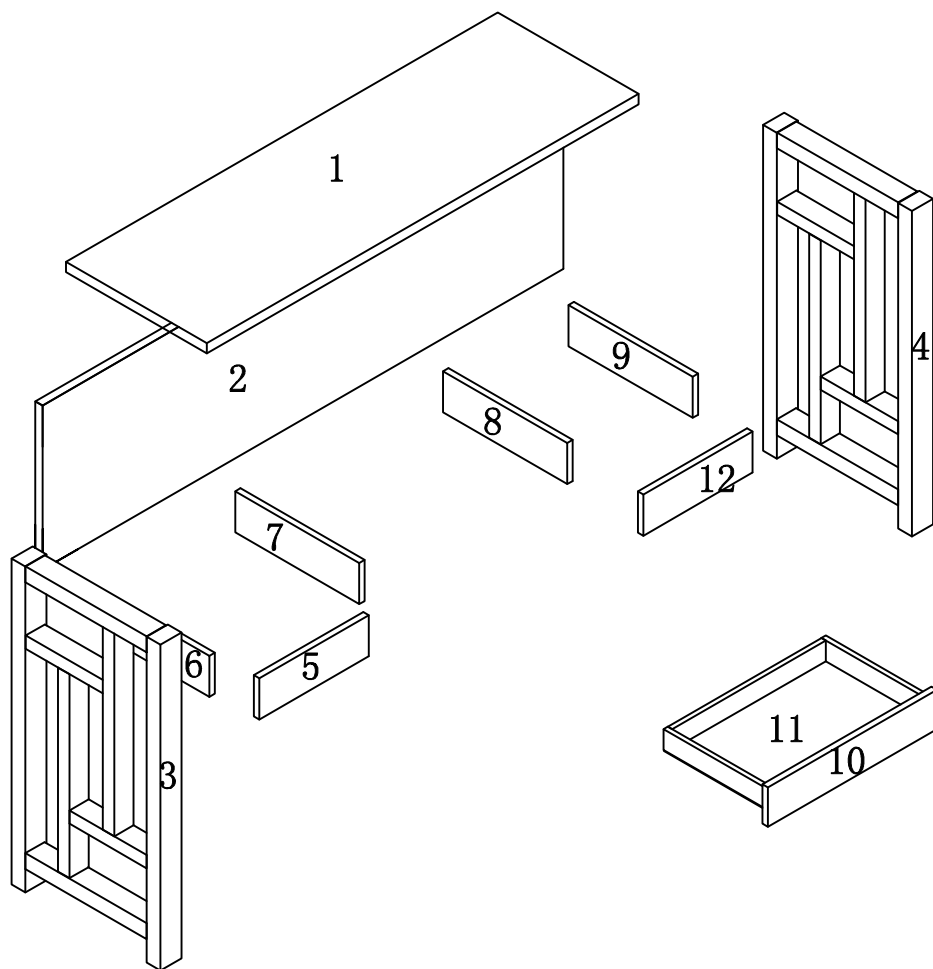















Please count and verify all parts before assembly



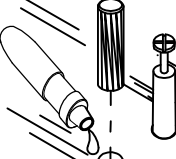
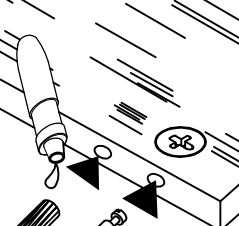
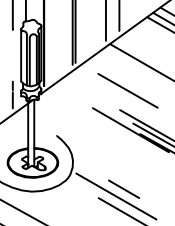
(1) Top Panel	1pc	(7) Left Support Panel	1pc
(2) Back Panel	1pc	(8) Right Support Panel	1pc
(3) Left Side Frame	1pc	(9) Right Side Panel	1pc
(4) Right Side Frame	1pc	(10) Drawer Front Panel	1pc
(5) Left Apron	1pc	(11) Drawer Box	1pc
(6) Left Side Panel	1pc	(12) Right Apron	1pc

HARDWARE IDENTIFICATION

ITEM#:125747

A		Large Cambolt	L29	19pcs
B		Large Camlock	Ø15	19pcs
C		Dowel	Ø8×25	10pcs
D		Allen Bolt	M6×40	6pcs
E		Large Screw	Ø4×40	4pcs
F		Small Screw	Ø4×25	2pcs
G		Allen Wrench	M4	1pc
H		Small Cambolt	L20	16pcs
I		Small Camlock	Ø12	16pcs
J		Knob		1pc
K		Knob Screw	Ø4x35	1pc
L		Sticker	Ø20	7pcs
M		Foot Pin		4pcs
O		Glue	Glue: For securing please apply to wood dowel first before inserting into panel.	1pc



Assembling the unit with camlocks and wood dowels.

				
Insert camlock, camlock must face bolt hole	Gently screw cam dowel into the threaded anchor	lightly glue one end of wood dowel and tap into hole.	lightly glue dowel and connect to second panel by inserting dowels into holes	Gently screw the cam clockwise into locked position. Do not overtighten.

Step1


PAGE: 4 of 6

1. Attach cambolt (H) into apron (5, 12).
2. Attach apron (5) assembly to left side panel (6) and left support (7) using camlock as shown.
3. Attach apron (12) assembly to right side panel (9) and right support (8) using camlock as shown.
4. Gently tighten camlocks.

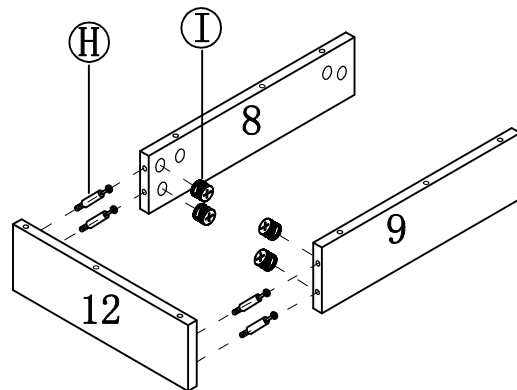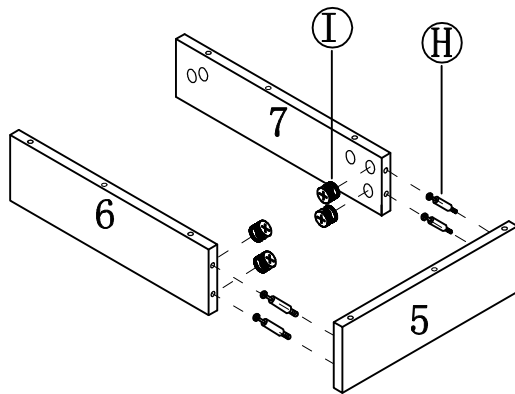

Step2

1. Attach cambolts (H) into back panel (2)
2. Attach back panel (2) to side panel and supports (6,9,7,8) using camlocks (I) as shown.

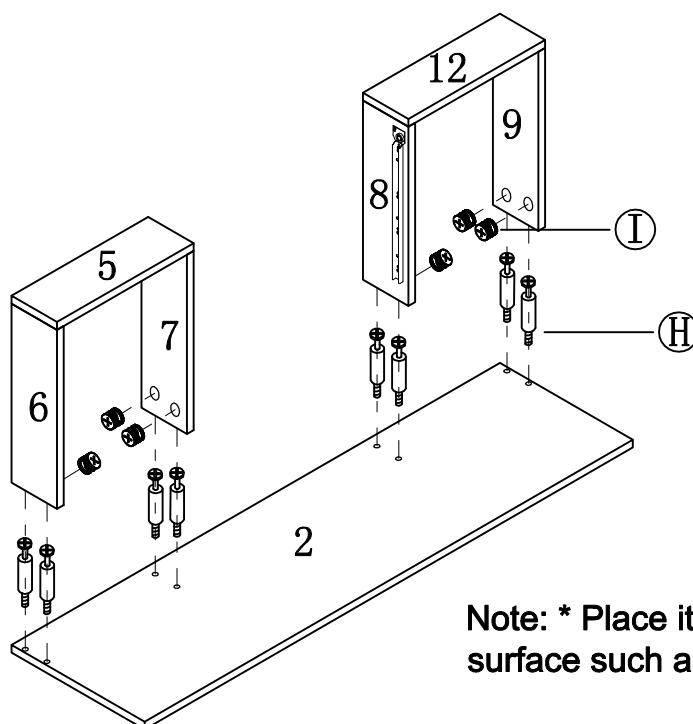


Note: * Place item on a soft surface such as carpet or a towel.

Step3


PAGE: 5 of 6

1. Lightly glue dowels (C) and insert them into side frames (3,4).
2. Attach cambolts (A) into side frames (3,4).
3. Attach side frames (3,4) to unit assembly using camlocks as shown.

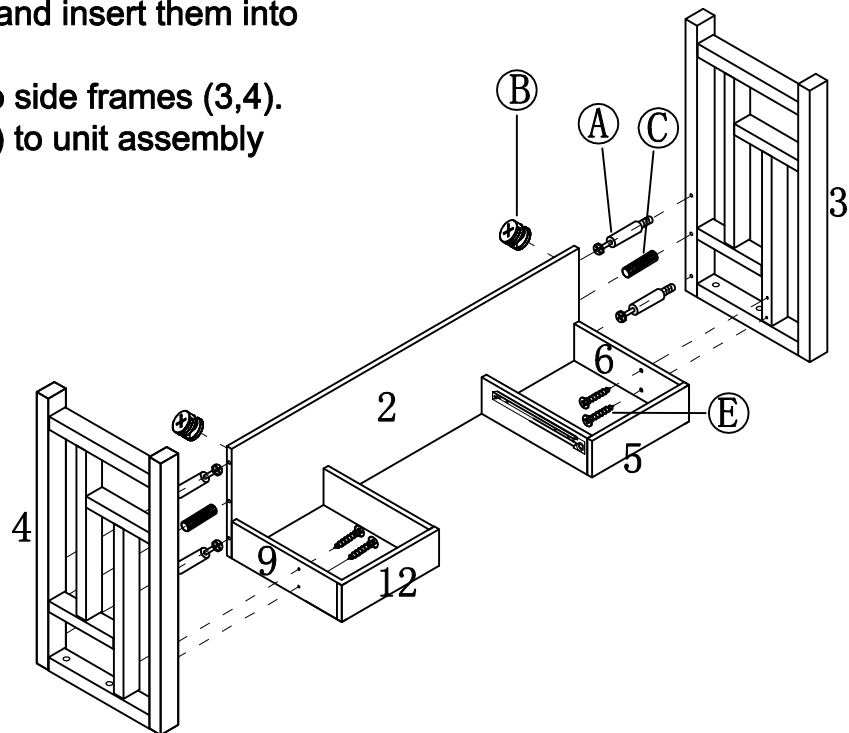

Step4


1. Lightly glue dowels (C) into glue and insert into top panel (1).
2. Attach cambolt (A) into top panel (1).
3. Attach top panel (1) to base frame as Assembly shown.

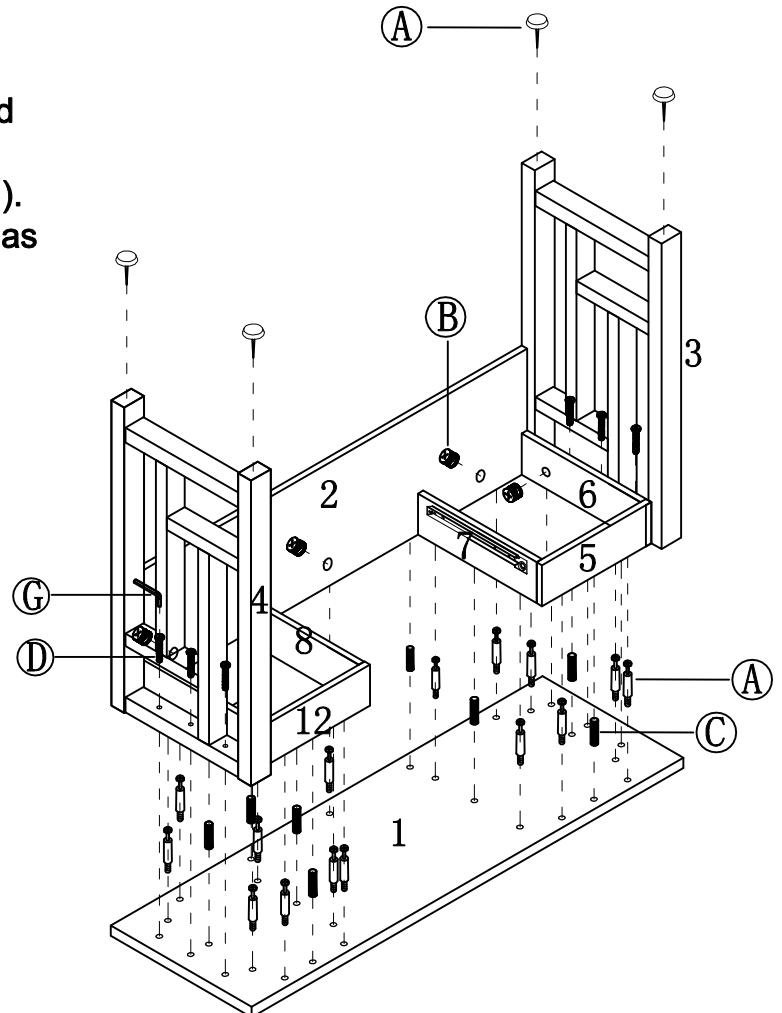

Step5

PAGE: 6 of 6

1. Attach drawer front (10) to drawer box (11) using screw (F) as shown.
2. Attach Knob (J) to drawer front (10) using Knob screw (K) as shown.

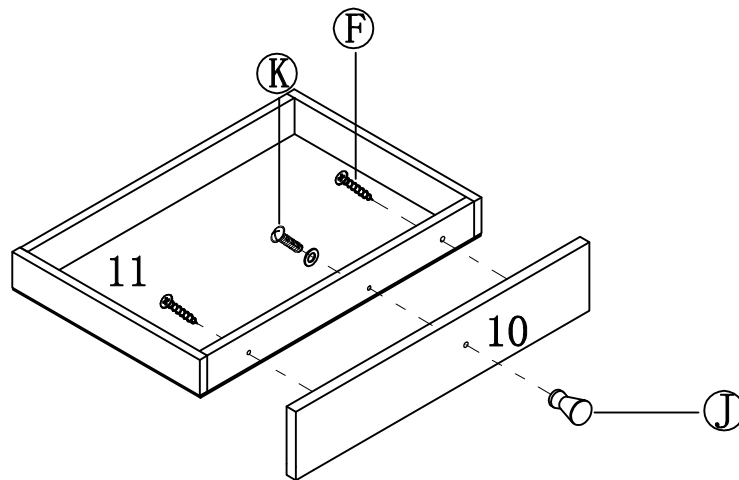

Step6

Gently put the drawer in.

