


## Contemporary Lighting™

PRODUCT NAME: Half Moon 1LT Pendant


ITEM NUMBER: E20366

Please consult your electrician for hanging fixture and wiring.

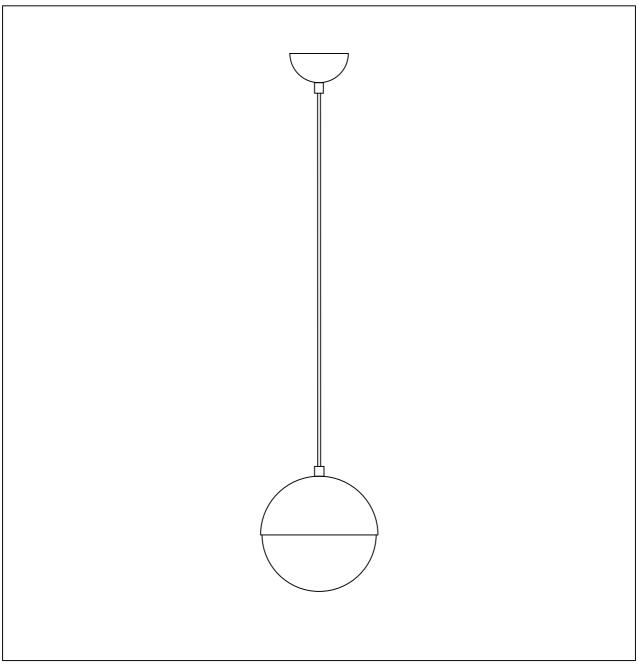


Bulb (Included):1\*E26\*12W


IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation




Locate all hardware & components before discarding packaging

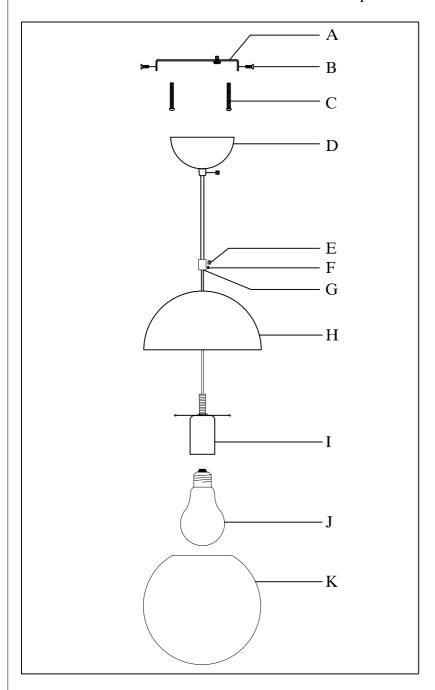


Cleaning & Care: Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.

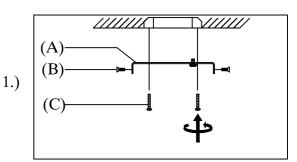

Step1:Remove mounting bracket from fixture and install to electrical box.

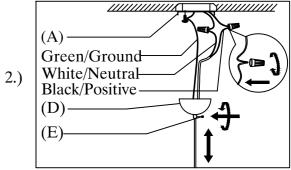


Step2: Adjust wire length to desired mounting height, and tighten strain relief screws to secure. Wire fixture to wires in outlet box. Green wire is for Ground.

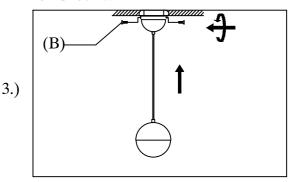



Step3: Install fixture to bracket and tighten screws at the ends of the canopy to secure. Install bulb into socket.

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation




Replace glass and light bulbs - take down

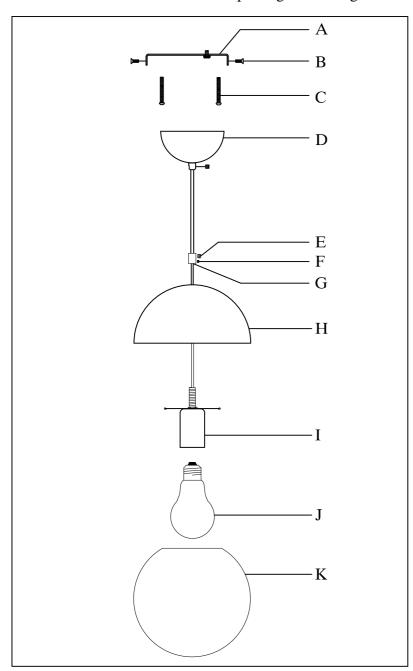


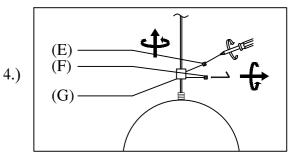

Step4: Twist the plastic screws(E) with a screwdriver, use the six angle wrench to loosen the inner six corner screws(F), and twist the cylindrical iron parts.

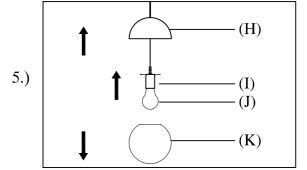


Step5:Open the semicircle lampshade(H), twist the nut and take out the lamp socket(I) and Glass(K).

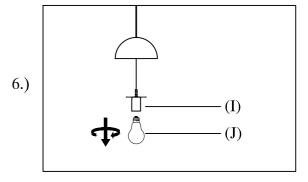


Step6: Turn the bulb out of the socket.


Cleaning & Care: Clean with soft cloth and a mild detergent. Do not use abrasive cleaner. IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation




Replace glass and light bulbs - install

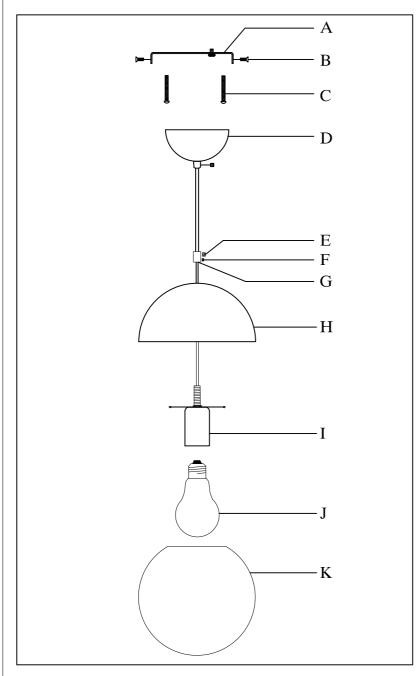


Cleaning & Care: Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.

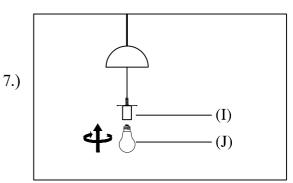

Step7: Twist the new bulb(J) into the lamp socket(I).

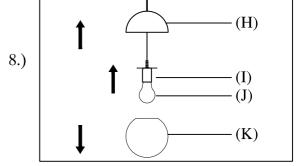

Step8: Tilt the lamp socket(I) into the Glass(K). Place the Glass at, tighten the nut and cover the upper Semicircular lampshade(H).

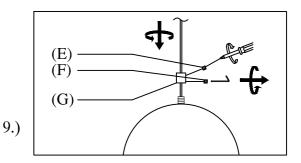

Step9: To tighten cylindrical iron(G) parts, first lock the inner hexagonal screw(F) with an inner hexagonal wrench, and then lock the plastic screw(E) with a screwdriver.

Page 4 of (4)