



# ASSEMBLY INSTRUCTION

## Hall tree with Bench


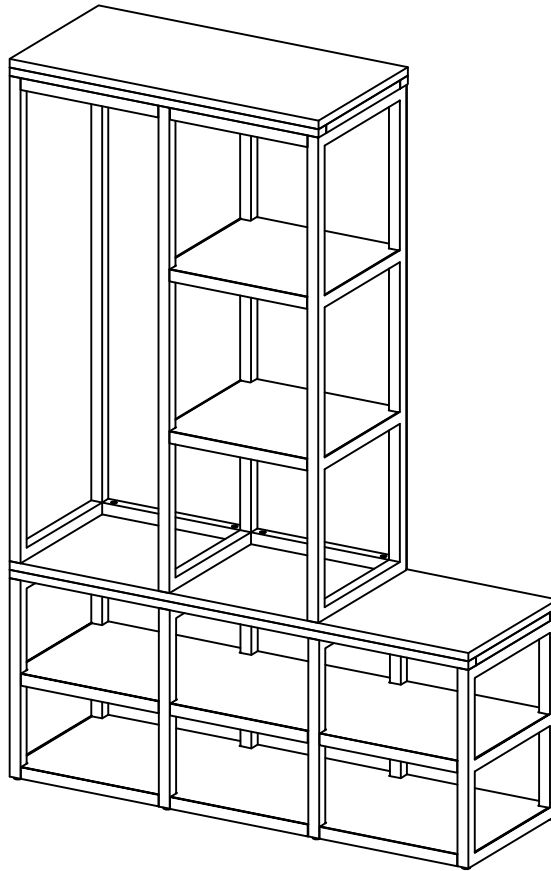


### REPLACEMENT PARTS



Please do not contact the company purchased from as we can help you faster.  
Order replacement parts and hardware at " [www.boltonfurniture.com](http://www.boltonfurniture.com) "

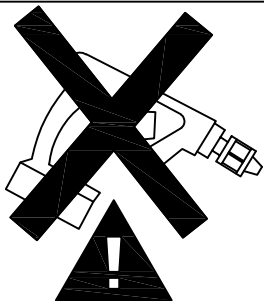

. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!  
. Please assemble on a clean soft surface to avoid damage.

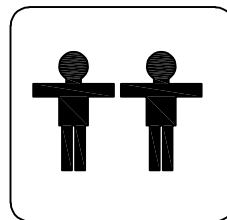


### Tools Required

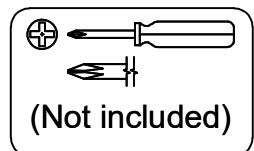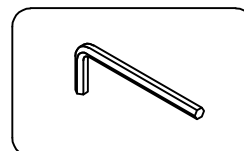



[www.boltonfurniture.com](http://www.boltonfurniture.com)


# Part list - Hall tree with Bench

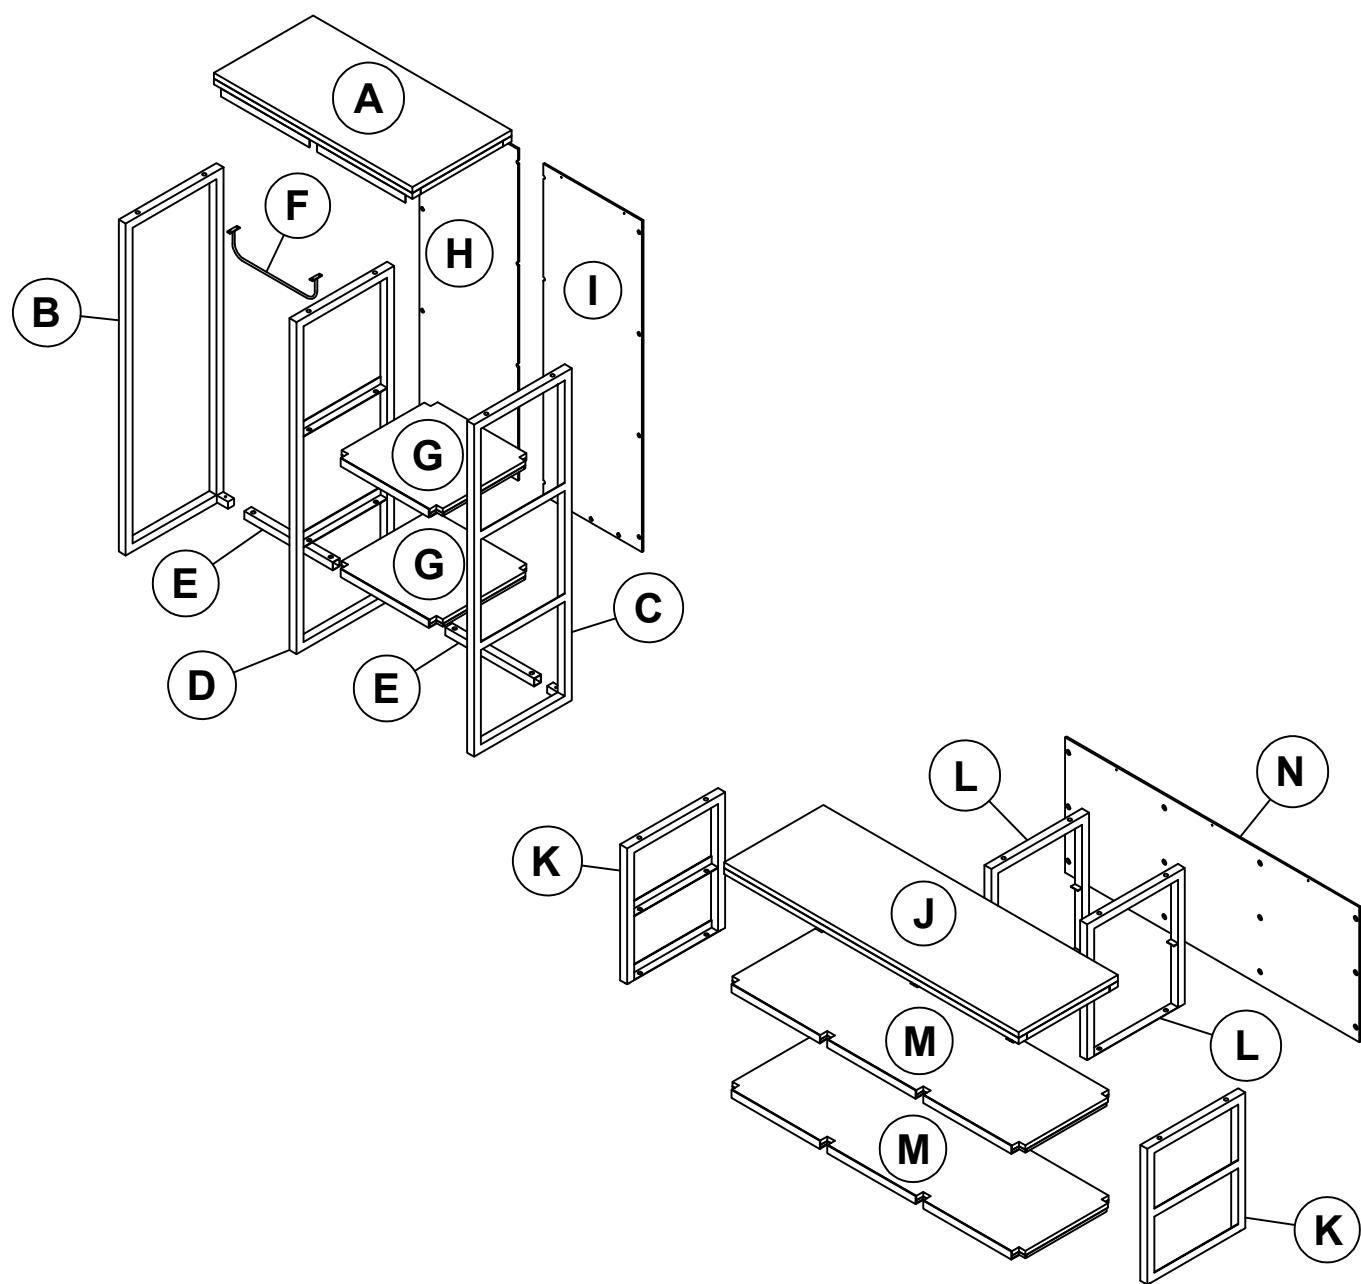



Identifying the hardware-Identify the hardware using the illustrations below


**O****28**  
M6\*20mm Bolt


**P****14**  
M6\*40mm Bolt


**Q****24**  
M6\*15mm Bolt

**R****07**  
Ø4\*15mm

**S****02**

**T****06**  
Ø4\*15mm

**U****26**  
Ø19\*Ø6\*1mm

**V****01**

**W****02**  
ANTI-TIP

[www.boltonfurniture.com](http://www.boltonfurniture.com)

# Step 01


Q

M6\*15mm Bolt

05

V

01

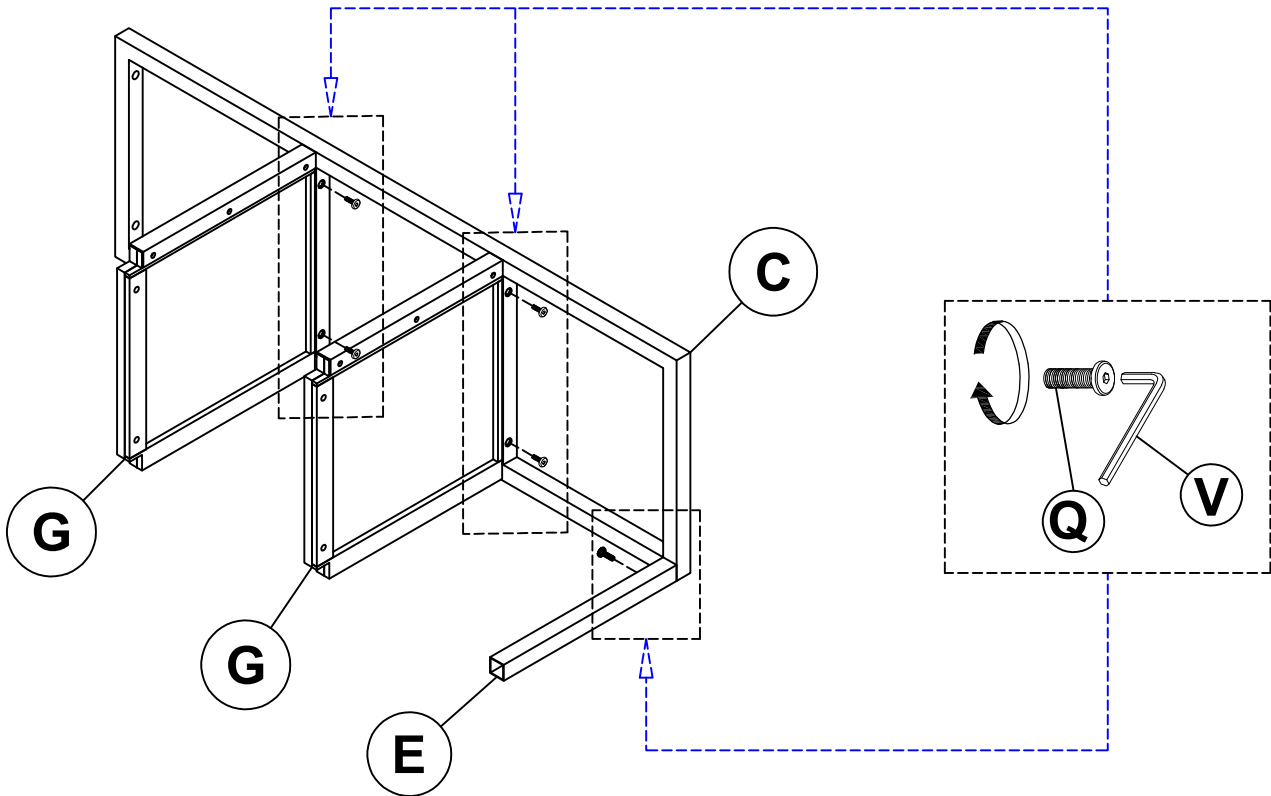

# Step 02


Q

M6\*15mm Bolt

05

V

01

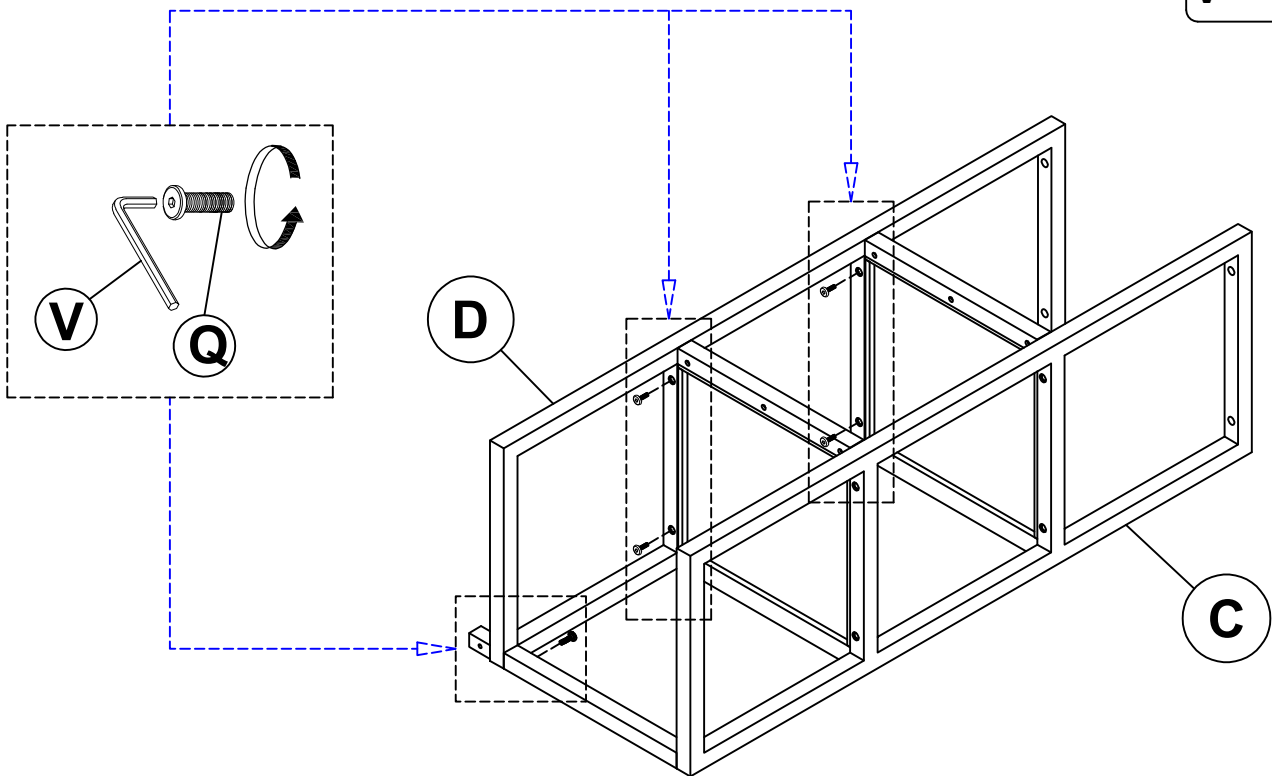


# Step 03

Q



M6\*15mm

01

V



01

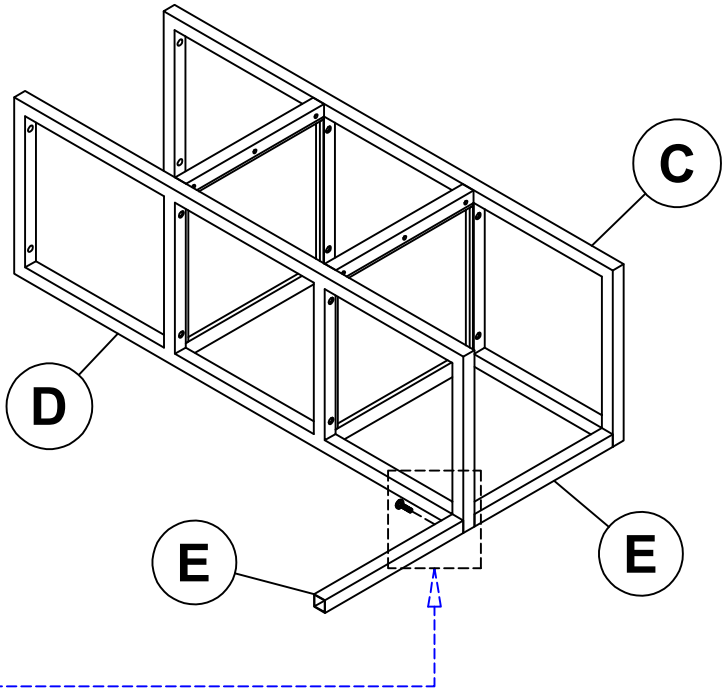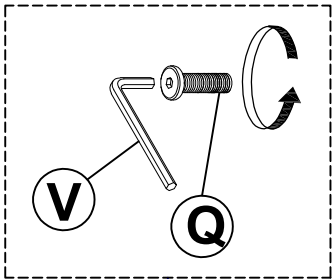


# Step 04

Q



M6\*15mm

01


V





01

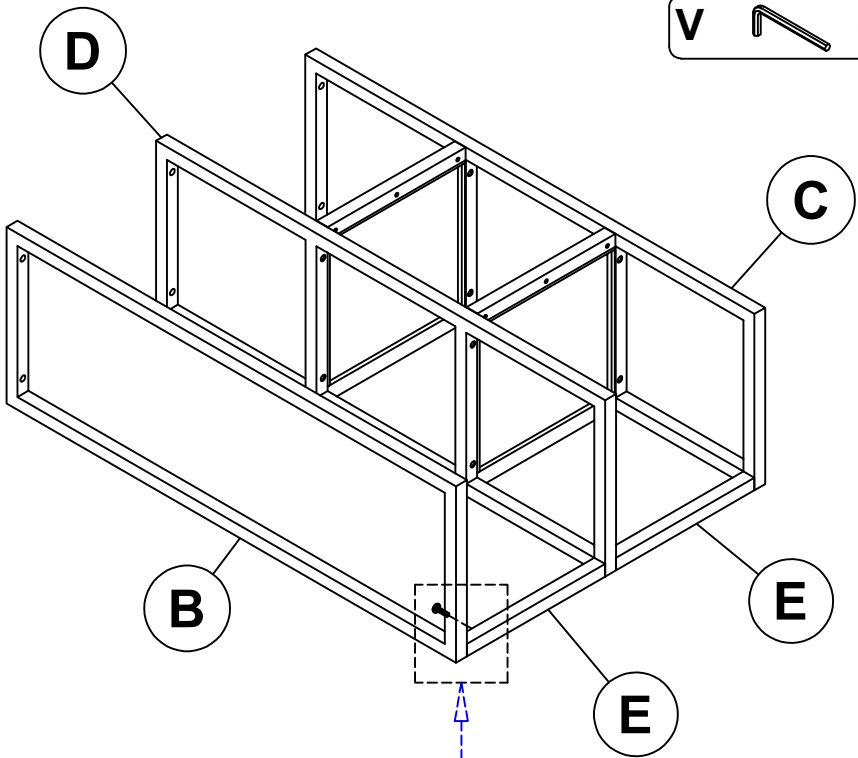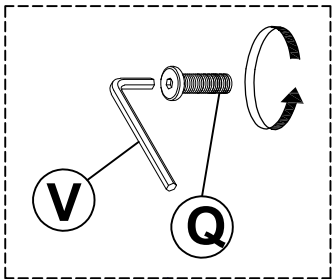


# Step 05


**T**  **04**  
Ø4\*15mm



**01**  
(Not included)

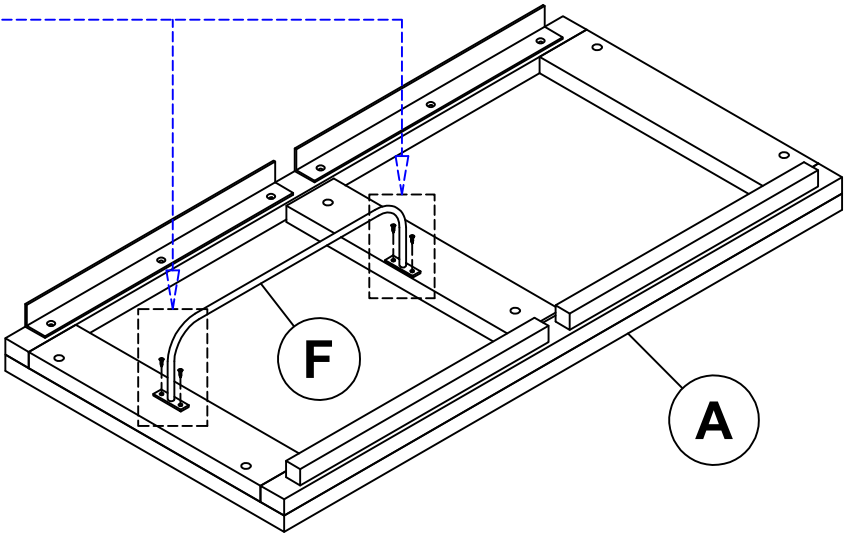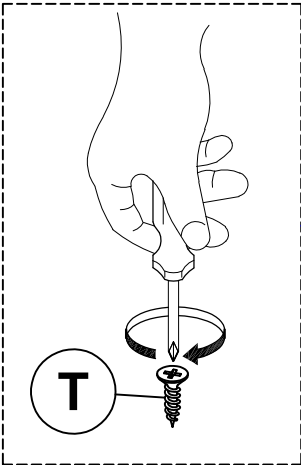



# Step 06

**P**  **06**  
M6\*40mm

**V**  **01**

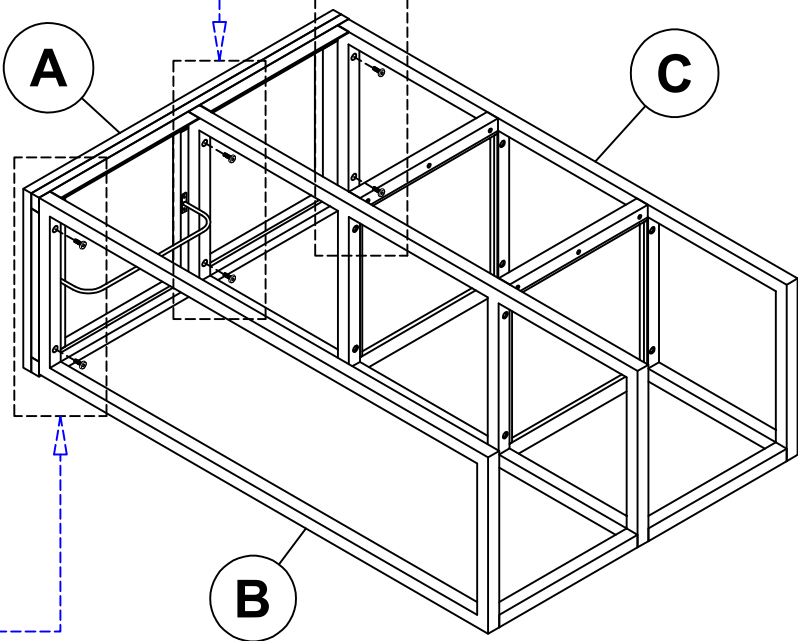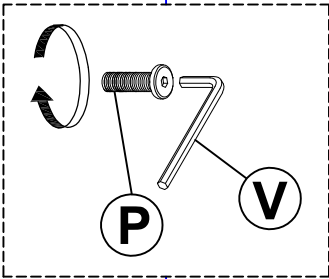

## Step 07

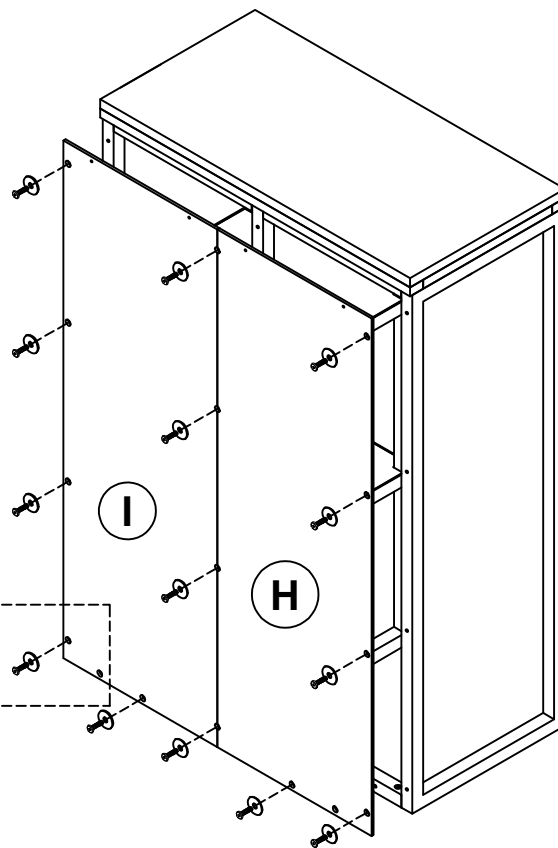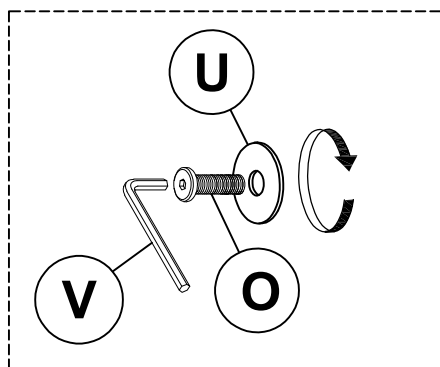

**O** M6\*20mm 14



**U** Ø19\*Ø9\*1mm 14

**V** 01



## Step 08

**R** Ø4\*15mm 04



**Q** (Not included) 01

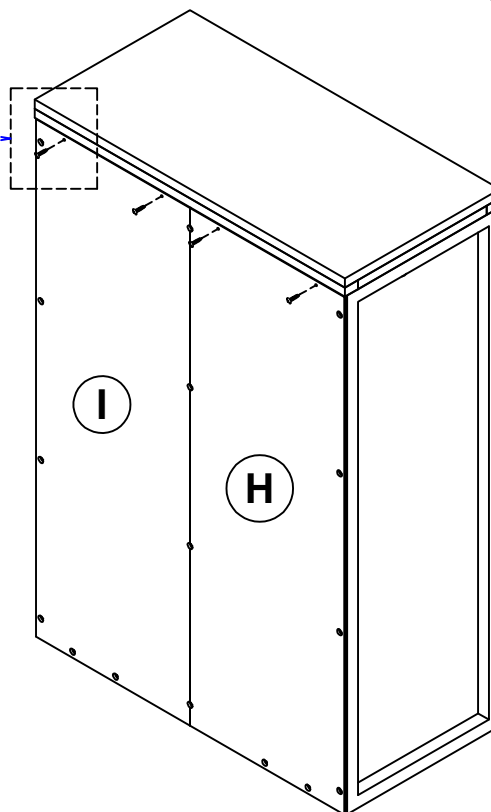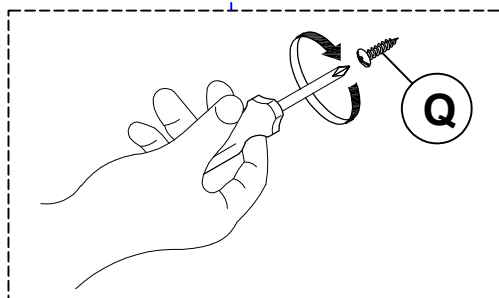

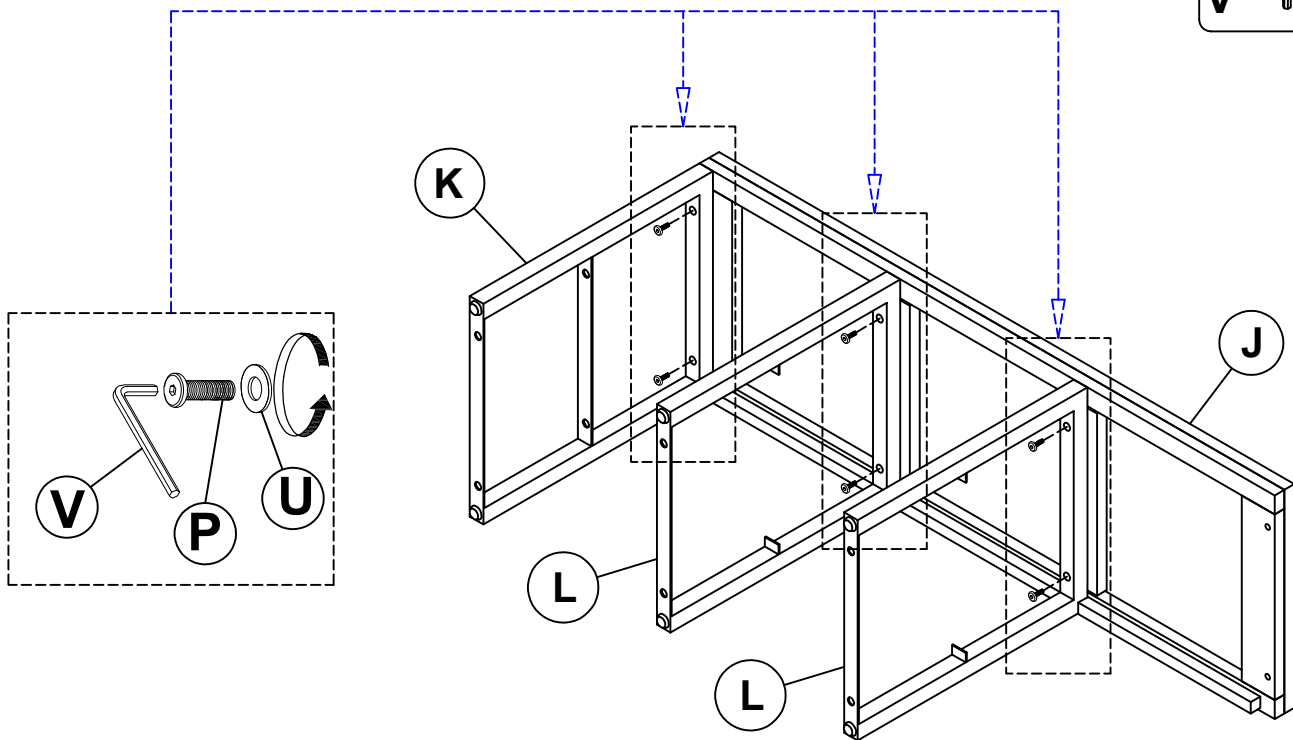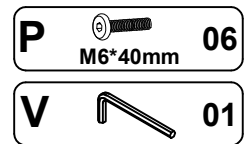

## Step 09

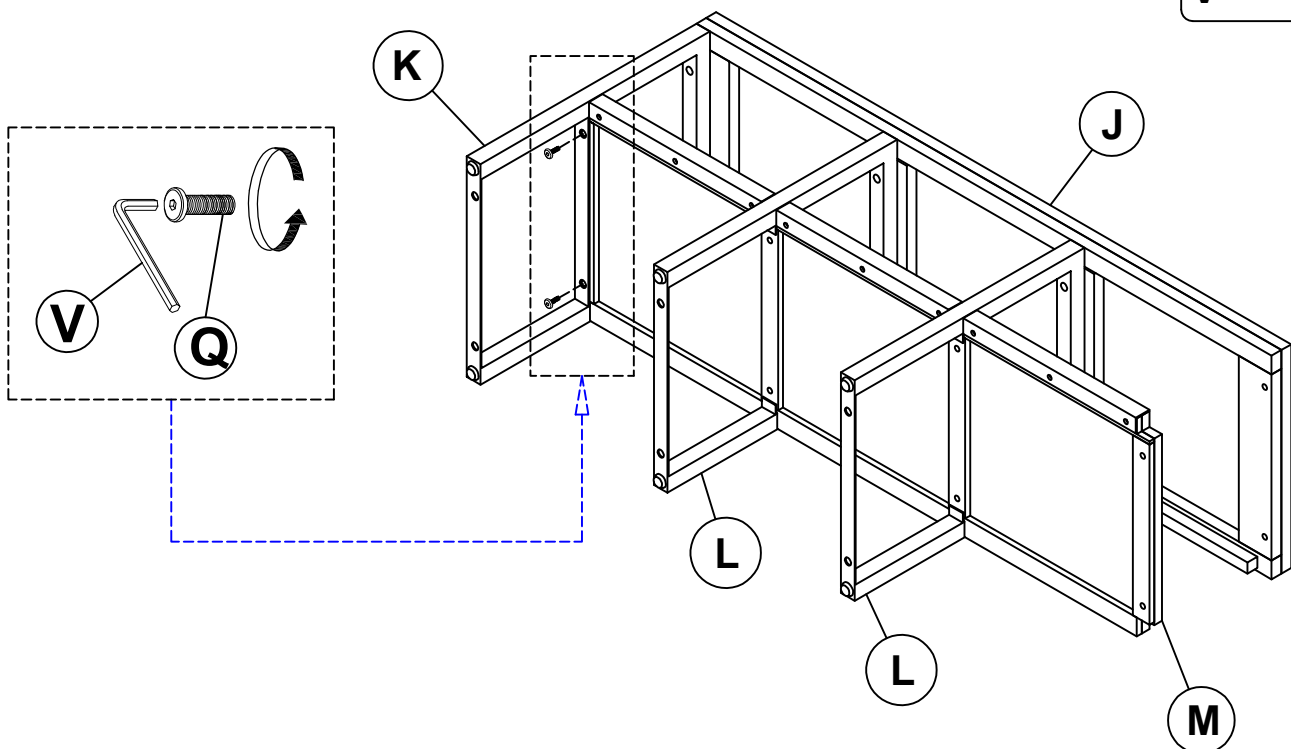
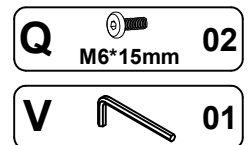


## Step 10






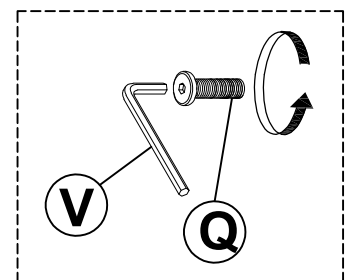
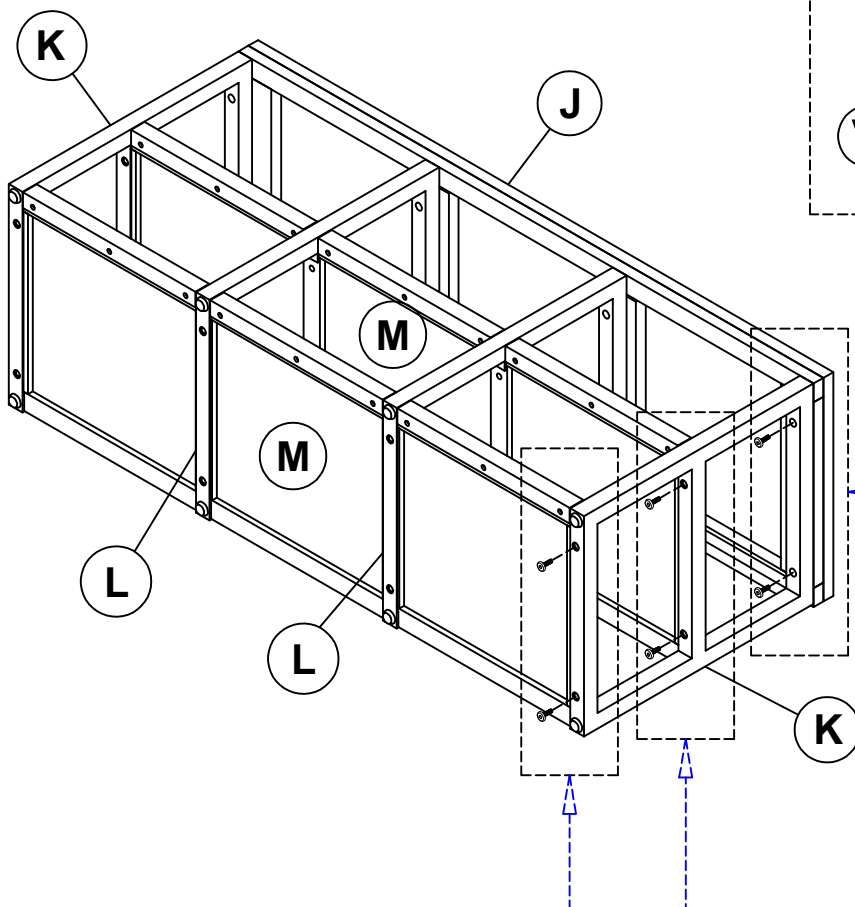
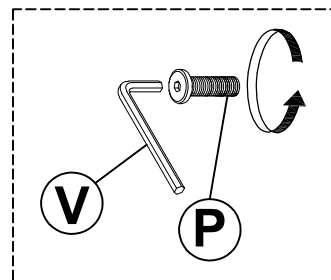
## Step 11
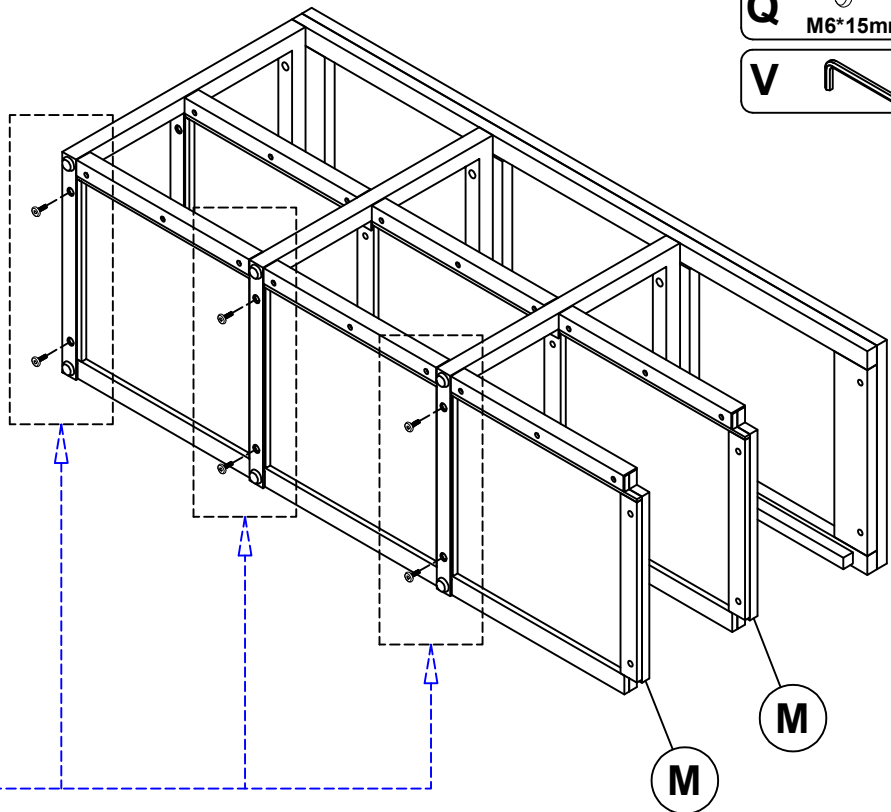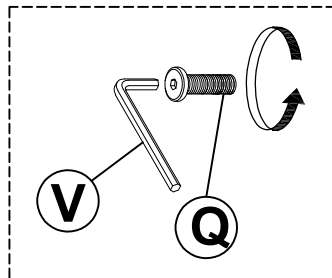
<b>Q</b>		<b>06</b>
M6*15mm		
<b>V</b>		<b>01</b>








## Step 12


<b>Q</b>		<b>04</b>
M6*15mm		
<b>P</b>		<b>02</b>
M6*40mm		
<b>V</b>		<b>01</b>






# Step 13

O		M6*20mm	12
R		Ø4*15mm	03
U		Ø19*Ø9*1mm	12
V			01
		(Not included)	01

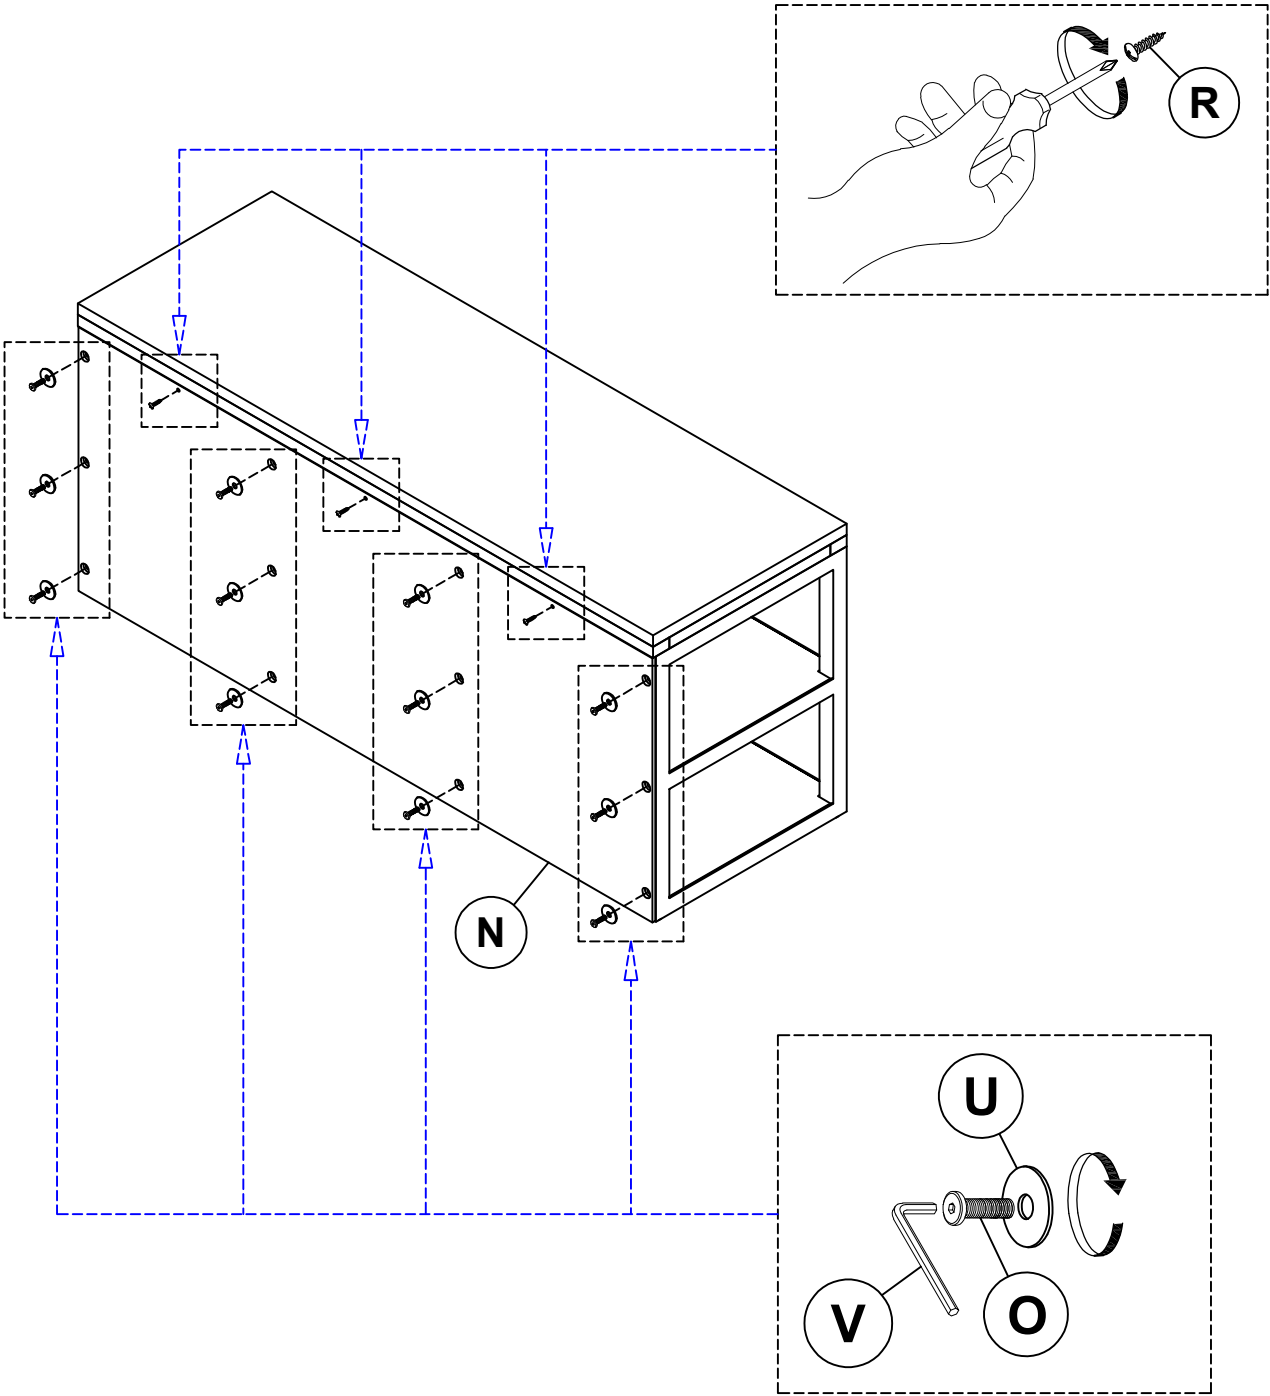


# Step 14


- O

 M6\*20mm


02
- S




02
- T





02
- V







01
- 

(Not included)



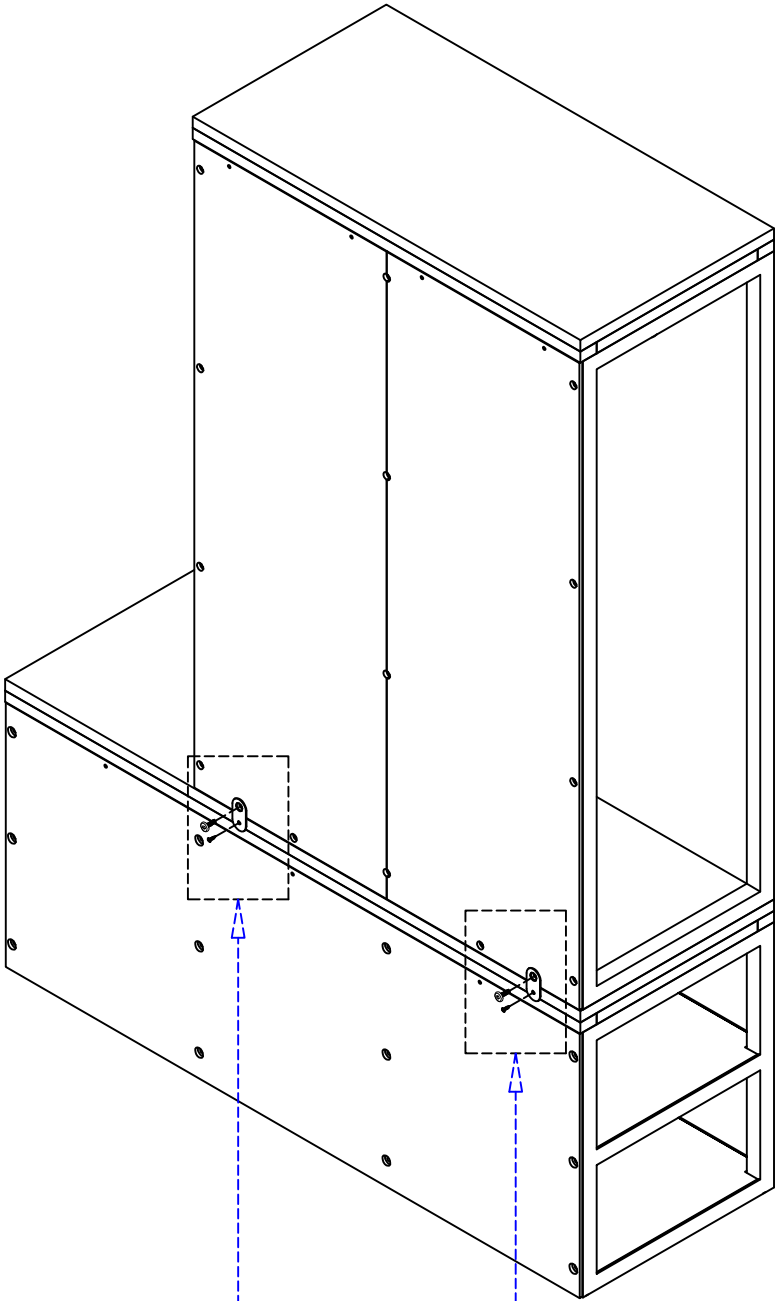
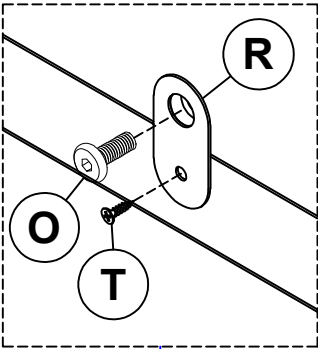
01



## "O" Anti-Tip

<b>A</b>	 4x15 Screw	<b>04</b>	<b>C</b>	 Plastic wall bracket	<b>04</b>
<b>B</b>	 4x35 Screw	<b>04</b>	<b>D</b>	 Nylon strap 140mm	<b>02</b>

## Secure to Stud behind Wallboard

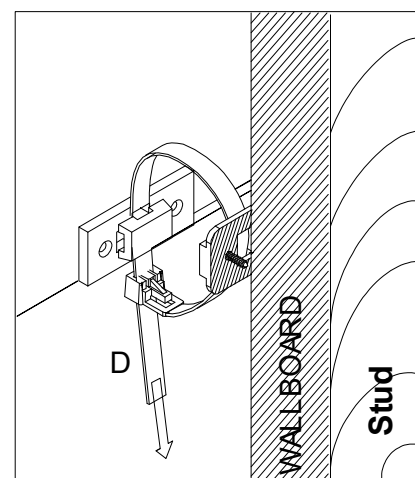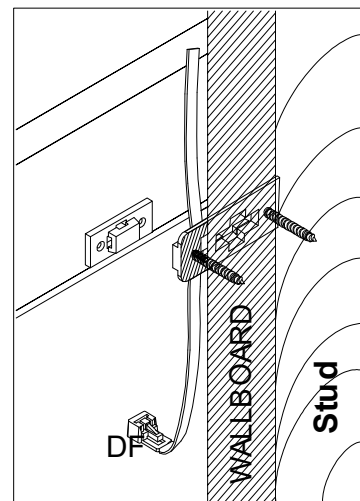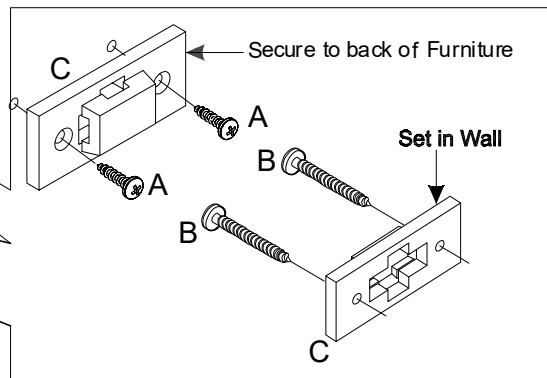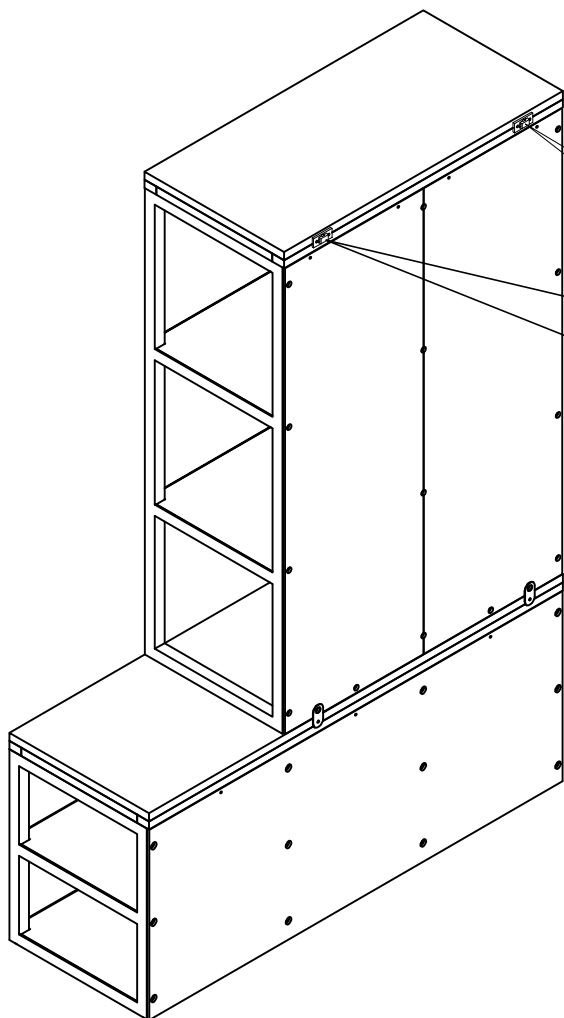

Secure to Stud behind Wallboard!

