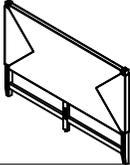
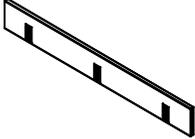
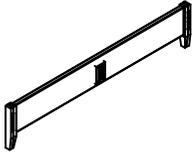
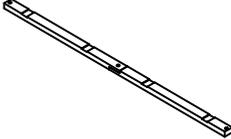






ASSEMBLY INSTRUCTIONS MALAY BED


PARTS LIST

CODE	PARTS	DESCRIPTION	QTY
1		HEADBOARD	1
2		SIDE RAIL	2
3		FOOT BOARD	1
4		MIDDLE SUPPORT	1
5		MIDDLE LEG	1
6		CROSS BAR	8
7		SIDE BAR	2



HARDWARE LIST

CODE	HARDWARE	DESCRIPTION	QTY
A		BRACKETS	8
B		JCBC BOLT M6 X 60MM SS	9
C		FLAT WASHER M6 x Ø18MM SS	17
D		SPRING WASHER M6 x Ø11MM SS	8
E		NUT M6	8
F		HEX KEY L4	1
G		WRENCH 10	1
H		FAB SCREW Ø8 X 1.5" SS	16


- PLEASE DO NOT DISCARD ANY OF THE PACKAGING UNTIL YOU HAVE CHECKED ALL THE PARTS AND HARDWARE HAVE BEEN SUPPLIED.
- BEFORE YOU BEGIN ASSEMBLY, DECIDE ON THE HEIGHT YOU WOULD LIKE TO SET THE CROSS BARS AS THEY CAN BE ADJUSTED TO DESIRED DISTANCE FROM FLOOR (10"-13").
- FOLLOW INSTRUCTIONS CLOSELY AS DEVIATION FROM THEM MAY VOID YOUR WARRANTY AND PRESENT A POSSIBLE SAFETY RISK.
- IT IS RECOMMENDED THAT ASSEMBLY IS DONE ON A SOFT SURFACE LIKE CARPET TO AVOID ANY DAMAGE.
- THOUGH NOT NECESSARY, IT IS ADVISED THAT ASSEMBLY BE COMPLETED BY A TEAM OF AT LEAST TWO PEOPLE.

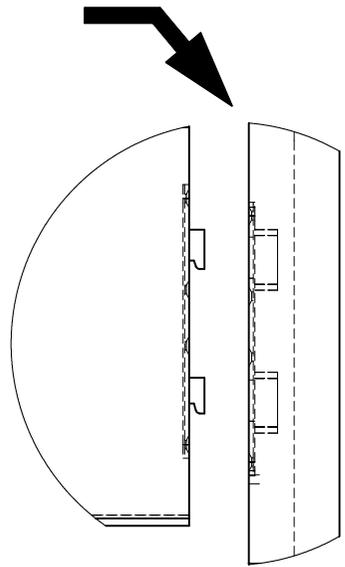



STEP 1

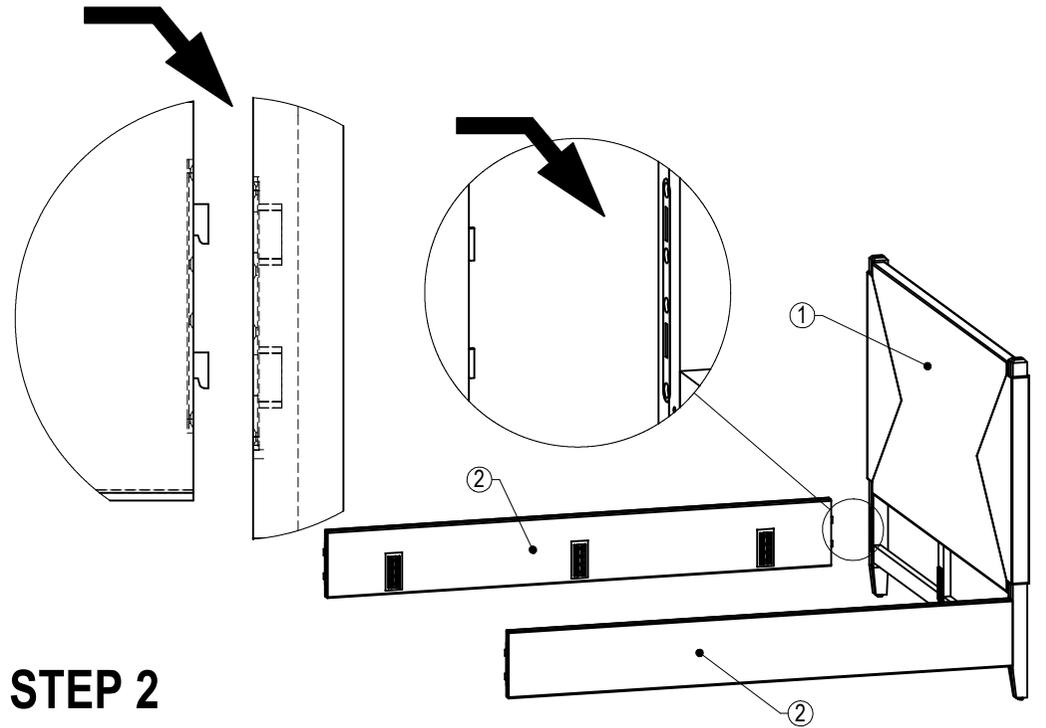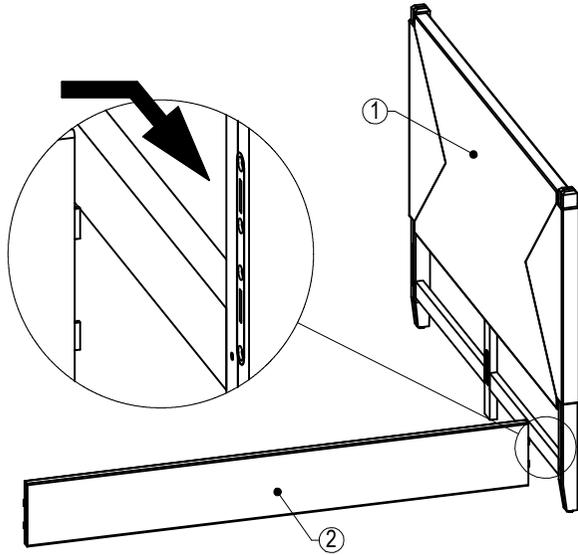

STEP 2

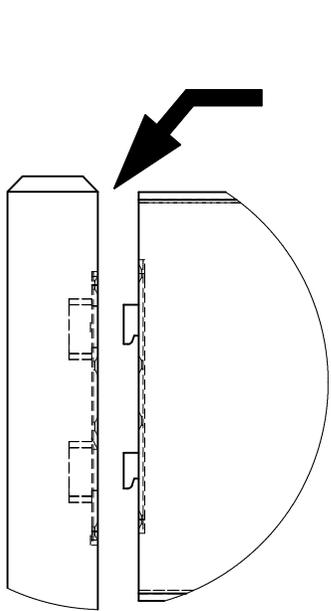

STEP 3

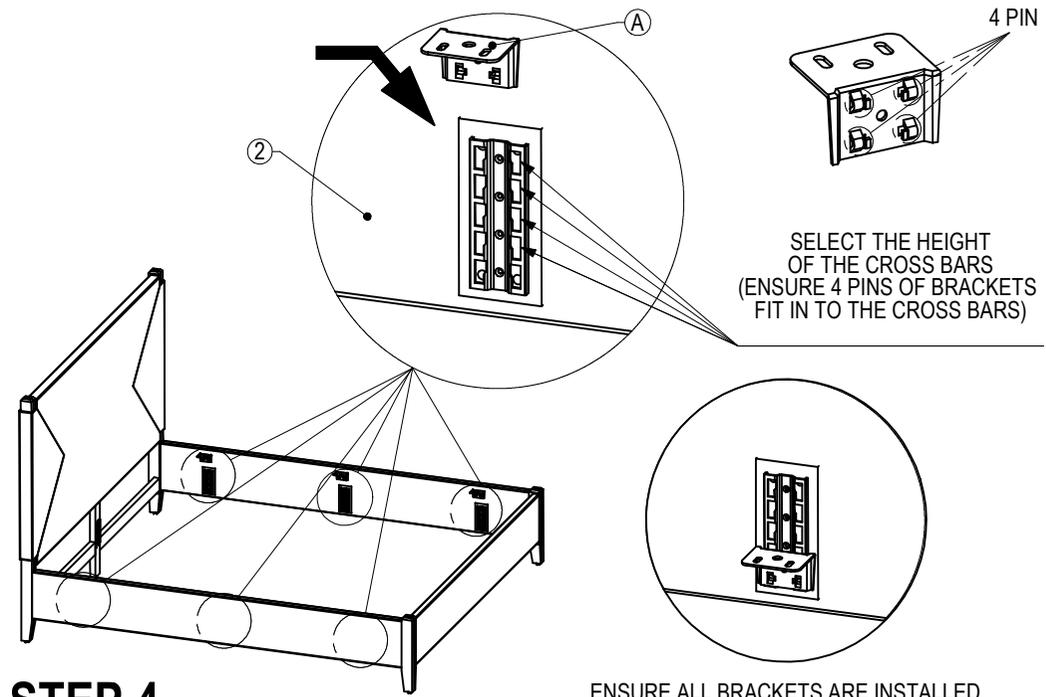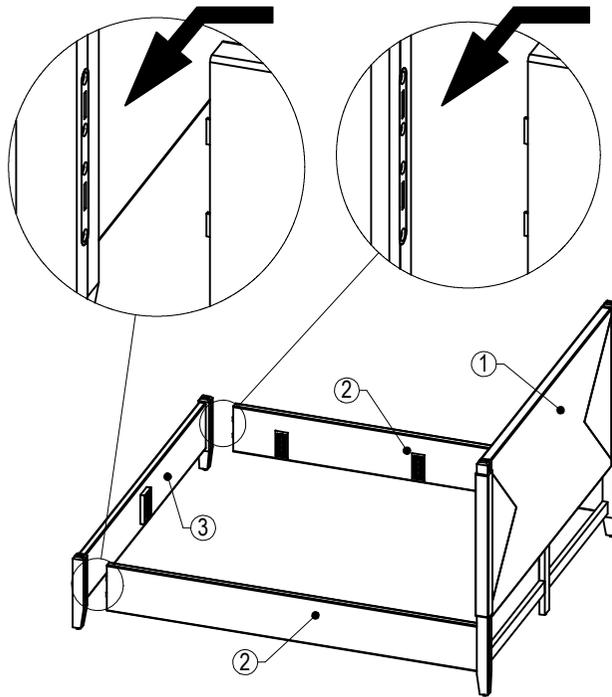


STEP 4


SELECT THE HEIGHT OF THE CROSS BARS (ENSURE 4 PINS OF BRACKETS FIT IN TO THE CROSS BARS)

ENSURE ALL BRACKETS ARE INSTALLED AT THE SAME HEIGHT POSITION BEFORE CONTINUING


Available Height Options (4 Positions)

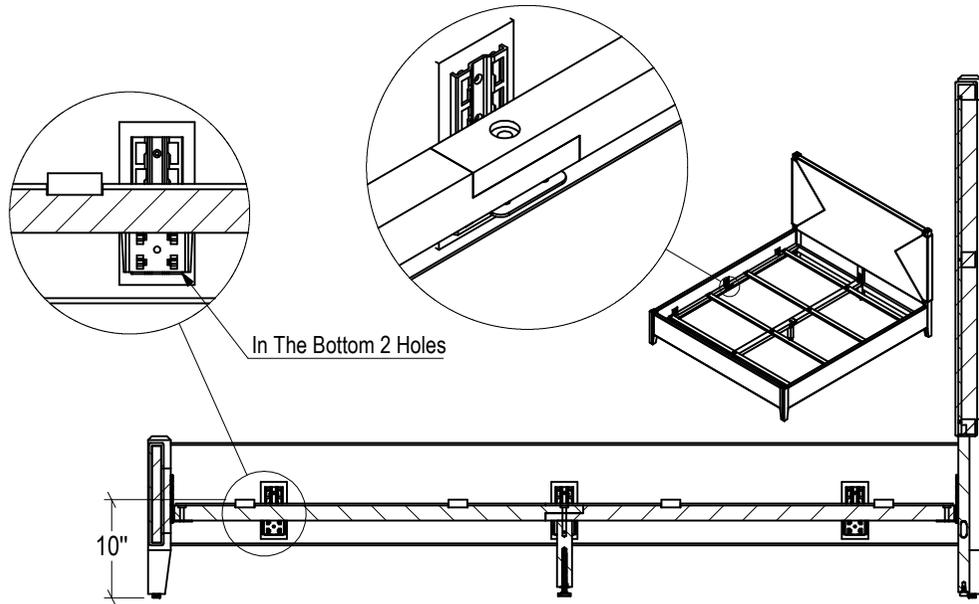


The Lowest Position

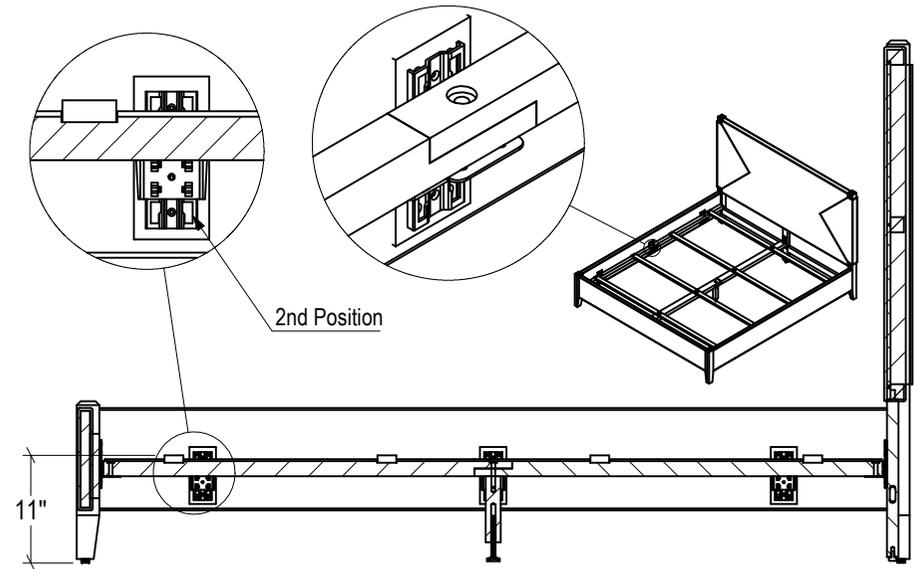


2nd Position

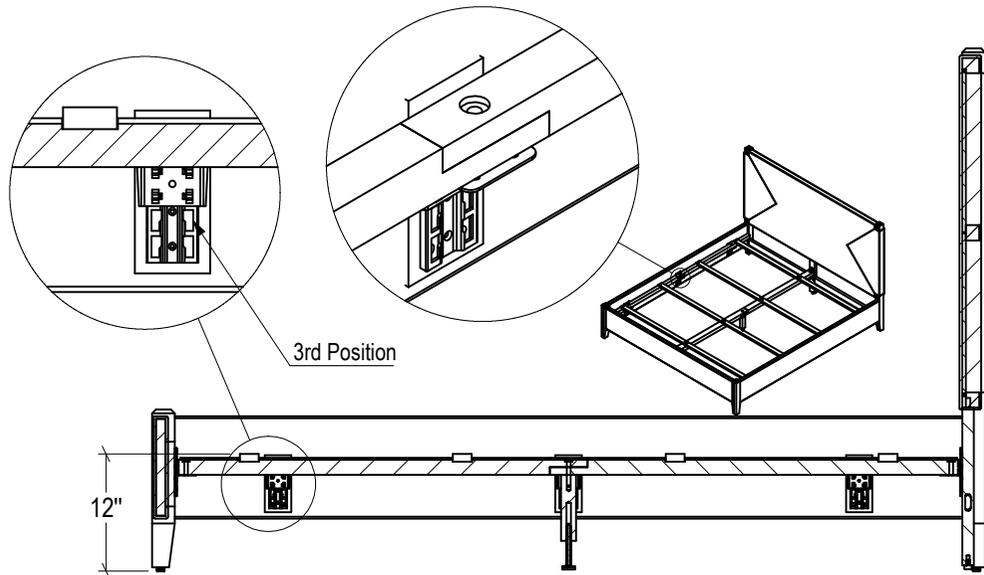


3rd Position

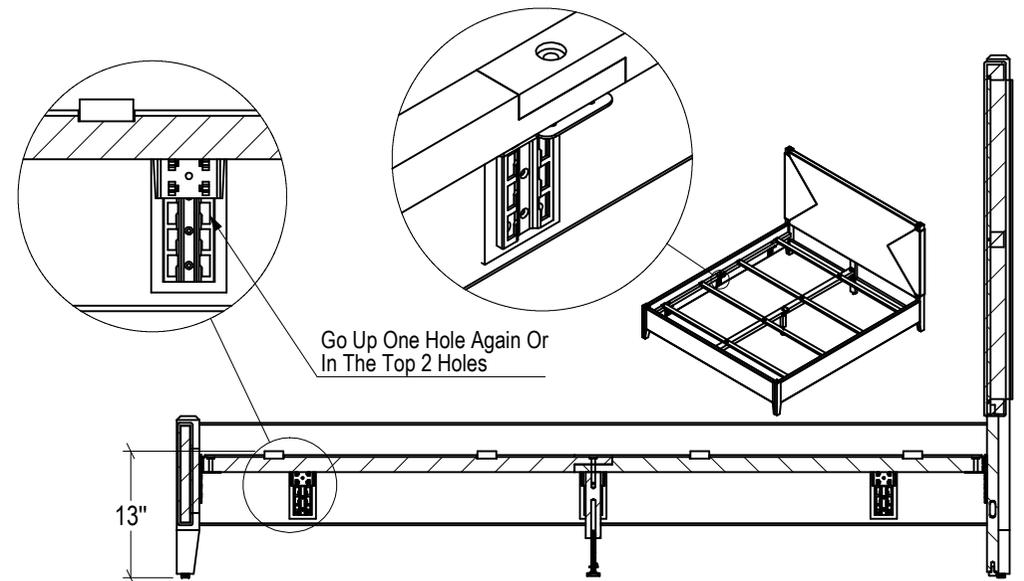


The Highest Position

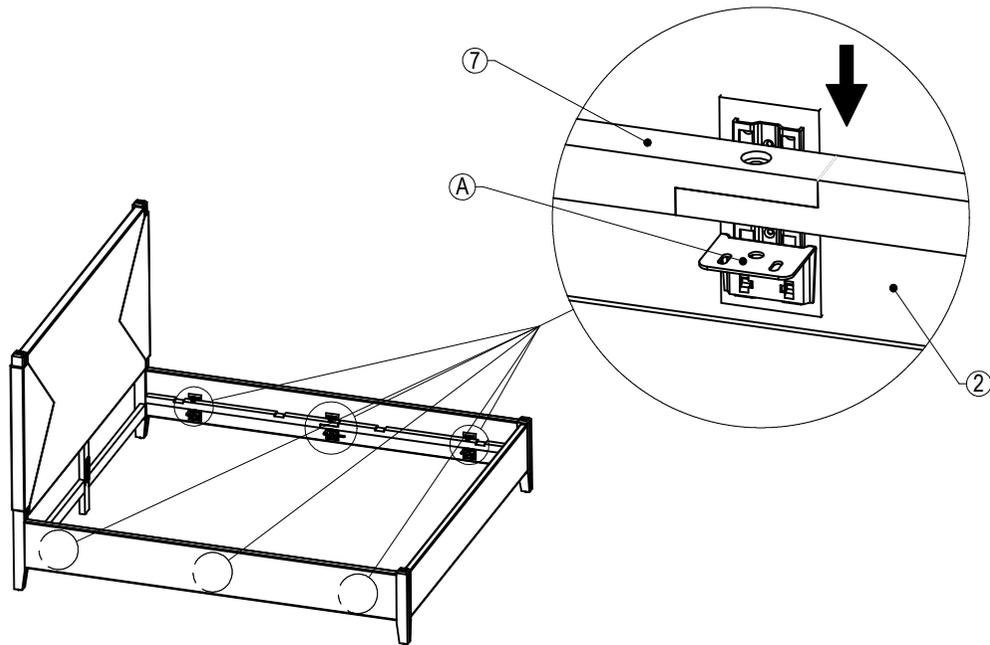


STEP 5

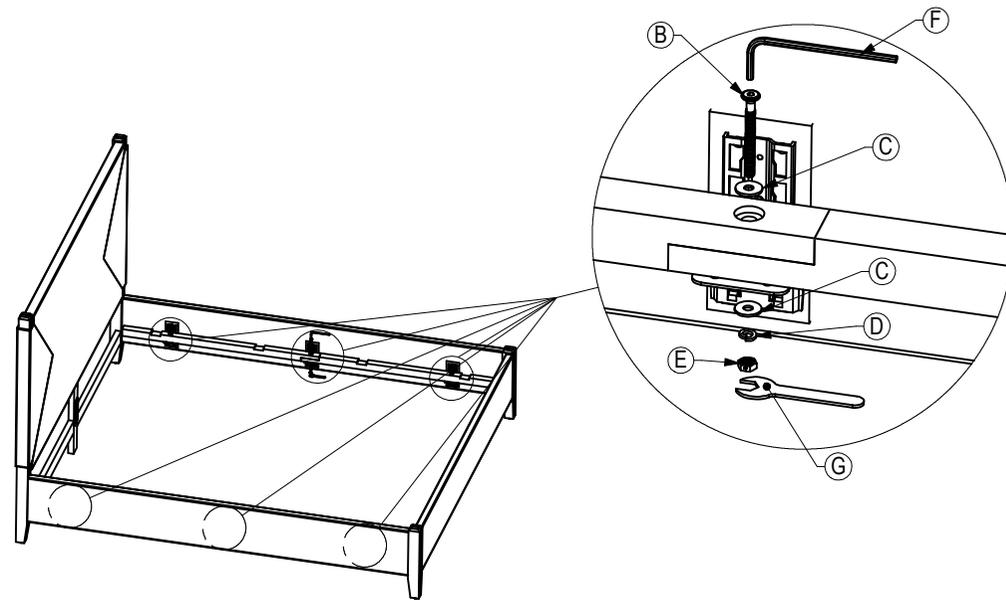


STEP 6

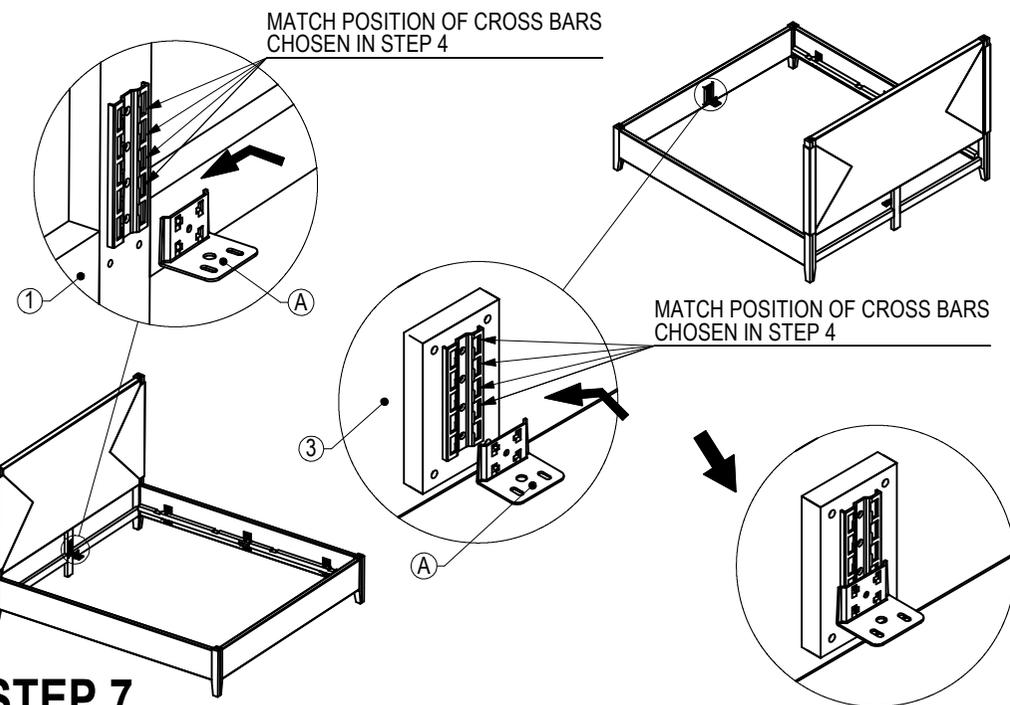


STEP 7

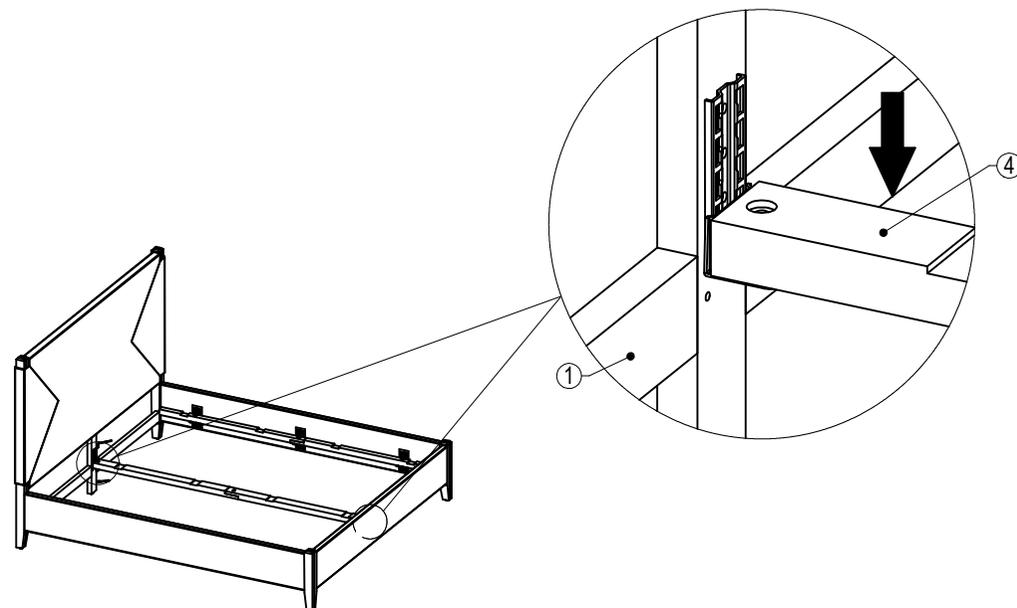


STEP 8

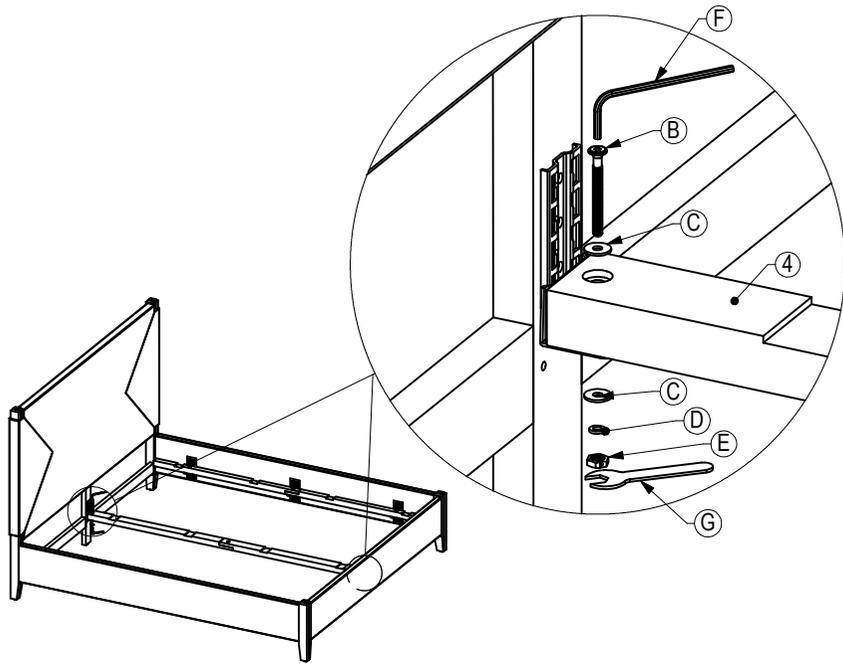


STEP 9

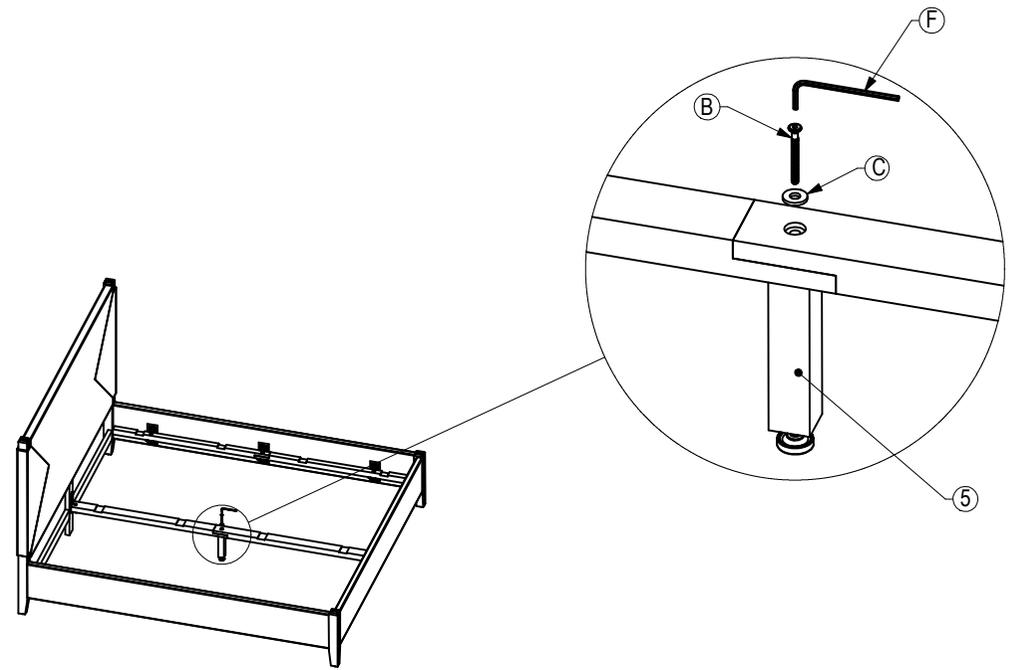

STEP 10

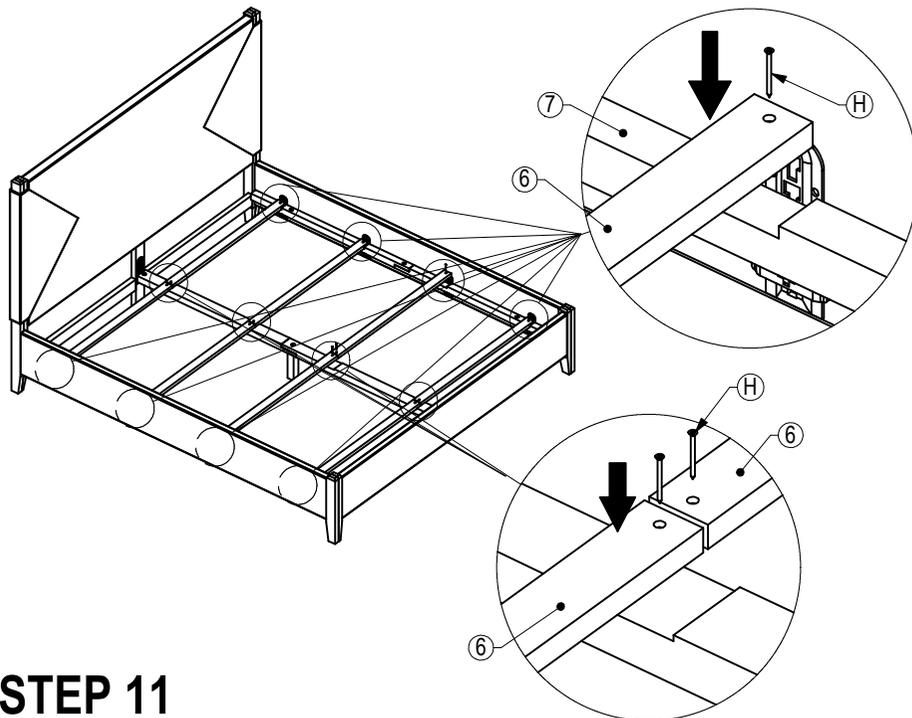

STEP 11

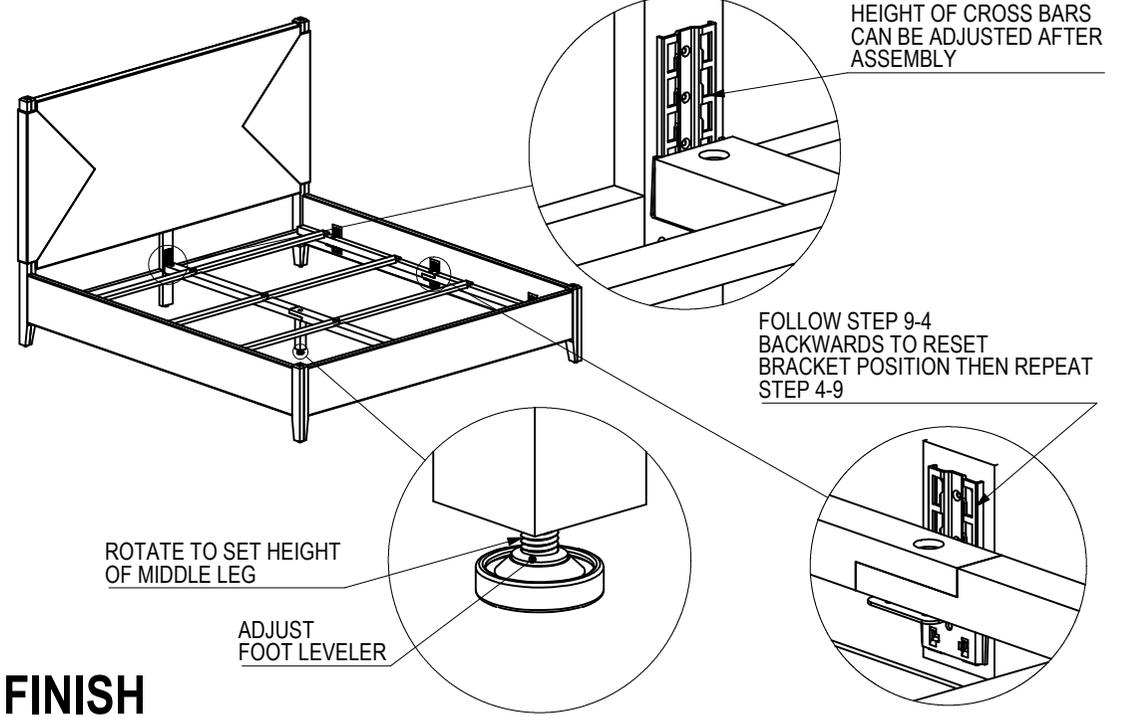

FINISH