

ASSEMBLY INSTRUCTION

IMPORTANT NOTE:

- ** PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ** BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ** DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY SET-UP.

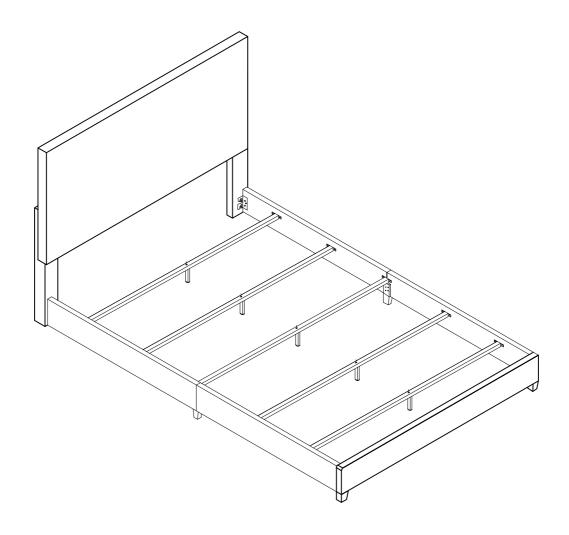

PARTS IDENTIFICATION

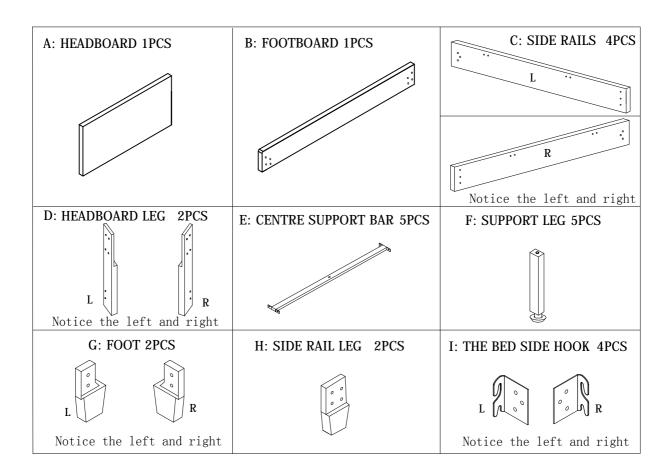

HARDWARE IDENTIFICATION

J: SCREW 1/4 *19mm	K: SCREW 1/4*23mm	M: SCREW 1/4*35mm	N: SPRING WASHER
12 PCS	20PCS	8PCS	M6 28 PCS
0)11111	())))))))	(()) 1111111	0
O: WASHER M6 28 PCS	P: ALLEN KEY	Q: SCREW 5/16*28mm	S: SCREW 5/16*35mm
	M4*21*57mm 1PCS	4 PCS	12 PCS
©		()))))))	()))))))))
T: SCREW 5/16*41mm	U: SPRING WASHER	V : WASHER M8 25 PCS	W: ALLEN KEY
9 PCS	M8 25PCS		M5*40*100mm 1PCS
(())))))))))	Ø	0	

ASSEMBLY INSTRUCTION

STEP 1: FIX THE HEADBOARD LEG TO THE HEADBOARD STEP 2: FIX THE FEET TO THE FOOTBOARD (headboard back) D (right) G (right) D (left) G (left) STEP 4: FIX SIDE RAILS TO FOOTBOARD AND STEP 3: FIX SIDE RAILS HEADBOARD. C (left) I (left) C (right) муО I (right) Ή **FINISH** STEP 5: FIX CENTRE SUPPORT BAR TO BED. K N O