



MODEL: SE BED 13017026WI





		ACCESSORIES	QUANTITY
A	Ø s	MINIFIX M7x64MM	4 PCS
В	1	MINIFIX M5x24MM	50 PCS
С	2	MINIFIX CASING	58 PCS
D		WOOD DOWEL M8X25MM	2 PCS
Е		WOOD DOWEL M8X30MM	78 PCS
F	P	IRON SHELF SUPPORT	8 PCS
G	Q.	SCREW M4x28MM	4 PCS
Н	0.	SCREW M6x50MM	18 PCS
I	0	WHITE LEG PIN	15 PCS
J		POWER PIN	40 PCS
K		ALUMINIUM M RAIL	2 PCS
L	O	CASTER TWR-25 SCREW M3.5x12MM	6 PCS 12 PCS
M		338 SLIDING ROLLER SCREW M3x12MM	4 SETS 32 PCS
N		L-BRACKET SCREW M3.5x16MM	2 PCS 8 PCS
О		ALLEN KEY	1 PC
P		WOOD DOWEL M8X50MM	8 PCS
Q	O manage	SCREW M4x38MM	12 PCS
R	•	SCREW M3.5x16MM	4 PCS
	CHEMICAL	HANDLE WITH CARE KEEP DRY	HARD SURFACE

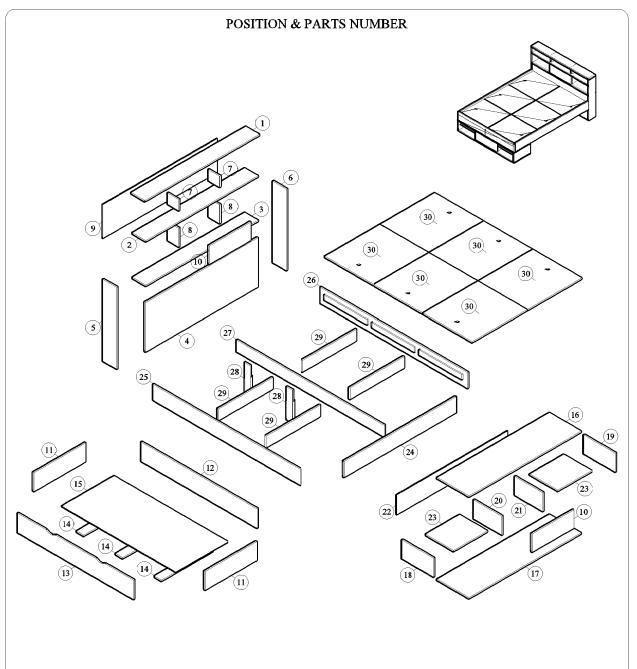






START ASSEMBLY

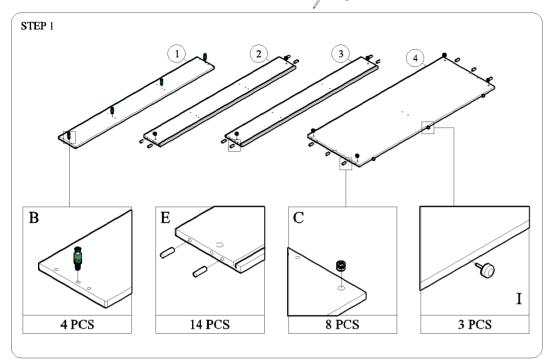


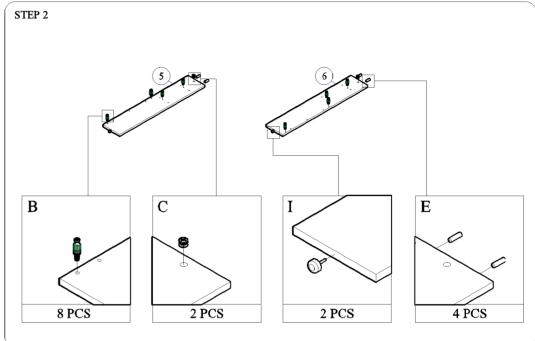


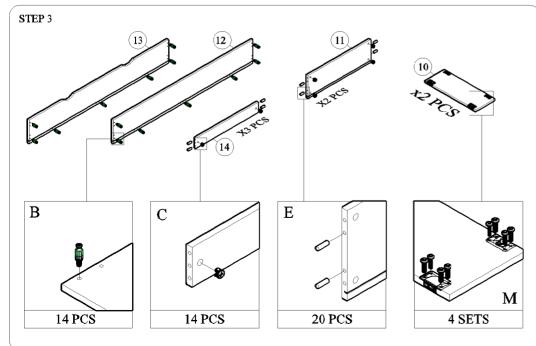


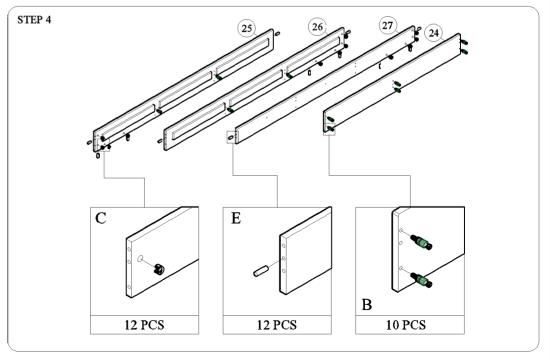


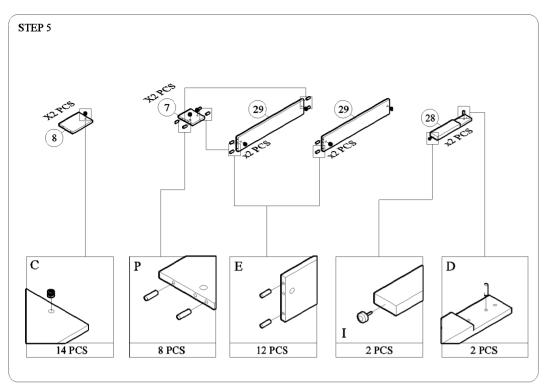


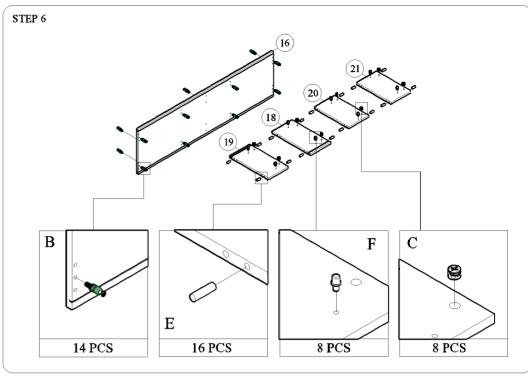


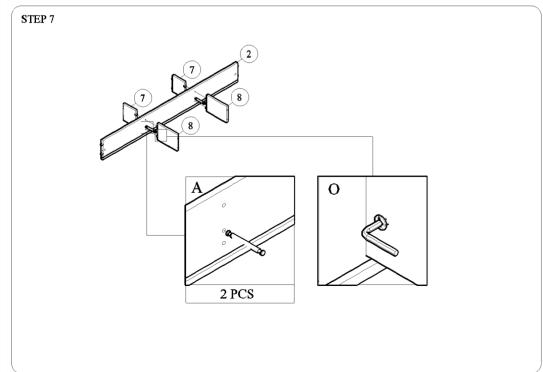


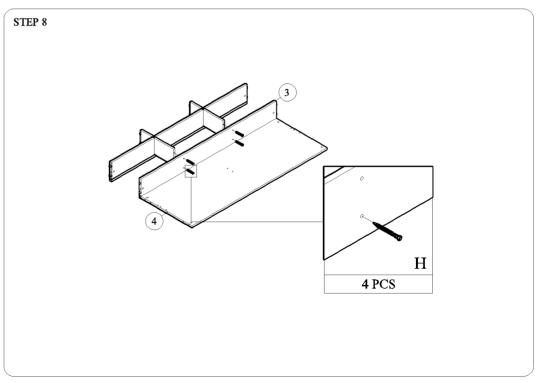


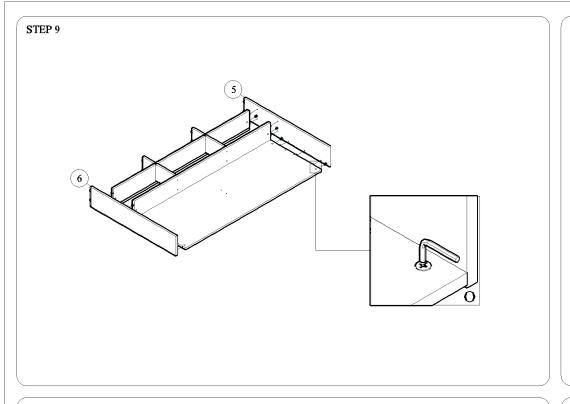


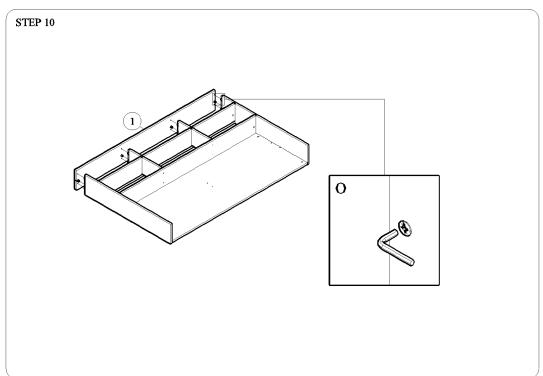


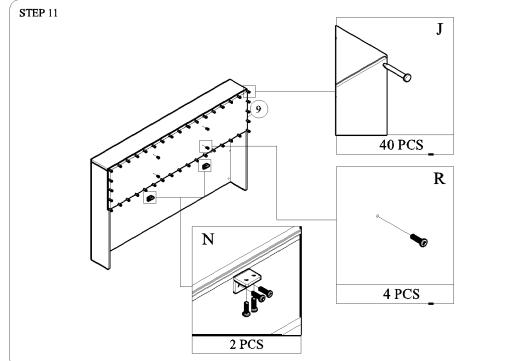


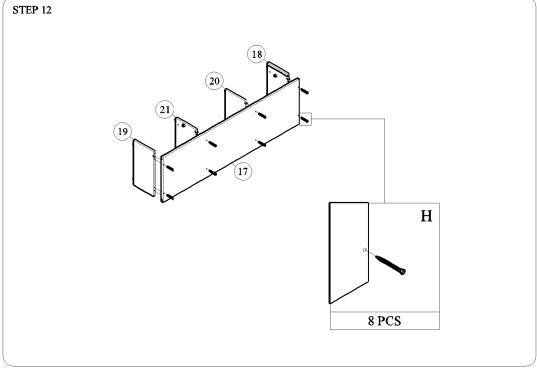


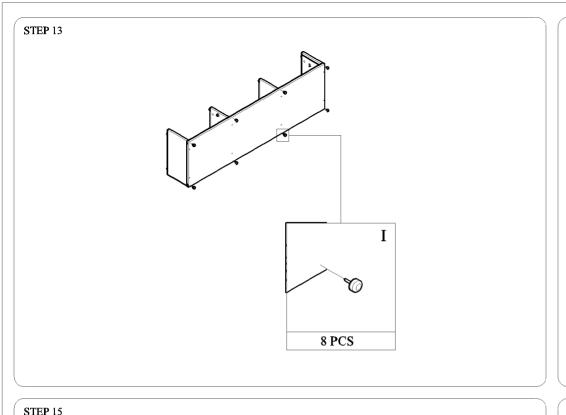


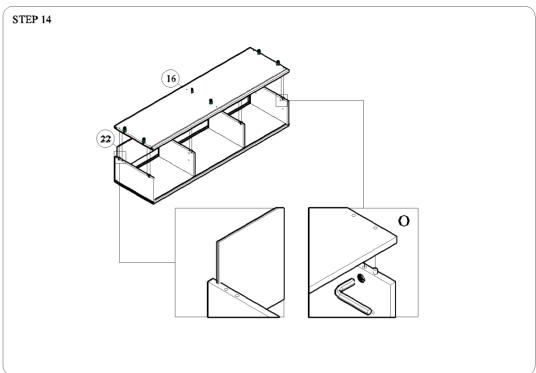


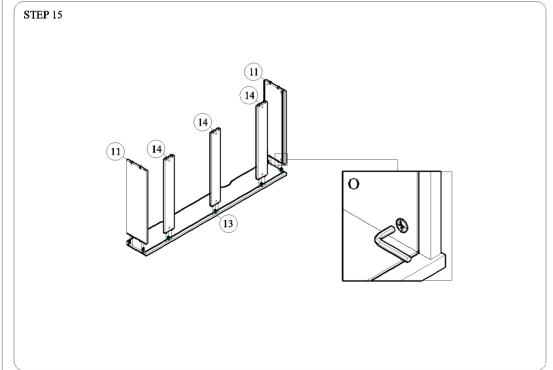


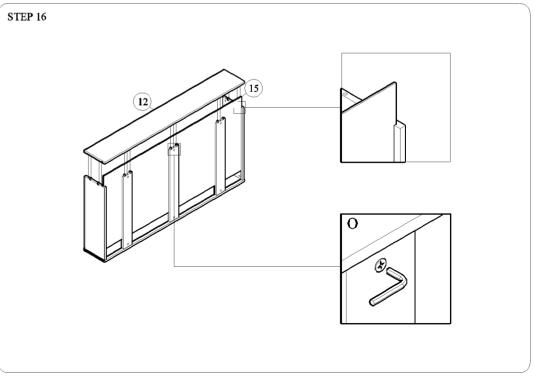


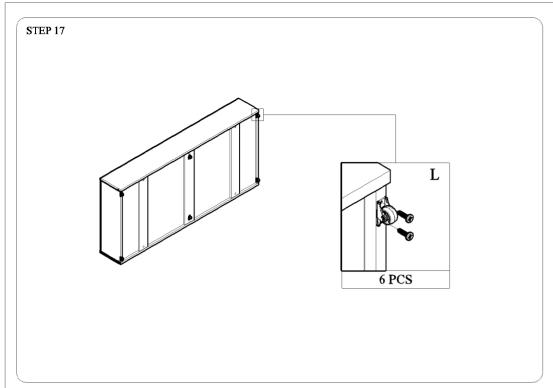


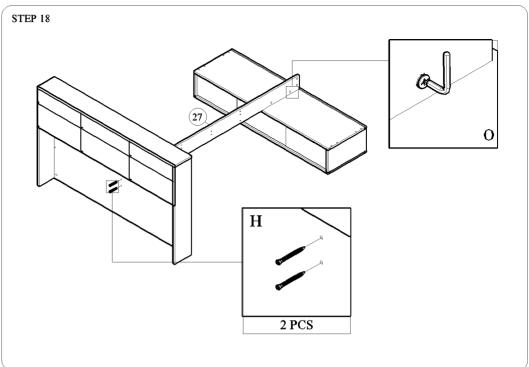

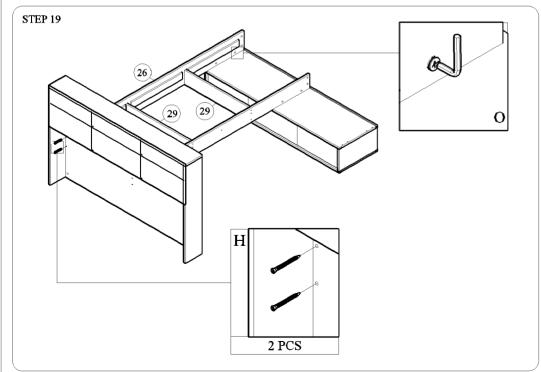

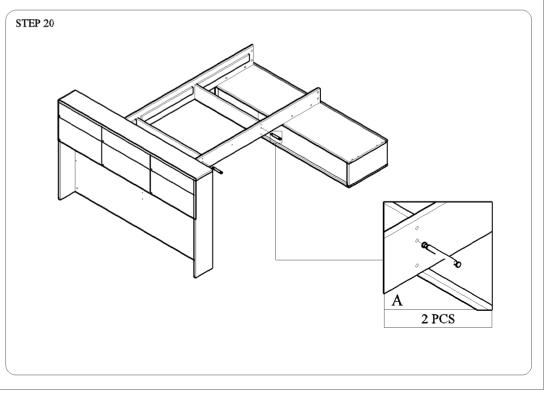

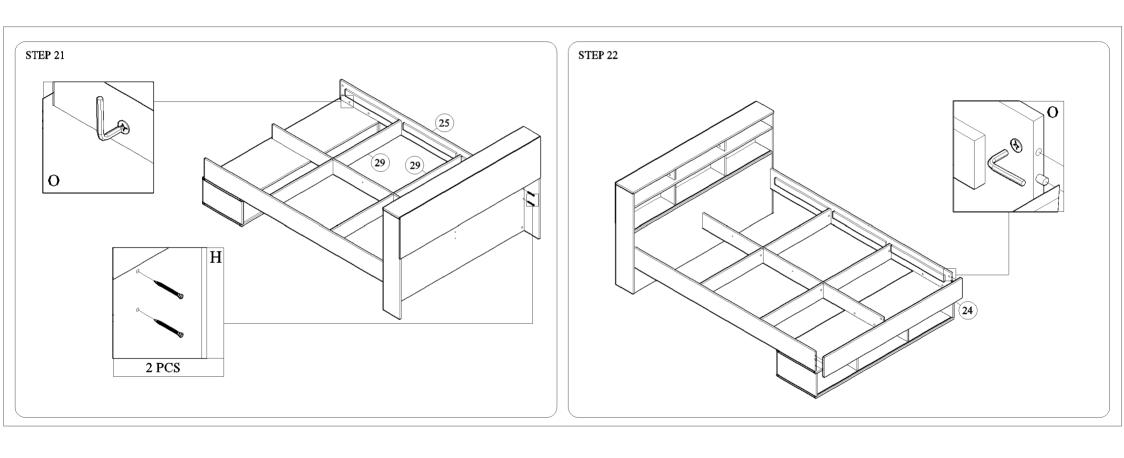

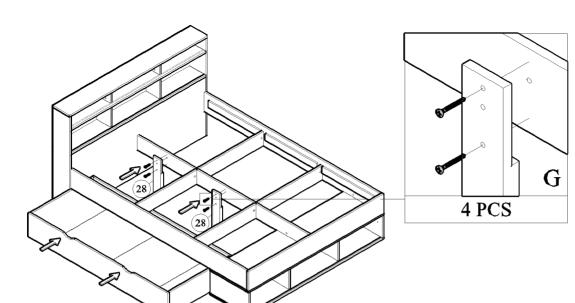

If you choose to place a drawer to the left of the bed.

You need to install the panel from the left as in the diagram.

The panel is intended as a drawer stopper.

If you choose to place a drawer to the right of the bed.

You need to install the panel from the right as in the diagram.

The panel is intended as a drawer stopper.

