






MANHATTAN  
COMFORT

# Glenmore 31.49" Wide Dresser


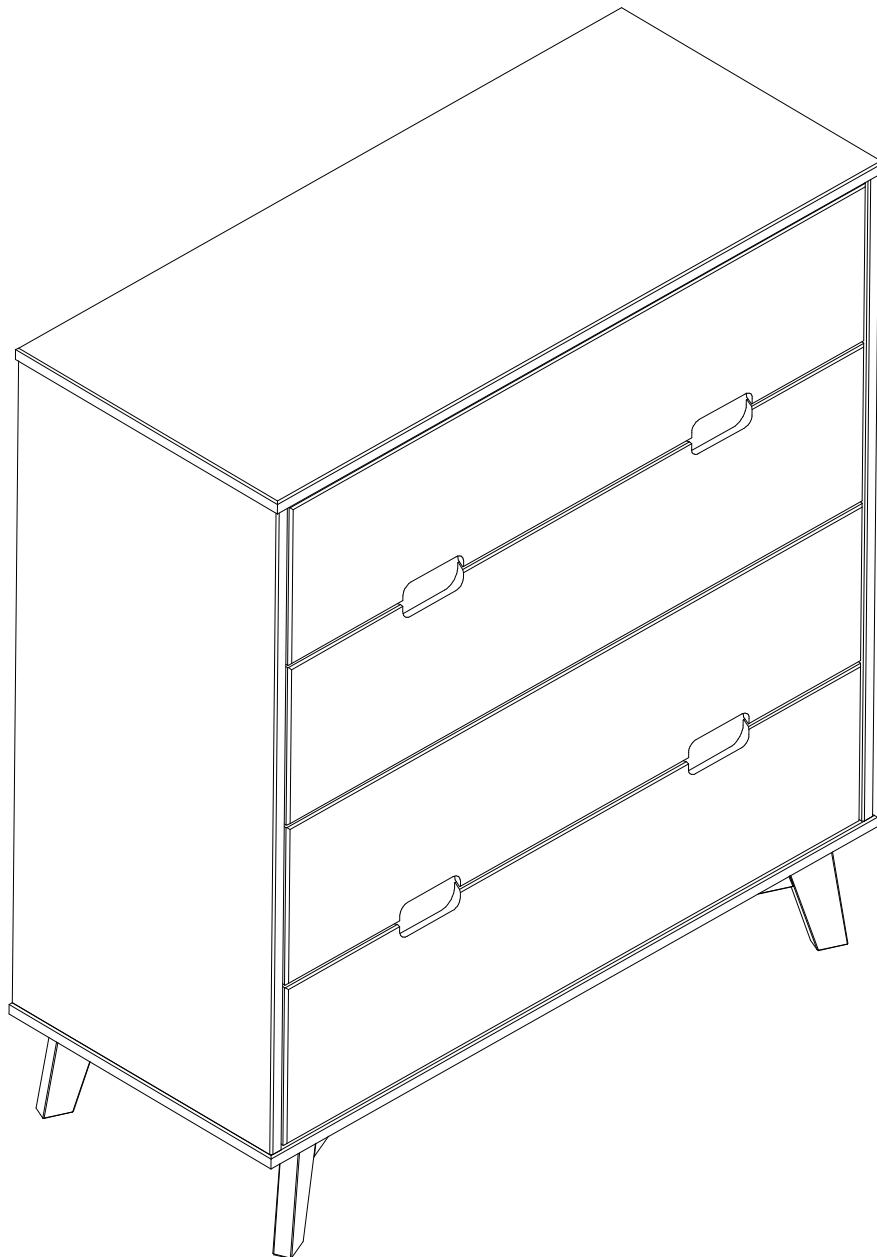


SKU# CS91408 - CS91409

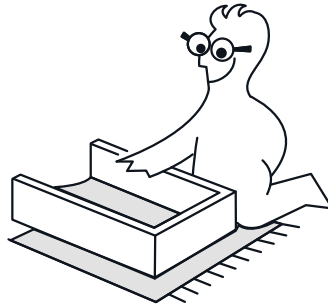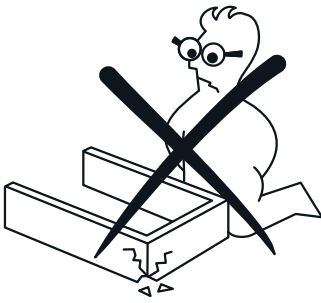


#### For Best Results


- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

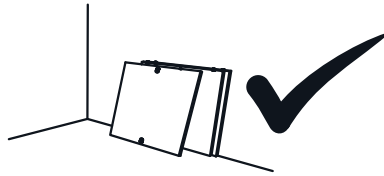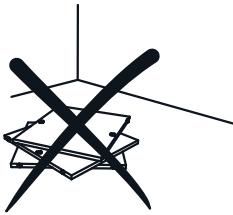

#### Tools Required

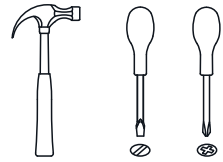

View our assembly video online  
[www.manhattancomfort.com](http://www.manhattancomfort.com)

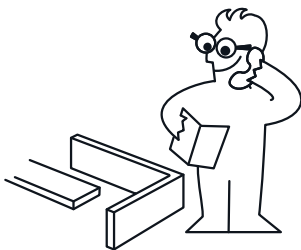

Stuck? Questions? We are here to help.  
1-888-230-2225  
[help@manhattancomfort.com](mailto:help@manhattancomfort.com)

---


## Avoid accidents

After finishing the assembly of the dresser,  
use the indicated safety bracket  
to keep it fixed in the wall.


Do not climb or lean  
on the dresser.


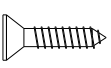
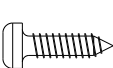



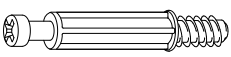

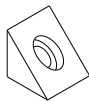
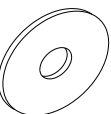


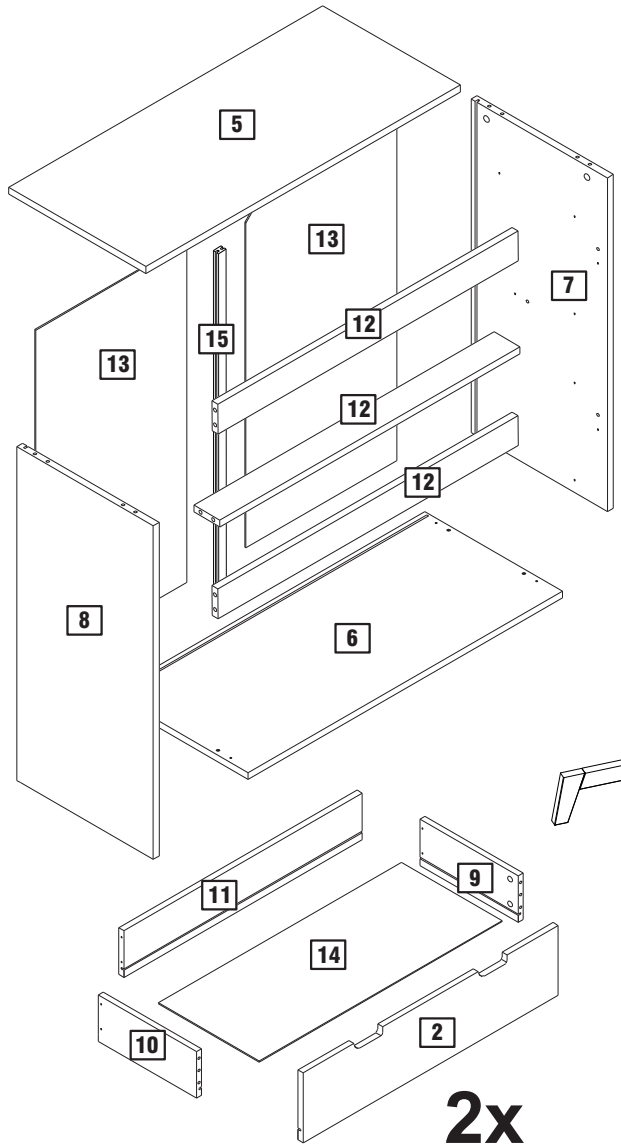

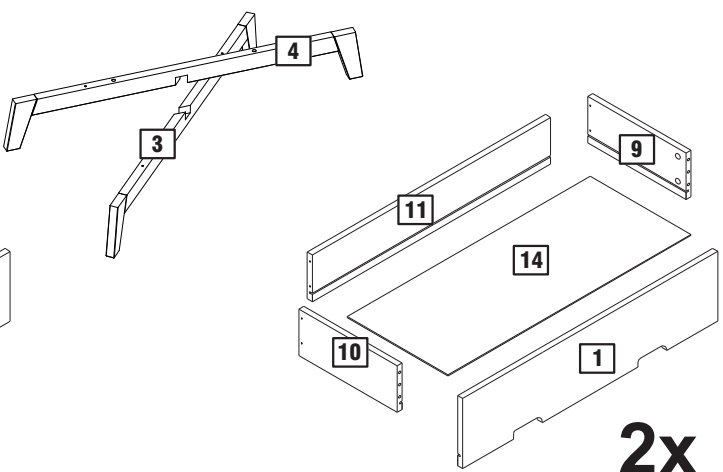


# Included in this Package




- 1 Upper Drawer Front x2
- 2 Bottom Drawer Front x2
- 3 Left Foot x1
- 4 Right Foot x1
- 5 Top Board x1
- 6 Base Board x1
- 7 Right Side x1
- 8 Left Side x1
- 9 Right Side Drawer x4
- 10 Left Side Drawer x4
- 11 Back Panel of Drawer x4
- 12 Central Batten x3
- 13 Blackplate x2
- 14 Bottom of Drawer x4
- 15 H Profile x1

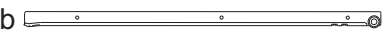


<b>A</b>  Wooden dowel x 26	<b>B</b>  12mm Screw x 32	<b>C</b>  14mm Screw x 17
<b>D</b>  40mm Screw x 20	<b>E</b>  45mm Screw x 4	<b>F</b>  8mm Screw x 16
<b>G</b>  Metal dowel x 26	<b>H</b>  Locking nut x 26	<b>J</b>  Plastic Bracket x 16
<b>K</b>  Washer x 2	<b>L</b>  Wall strap x 1	<b>M</b> a  b  Right runner x 4 pair
<b>N</b> a  b  Left runner x 4 pair		

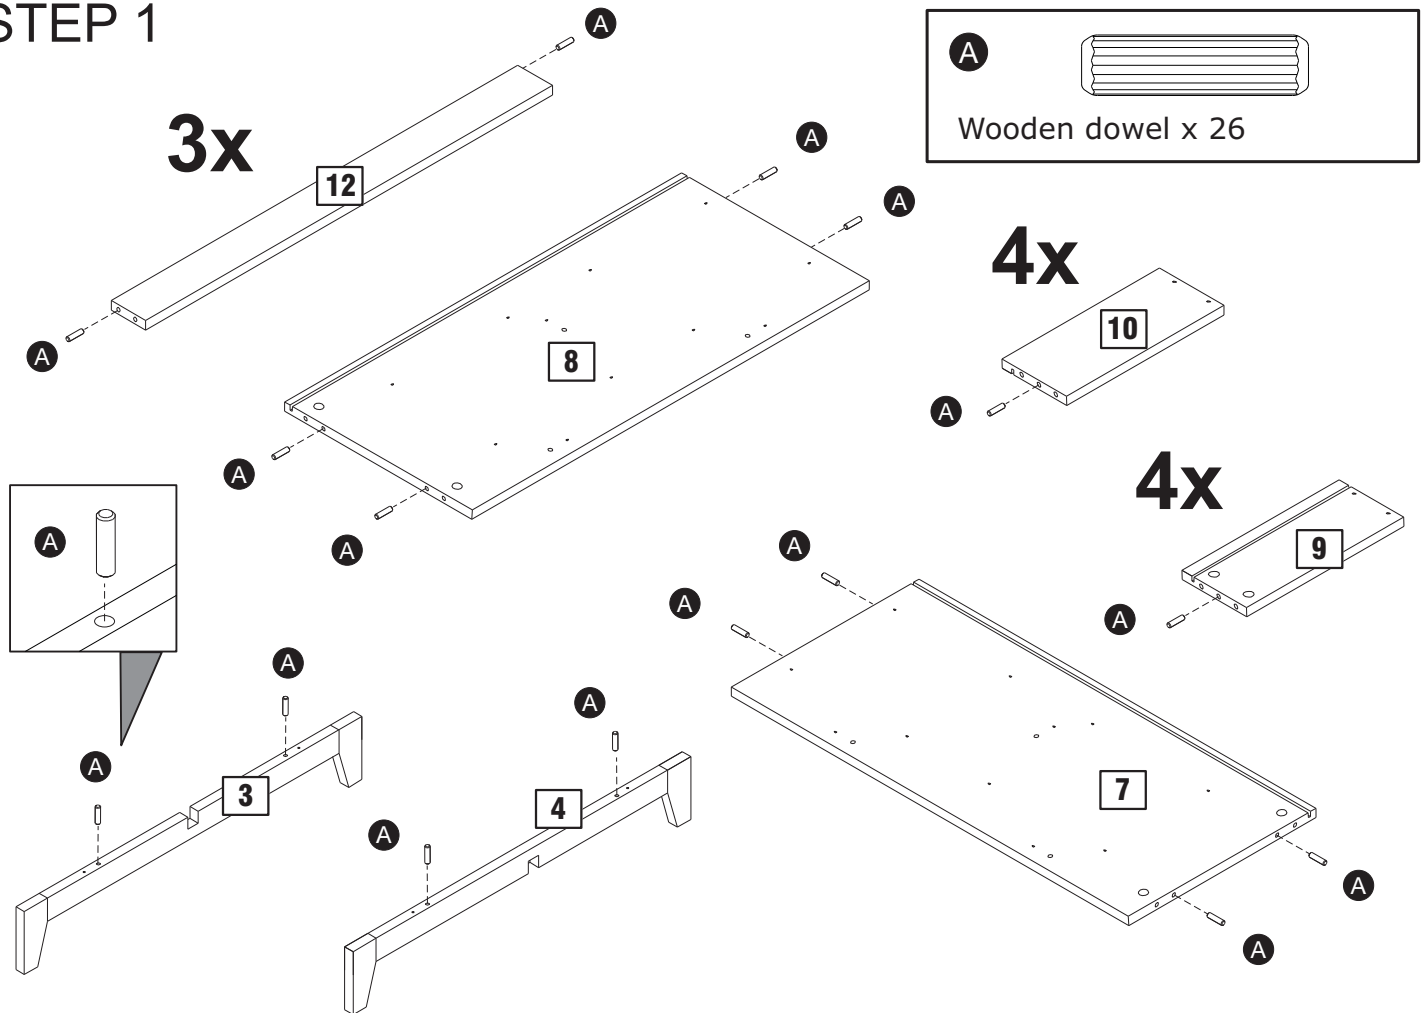


## STEP 1

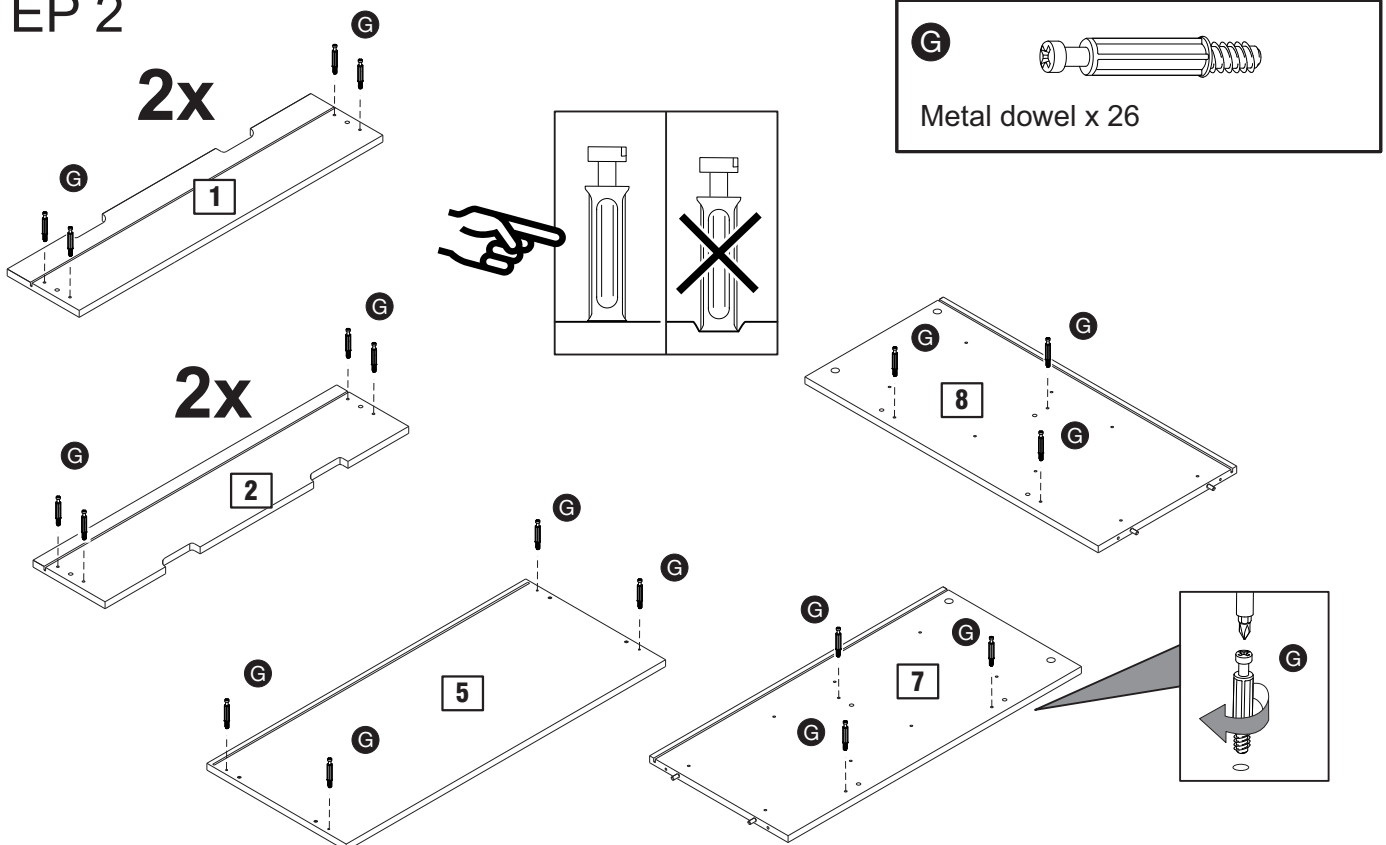


## STEP 2





## STEP 3


<b>F</b>  8mm Screw x 16	<b>M</b>  <b>a</b> Right runner x 4
	<b>N</b>  <b>a</b> Left runner x 4

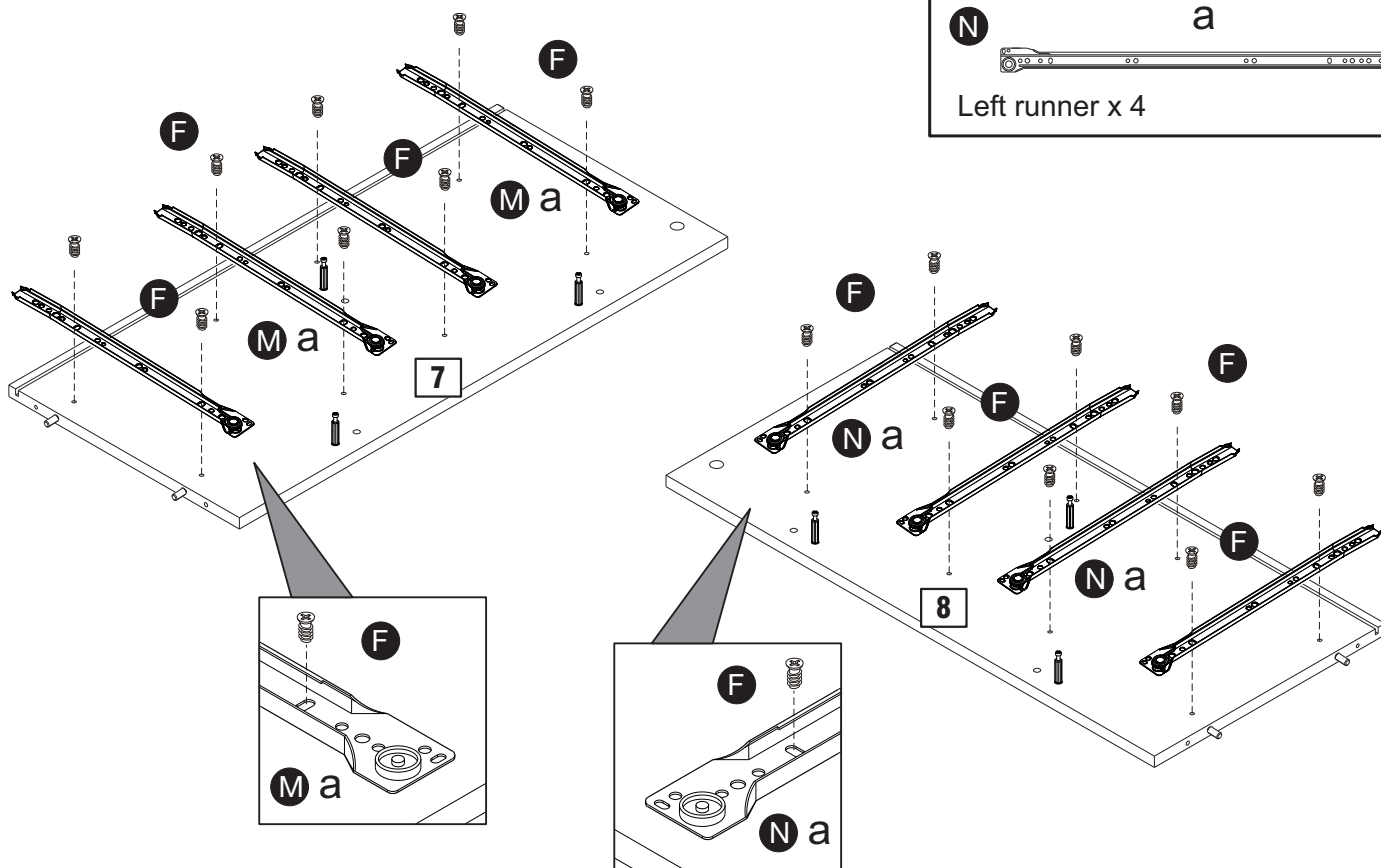


## STEP 4

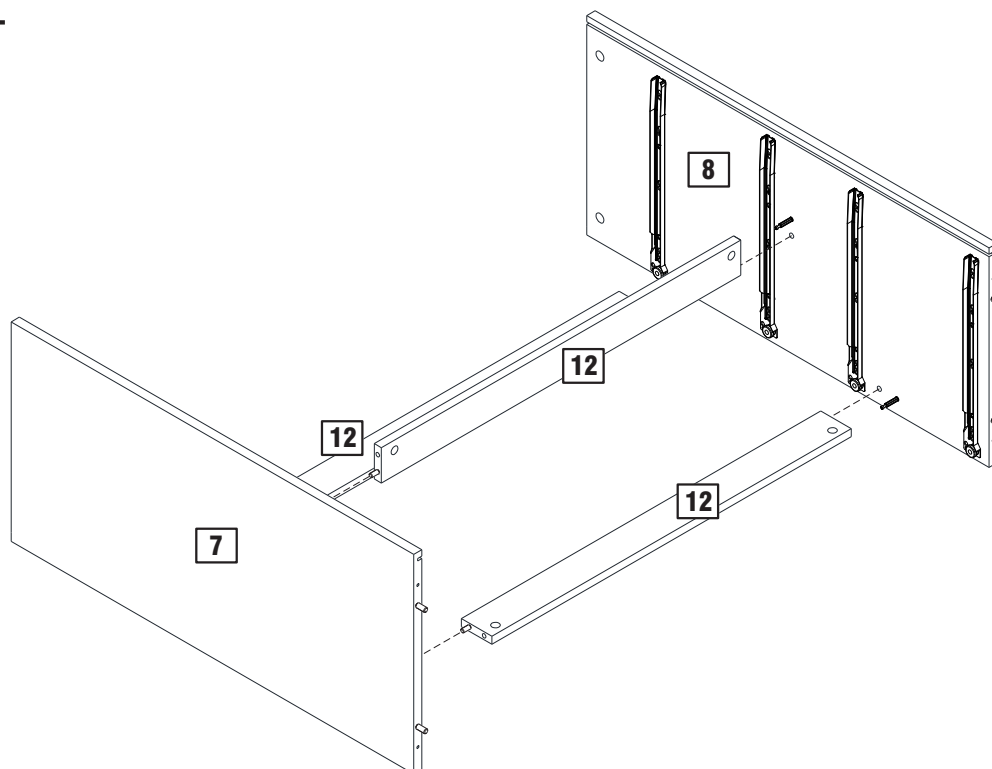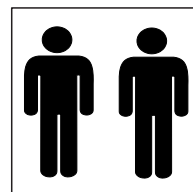


## STEP 5

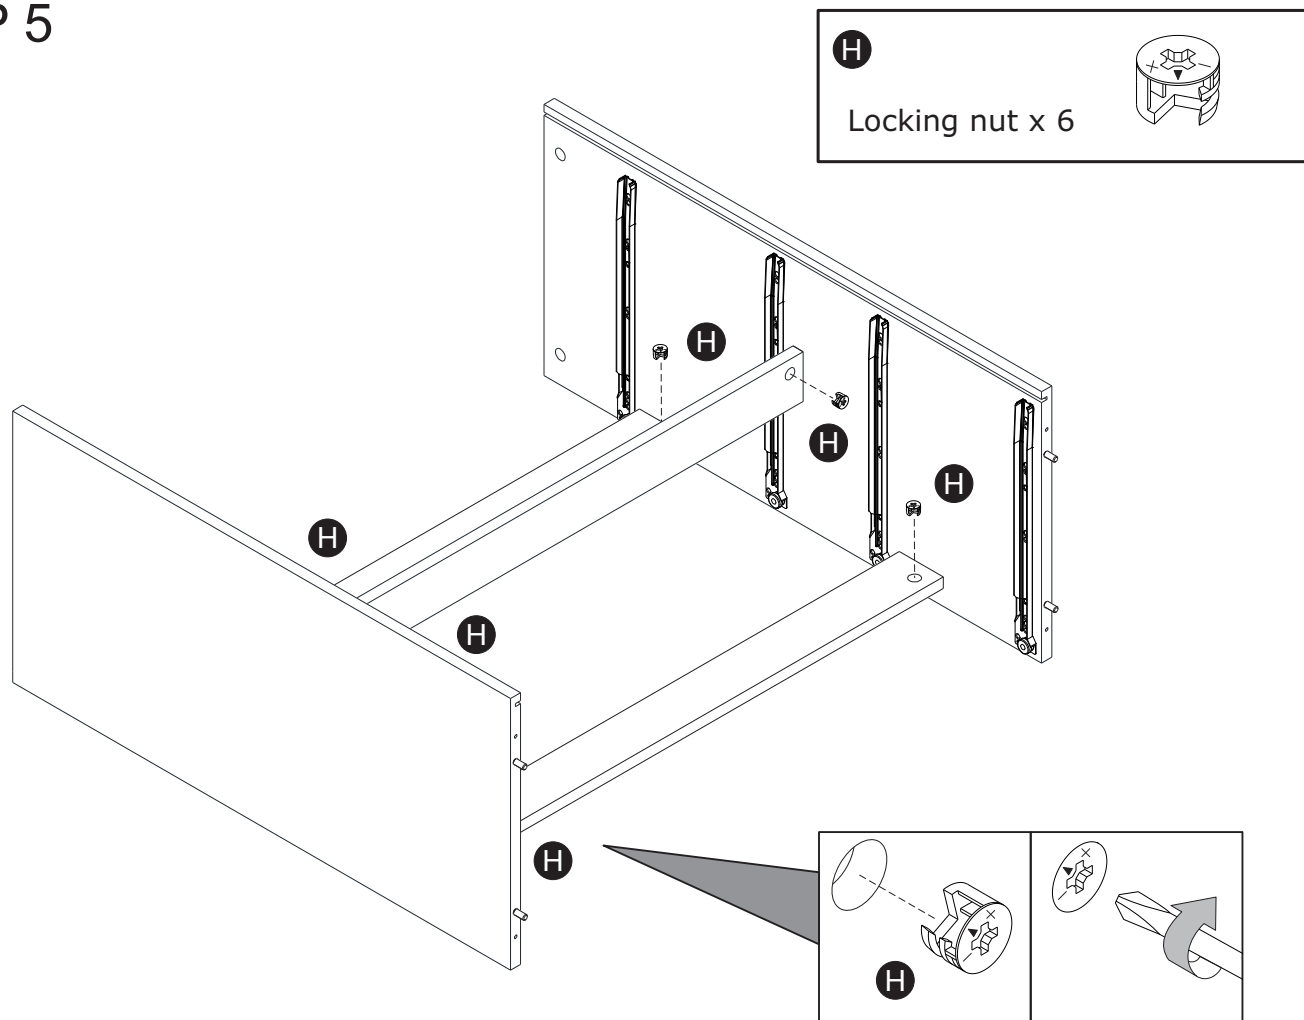


## STEP 6

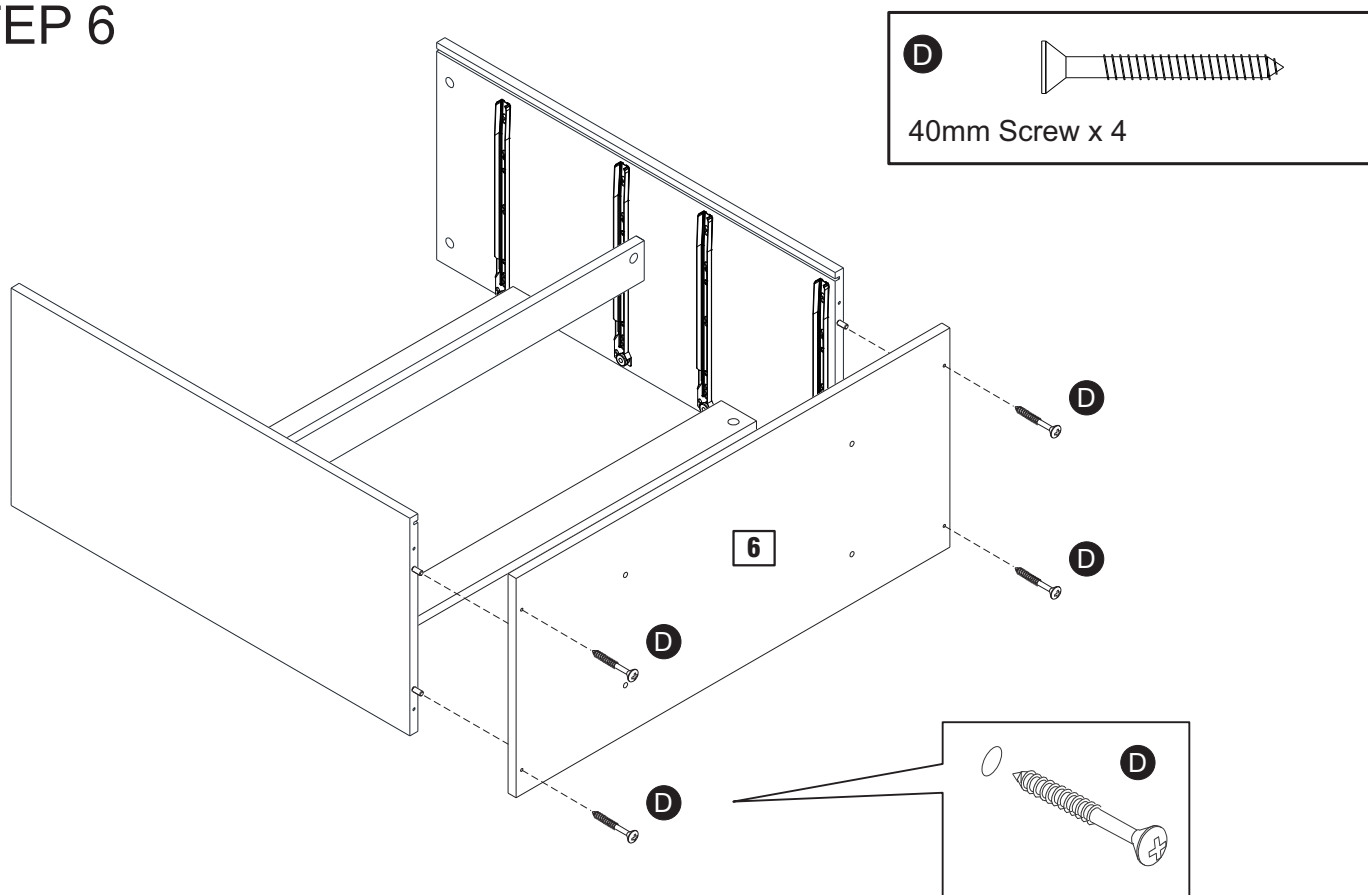

## STEP 7

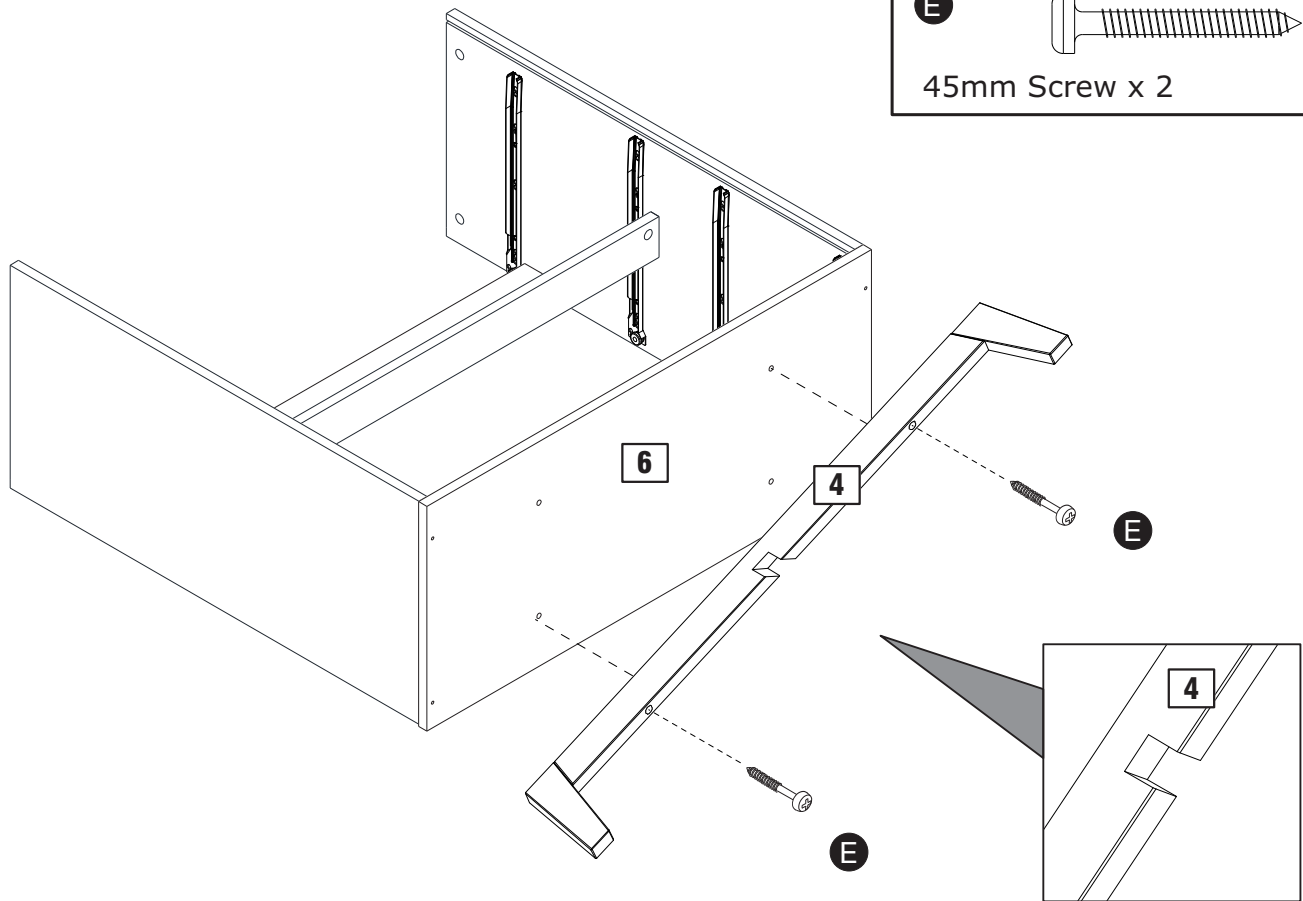


## STEP 8

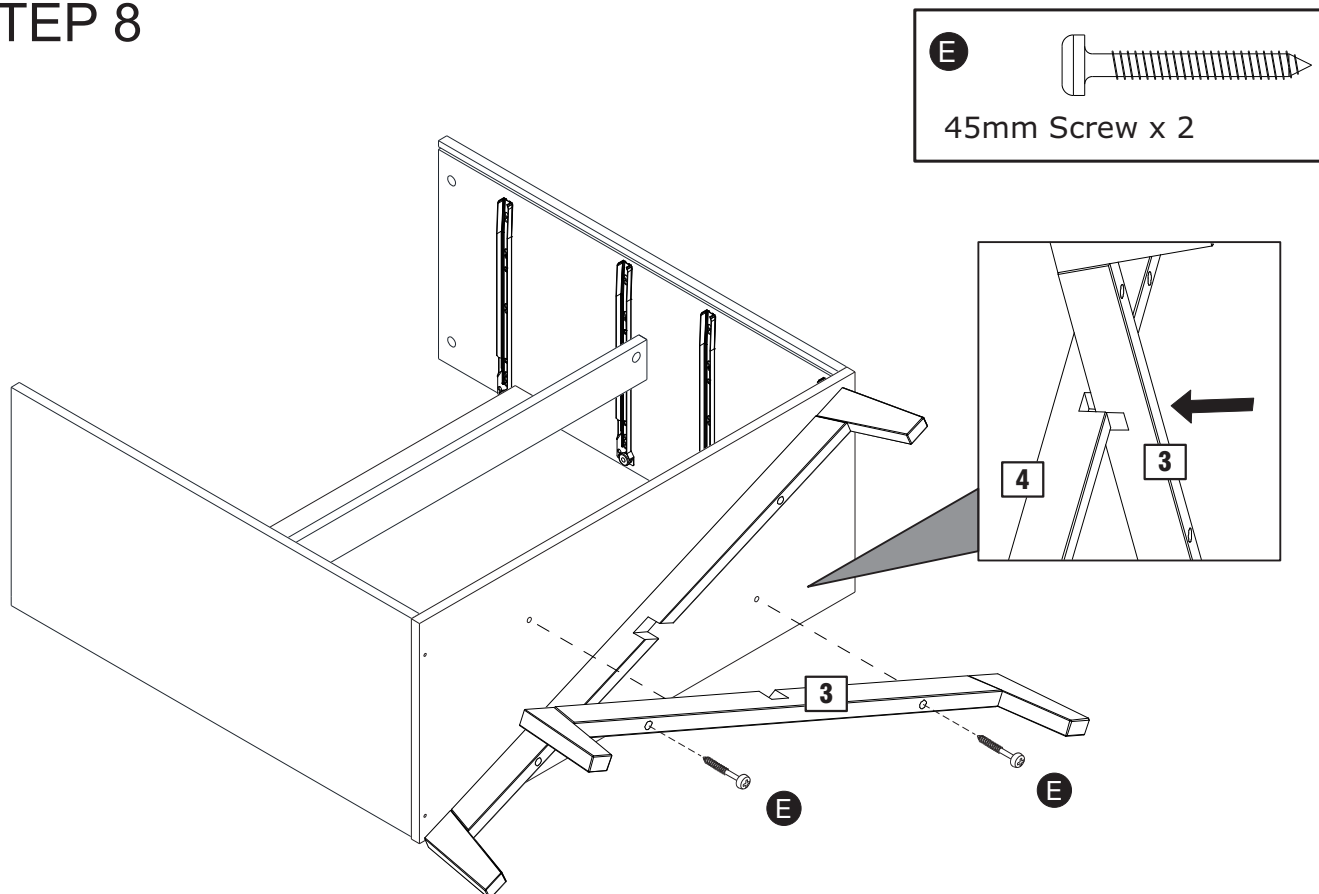





## STEP 9

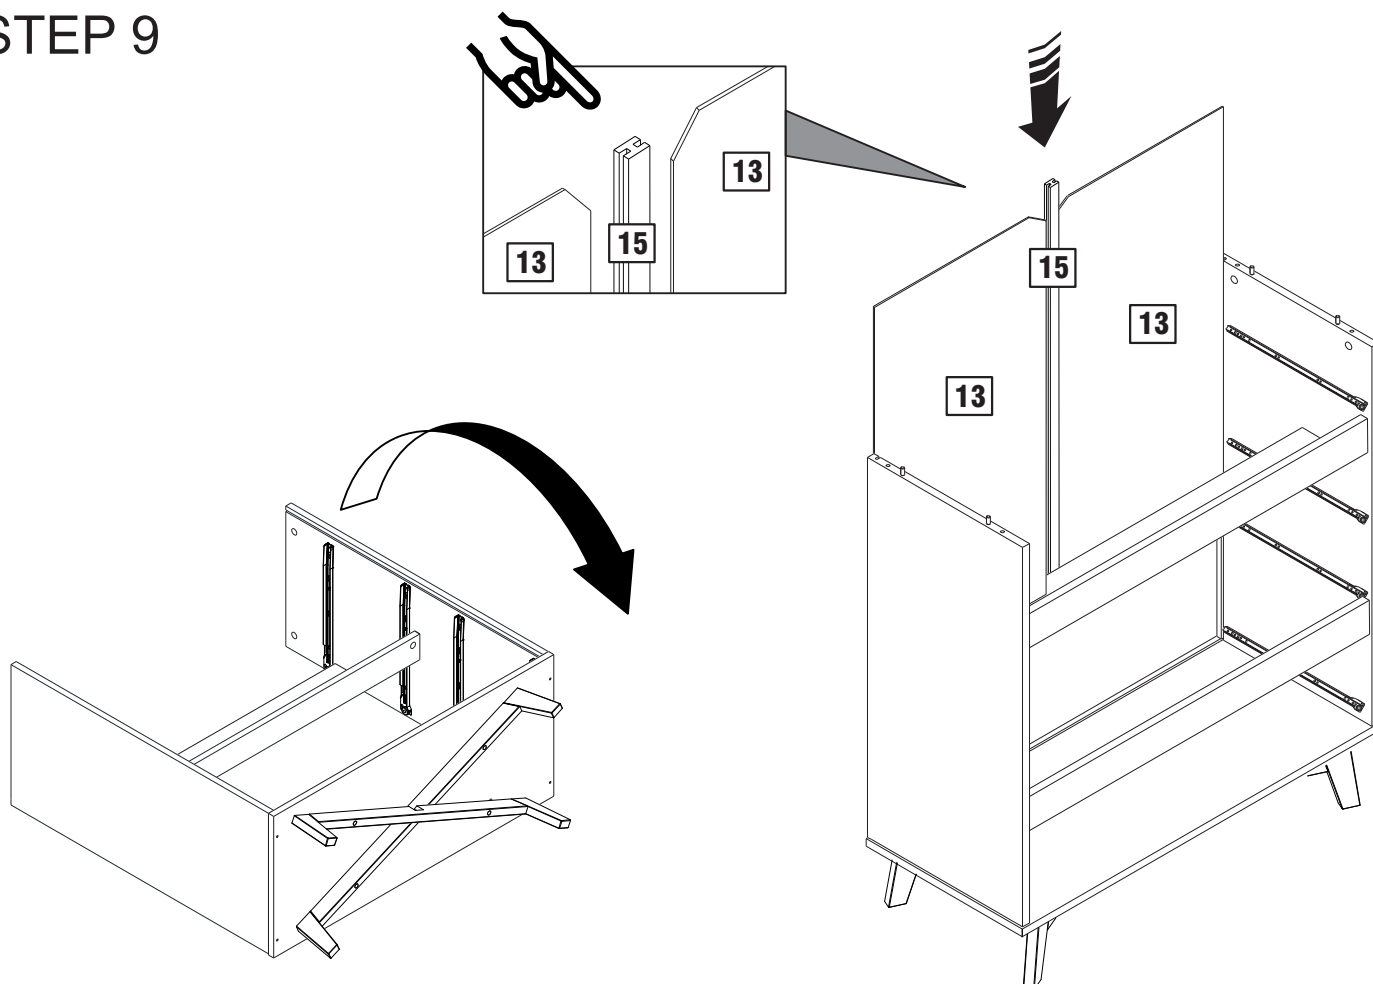


## STEP 10

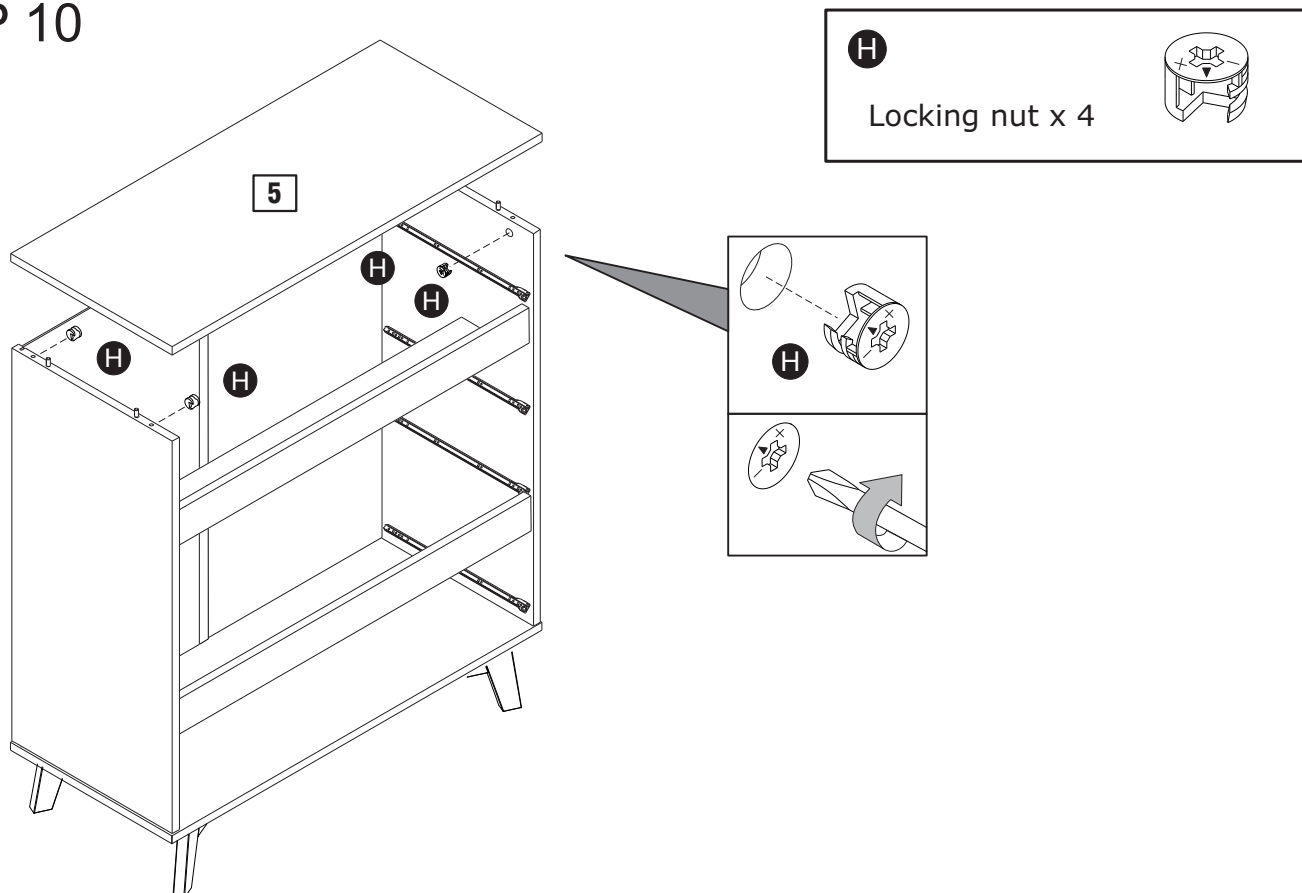


## STEP 11

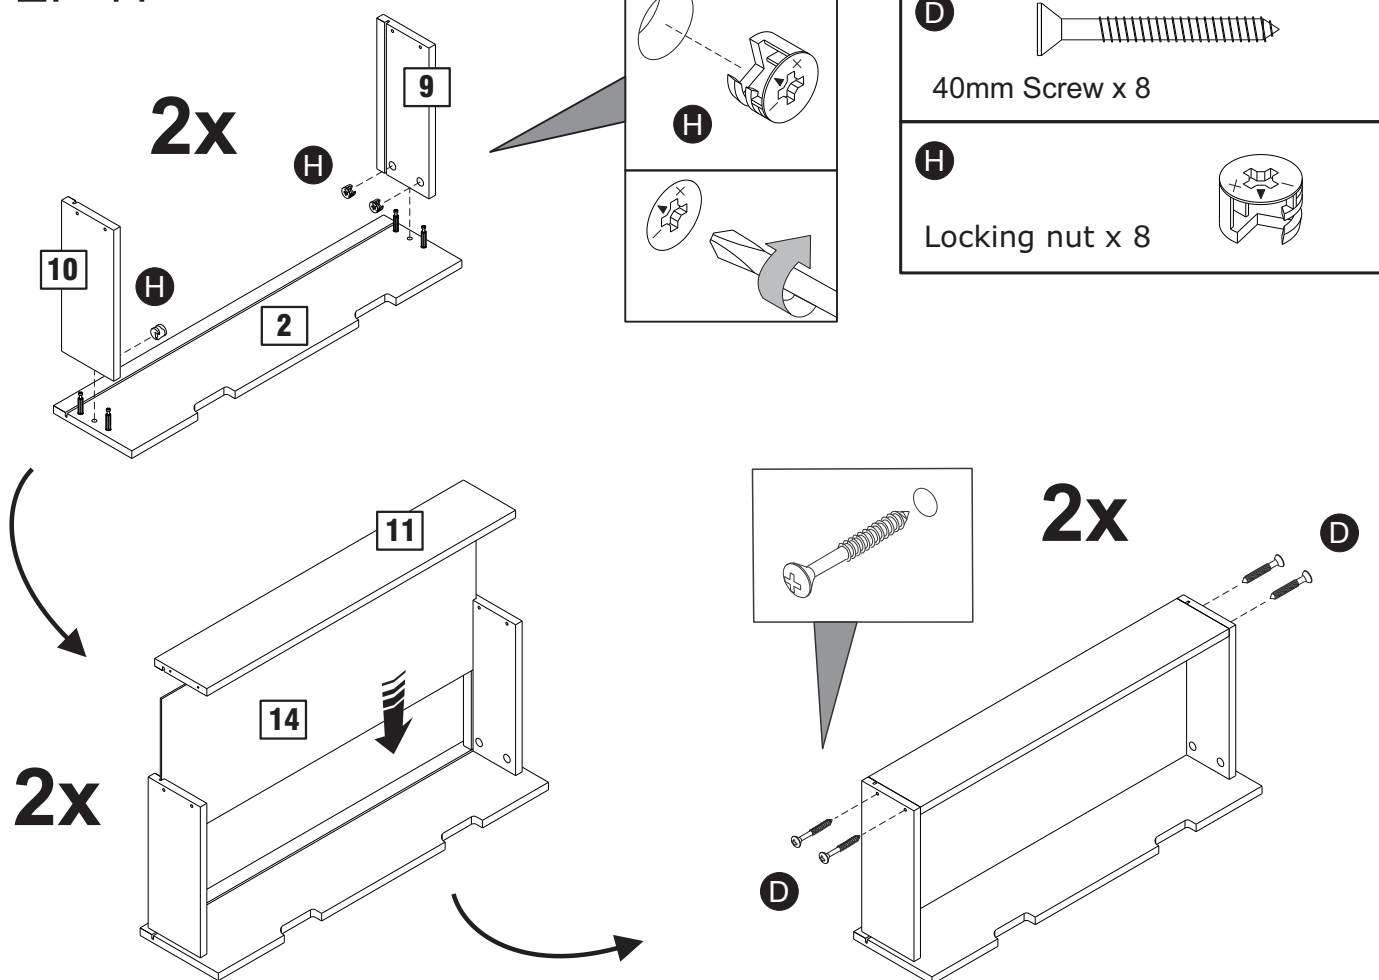


## STEP 12

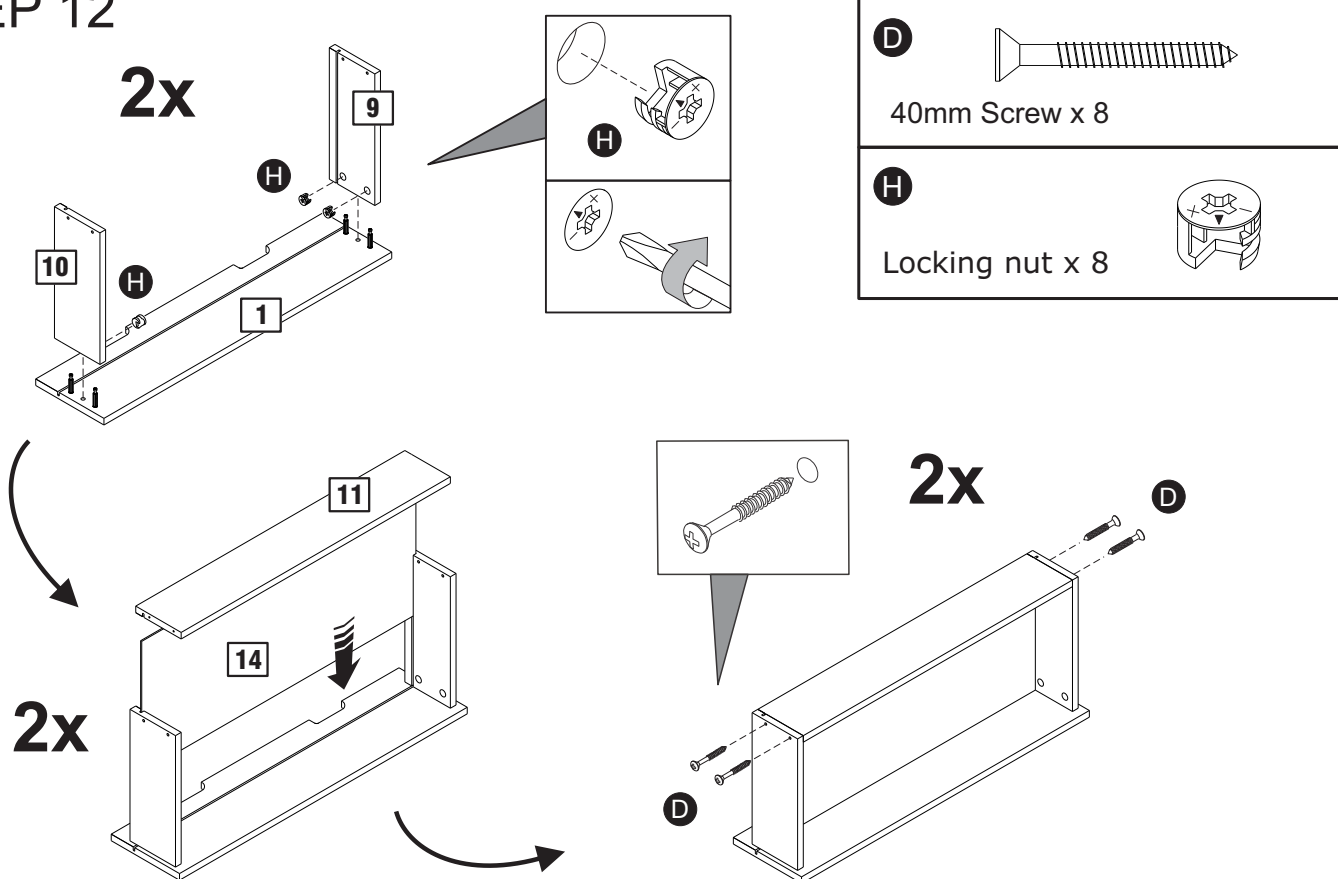



## STEP 13

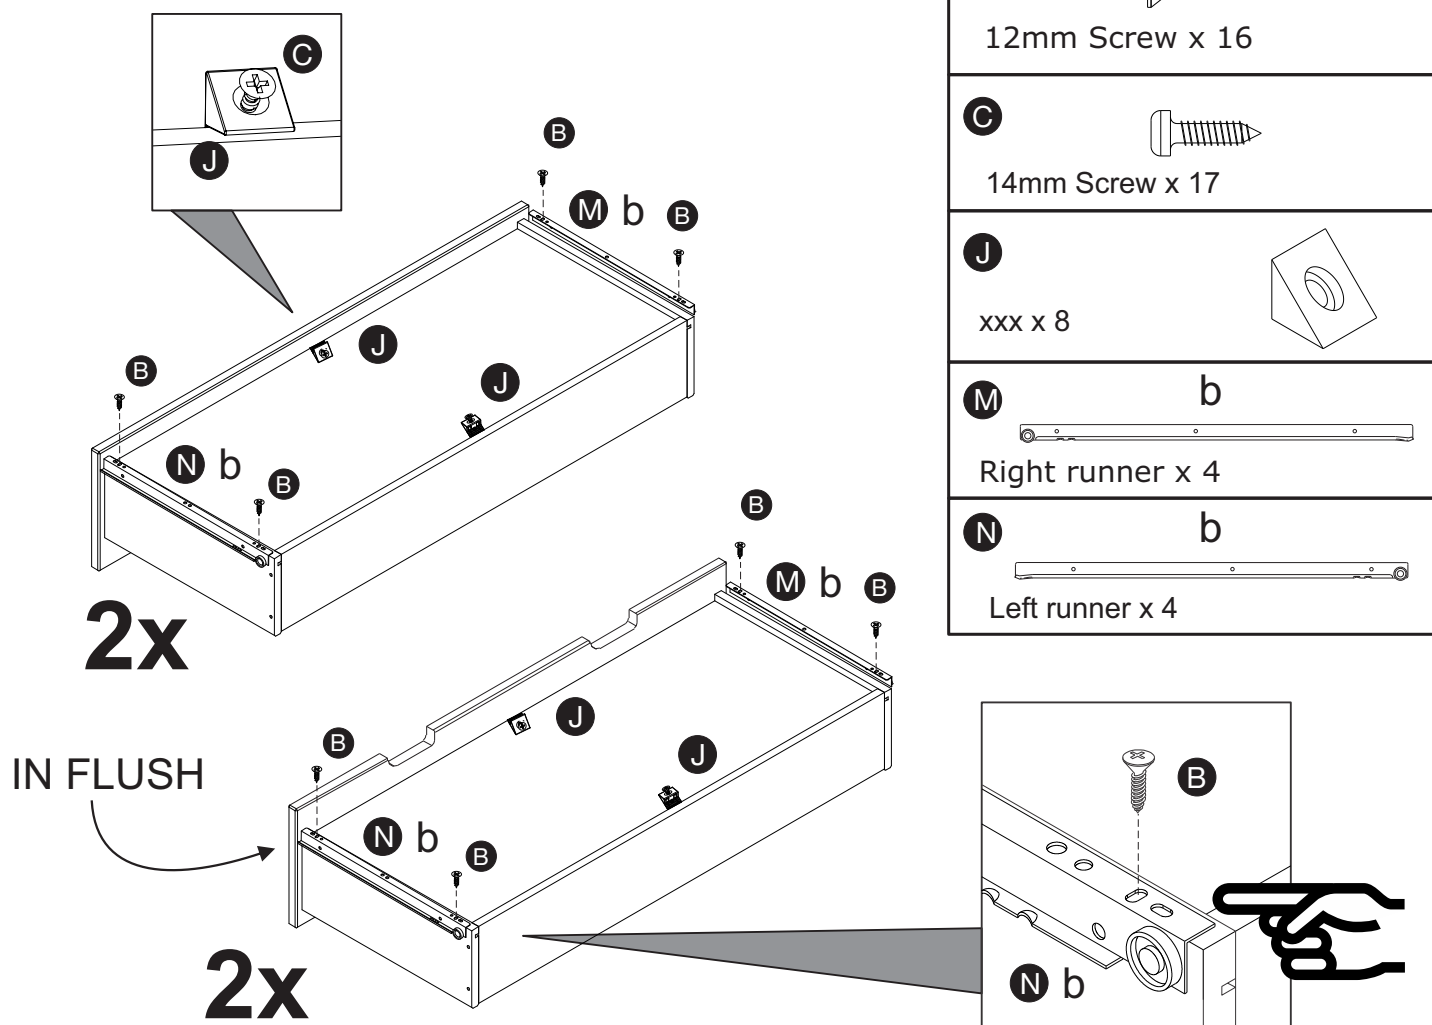


## STEP 14

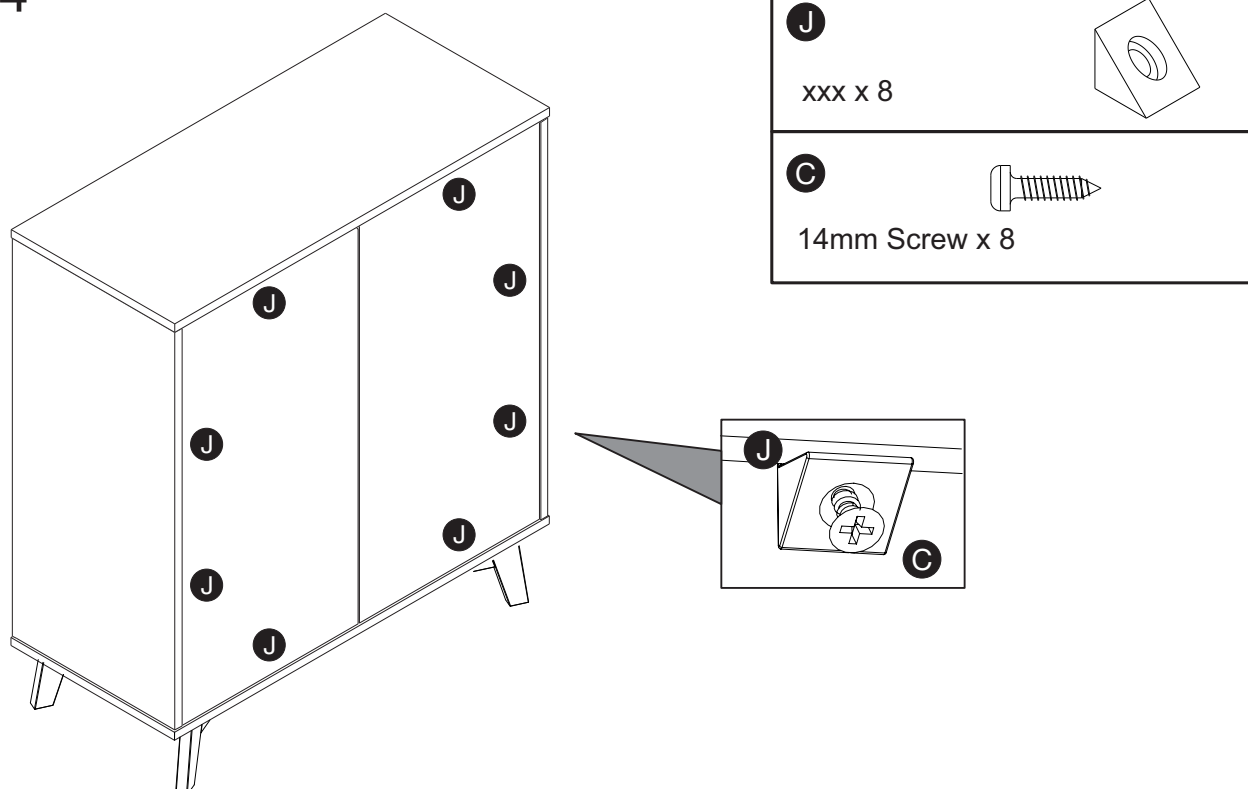











## STEP 13

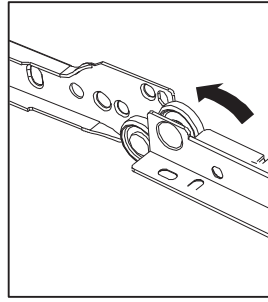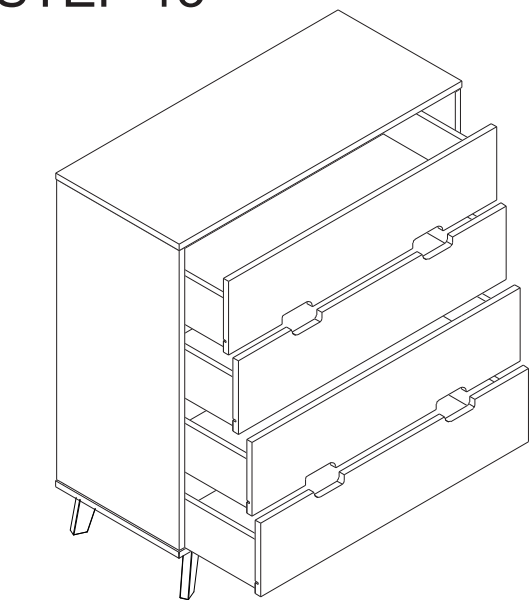


**B**




12mm Screw x 16

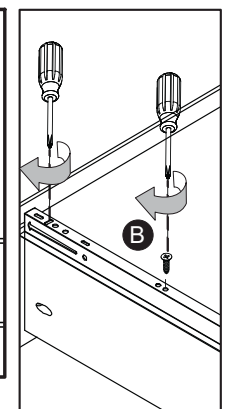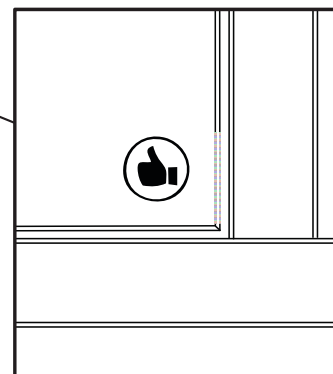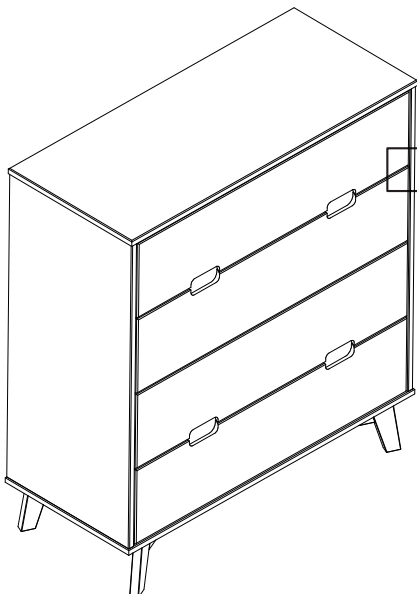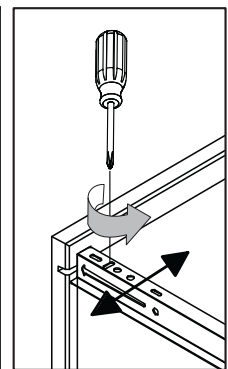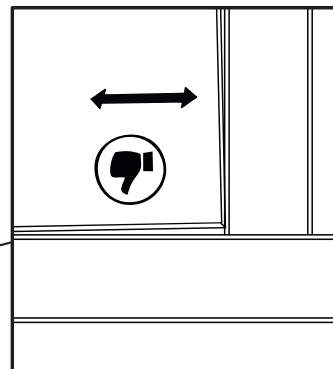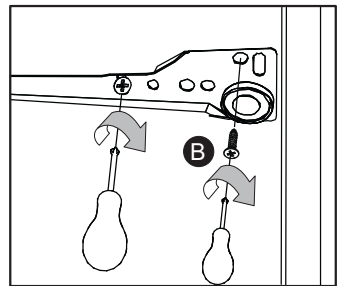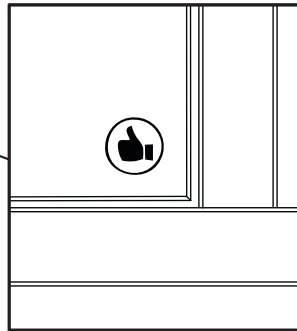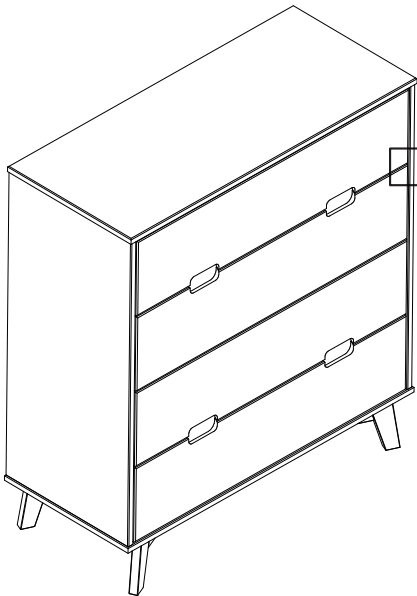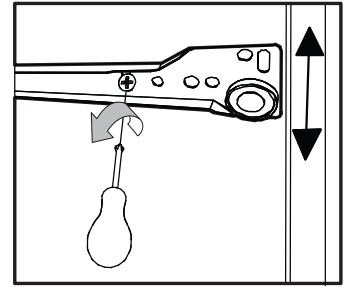
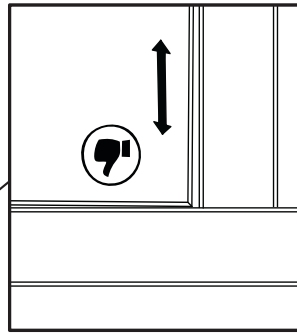




## STEP 11

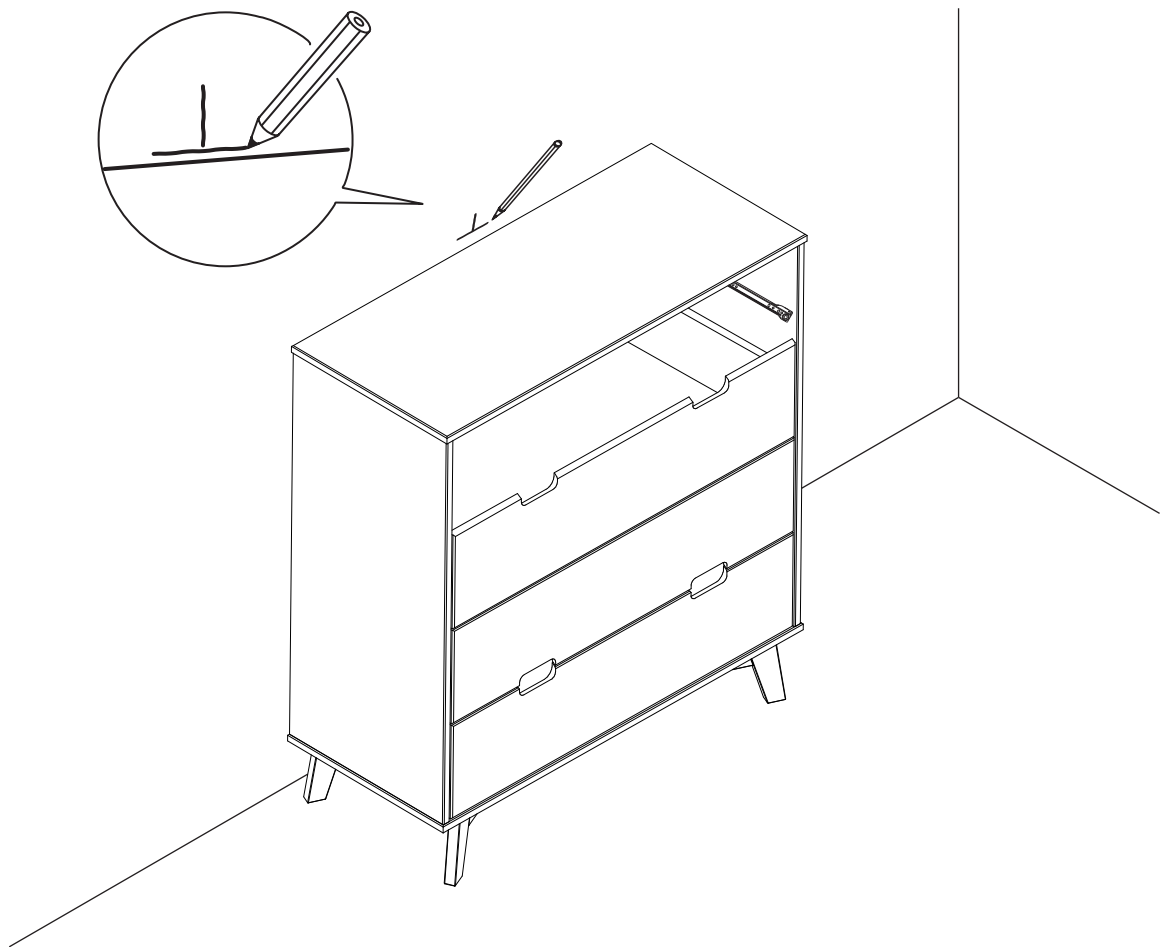

## STEP 12

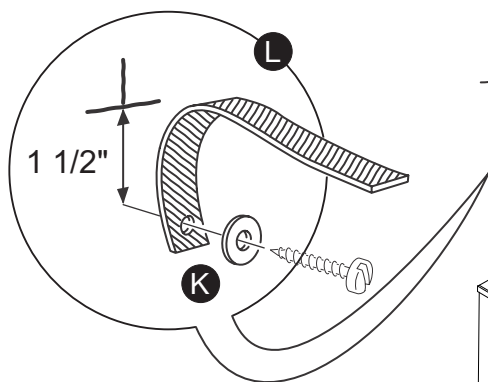

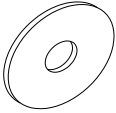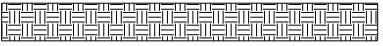
<b>K</b>	
Washer x 1	
<b>L</b>	
Wall strap x 1	

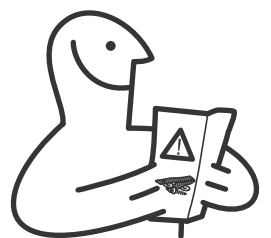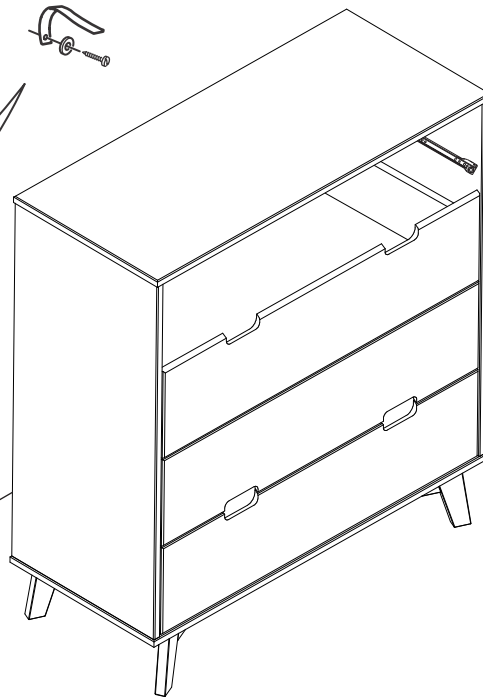


## STEP 13

C




14mm Screw x 1

K





Washer x 1

1<sup>st</sup>

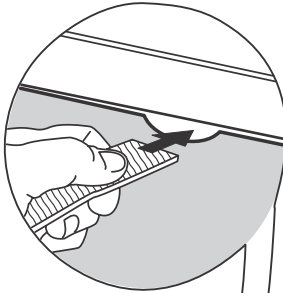

2<sup>nd</sup>

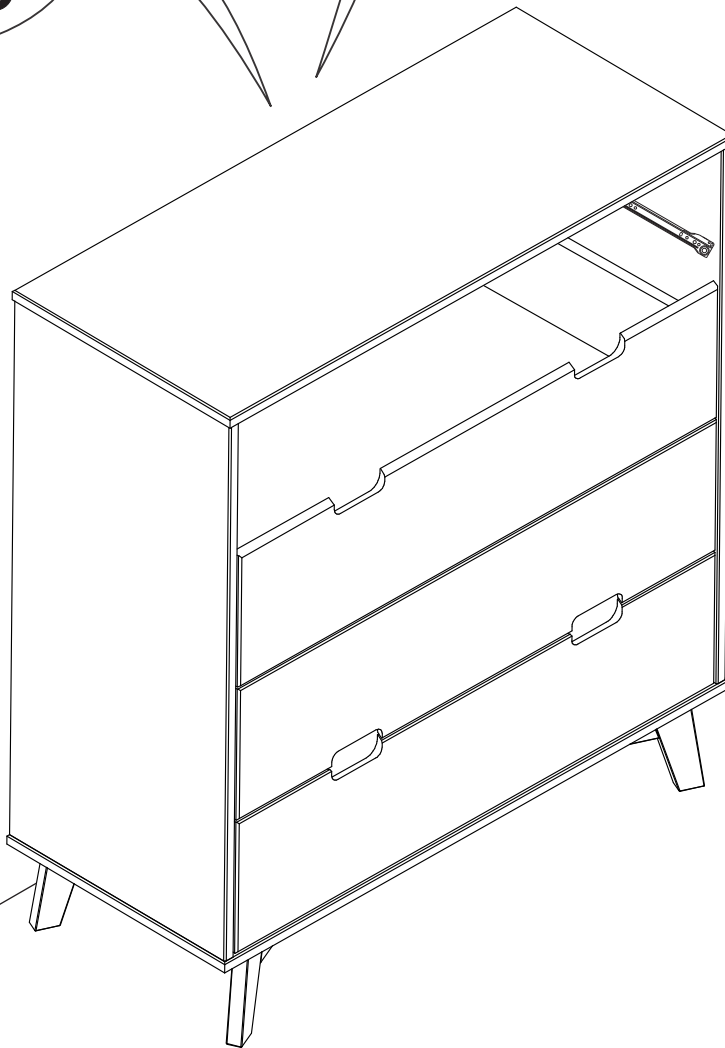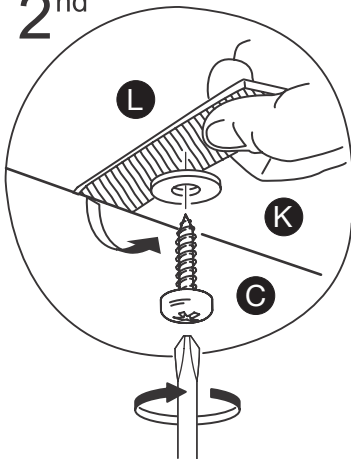

# A guide to - Wall Mounting & Fixings

## Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.



**Important:** When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


### Hints:

- 1: General rule:  Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

## Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

### No.1 "General Purpose" wall plug

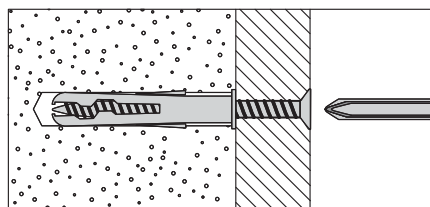


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

### No.2 "Plasterboard" wall plug

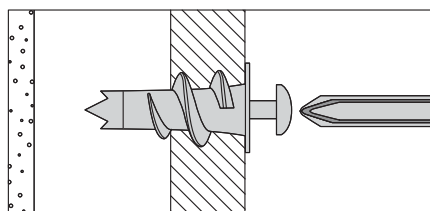


For use when attaching light loads on to plasterboard partitions.

### No.3 "Cavity Fixing" wall plug

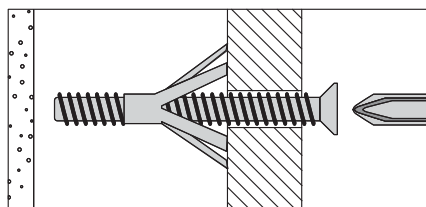


For use with plasterboard partitions or hollow wooden doors.

### No.4 "Cavity Fixing-Heavy Duty" wall plug

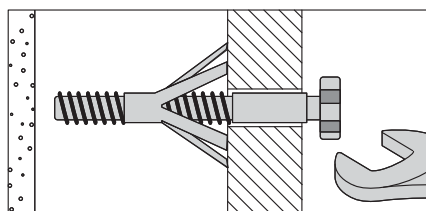


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

### No.5 "Hammer Fixing" wall plug

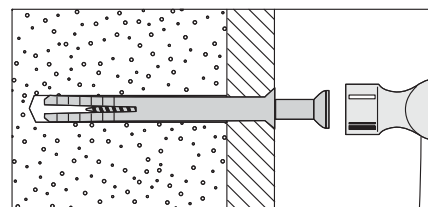

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

### No.6 "Shield Anchor" wall plug Heavy loads

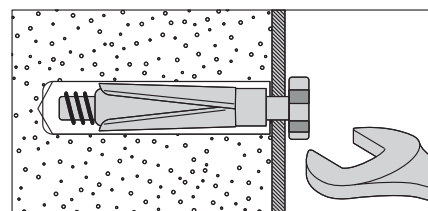

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



## Care & Maintenance

**Safety:** Always check the fitting and location to ensure your safety in and around the home.

**Fitting:** From time to time check the fitting to ensure the wall plugs or screws do not become loose.