



## JONATHAN ADLER

### JACQUES COLLECTION

Our Jacques Collection is the perfect blend of simplicity and glamour, modern and traditional. Crafted from crystal clear acrylic with brass accents or moody smoke acrylic with nickel corners.

---

### CARE INSTRUCTIONS

- To best preserve its brilliant clarity, keep out of direct sunlight.
- Avoid contact with hot items.
- Wipe spills immediately. Do not allow water to collect on the surface.
- Clean using a soft, dry microfiber cloth in straight strokes.
- Do not use household window cleansers on acrylic. If you need deep cleaning, use warm (hot water can cause clouding) soapy water and a soft, lint-free cloth. If scratches develop, Novus cleaners may be used to repair. Novus level 1 is for cleansing, 2 for polishing light scratches, and 3 for more significant wear.
- We recommend retightening allen bolts every three months to ensure stability.
- **For leather items:** Leather is a naturally porous material. Exposure to moisture can cause leather to warp and stretch. Wipe spills immediately. Maintain leather by keeping away from direct sunlight and fluctuations in temperature. If product is showing signs of significant wear, consult with a professional.

# JONATHAN ADLER

## FURNITURE

### Jacques Pedestal

#### Assembly Instruction


- For ease of assembly two people are recommended.

#### Parts Included:

- (4pcs) Acrylic Bar - A





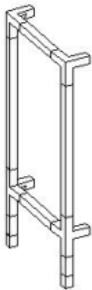




- (2pcs) Pedestal Frame - D



- (2pcs) Glass Shelf - J





#### Hardware Enclosed:

B	 Countersink Screw	6pcs
C	 Allen Wrench	1pc
F	 L Bracket	2pcs
G	 Anchor	2pcs
H	 Screw	2pcs
L	 Flat Headed Screw	2pcs
K	 Rubber Pad	8pcs


#### Assembly Instructions:

- Remove all of the components from their boxes and place them on a carpeted or scratch-free surface.
- Insert Acrylic Bar (A) into metal holes of Pedestal Frame (D) and tighten all Countersink Screws (B) by using Small Allen Wrench (C).
- Insert the other Pedestal Frame (D) to the assembled Acrylic bars and tighten all Countersink Screws (B) by using Small Allen Wrench (C).

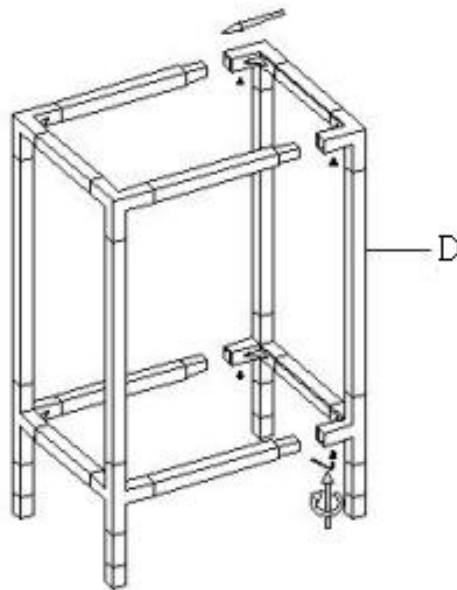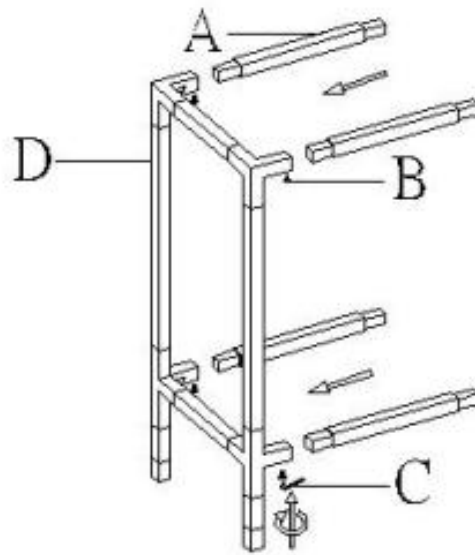


4. If the item stands next to the wall, anti-tip hardware is required. Insert Anchor (G) into wall and tighten Screws (H) through the brackets by using screwdriver (not included), then fasten the brackets to the pedestal by using the Flat Head Screws (L) and Small Allen Wrench (C).


5.

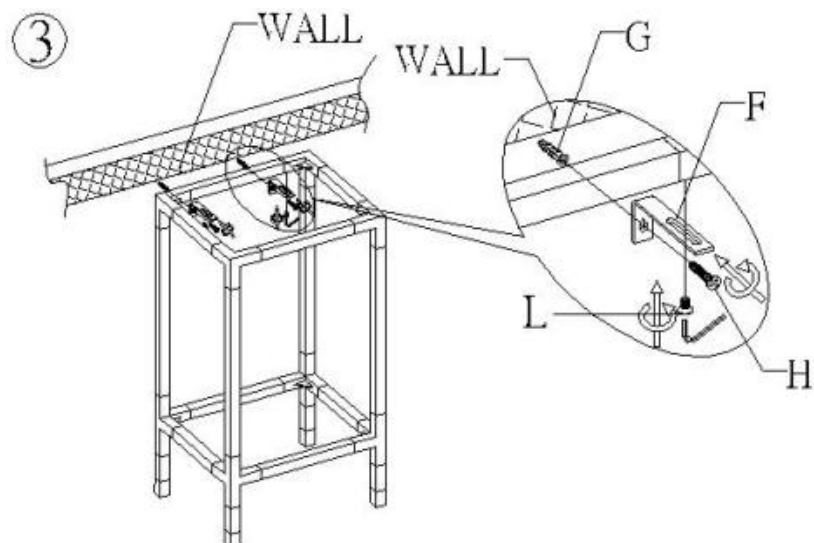

6. Put Rubber Pads (K) on to the corner of pedestal, and then carefully place the Glass Shelves (J) on the Rubber Pads (K).
7. Adjust the levelers under the legs if needed.

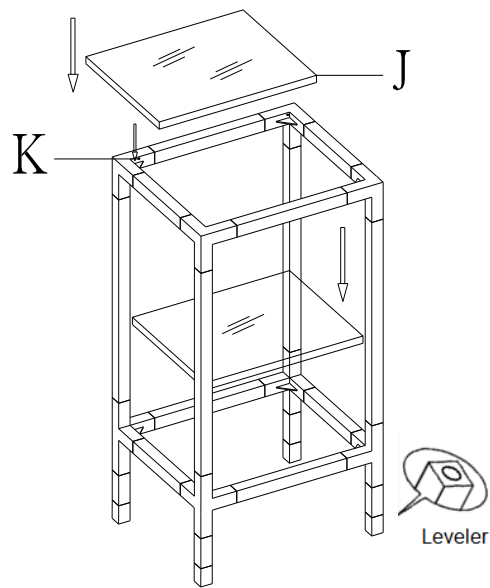

8. Assembly is complete.

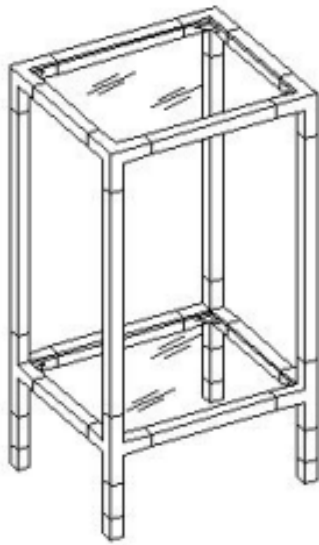

Ensure all bolts are fully tightened every three months to ensure stability.