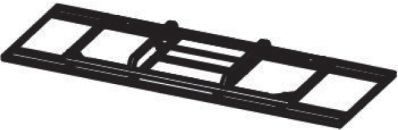








PART LIST

PART#	DESCRIPTION	PICTURE	Q'TY
A	Table top		1
B	Legs		4
C	Hex Head Bolt M6 x 25 mm		16
D	M6 Washer		16
E	M6 Spring Washer		16
F	Bolt Cap		16
G	Wrench		1

Assembly Steps:

Note: Do not fully tighten bolts until assembly is completed and alignment is correct.

Step 1. Carefully place the table top frame (A) upside down on a non-abrasive surface. Assemble the table legs (B) to the table top (A) with Hex Head bolts (C) , M6 Spring Washer (E) and washers (D) by Wrench (G), then cover the bolts with bolt cap (F) as show in Figure1.

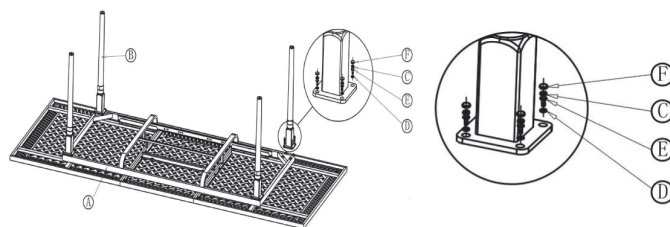


Figure1

Step 2. Verify all bolts are securely tightened before use and turn your table right side up (See Figure 2). Your table is now ready to use.

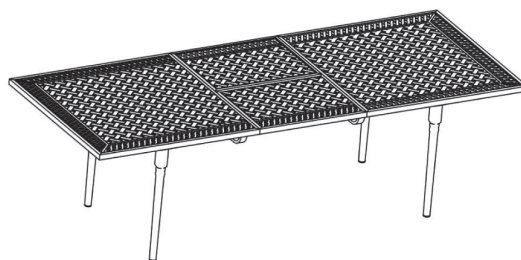













Figure 2

PART LIST

PART#	DESCRIPTION	PICTURE	Q'TY
A	Chair frame		1
B	T rocker		1
C	Base		1
D	Steel panel		4
AA	Bolt M8x45mm		4
BB	M8 Washers		8
CC	M8 Spring gasket		4
DD	M8 Nut		4
EE	M8 Bolt Cover		4
FF	Bolt Cover for M8 nut		4
GG	Open Wrench		2

Assembly Steps:

Note: Do not fully tighten bolts until assembly is completed and alignment is correct.

Step 1. Carefully place the chair frame (A) upside down on a non-abrasive surface. Assemble the T rocker (B) to the chair frame (A) with steel panel (D) and bolts (AA) and washers (BB) and M8 Spring gasket (CC) and M8 Nut (DD) by using open wrench (GG), then cover the bolts with bolt covers (EE and FF) as show in Figure 1.

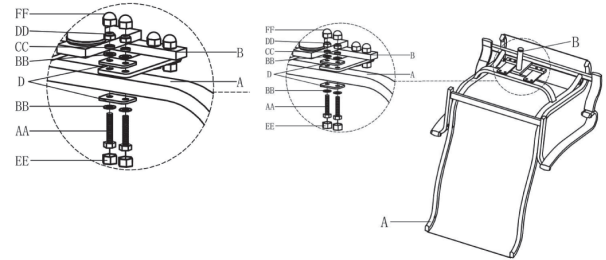


Figure 1

Step 2. Place the chair frame (A) into the base (C) as show in Figure 2.

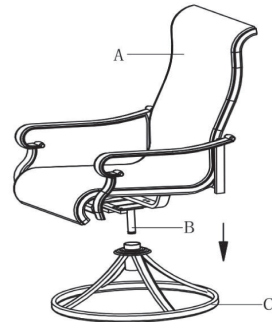


Figure 2

Step 3. You chair is now ready to use.

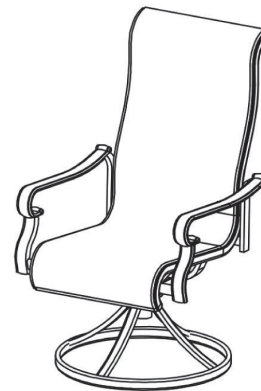


Figure 3