

# HULALA

---

H O M E



**ITEM NO.NSYL0889**

---

**NOTE:**

This brochure contains IMPORTANT safty info. Please read and keep for future reference.

---

# MAINTAINANCE AND WARNING



- 1.Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight,material will possibly fade over time.
- 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protectedby a padded barrier.
- 6.Not for commercial use,only for residential use.



Weight Limitation

















**70 LBS**

# EXPLOSIVE VIEW







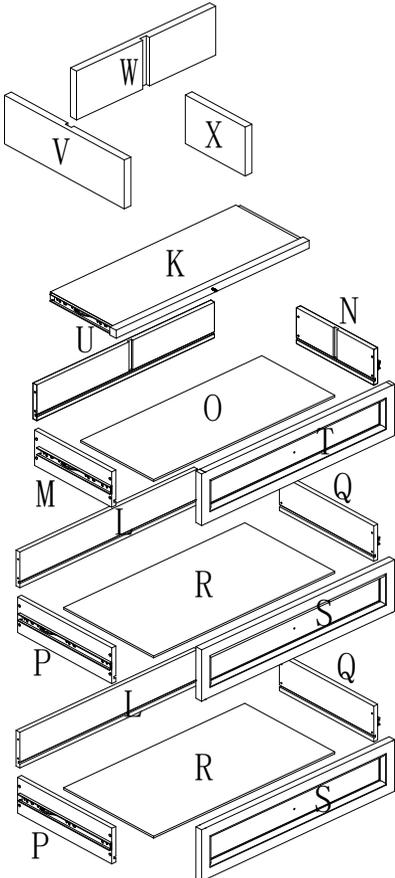
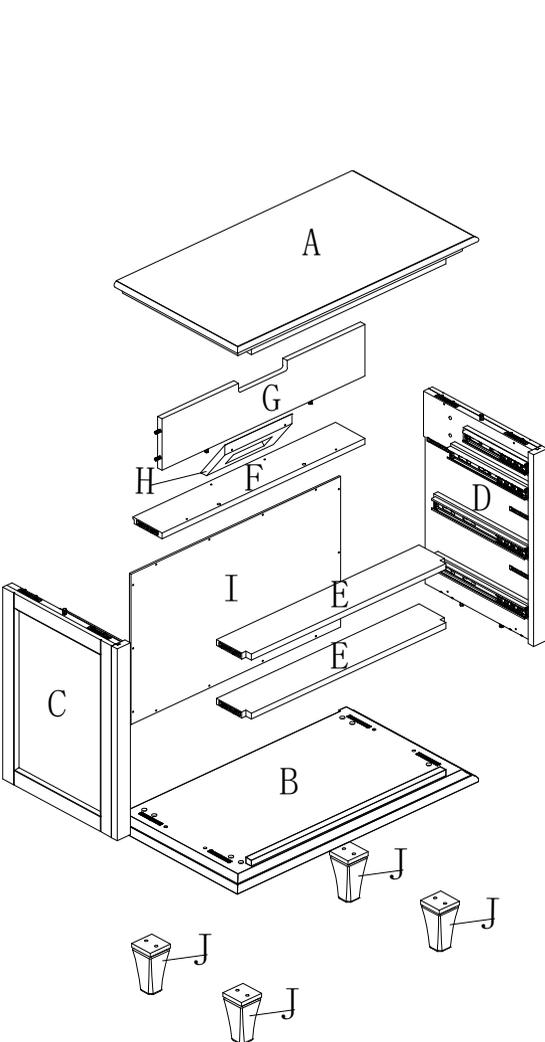


2 PERSONENS


# PARTS LIST 1

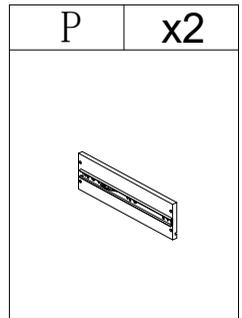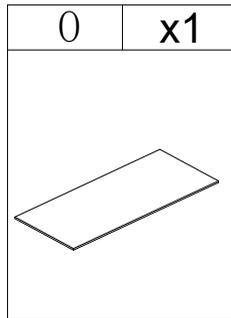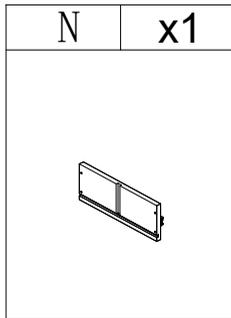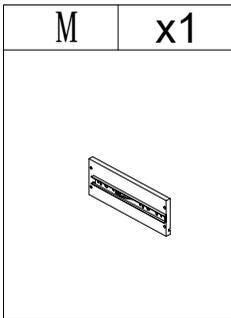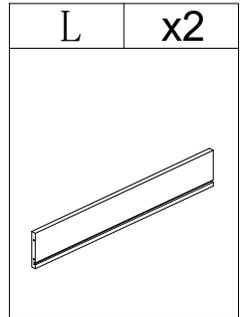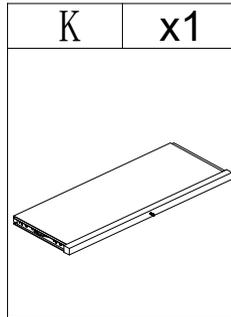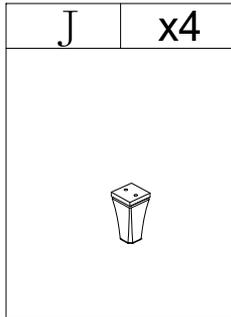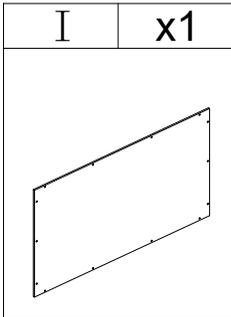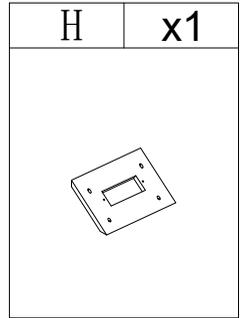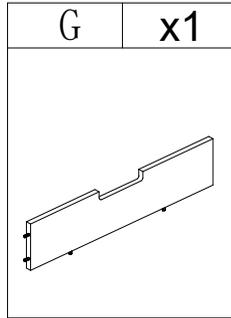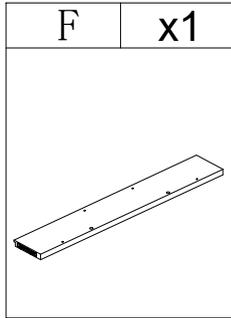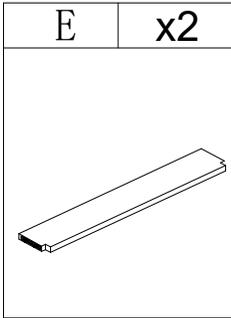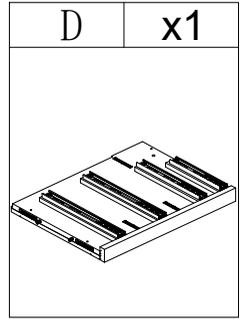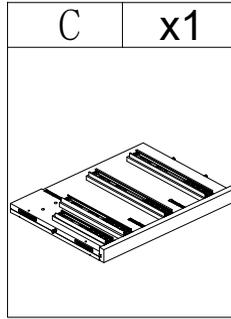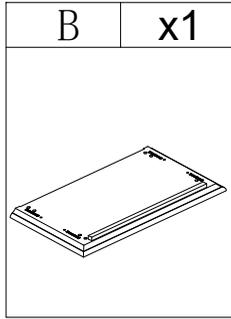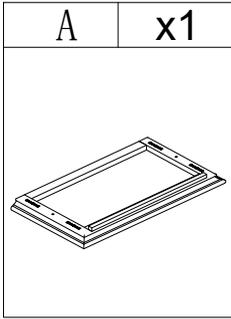



# PARTS LIST 2

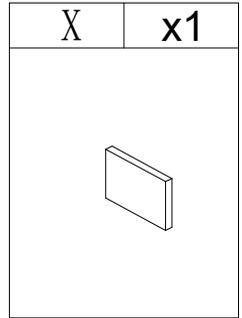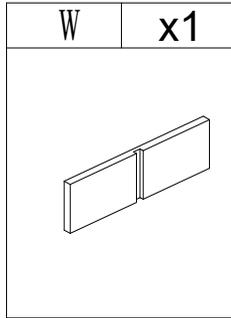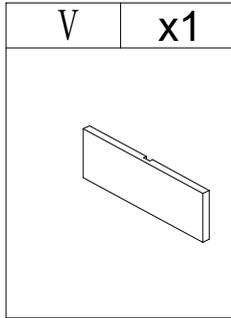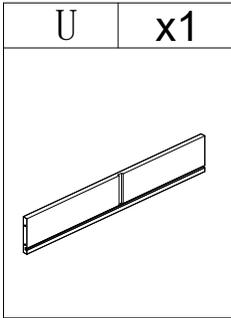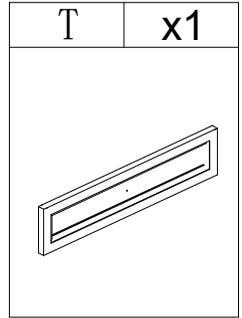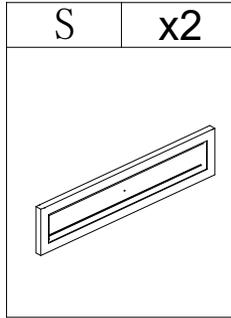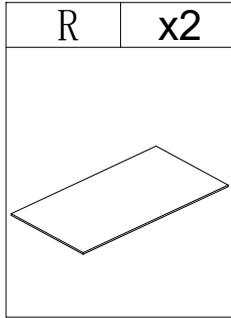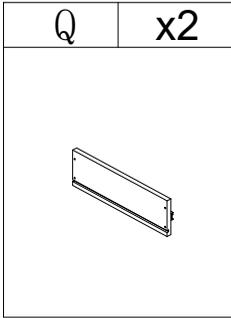

# HARDWARE LIST

#1	x30	#2	x14	#3	x2	#4	x3	#5	x2	#6	x8
											
Ø4*25MM		Ø3*15MM		Ø3*20MM		Ø5/32"*18MM		Ø3*12MM		1/4"*2"	
#7	x1	#8	x3	#9	x2	#10	x2	#11	x1	#12	x2
											
Ø15*12MM		Ø27*22MM								Ø4*39MM	
#13	x1										
											

# TOOL LIST

#14	x1	#15	x1
			
M6			


# HARDWARE SPARE LIST


#1	x1	#2	x1	#6	x1
					
Ø4*25MM		Ø3*15MM		1/4"*2"	

# ASSEMBLY INSTRUCTIONS

## STEP-1

1.Insert part (G) into part (F),make sure all holes aligned and use screw#1 to attach them , tighten screw #1 with screwdriver #15.

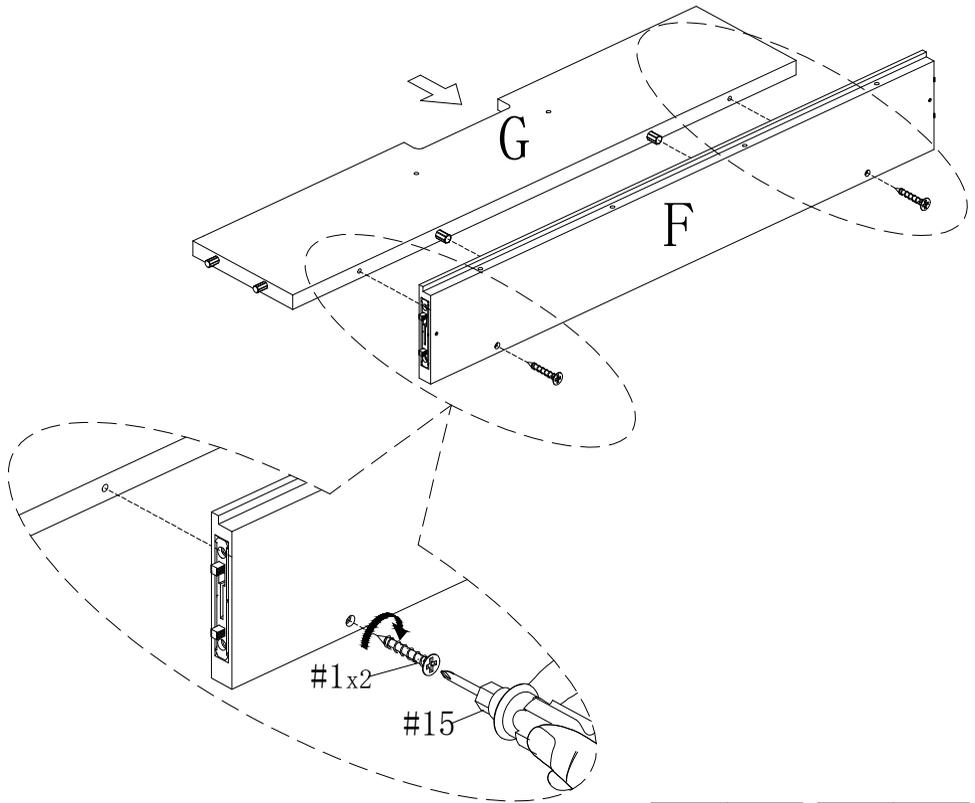



#1	x2	#15	x1
			
Ø4*25MM			

# ASSEMBLY INSTRUCTIONS

## STEP-2

1. Insert part (G&F&E) into part (D), make sure all holes aligned and then tighten it with allen key #14 as picture show.

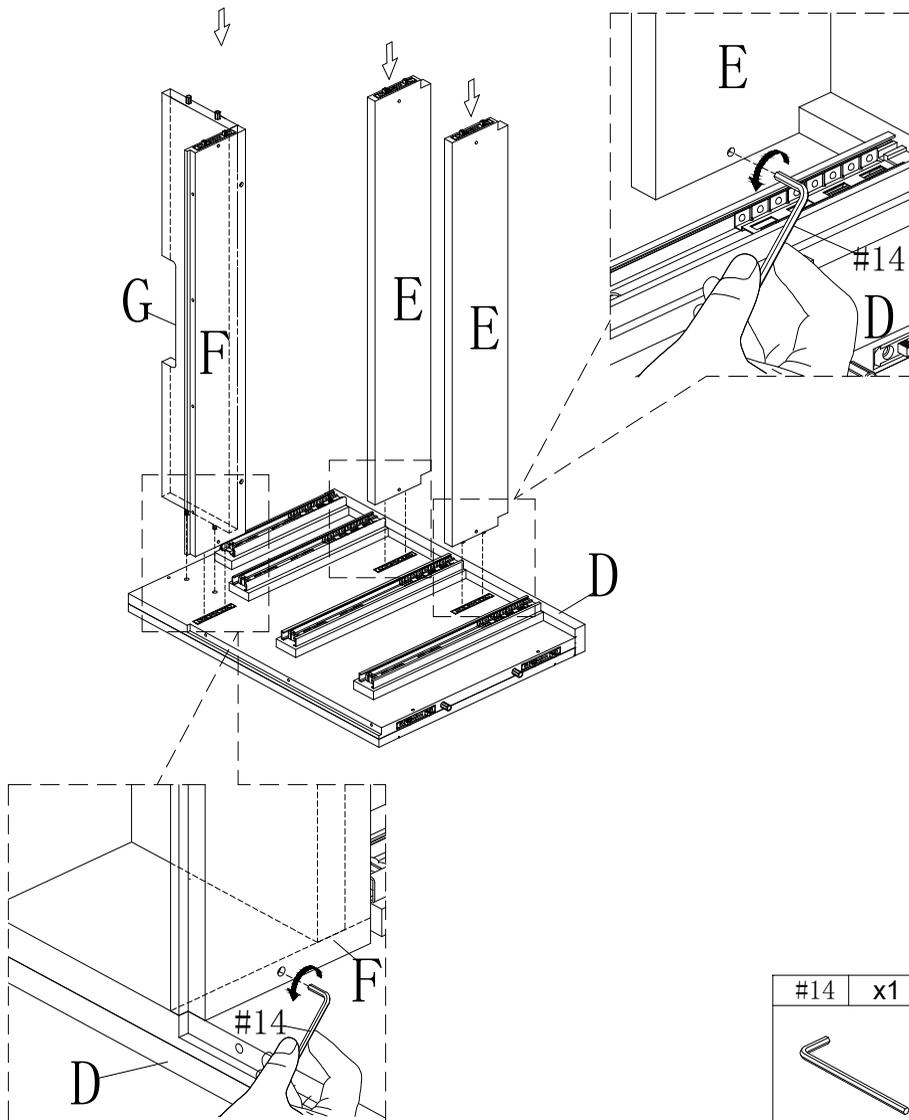


#14	x1
	
M6	

08/27

# ASSEMBLY INSTRUCTIONS

## STEP-3


1. Insert side panel (C) into the corresponding hole of preassembled step 2 , make sure all holes aligned and use allen key #14 to tighten it as picture show.

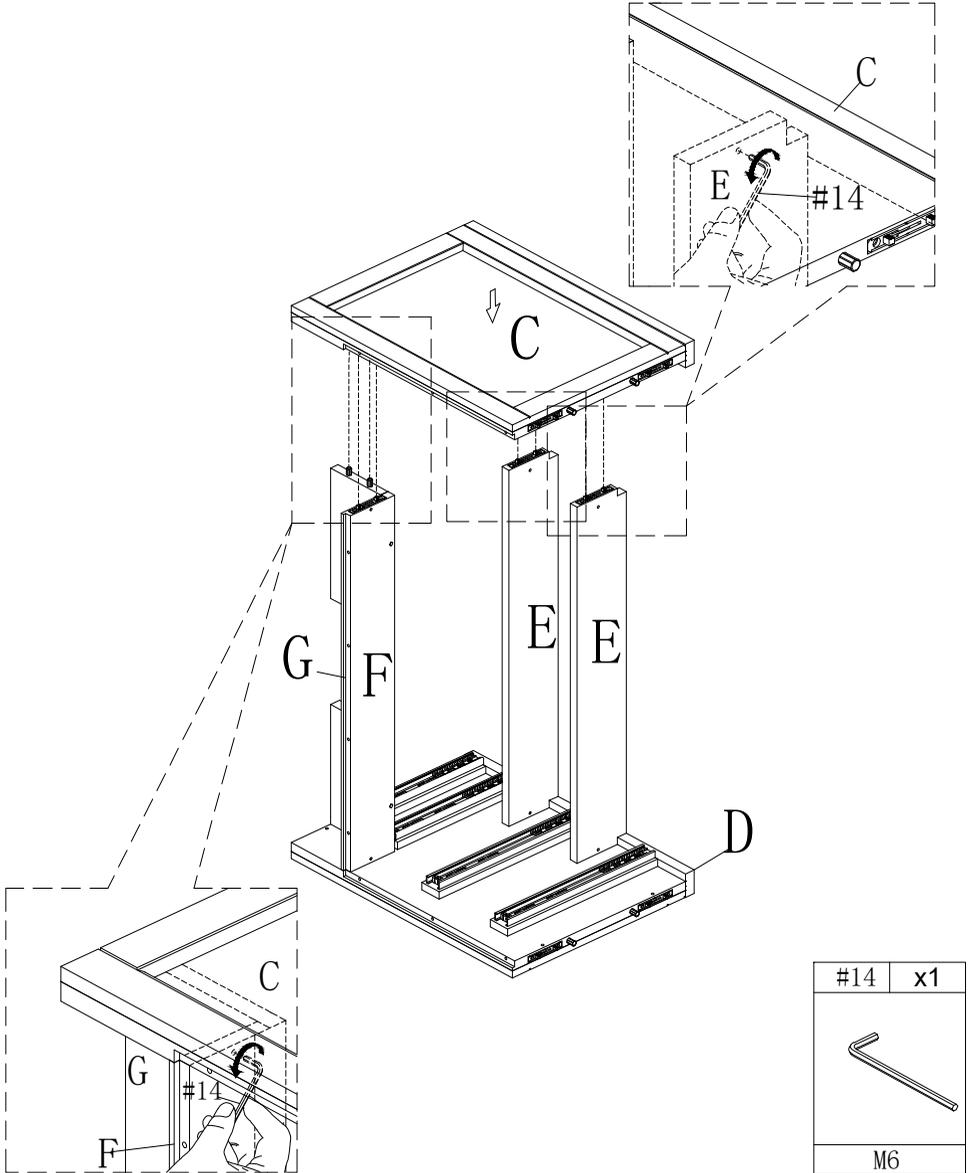

# ASSEMBLY INSTRUCTIONS

## STEP-4

1. Insert screw #6, install leg J on of bottom panel B, then tighten the screw with an Allen key #14.

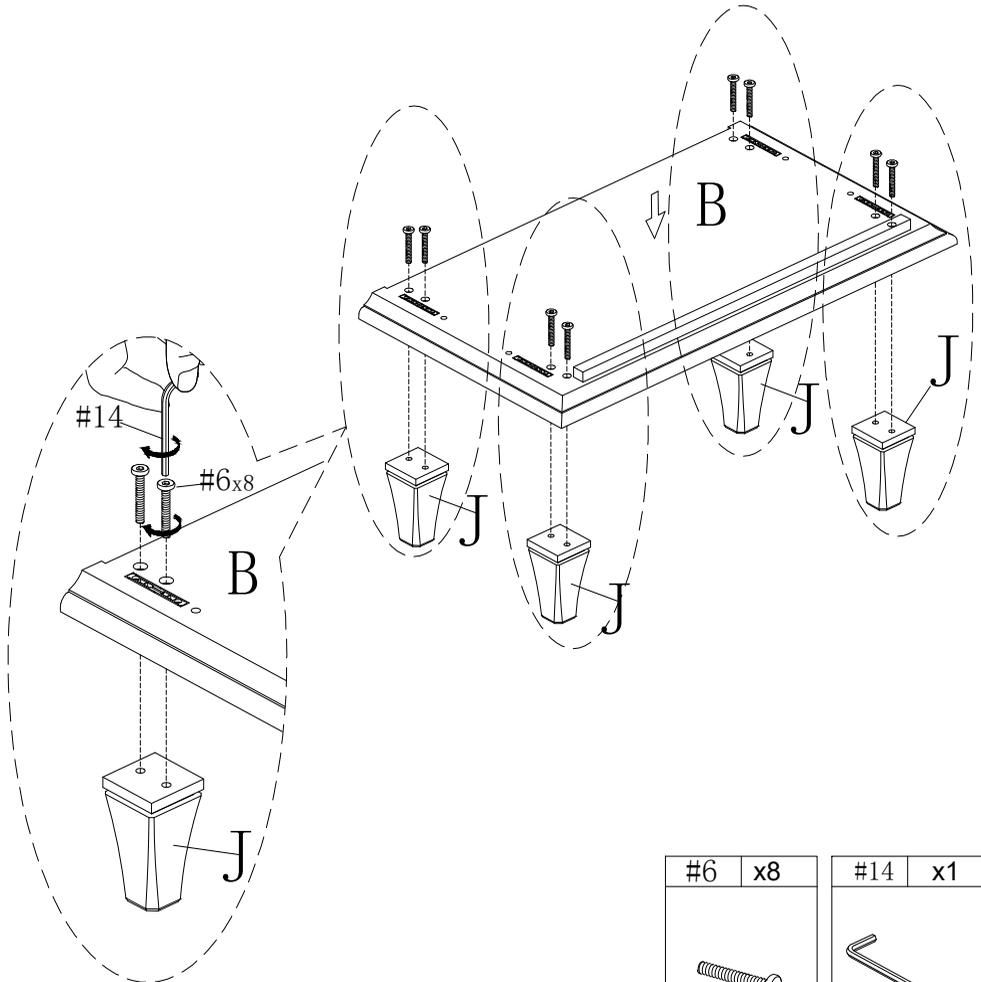


#6	x8
	
1/4"*2"	

#14	x1
	
M6	

# ASSEMBLY INSTRUCTIONS

## STEP-5

1. Insert preassembled step 3 into the corresponding hole of bottom panel (B), make sure all holes aligned and use allen key #14 to tighten it as picture show.

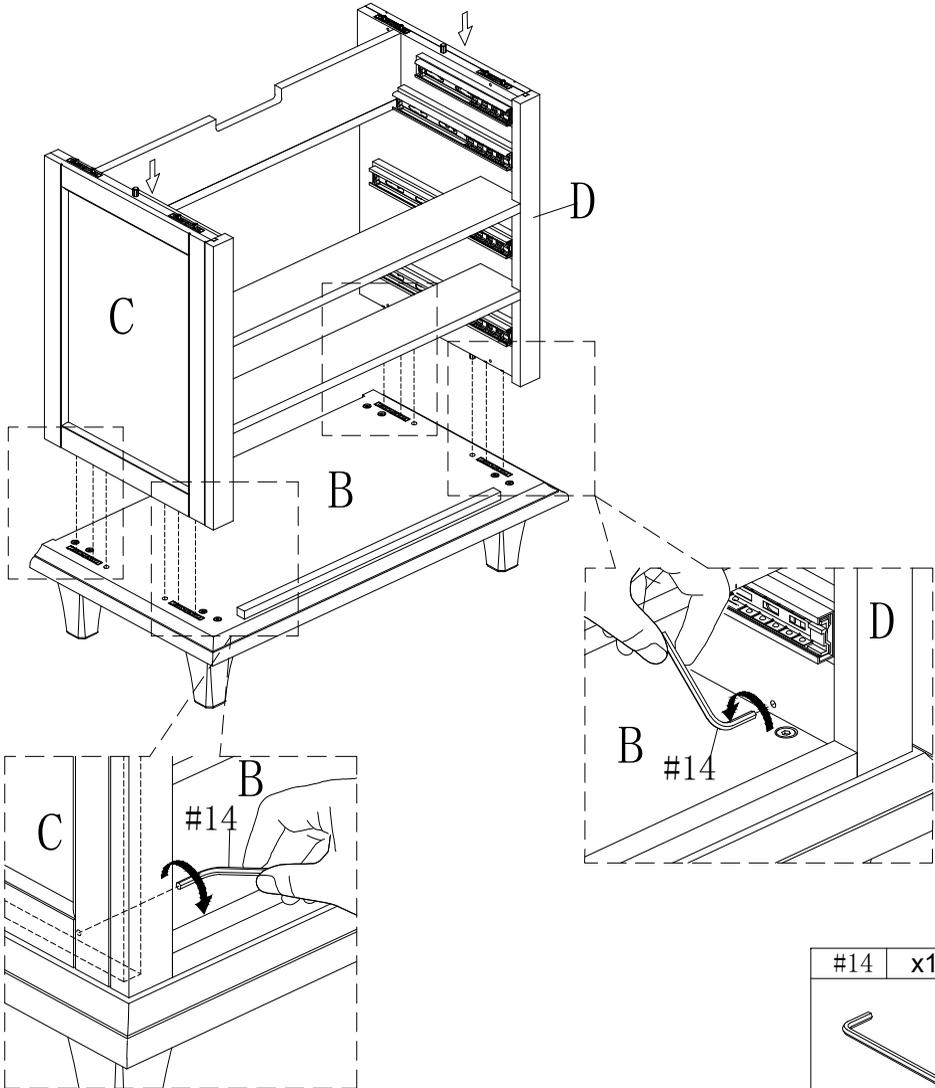


#14	x1
	
M6	


# ASSEMBLY INSTRUCTIONS

## STEP-6

1.insert back panel(I) into the groove of preassembled step 5,make sure all holes aligned and use screw #2 to attach them , tighten screw #2 with screwdriver#15.

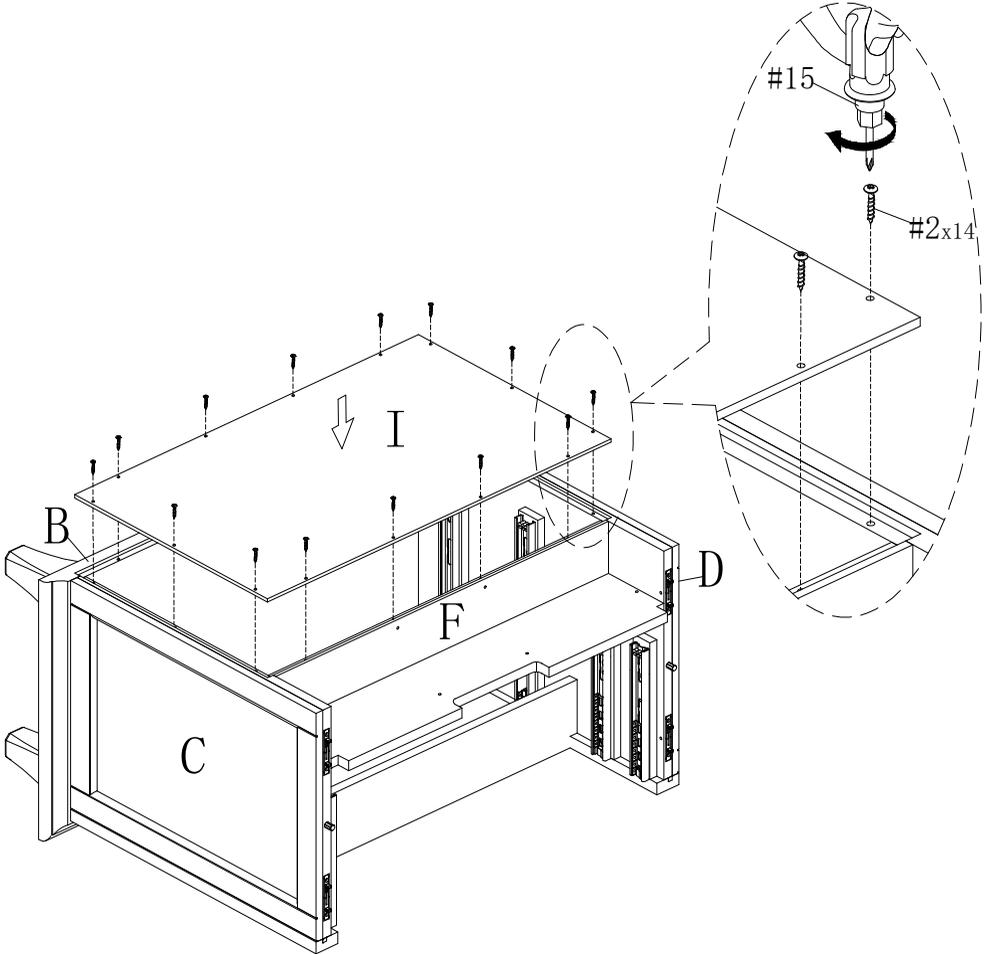


#2	x14
	
Ø3*15MM	

#15	x1
	


# ASSEMBLY INSTRUCTIONS

## STEP-7

1.insert part (H) into the preassembled step 6,make sure all holes aligned and use screw #1 to attach them , tighten screw #1 with screwdriver#15.

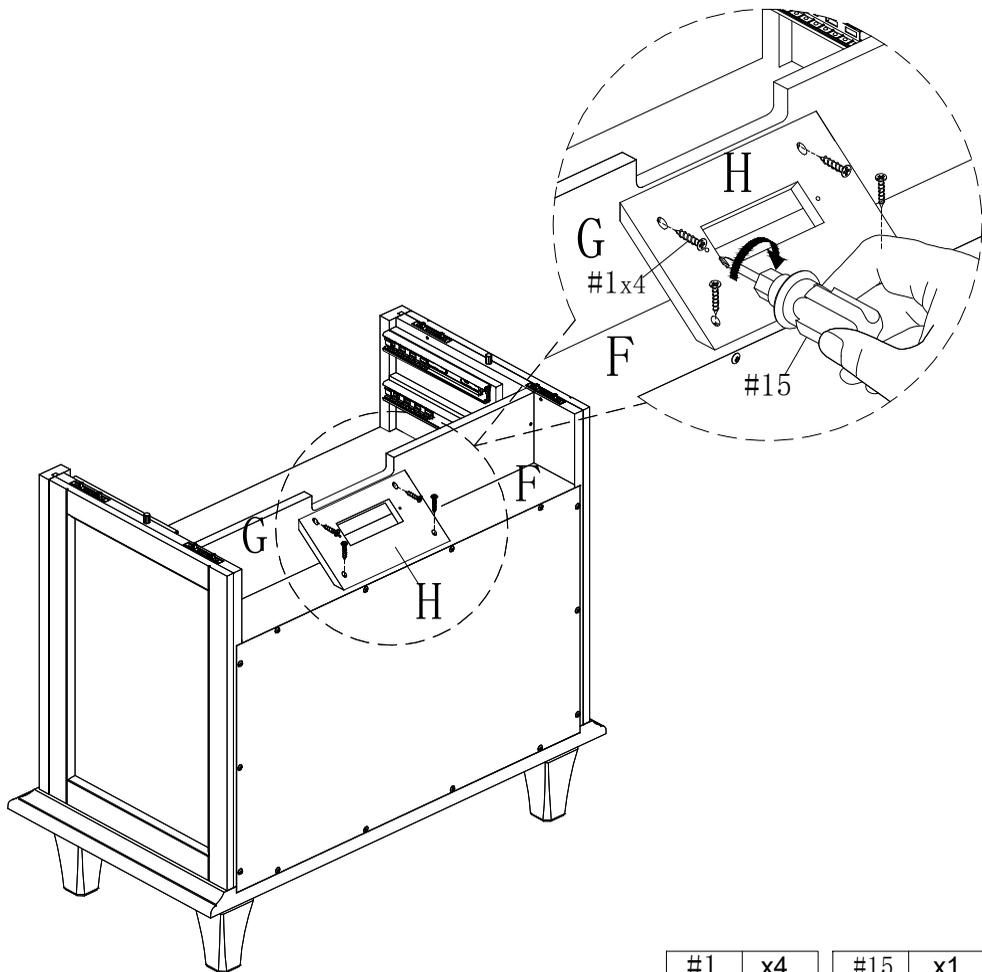


#1	x4
	
Ø4*25MM	


#15	x1
	

# ASSEMBLY INSTRUCTIONS

## STEP-8

1.insert part #13 into the preassembled step 7,make sure all holes aligned and use screw #5 to attach them , tighten screw #5 with screwdriver#15.

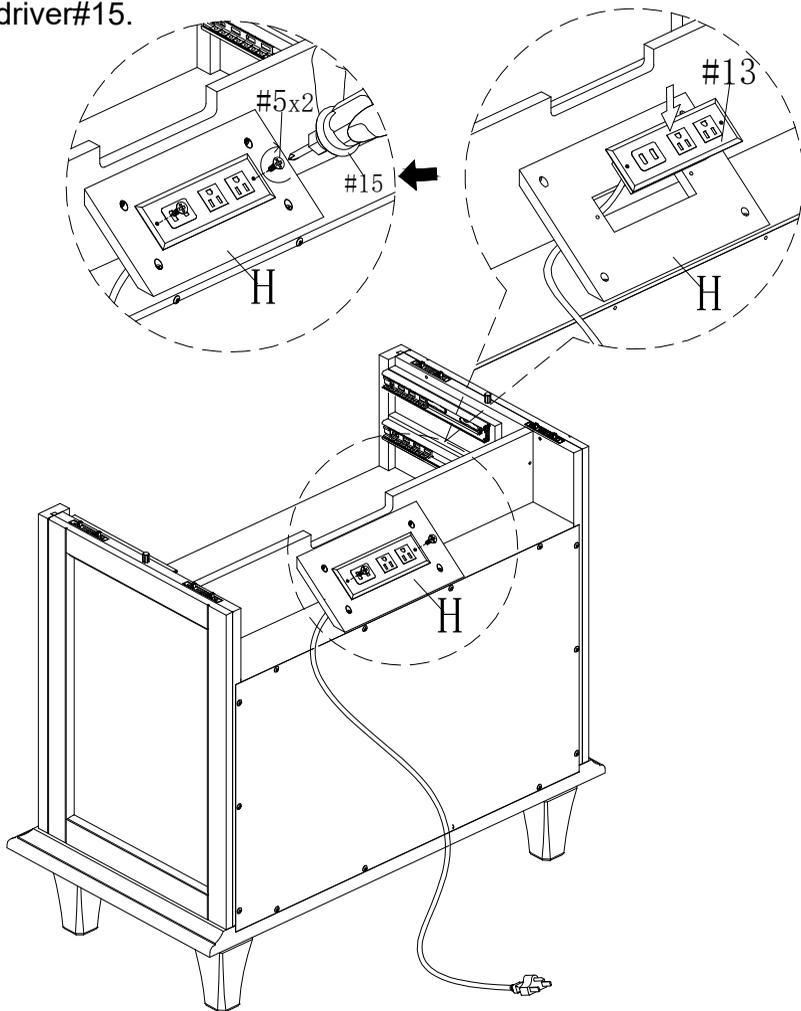


#13	x1	#5	x2	#15	x1
					
		Ø3*12MM			

# ASSEMBLY INSTRUCTIONS




## STEP-9

1. Insert top panel (A) into the corresponding hole of preassembled step 8 , make sure all holes aligned and use allen key #14 to tighten it as picture show.

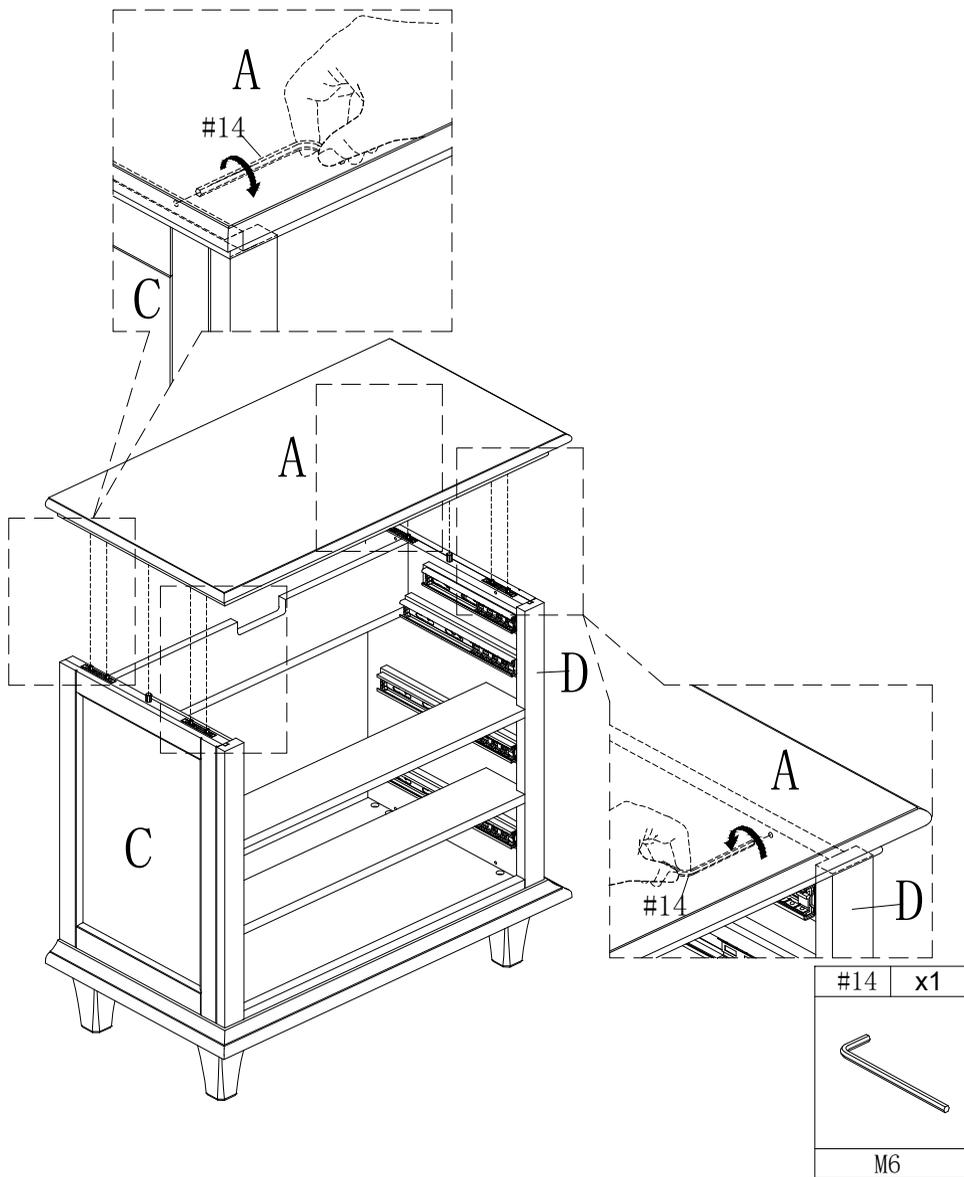

# ASSEMBLY INSTRUCTIONS



## STEP-10

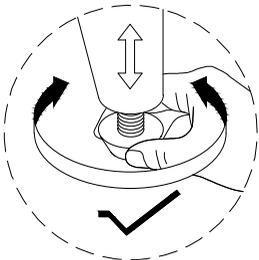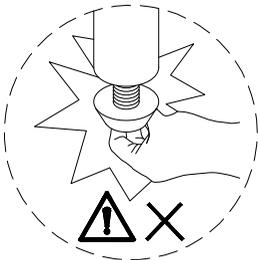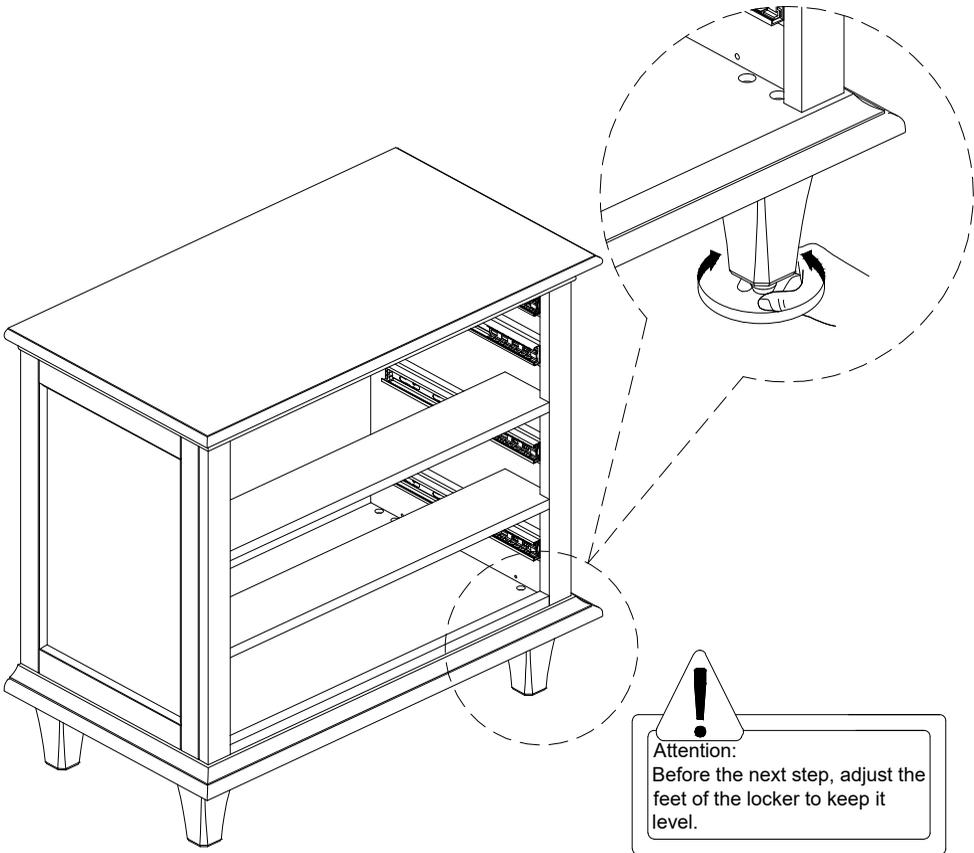


# ASSEMBLY INSTRUCTIONS

## STEP-11

1. Connect part (M&N) to part L using screw #1 and tighten it with screwdriver #15. Slide in the part (O) into the groove in part (M&N). make sure they are also in groove in part (L).

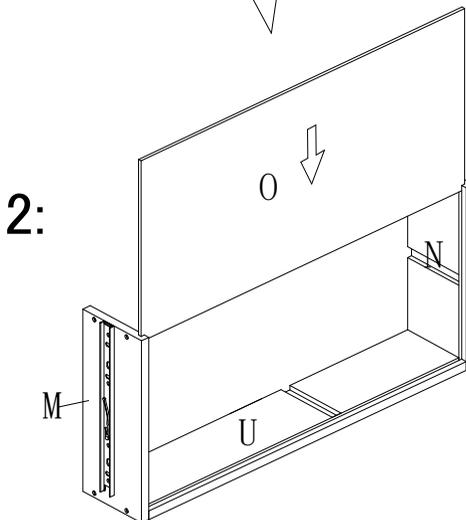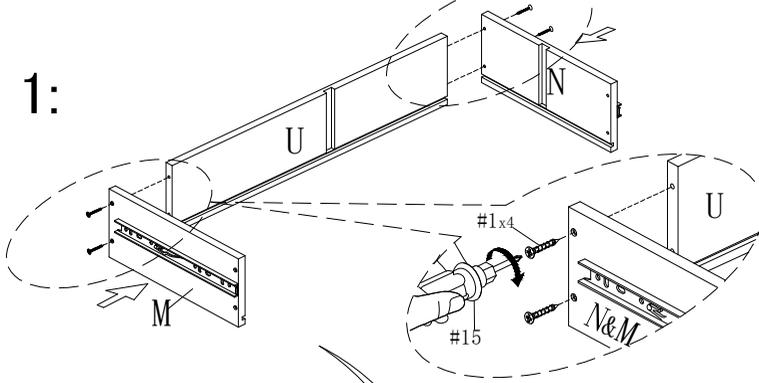


#1	x4
	
Ø4*25MM	


#15	x1
	

# ASSEMBLY INSTRUCTIONS

## STEP-12

1. Connect the (T) and (M&N) using screw #1, and tighten it with screwdriver #15.
2. Install handle #8 to panel (T) using screw #4 and tighten it with screwdriver #15.

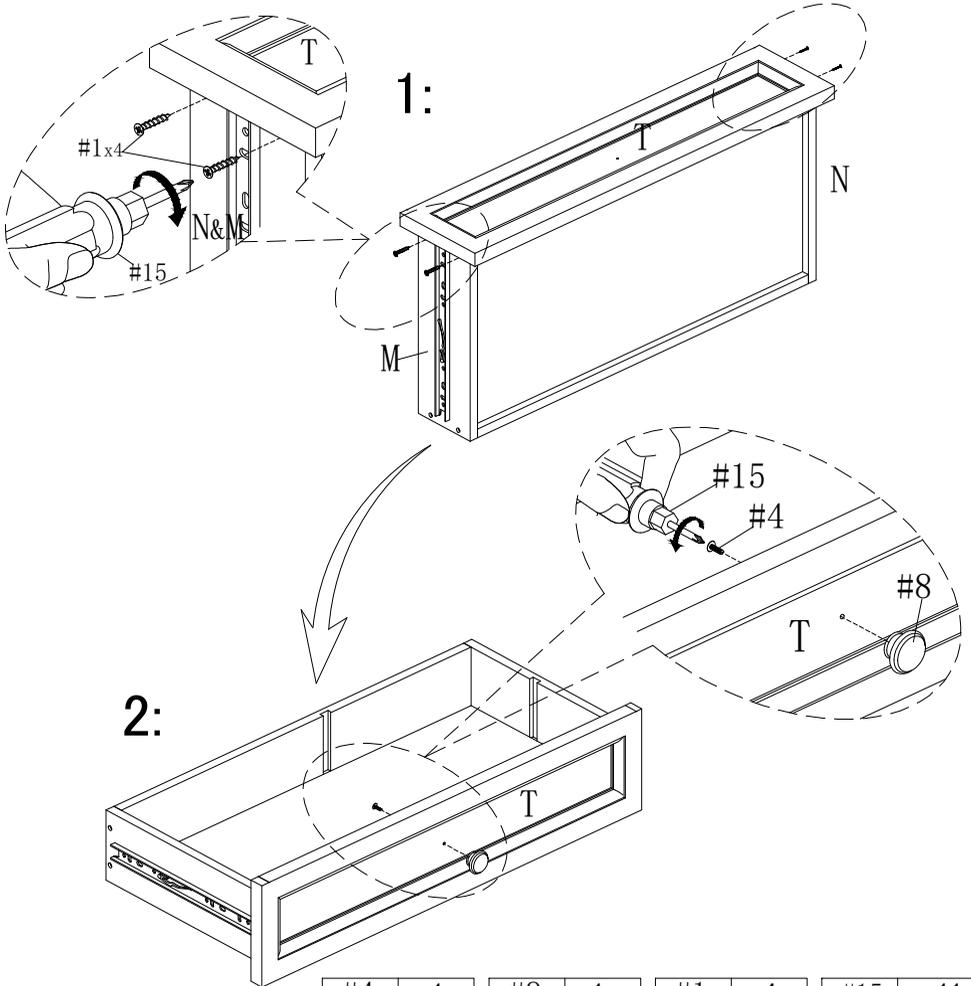

#4	x1	#8	x1	#1	x4	#15	xx1
							
Ø5/32**18MM		Ø27*22MM		Ø4*25MM			


# ASSEMBLY INSTRUCTIONS

## STEP-13

slide in the part V into the groove in part U . make sure it is also in groove in part T.

slide in the part W into the groove in part V . make sure it is also in groove in part N.



slide in the part X into the groove in partW . make sure it is also in groove in part T.

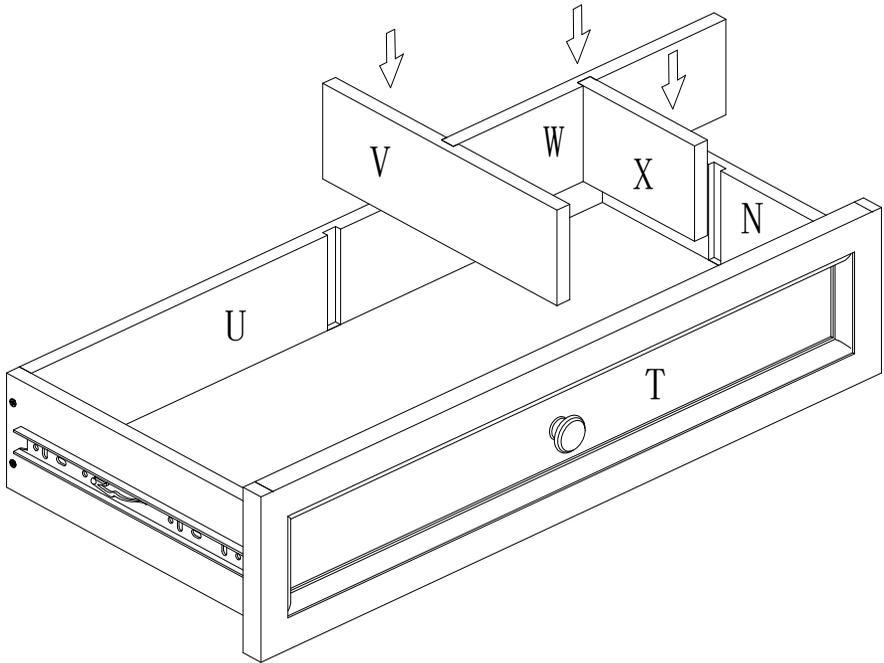


# ASSEMBLY INSTRUCTIONS

## STEP-14

1. Connect part (P&Q) to part L using screw #1 and tighten it with screwdriver #15. Slide in the part (R) into the groove in part (P&Q). make sure they are also in groove in part (L).

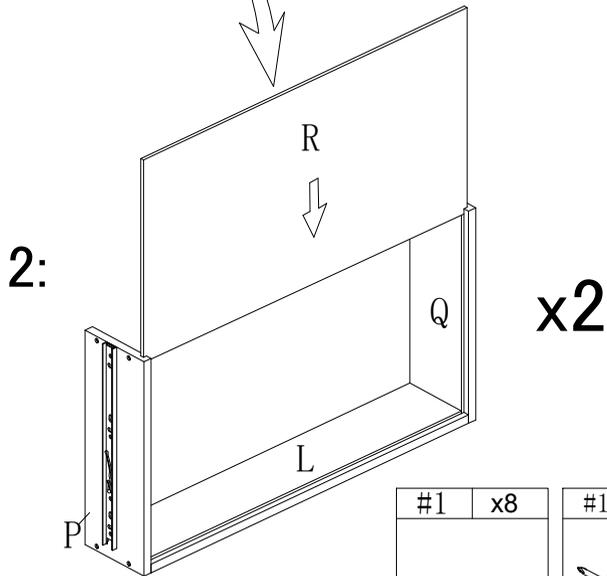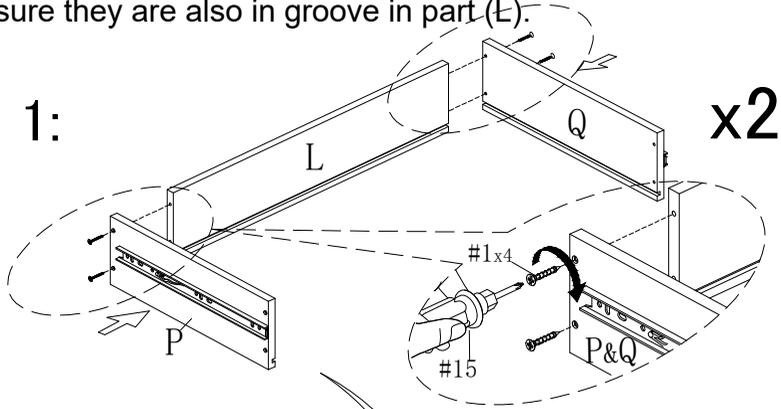

#1	x8
	
Ø4*25MM	


#15	x1
	

# ASSEMBLY INSTRUCTIONS

## STEP-15

1. Connect the (S) and (P&Q) using screw #1, and tighten it with screwdriver #15.


2. Install handle #8 to panel (S) using screw #4 and tighten it with screwdriver #15.

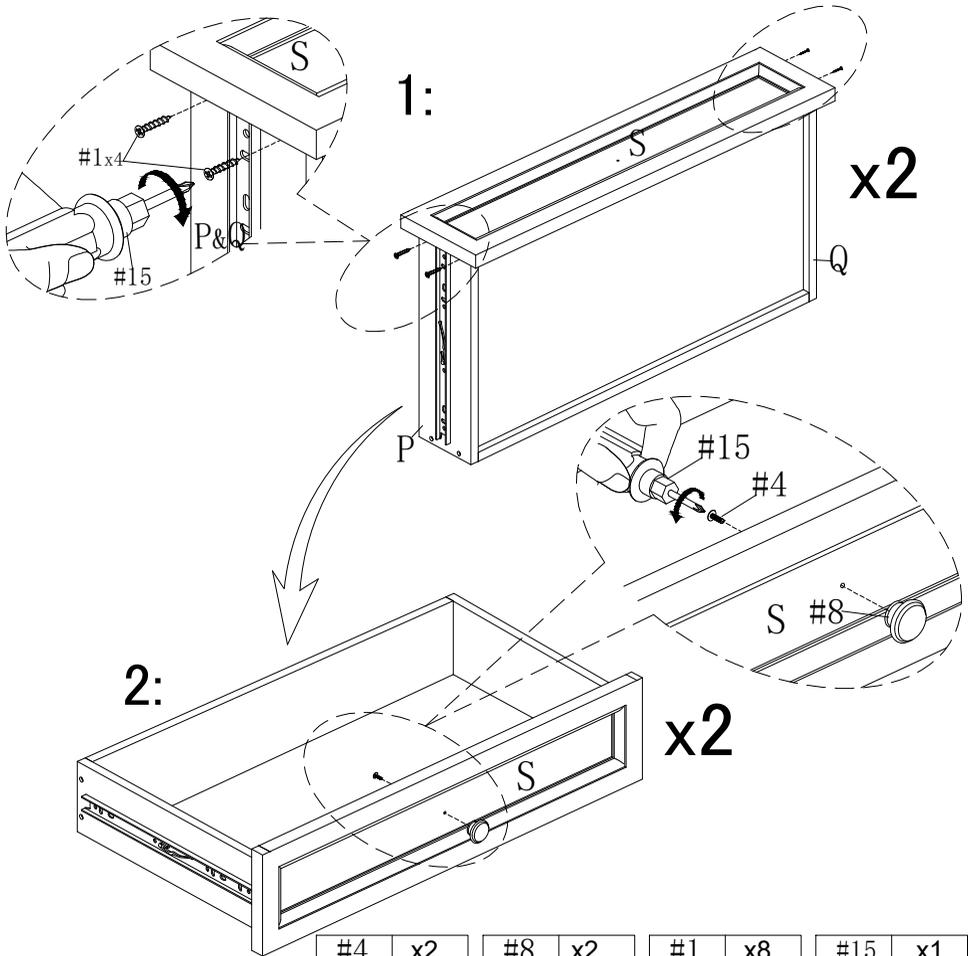

#4	x2
	
Ø5/32**18MM	

#8	x2
	
Ø27*22MM	


#1	x8
	
Ø4*25MM	

#15	x1
	


# ASSEMBLY INSTRUCTIONS

## STEP-16


2. Install #8 handle clockwise onto panel (K).

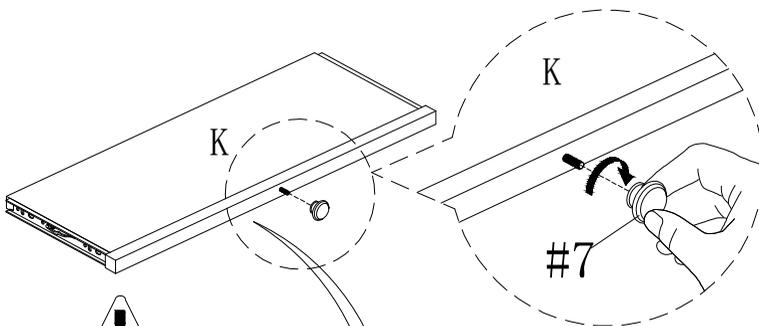


**!**  
Attention: When installing the drawer, slide the steel ball slide rail of side panel to the most front as picture show.

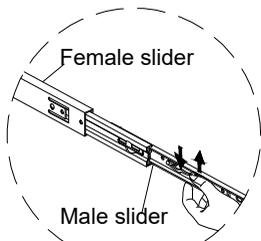

**Schematic diagram of slide rail disassembly**

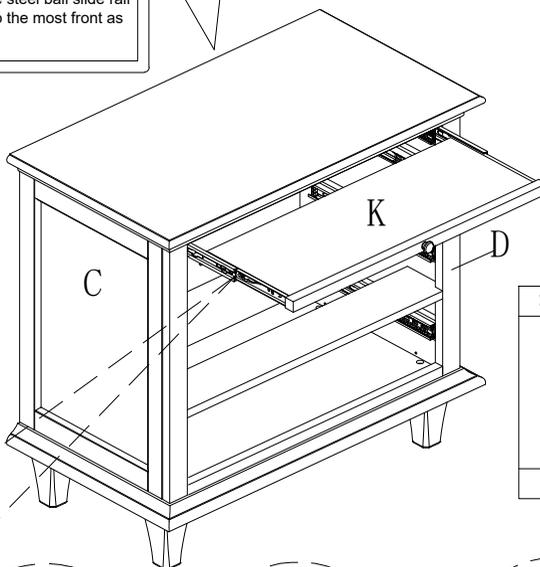



#7	x1
	
Ø15*12MM	

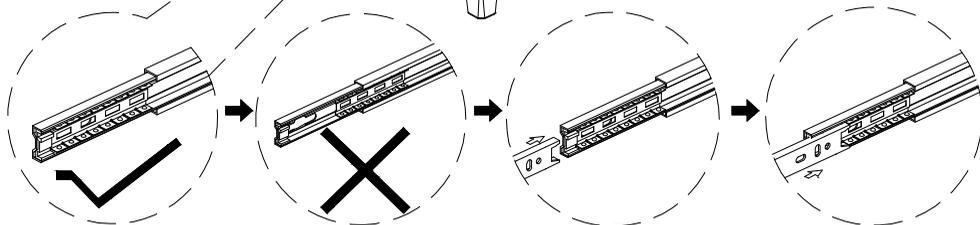


# ASSEMBLY INSTRUCTIONS

## STEP-17

  
Attention: When installing the drawer, slide the steel ball slide rail of side panel to the most front as picture show.

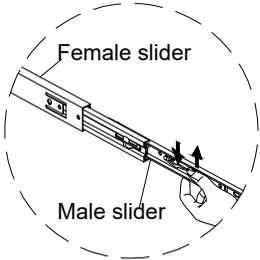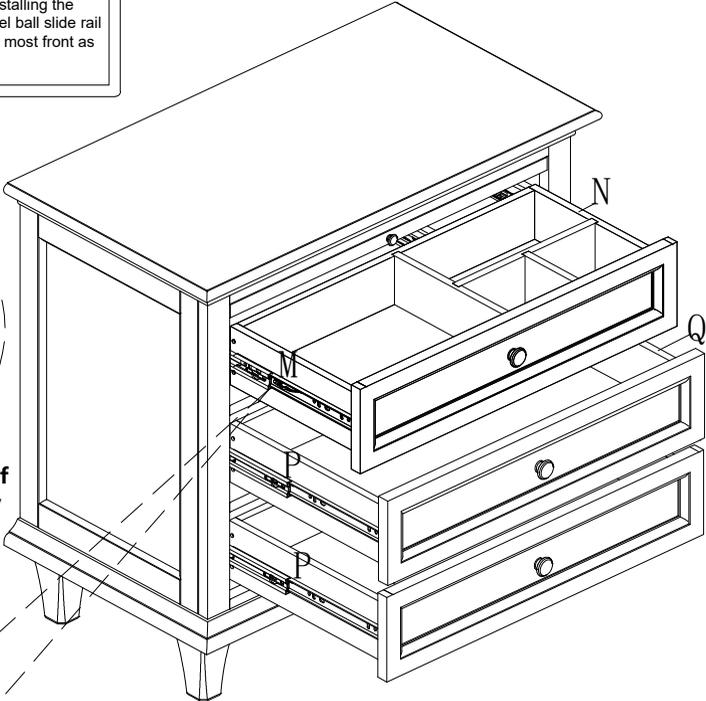


Schematic diagram of slide rail disassembly

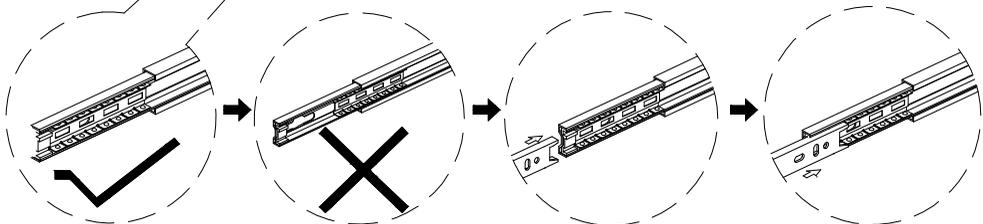


# ASSEMBLY INSTRUCTIONS

## STEP-18


1. Use screw #3 to attach part #10 to top panel (A), tighten screw #3 with screwdriver #15.

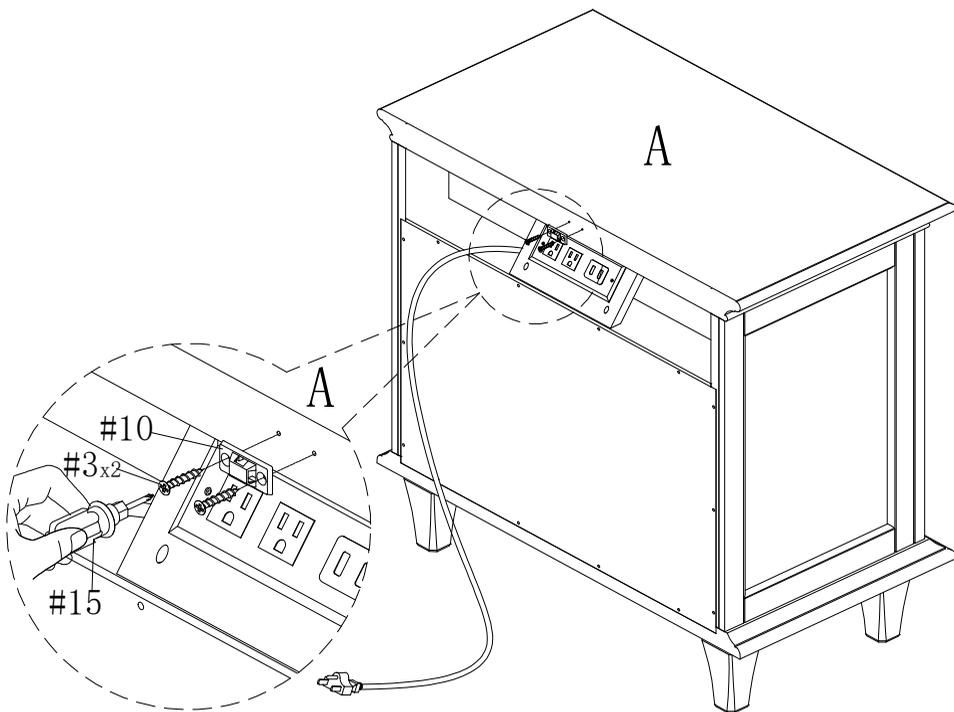

#10	x1	#3	x2	#15	x1
					
		Ø3*20MM			

# ASSEMBLY INSTRUCTIONS


## STEP-19

#12	x2	#9	x2	#10	x1	#15	x1
							
Ø4*39MM							

1. Install the anti-collapse device.


2. Mark the position on the wall, that corresponds to the location of part #10 on the top of panel (A); Drill and insert the expandable screw #9 by hammer.

3. Assemble the part #10 to the wall. Align the hole in the part #10 with the expandable screw #9, use screw #12 to attach it and tighten by screwdriver #15.

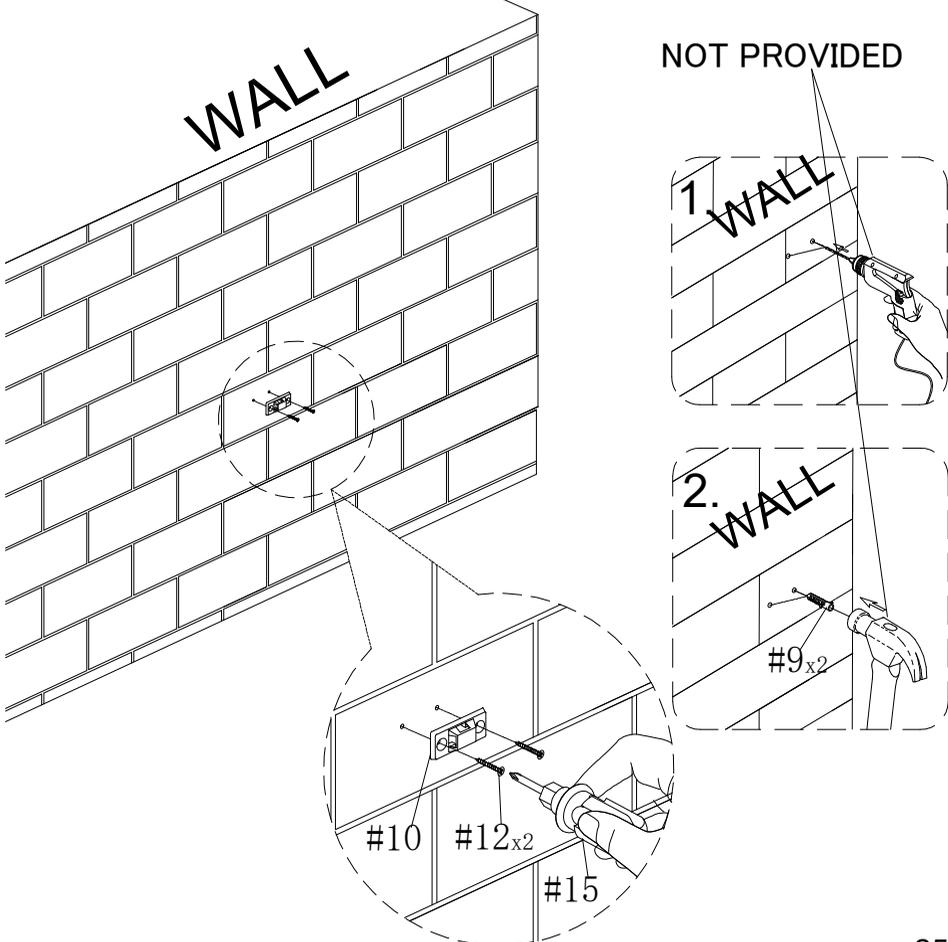


# ASSEMBLY INSTRUCTIONS

## STEP-20

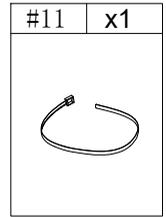

Let the plastic belt #11 pass through the both part #10 and pull tightly.

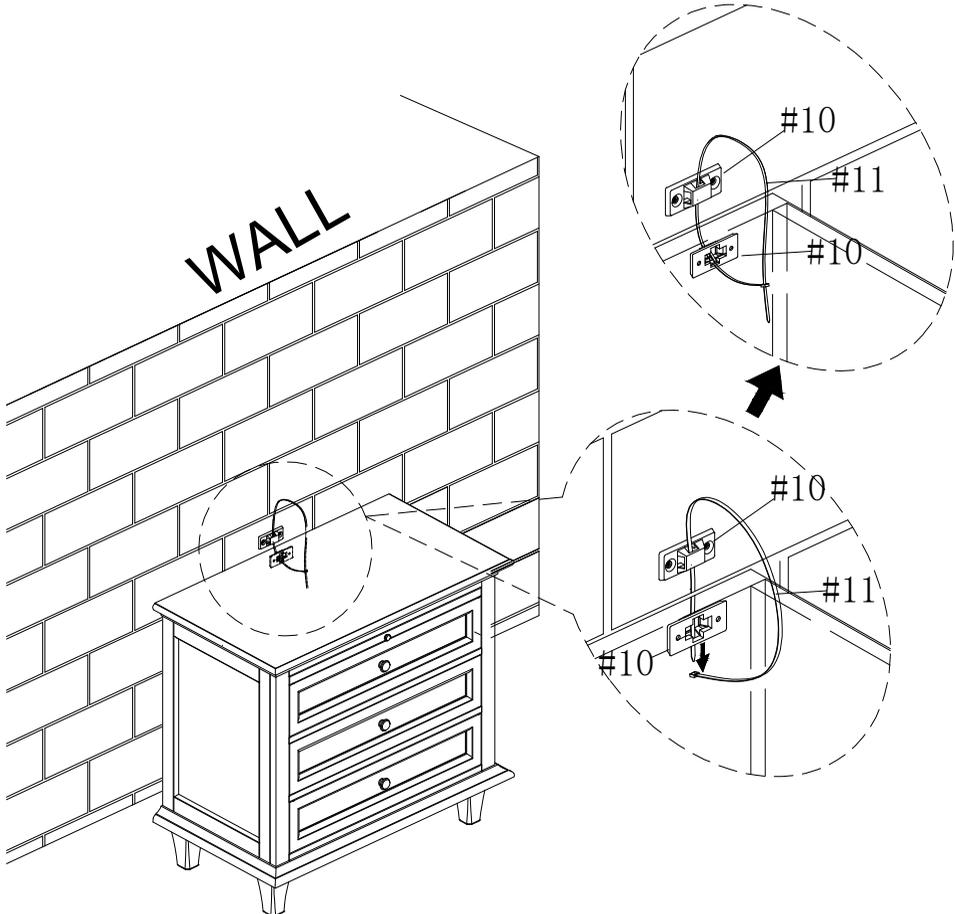

# WARRANTY

1. We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
2. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
3. Replacement parts by purchasing them with our company if they are available.

Are you having difficulty  
With assembly? Missing parts?  
Please send email with your order No to  
**[customerservice@hulalahome.com](mailto:customerservice@hulalahome.com)**  
For return, please check the return policy with  
the retailer or market place you bought from.

Appreciate your purchasing from us.  
Pop up your life by our furniture piece!