



Assembly Instructions For

F2606/8 (E) 5/10

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

1. Slip center column down through the fixture wires, and then screw on top of main frame.
2. A. Hook upper section of arm onto center column.
B. Hook bottom ends of arm onto main frame.
3. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one.
4. Install shade onto sockets by fastening with spacer tube and counter ring. Note correct position of spacer tube from left diagram. Use enclosed wrench to tighten the counter ring.
5. Install light bulbs (not included). See relamping label at socket area for type and maximum allowed wattage.

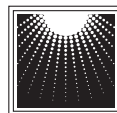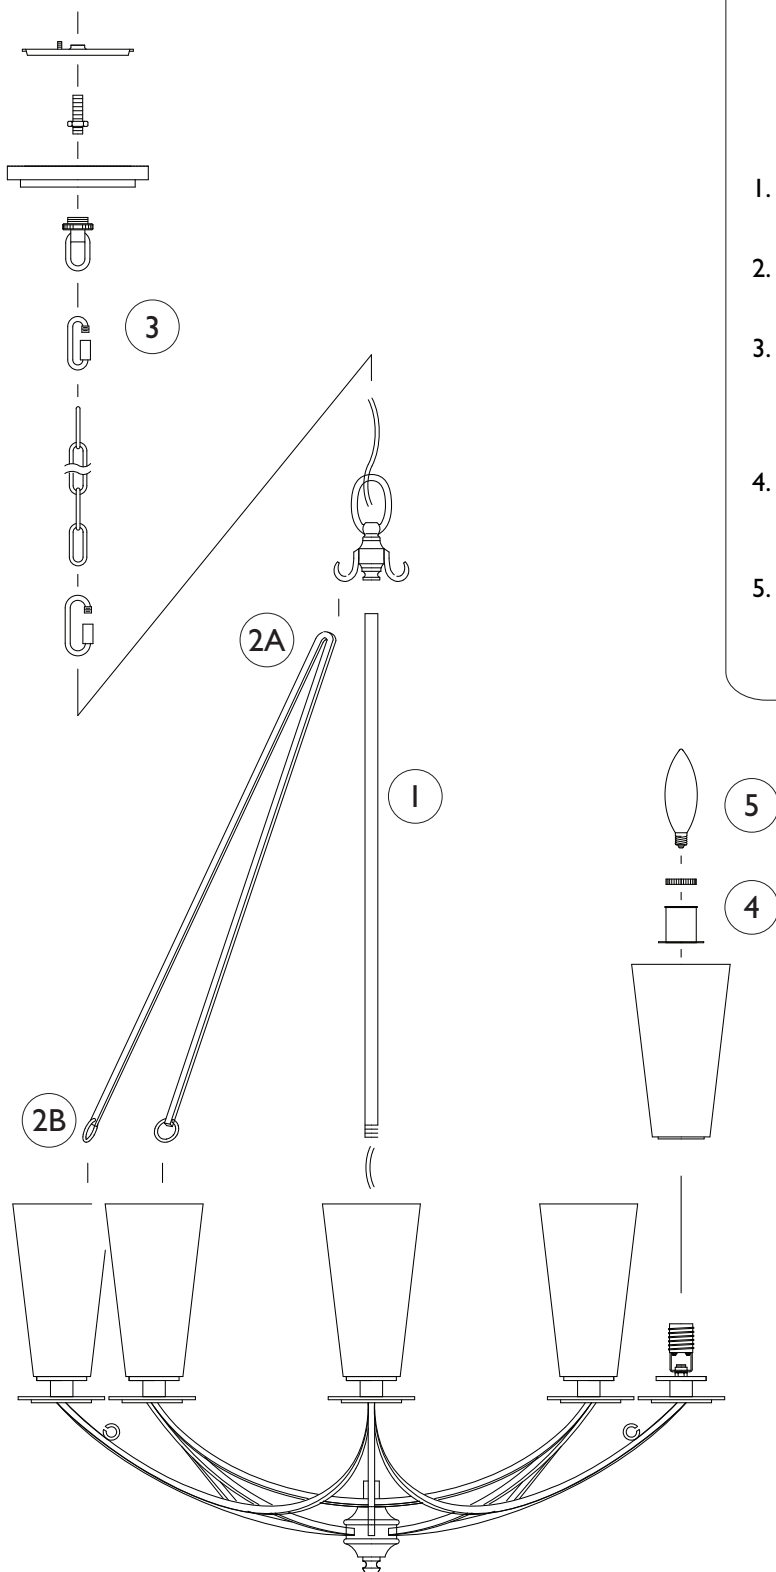

**MURRAY
FEISS**

GENERATION
BRANDS™