


HEADBOARD ASSEMBLY INSTRUCTIONS

TOOLS & PARTS INCLUDED

A – Leg (Left Facing)	1
B – Leg (Right Facing)	1
C – Slat	1
D – Bolt (M8* 6.5cm)	2
E – Bolt (M8* 5cm)	8
F – Lock Washer	10
G – Flat Washer – Small	2
H – Flat Washer – Large	8
I – Allen Key	1

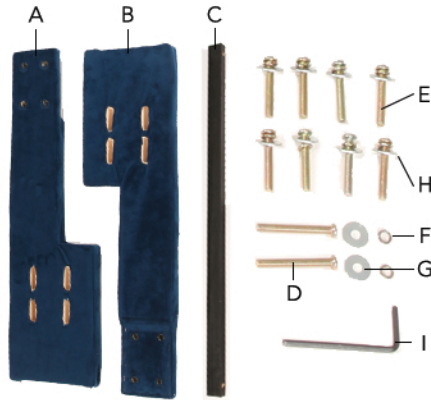

STEP ONE

Lay headboard flat on the floor with the back facing up. Open the Velcro of the back and take the legs, slat and parts pack out. Close the Velcro carefully.



STEP TWO

Align legs with the holes on the back and attach them by inserting the bolts into the legs holes. Use all 8 short bolts, each paired with a lock washer and a large flat washer. Use the Allen key to tighten bolts slightly.



STEP THREE

Place the slat between the legs and attach it by inserting the bolts into the slat holes. Use the 2 long bolts, each paired with a lock washer and a small flat washer. Tighten with the Allen key, then tighten all 10 bolts fully.

