




## Assembly Instruction

INSTRUCTION DE MONTAGE  
MONTAGEANLEITUNG  
SAMLEVEJLEDNING

**MAKE SURE THE LETTERS  
MATCH BEFORE ASSEMBLING  
NEED ASSEMBLY ASSISTANCE?  
CALL US AT 866-814-8325**

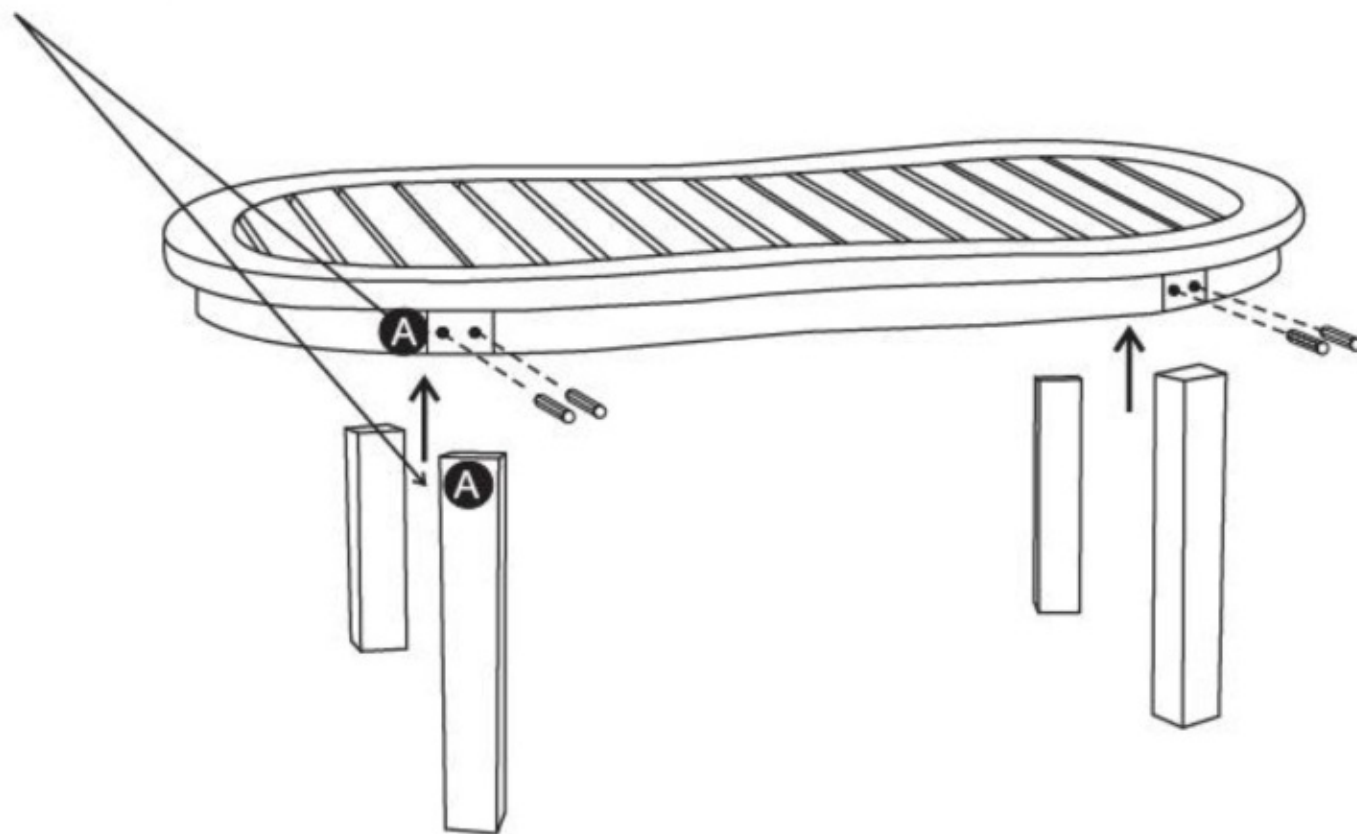

**Make sure to use Gorilla Glue (Not Included)  
on all wood joints before assembly**

**Code**

**Wj605**

**Hardware**



**Custom Bolt (8 Pcs)**

**Tool**



**Socket Wrench 4m/m Ht**

**Total Section**

**5 Section**