


ASSEMBLY INSTRUCTIONS

ITEM NO: LA-2025WL-1BW

THE LAMP HAVE TWO WAY OF ASSEMBLING: THIS IS FIXTURE.

1. Carefully unpack and place all parts on a smooth surface and lay them up as per the sketch.
2. Cut off the plug from where (S) the wire is 6 inch to 8 inch. Peel off 14mm of plastic cover at the end of wire. pull wire back to body, it is then here wire (J).
3. Continue to use wire clap at point (P) or use tube stopper (Q) to replace wire clap at point (P).
4. Screw ground wire (D) and ground wire (I) together with ground wire screw (G).
5. Connect supply wire (B) and wire (J) with wire nut connectors (C),positive to positive, negative to negative, then wrap it by insulating tape.
6. Tighten eight diagram plate (E) to wall outlet box (A) by screw (F)
7. Attach body (L) to eight diagram plate (E) through screw (H), tighten it by screw nut (K) to screw (H).
8. Insert harp (M) to saddle of body (L).
9. put shade on harp (M), tighten it by finial (N).

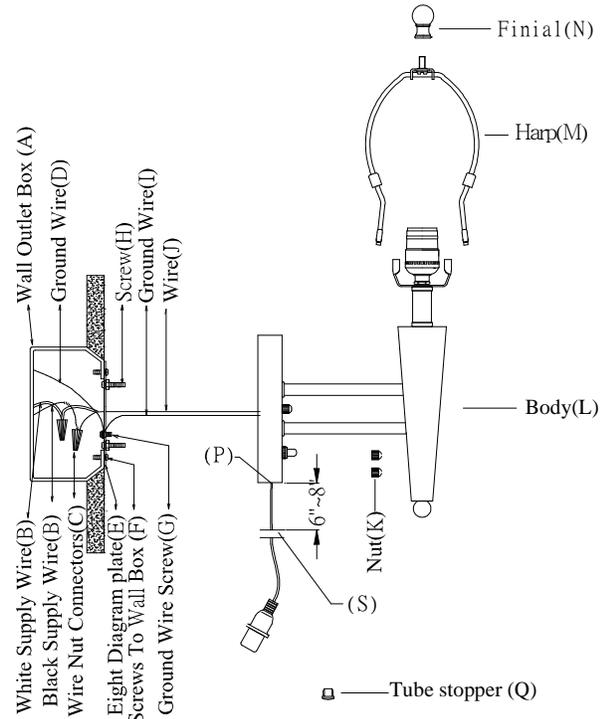

WATTAGE: 60W TYPE A (EX BULB)

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ASSEMBLY INSTRUCTIONS

ITEM NO: LA-2025WL-1BW

THE LAMP HAVE TWO WAYS OF ASSEMBLING: THIS IS PORTABLE.

1. Carefully unpack and place all parts on a smooth surface, and lay them up as per the sketch.
2. Drill two level holes on the wall according to eight diagram plate (E)(consumer decide the height from ground to the wall lamp location), punch plastic anchor (G)into the holes.
3. Screw the eight diagram plate (E) to wall with wood screw (F).
4. Tighten body (A) to eight diagram plate (E) with nut (D).
5. Insert harp (B) into saddle of body (A).
6. Put shade on harp (B), tighten it by finial (C)
7. Make sure body (A) is installed to the wall tightly, take out wire covering parts (2pcs wire cover, wood screw, plastic anchor (H) 4pcs)
8. Put wire cover (J) right under the hole that the wire comes out of. drill holes on the wall according to the holes on the wire cover (J).
9. Punch plastic anchor (H) to the holes. tighten wire cover (J) to wall by wood screw (I).
10. Have wire (L) run through wire cover (J).
11. Put wire cover (K) to wire cover (J), make sure wire cover (J)is been fully covered.
12. Insert the polarized plug into wall outlet, turn on the switch and enjoy your new lamp.

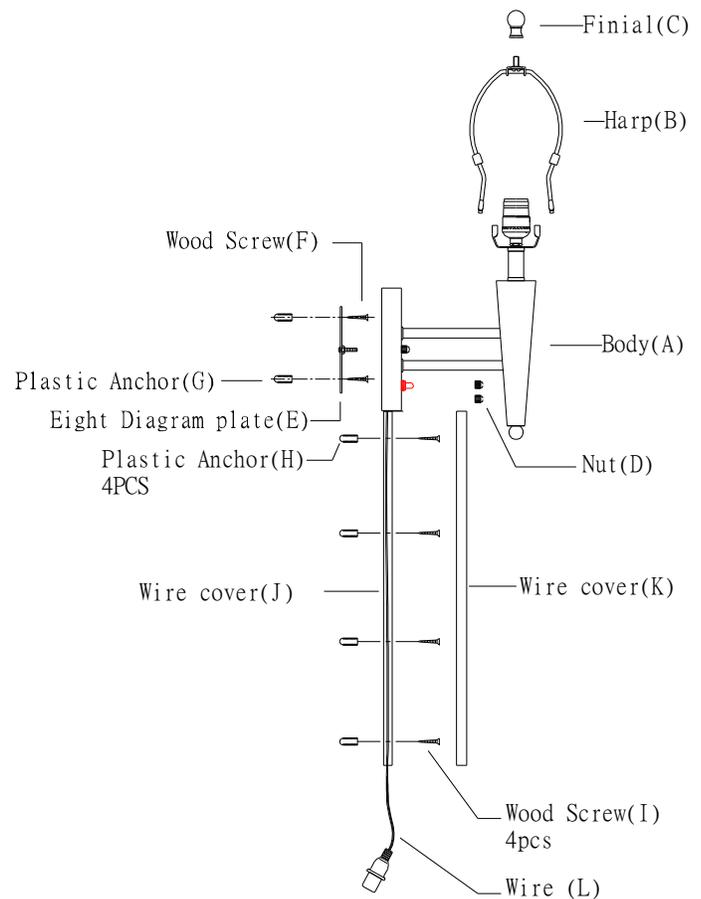

WATTAGE: 60W TYPE A (EX BULB)

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.