



JONATHAN ADLER

JACQUES COLLECTION

Our Jacques Collection is the perfect blend of simplicity and glamour, modern and traditional. Crafted from crystal clear acrylic with brass accents or moody smoke acrylic with nickel corners.

CARE INSTRUCTIONS

- To best preserve its brilliant clarity, keep out of direct sunlight.
- Avoid contact with hot items.
- Wipe spills immediately. Do not allow water to collect on the surface.
- Clean using a soft, dry microfiber cloth in straight strokes.
- Do not use household window cleansers on acrylic. If you need deep cleaning, use warm (hot water can cause clouding) soapy water and a soft, lint-free cloth. If scratches develop, Novus cleaners may be used to repair. Novus level 1 is for cleansing, 2 for polishing light scratches, and 3 for more significant wear.
- We recommend retightening allen bolts every three months to ensure stability.
- **For leather items:** Leather is a naturally porous material. Exposure to moisture can cause leather to warp and stretch. Wipe spills immediately. Maintain leather by keeping away from direct sunlight and fluctuations in temperature. If product is showing signs of significant wear, consult with a professional.

JONATHAN ADLER

FURNITURE

Jacques Bar Cart

Assembly Instruction

- For ease of assembly two people are recommended.

Parts Included:

- (2pcs) Side Frame – A B






- (4pcs) Acrylic Bar – C



- (2pcs) Glass Shelf – D




Hardware Enclosed:


E	 Bolt	8pcs
F	 Allen Wrench	1pc
G	 Rubber Pad	8pcs

Assembly Instructions:



1. Remove all of the components from their boxes and place them on a carpeted or scratch-free surface.
2. Place one Side Frame (A) on the carpeted or scratch-free surface, insert Acrylic Bars (C) into metal holes and tighten all Screws (E) by using Allen Wrench (F).

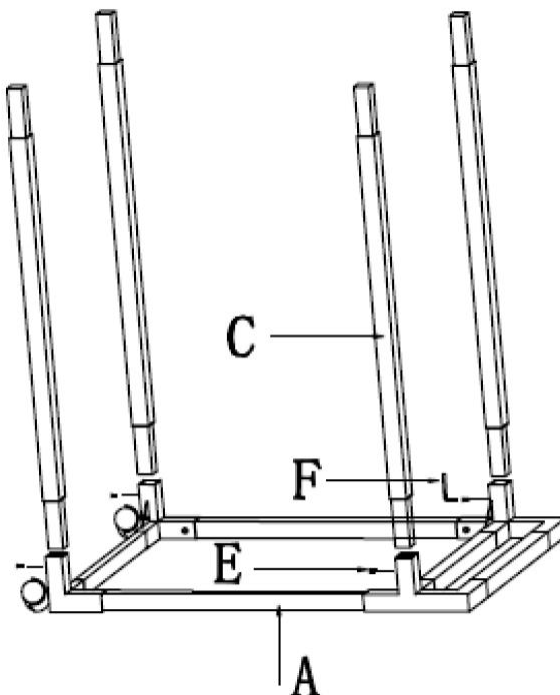

3. Insert Side Frame (B) to the assembled Acrylic Bars and tighten all Screws (E) by using Allen Wrench (F).

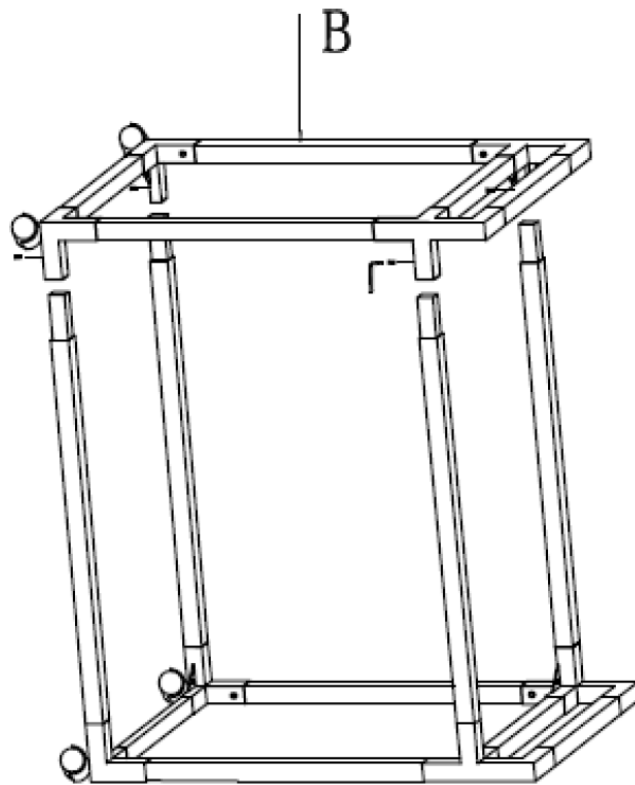

4. Upright the Bar Cart. Put Rubber Pads (G) on to the corners of Bar Cart, then carefully place the Glass Shelves (D) on to the Rubber Pads.

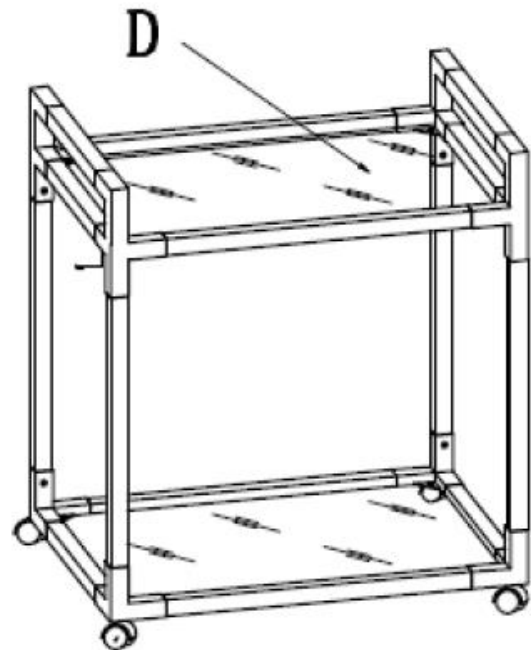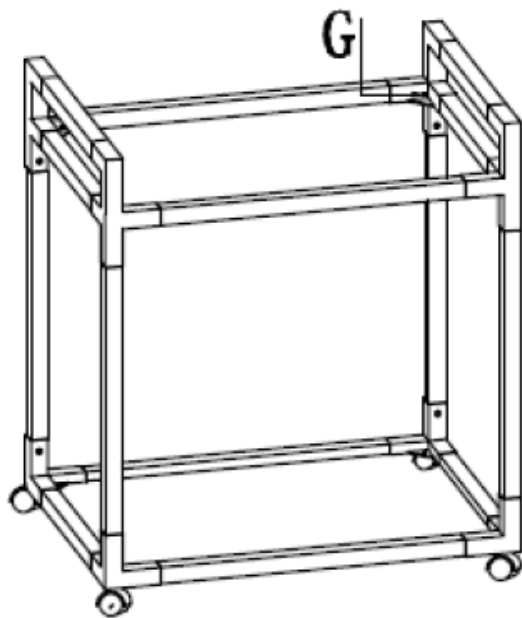

5. Assembly is complete.

