

ASSEMBLY INSTRUCTIONS:

6000-0700/7400 VANITY MIRROR/ VANITY

LEGACY CLASSIC

FURNITURE






Thank you for purchasing this quality product. Before beginning, please check the packing material carefully for small parts which may have come loose inside the carton during shipping. Please do not discard any packing material until all parts have been located. If any parts are missing, please contact your dealer for prompt replacement.










Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.


(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.

(3) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the below mentioned components are attached to the furniture properly and kept tightened.


Parts & Hardware List:

PARTS LIST			Q'TY
A	MIRROR		1 PC
B	RIGHT VANITY		1 PC
C	LEFT VANITY		1 PC
D	GLASS SHELF		1 PC
E	METAL BRACKET		4 PCS


HARDWARE LIST			Q'TY	HARDWARE LIST			Q'TY
1	BOLT	 5/16"*1-1/4"	8 PCS	6	SHELF SUPPORT		4 PCS
2	LOCK WASHER	 5/16"	8 PCS	7	ZINC SCREW	 #6*5/8"	8 PCS
3	FLAT WASHER	 5/16"	8 PCS	8	DOWEL	 10*40mm	4 PCS
4	WRENCH	 87*12mm	1 PC	9	ANTI-TIP KIT		1 SET
5	BLACK SCREW	 #8*3/4"	8 PCS				

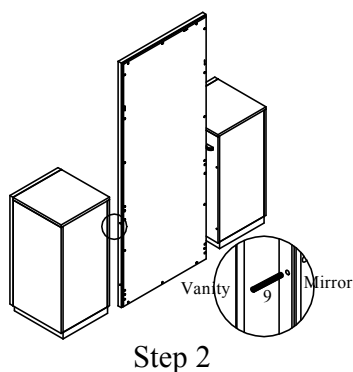

Step 2

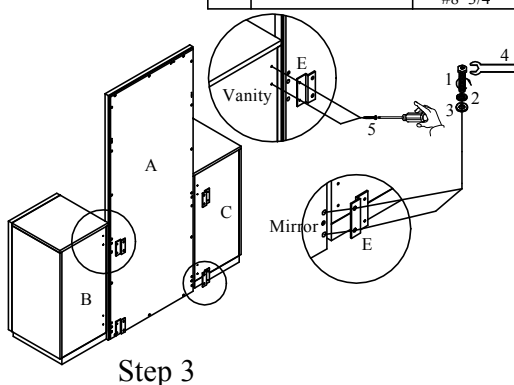

Step 3

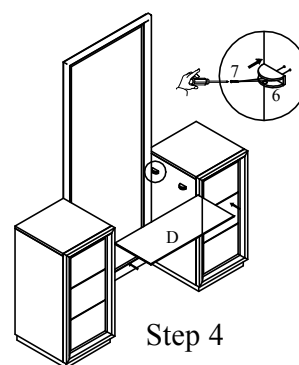

Step 4

Assembly Procedures:

Step 1: Lay out all parts and hardware. Make sure the quantity of each is correct and the feet are free of stain staples, screws and nails.

Step 2: Place the mirror (A) on the vanity (B & C) using the dowel (8) as shown.

Step 3: Assemble the metal bracket (E) to the mirror & vanity (A & B, C) using hardware (1, 2, 3, 4, 5) as shown.

Step 4: Carefully install the glass shelf (D) to the vanity (B & C) using the hardware (6, 7) as shown.

Warning: Do not move / transport assembled as this will cause damage.

Assembly is complete.