
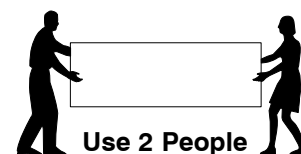


# 0046-1 Daybed

## Assembly Instructions

WII-0120

### 1 Assembled View

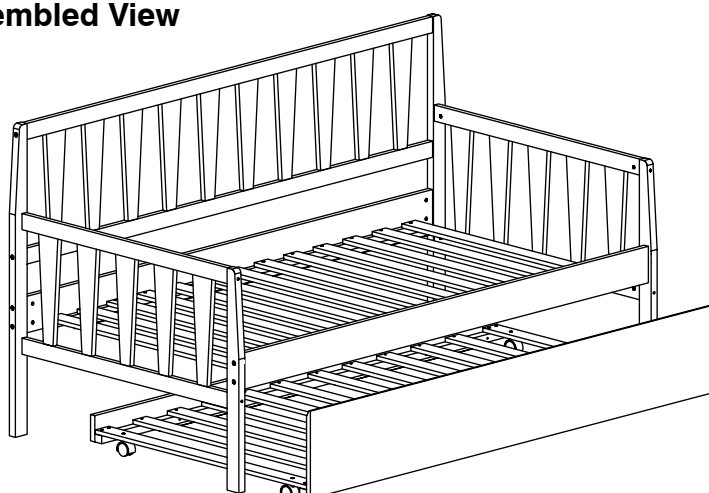


Use 2 People




**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened


### 2 Parts in this Box

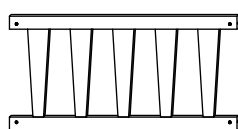

**A** Side Panel x 2

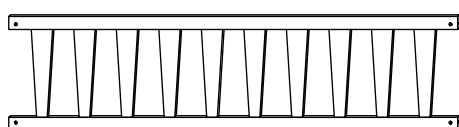


**B** Back Panel x 1



**C** Side Rail x 2

Slats are packed in separately in Box B

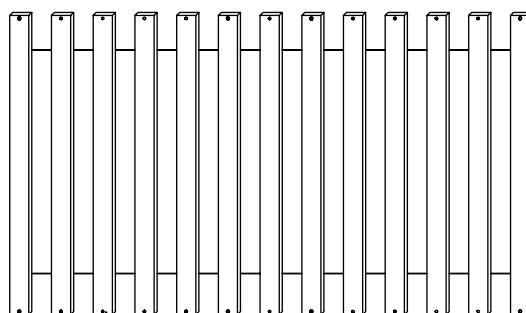

**H** Set of Slats x 1


### 3 Hardware in this Box



**1** M6 x 100mm JCB x 12




**5** Barrel Nut x 20




**2** M6 x 70mm JCB x 8



**6** Wood Dowel (10 x 40mm) x 4




**3** M6 x 40mm JCB x 8



**4** Wood Screw (M4 x 32mm) x 18



**7** Allen Key x 1

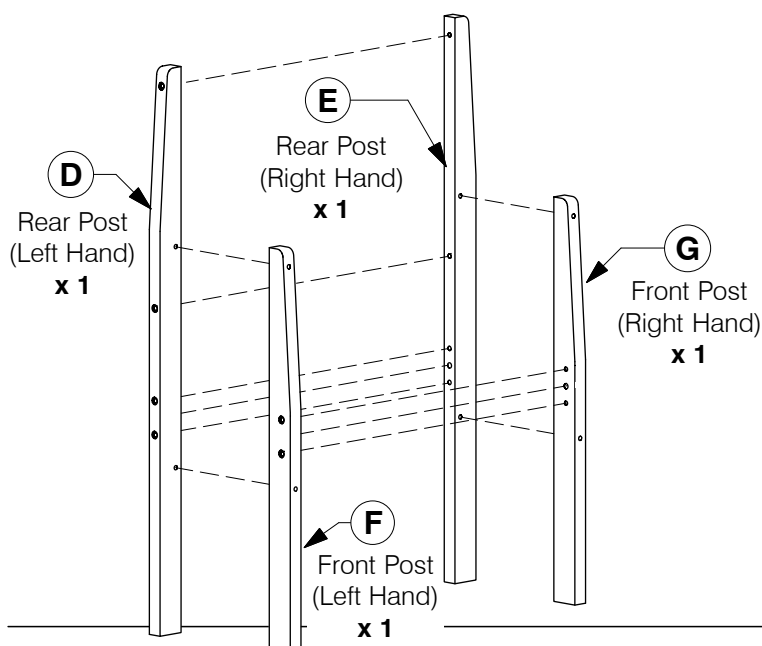


# 0046-1 Daybed


## Assembly Instructions

WII-0120

- 4** Assemble the Rear Post (D/E) to the Side Panel (A).

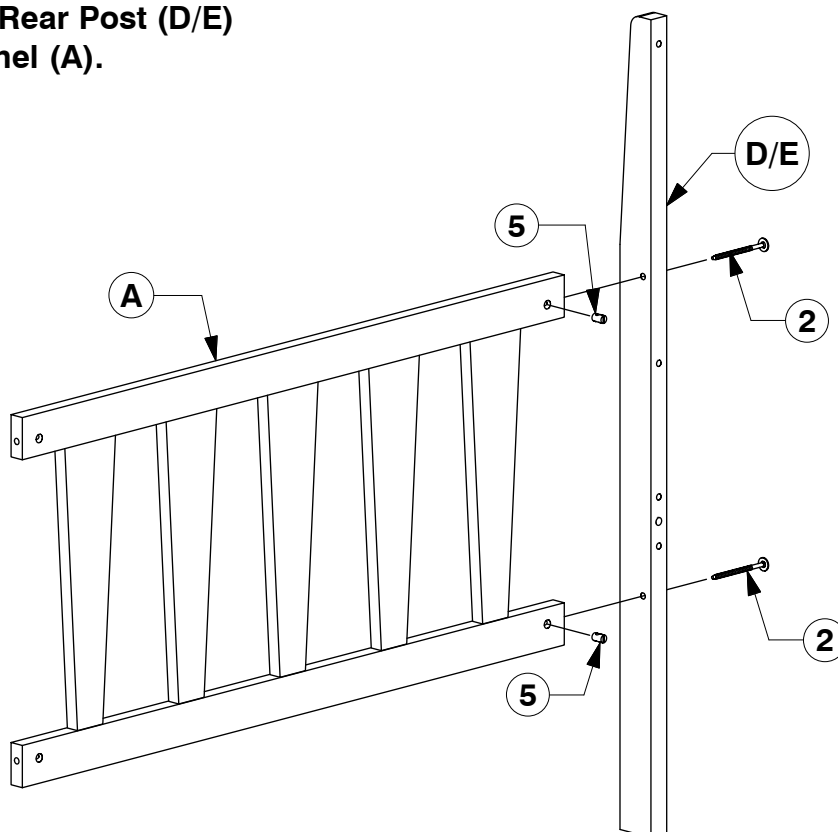

- 5** Assemble the Front Post (F/G) to the Side Panel (A).

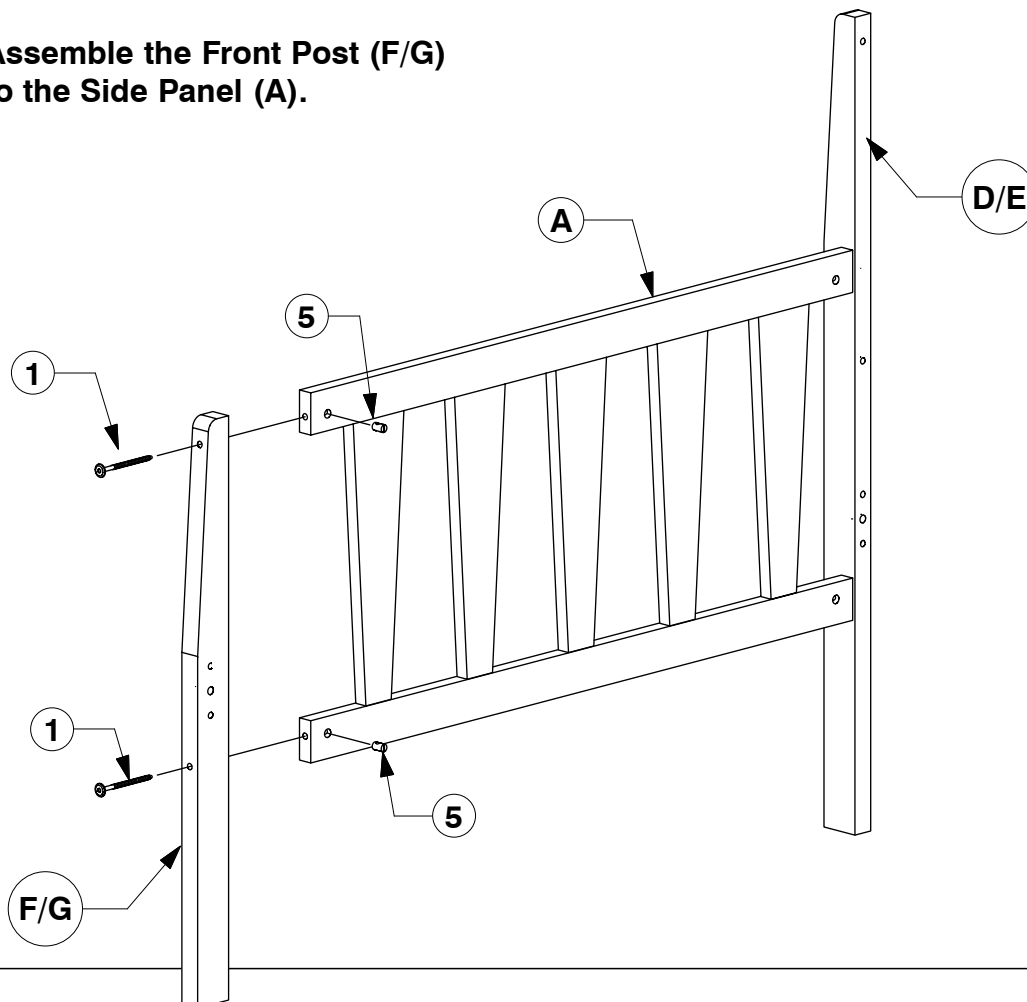


# 0046-1 Daybed



## Assembly Instructions

WII-0120

- 6 Assemble the Side Panel (A) to the Back Panel (B) & Side Rail (C).**

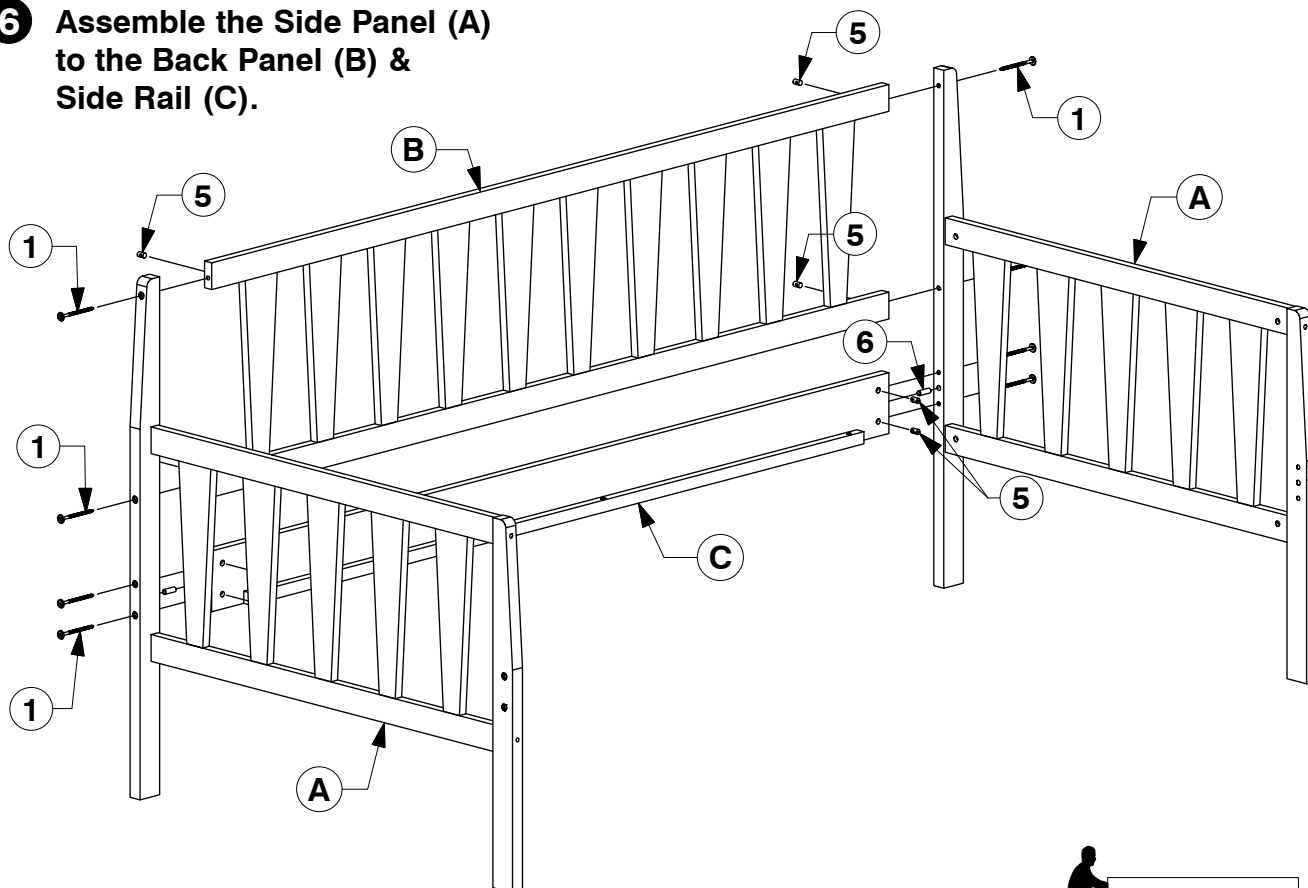

- 7 Assemble the Side Rail (C) to the Front Post (F/G).**

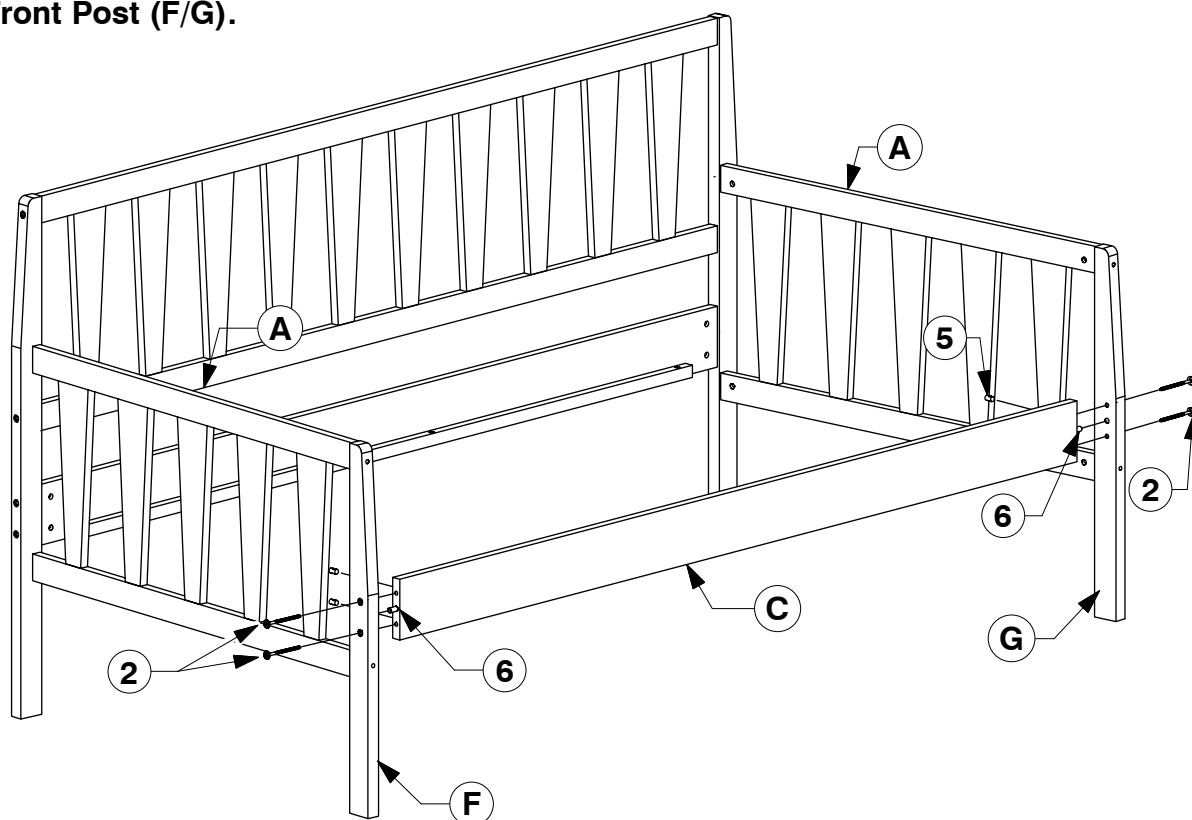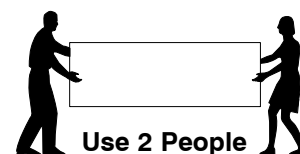


# 0046-1 Daybed

## Assembly Instructions

WII-0120

- 8** Bolt the Set of Slats (H) between the Side Rail (C).

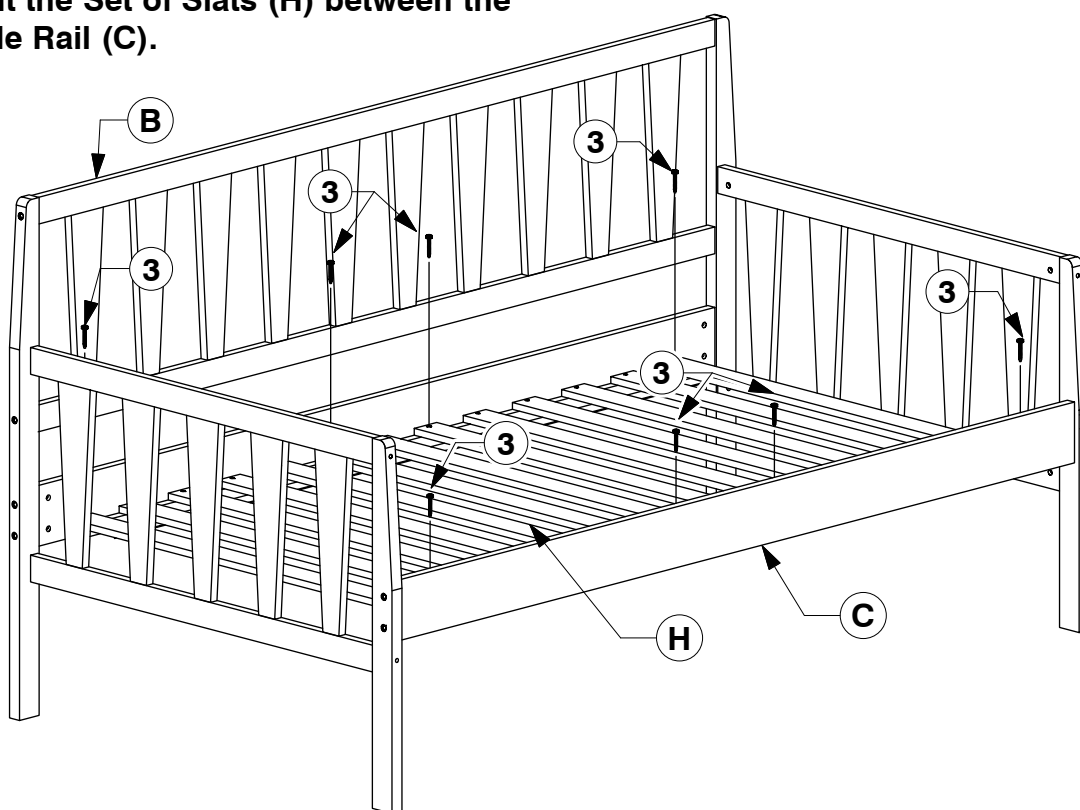

- 9** Screw the Set of Slats (H) between the Side Rail (C). Finally, fit the assembled Trundle.

