




Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325

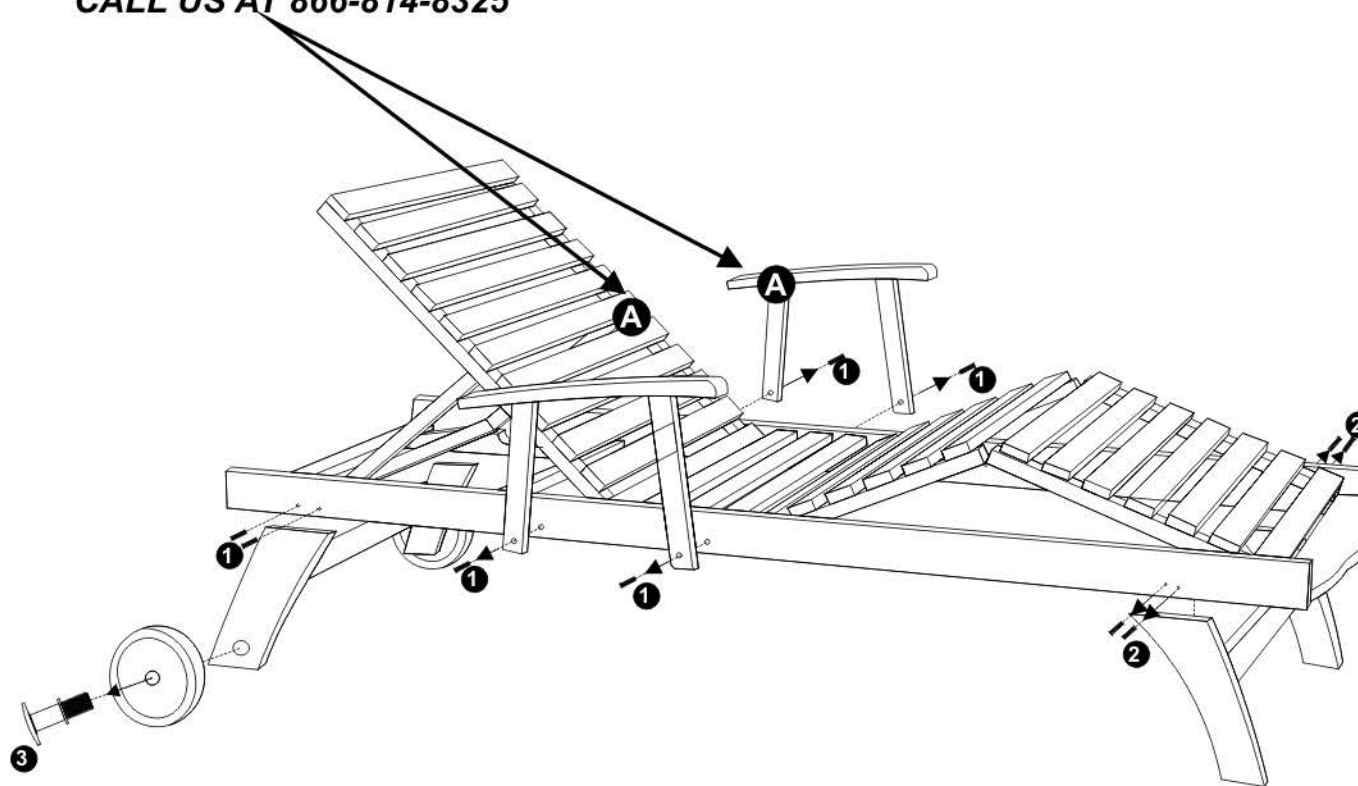

*Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly*


Code

Ak28

Hardware



- 1. Costum Bolt 50mm (8 pcs)
- 2. Costum Bolt 28mm (4 pcs)

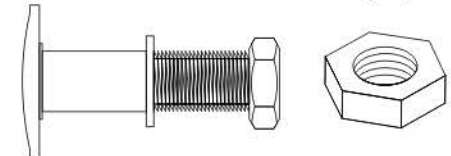

3. Bolt

(2 Pcs)

Tool



Socket Wrench 4m/m Ht



Total Section

7 Section