


Cheviot

PRODUCTS INC

Model # 3121

INSTRUCTIONS

1. Connect the two parts of the shower rod using the included brass sleeve.
2. Use a pipe cutter to cut the assembled shower curtain frame to the desired dimensions.
3. Position the wall flanges on the wall and mark screw positions with a pencil. Drill 1/4" pilot holes as marked and insert wall anchors.
4. Attach wall flanges to the curtain rod using the supplied set screws.
5. Screw the wall flanges to the wall as marked in step 3.

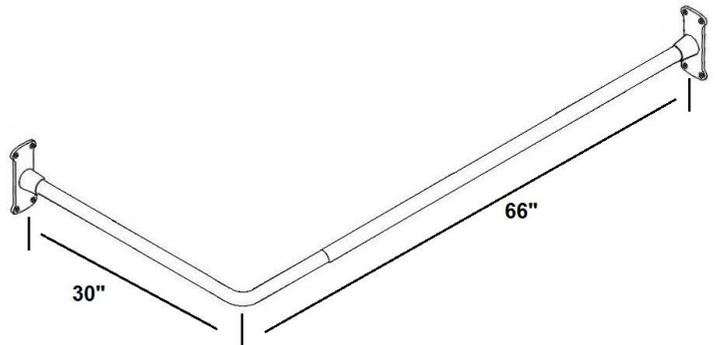

CARE AND MAINTENANCE

Minimum Maintenance is required to maintain product finish. With proper maintenance your CHEVIOT shower curtain will continually look like new. Special care should be taken when cleaning your frame and the following suggestions should help extend the life of your product.

- a) Cleaning should be done regularly using a soft cotton cloth and warm water, then towel dry.
- b) Do not use cleaners that contain abrasives or harsh chemicals; Care should be taken in selecting cleaning supplies. Many cleaners contain detergents, ammonia, or other corrosive solvents that could damage the finish.
- c) Occasionally clean with a non-abrasive wax polish.

Tel : (800)-444-5969

www.cheviotproducts.com

M12-007