


# ASSEMBLY INSTRUCTIONS

WF 294631/ WF 294632

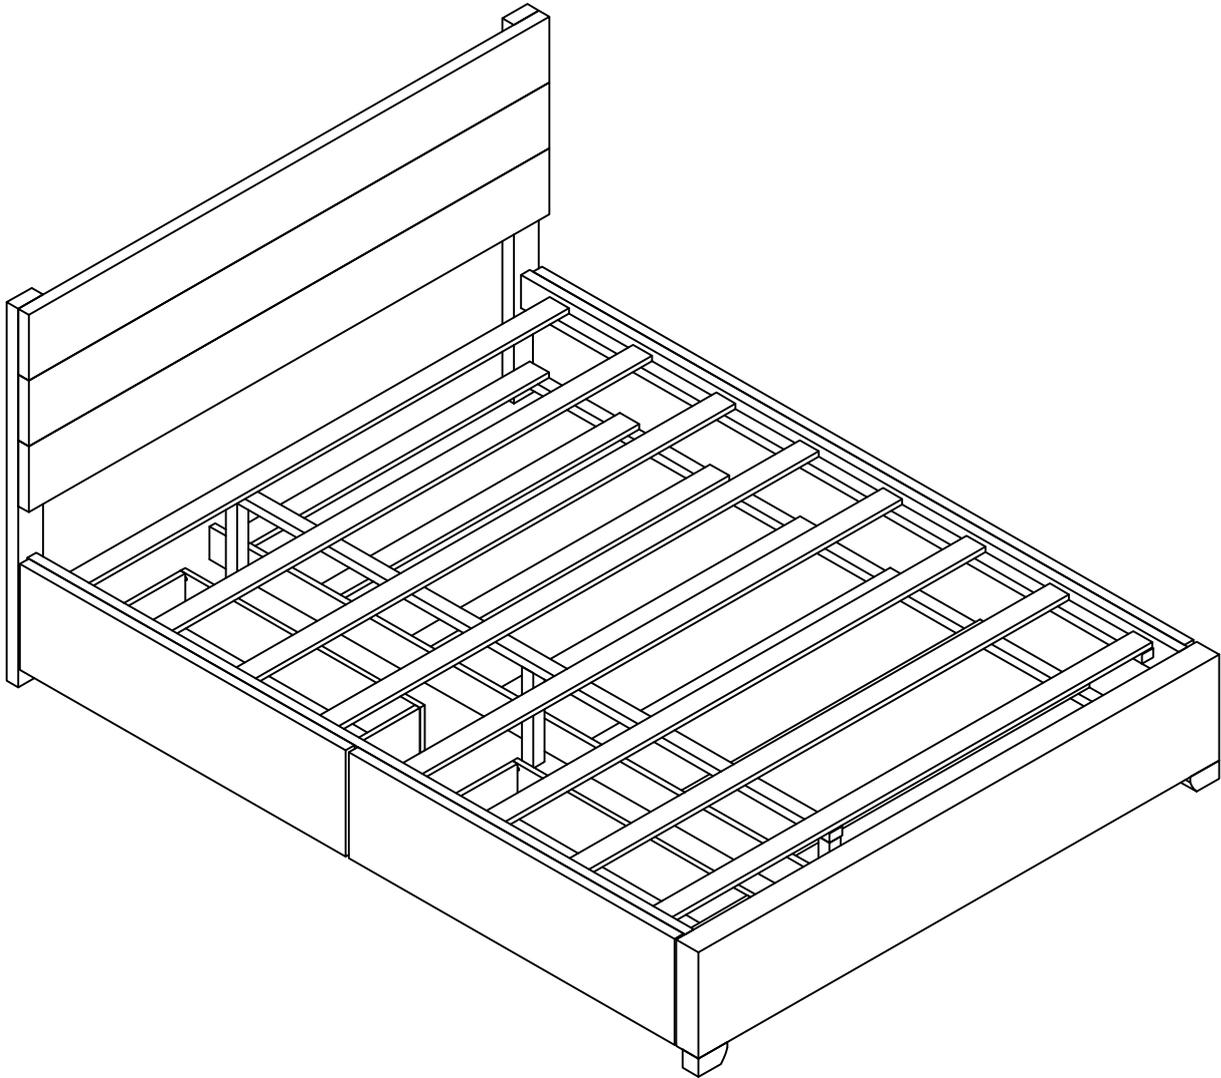

## IMPORTANT NOTE

**\*\*PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO  
AVOID THE PARTS FROM BEING SCRATCHED**





**\*\* BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP**

**\*\*DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP**


# ASSEMBLY INSTRUCTIONS

WF 294631/ WF 294632

## PART LIST BOX 1: WF 294631
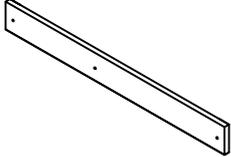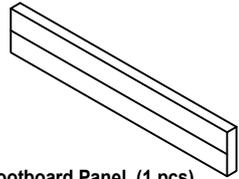
<p>1</p>  <p>Lower Bed Panel (3 pcs)</p>	<p>2</p>  <p>Connection Bar (1 pc)</p>	
<p>3</p>  <p>Left Metal Plate (1 pc)</p>	<p>4</p>  <p>Right Metal Plate (1 pc)</p>	<p>5</p>  <p>Footboard Panel (1 pcs)</p>
<p>6</p>  <p>Roll Slat (8 pcs) 1365*60*15</p>	<p>7</p>  <p>Leg (2 pcs)</p>	<p>8</p>  <p>Left Wheel Board (2pcs)</p>
<p>9</p>  <p>Right Wheel Board (2 pcs)</p>	<p>10</p>  <p>Stand in Pull Box (4pcs)</p>	<p>11</p>  <p>Side Pull Box (4pcs)</p>
<p>12</p>  <p>Back Panel Pull Box (2 pcs)</p>	<p>13</p>  <p>Pull Box Bottom Board (2 pcs)</p>	<p>14</p>  <p>Pull Box Bottom Board (2pcs)</p>



## PART LIST BOX 2: WF 294632
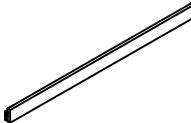
<p>15</p>  <p>Left Lower Rail (1 pc)</p>	<p>16</p>  <p>Right Lower Rail (1pc)</p>	<p>17</p>  <p>Front Panel Trundle (1 pc)</p>
<p>18</p>  <p>Back Panel Trundle (1 pc)</p>	<p>19</p>  <p>Roll Slat (8 pcs) 985*60*15</p>	<p>20</p>  <p>Center Rail (1 pc)</p>
<p>21</p>  <p>Bed Slat Support With Leveler (3 pcs)</p>		

# ASSEMBLY INSTRUCTIONS


WF 294631/ WF 294632

## HARDWARE LIST IN WF 294631

<p><b>A</b></p>  <p>(Ø 5/16 "X25mm) Short Bolt (8pcs)</p>	<p><b>B</b></p>  <p>(Ø 5/16 "X38mm) Long Bolt (9 pcs)</p>	<p><b>C</b></p>  <p>(Ø 5/16 "X55mm) Long Bolt (2 pcs)</p>
<p><b>D</b></p>  <p>(Ø 5/16 "-RBW) Flat Washer (19 pcs)</p>	<p><b>E</b></p>  <p>(Ø 5/16 "-RBW) Spring Washer (19 pcs)</p>	<p><b>F</b></p>  <p>(M4x75mm x32mm) Allen Wrench (1 pc)</p>
<p><b>G</b></p>  <p>( m4x20mm-RBW) Flat Head Screw (72 pcs)</p>	<p><b>H</b></p>  <p>( m4x30mm-RBW) Flat Head Screw (44 pcs)</p>	<p><b>I</b></p>  <p>( m4x38mm-RBW) Flat Head Screw (24 pcs)</p>
<p><b>J</b></p>  <p>( 38mmx38mmx25mmx2mm) Square Patch (4 pcs)</p>	<p><b>K</b></p>  <p>( Ø10x10mmx10mm) Plastic Button (24 pcs)</p>	<p><b>L</b></p>  <p>( m41x25mmx50mm) Wheels (12 pcs)</p>


# ASSEMBLY INSTRUCTIONS

## STEP 1

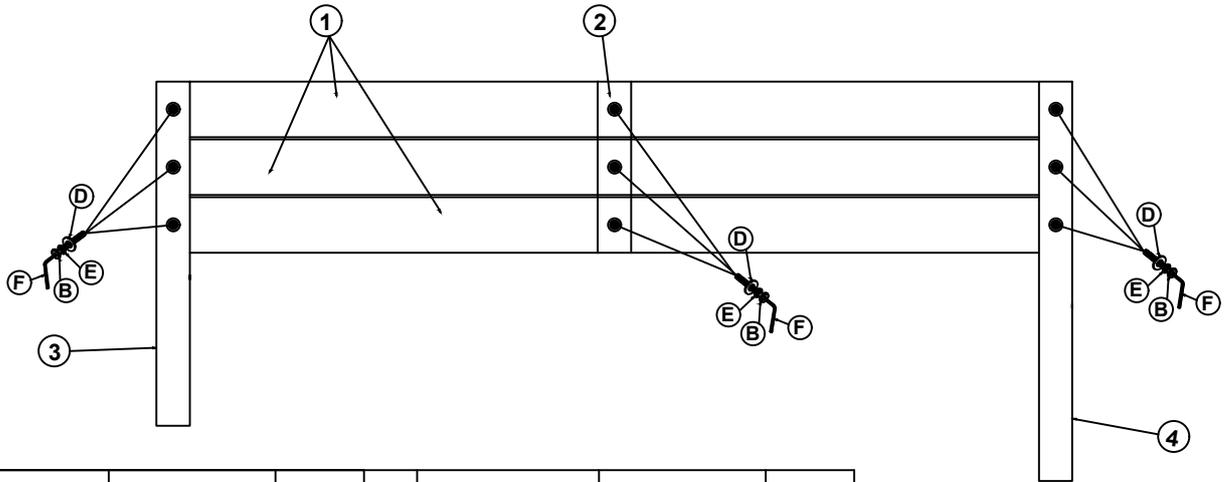

B	<b>Bolt</b> (Ø 5/16 "X38mm)		9pcs	D	<b>Flat Washer</b> (Ø 5/16 "-RBW)		9pcs
E	<b>Spring Washer</b> (Ø 5/16 "-RBW)		9pcs	F	<b>Allen Wrench</b> (M4x75mm x32mm)		1pc


## STEP 2

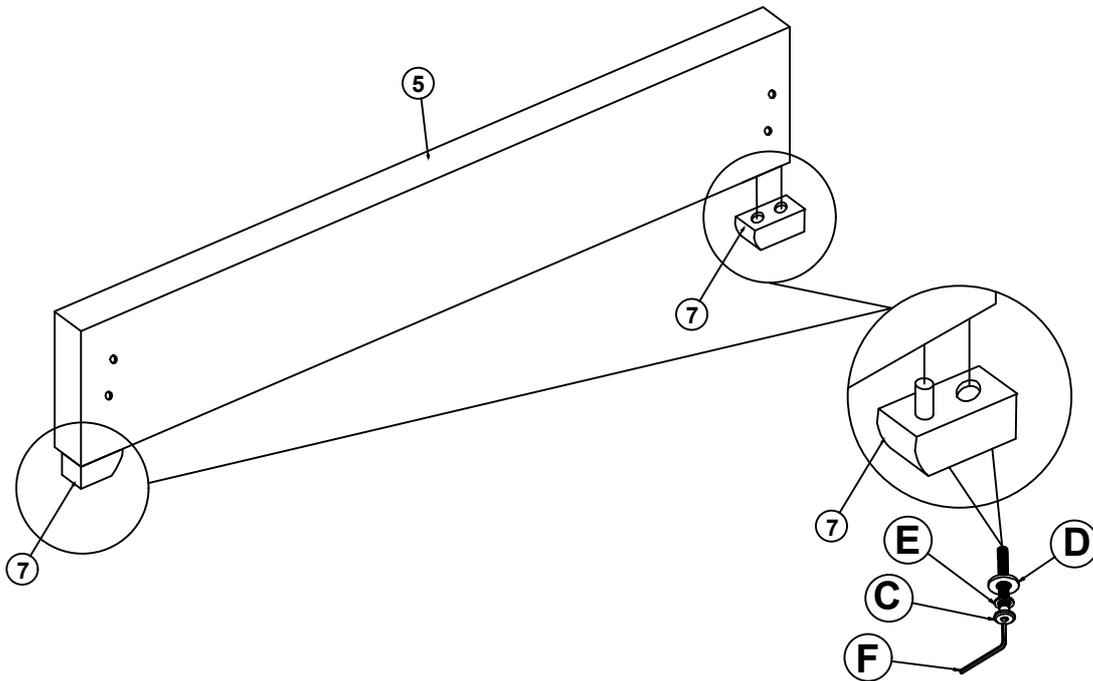


C	<b>Bolt</b> (Ø 5/16 "X55mm)		2pcs	D	<b>Flat Washer</b> (Ø 5/16 "-RBW)		2pcs
E	<b>Spring Washer</b> (Ø 5/16 "-RBW)		2pcs	F	<b>Allen Wrench</b> (M4x75mm x32mm)		1pc

# ASSEMBLY INSTRUCTIONS

## STEP 3

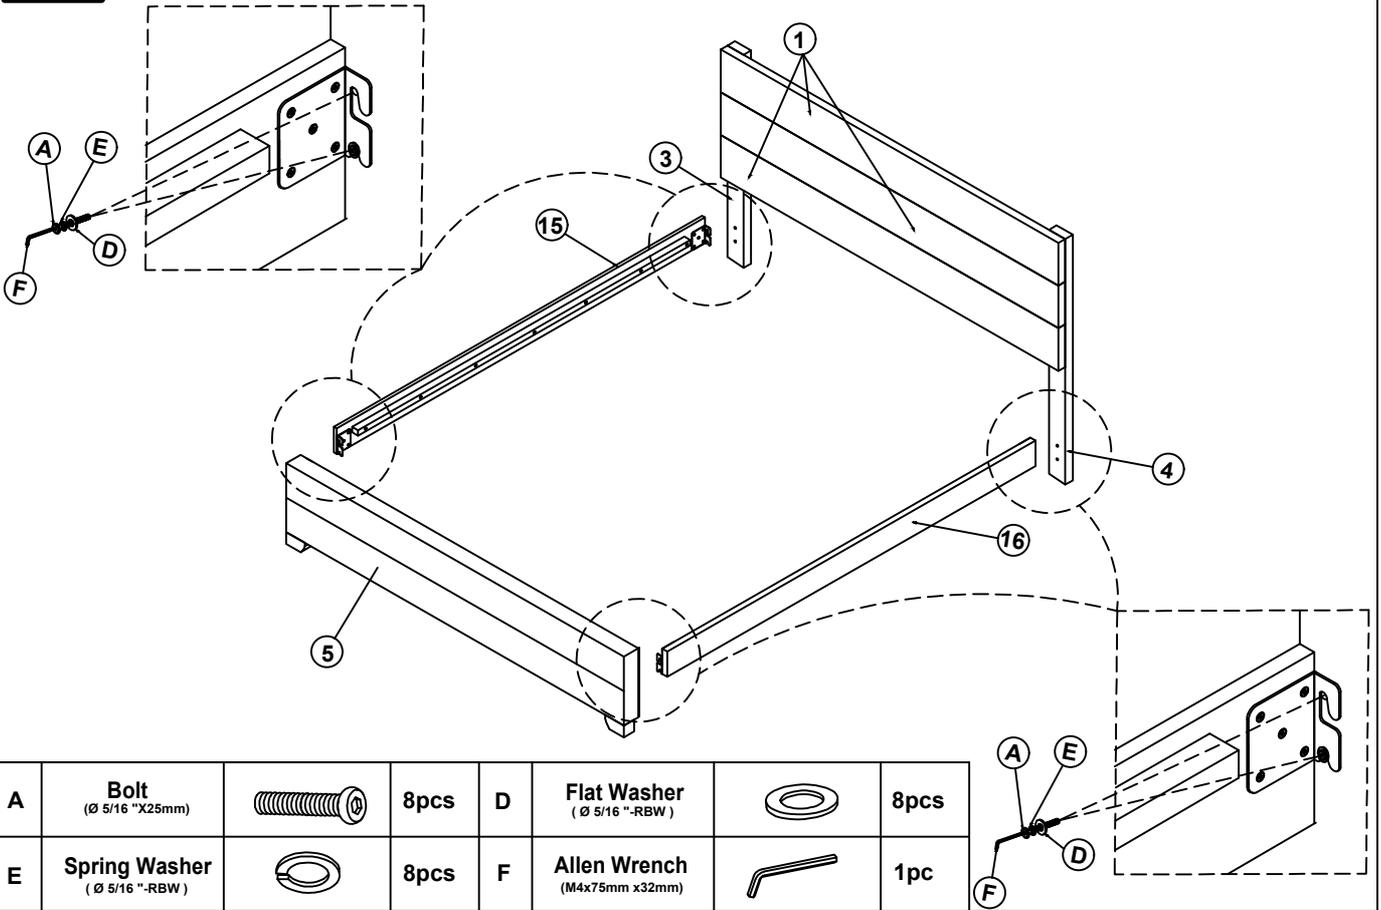


## STEP 4

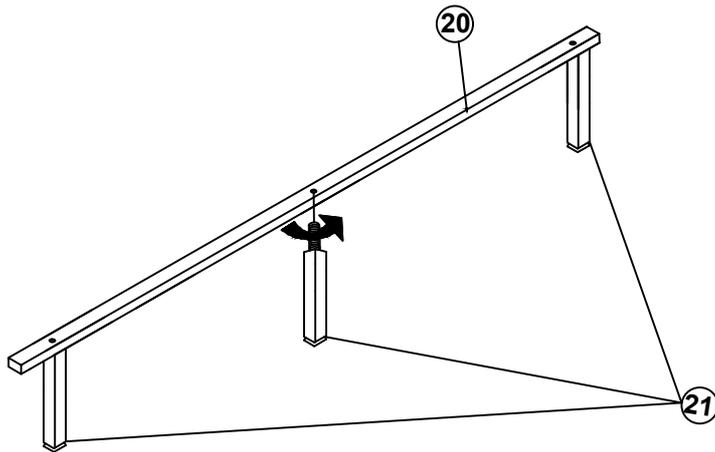


# ASSEMBLY INSTRUCTIONS


## STEP 5

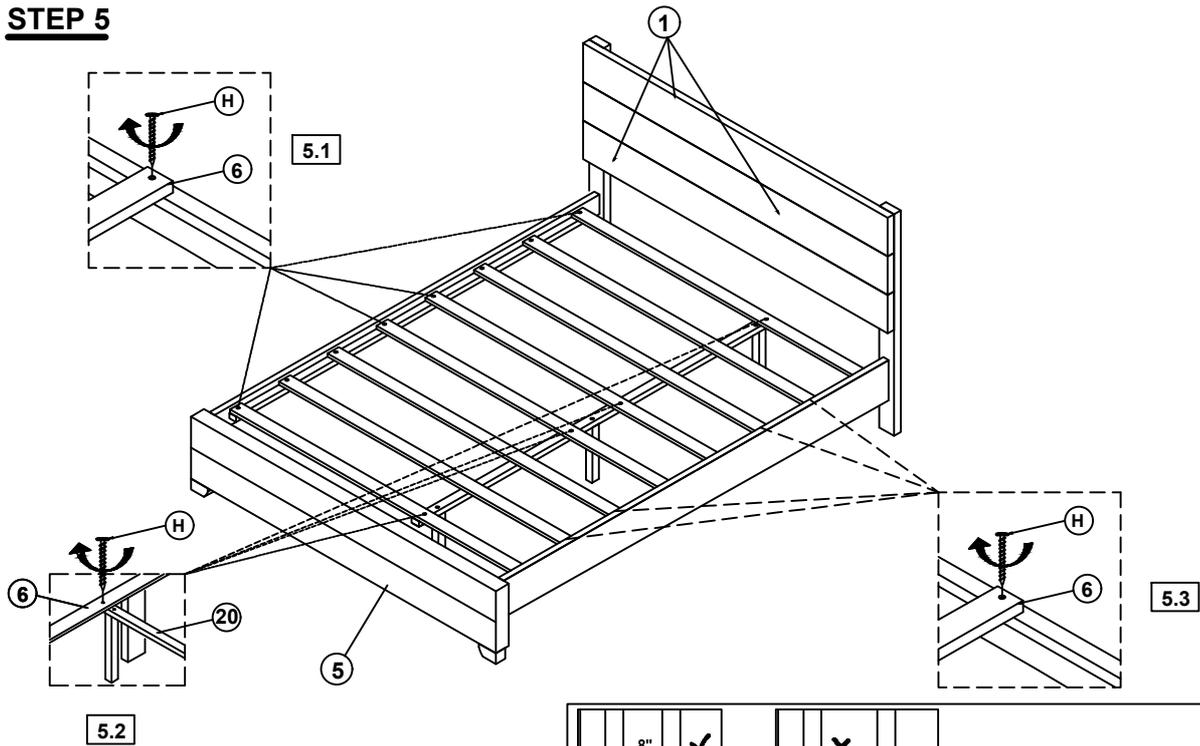


**NOTE:** Do not lock the screws of the trundle slats to the utermost edge the trundle slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

H	Flat Head Screw (m4x30mm-RBW)		20pcs
---	----------------------------------	---	-------


## STEP 6

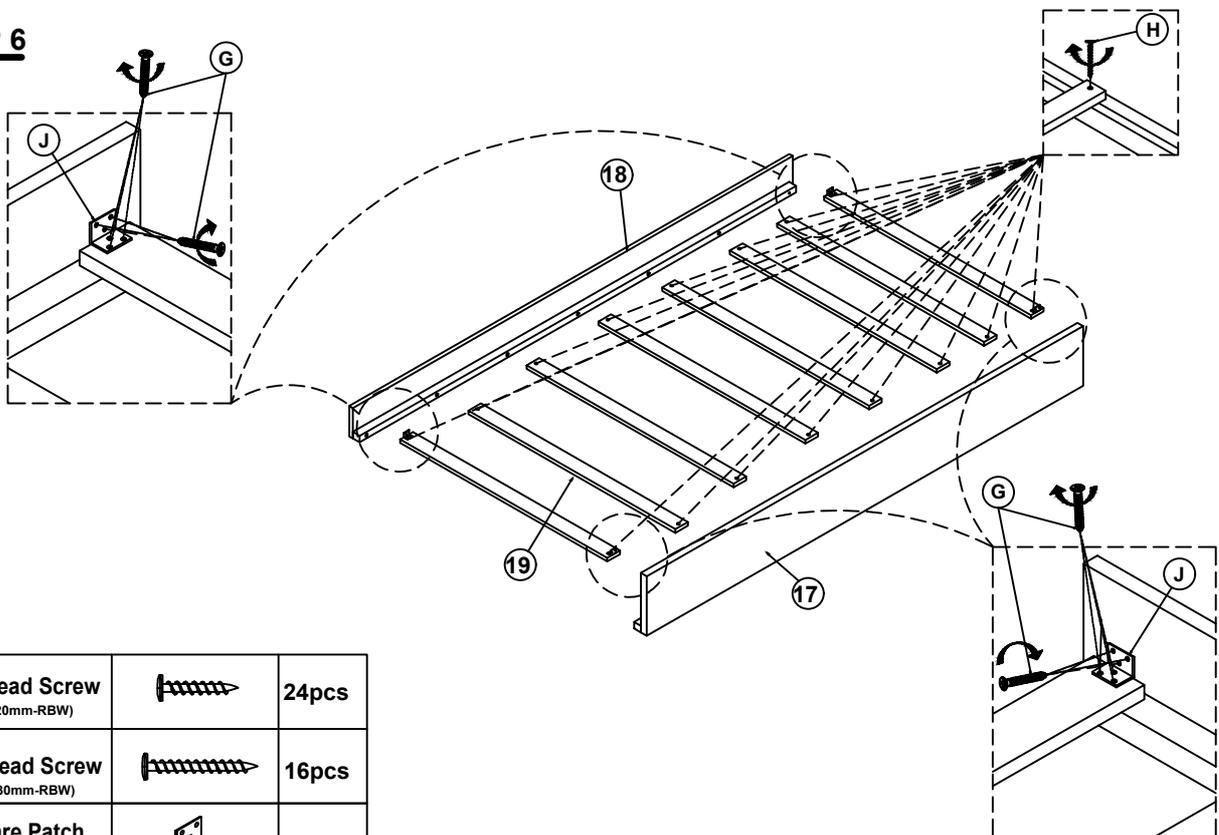

G	Flat Head Screw (m4x20mm-RBW)		24pcs
H	Flat Head Screw (m4x30mm-RBW)		16pcs
J	Square Patch (38mmx38mmx25mmx2mm)		4pcs


# ASSEMBLY INSTRUCTIONS

## STEP 7

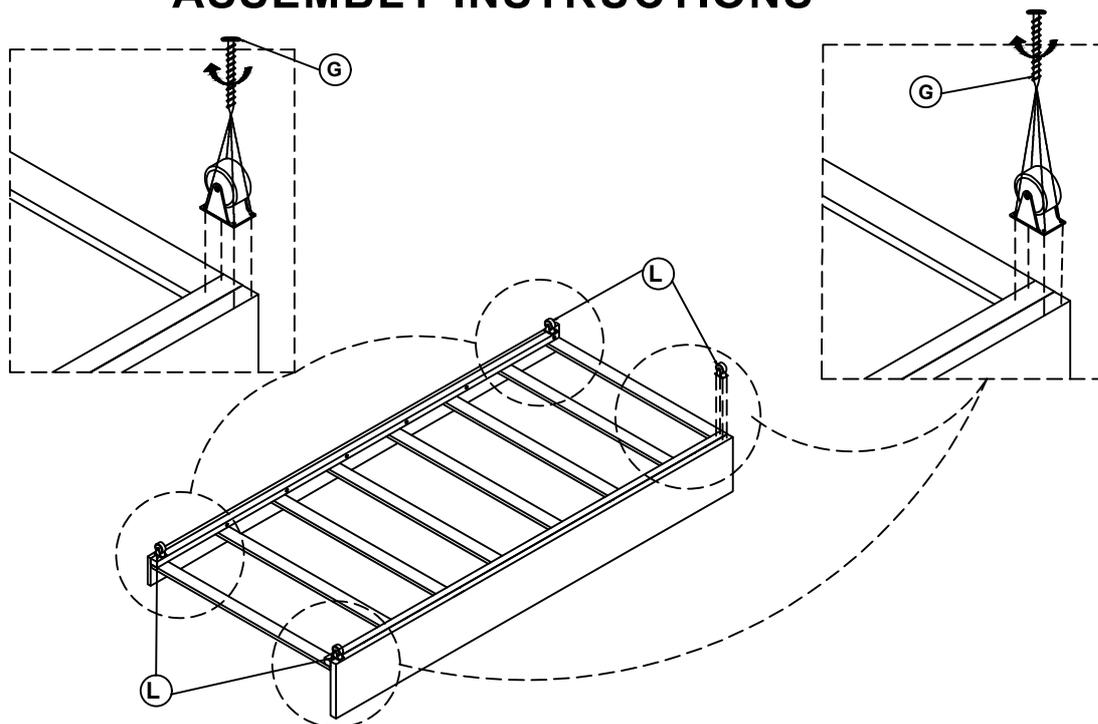


G	Flat Head Screw (m4x20mm-RBW)		16pcs
L	Wheels (m41x25mmx50mm)		4pcs

## STEP 8

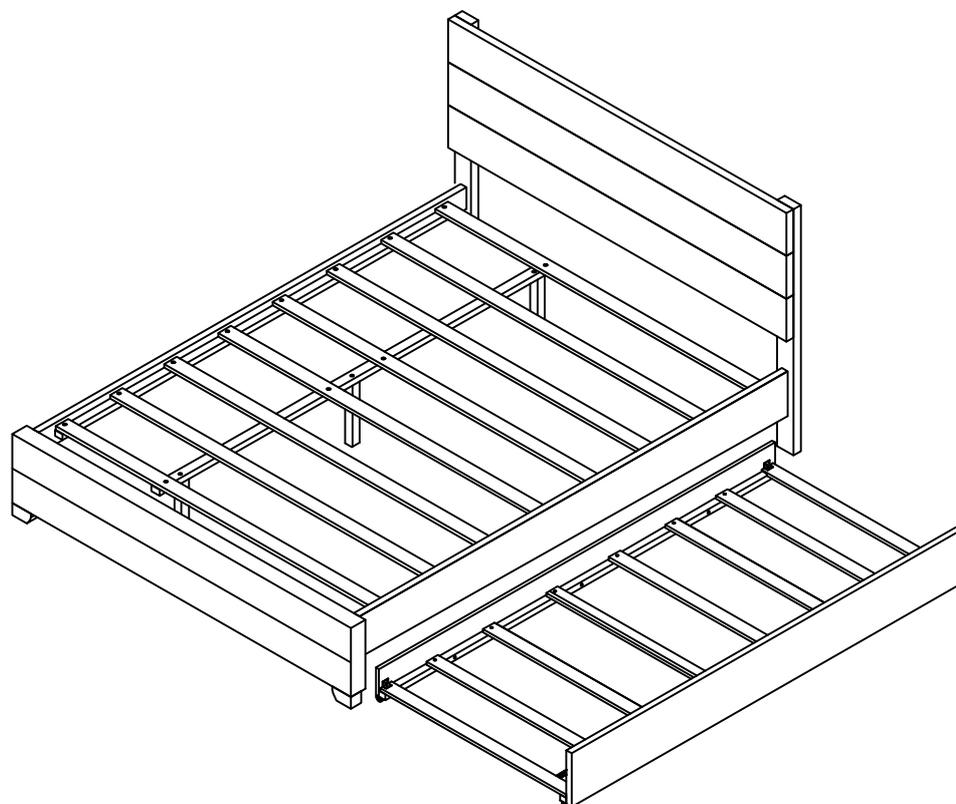


# ASSEMBLY INSTRUCTIONS

## STEP 9

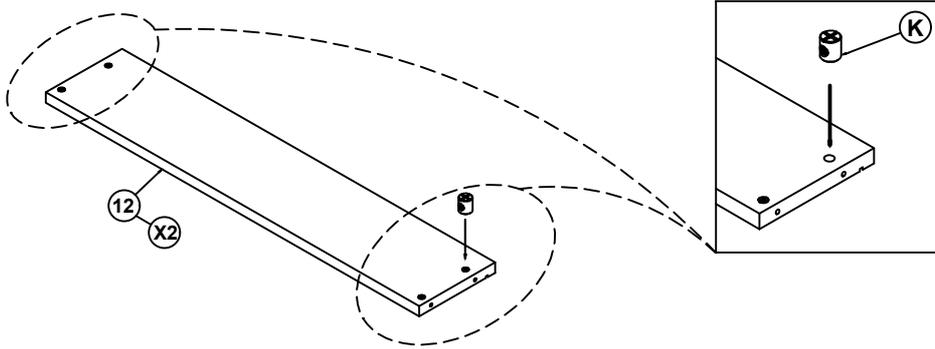


K	Plastic Button (Ø10x10mmx10mm)		8pcs
---	-----------------------------------	---	------

## STEP 10

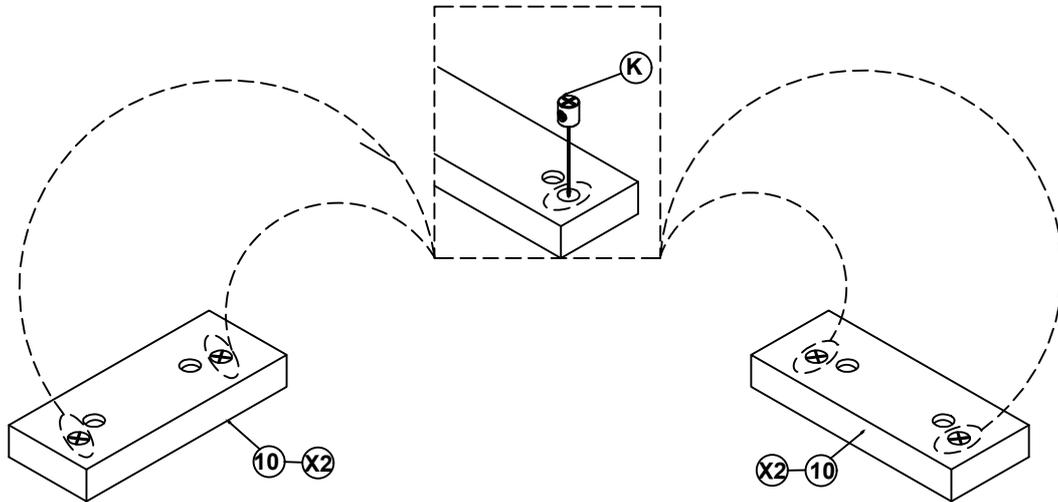

K	Plastic Button (Ø10x10mmx10mm)		8pcs
---	-----------------------------------	---	------


## STEP 11

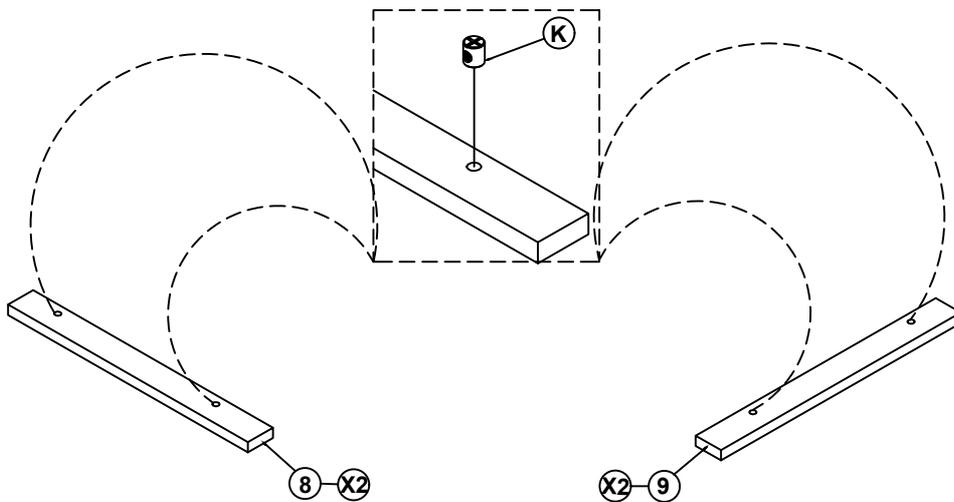


K	Plastic Button (Ø10x10mmx10mm)		8pcs
---	-----------------------------------	---	------


# ASSEMBLY INSTRUCTIONS


## STEP 12

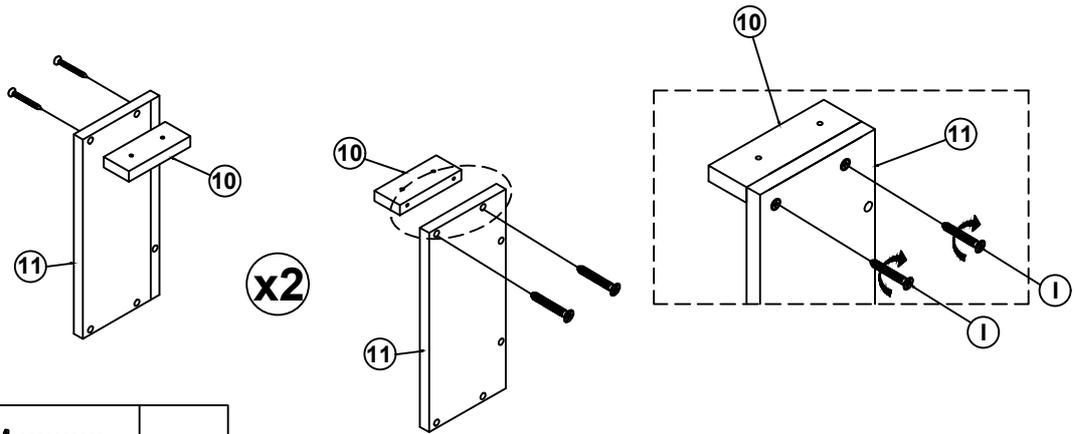


I	Flat Head Screw (m4x38mm-RBW)		8pcs
---	----------------------------------	---	------


## STEP 13

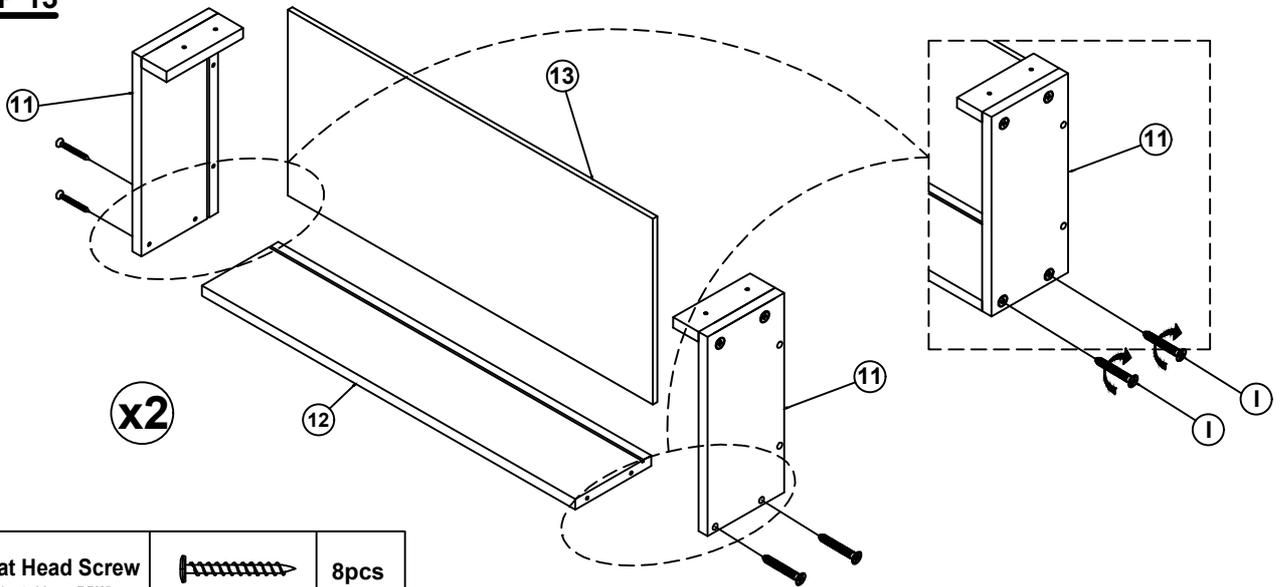

I	Flat Head Screw (m4x38mm-RBW)		8pcs
---	----------------------------------	---	------


## STEP 14

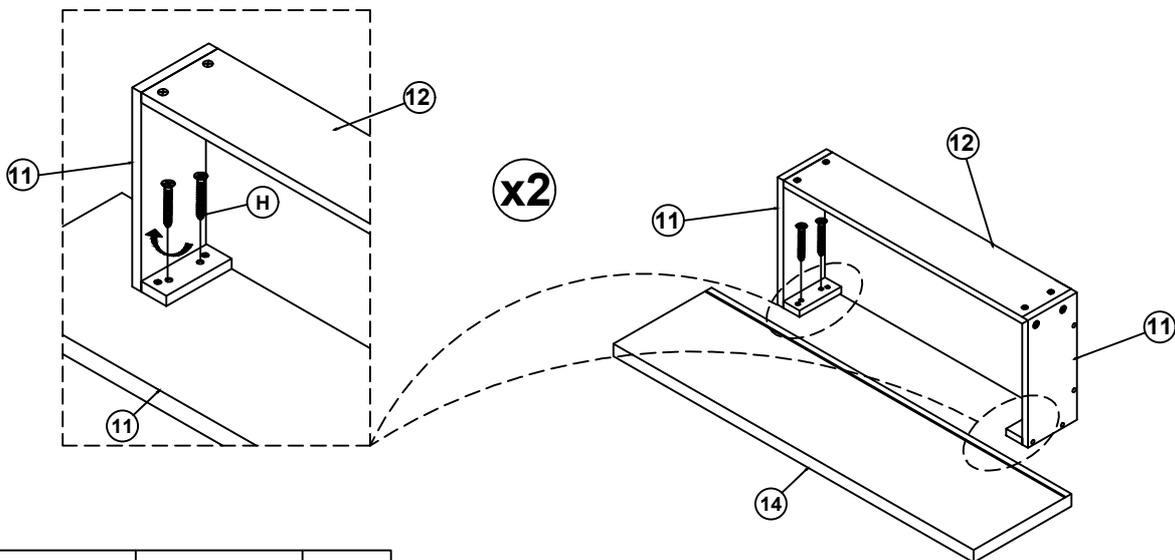


H	Flat Head Screw (m4x30mm-RBW)		8pcs
---	----------------------------------	---	------


# ASSEMBLY INSTRUCTIONS


## STEP 15

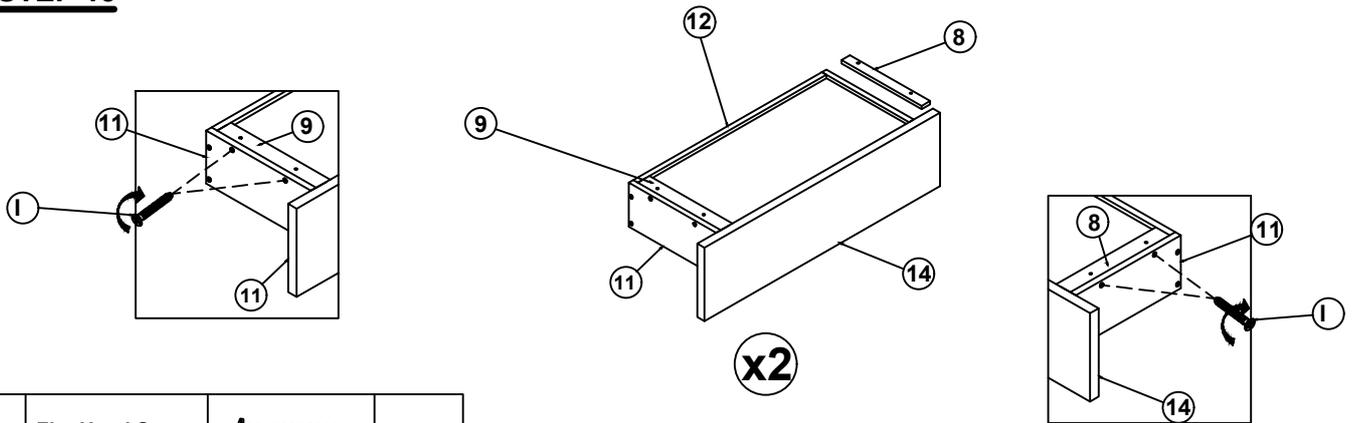

I	Flat Head Screw (m4x38mm-RBW)		8pcs
---	----------------------------------	---	------

## STEP 16

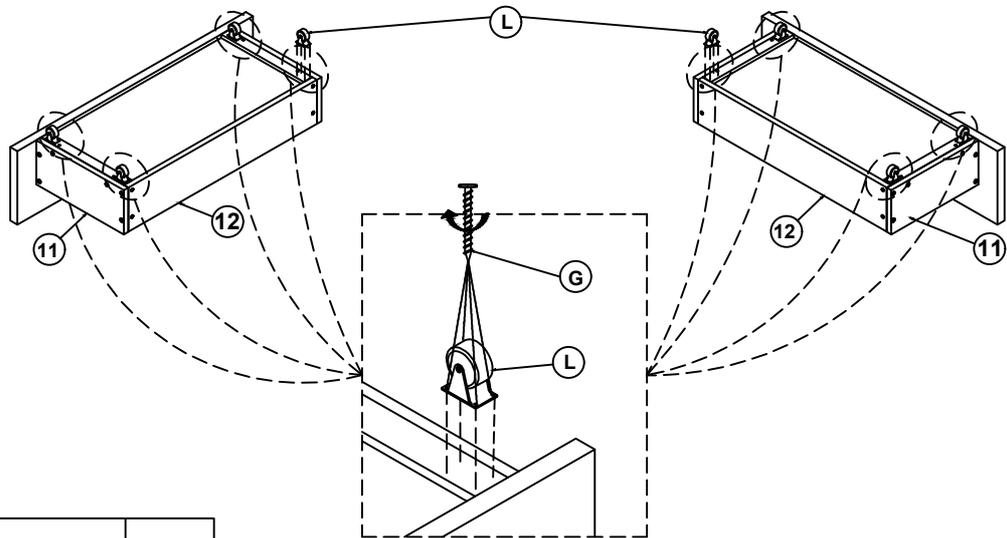

G	Flat Head Screw (m4x20mm-RBW)		32pcs
---	----------------------------------	---	-------

## STEP 17 COMPLETE

