




Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325

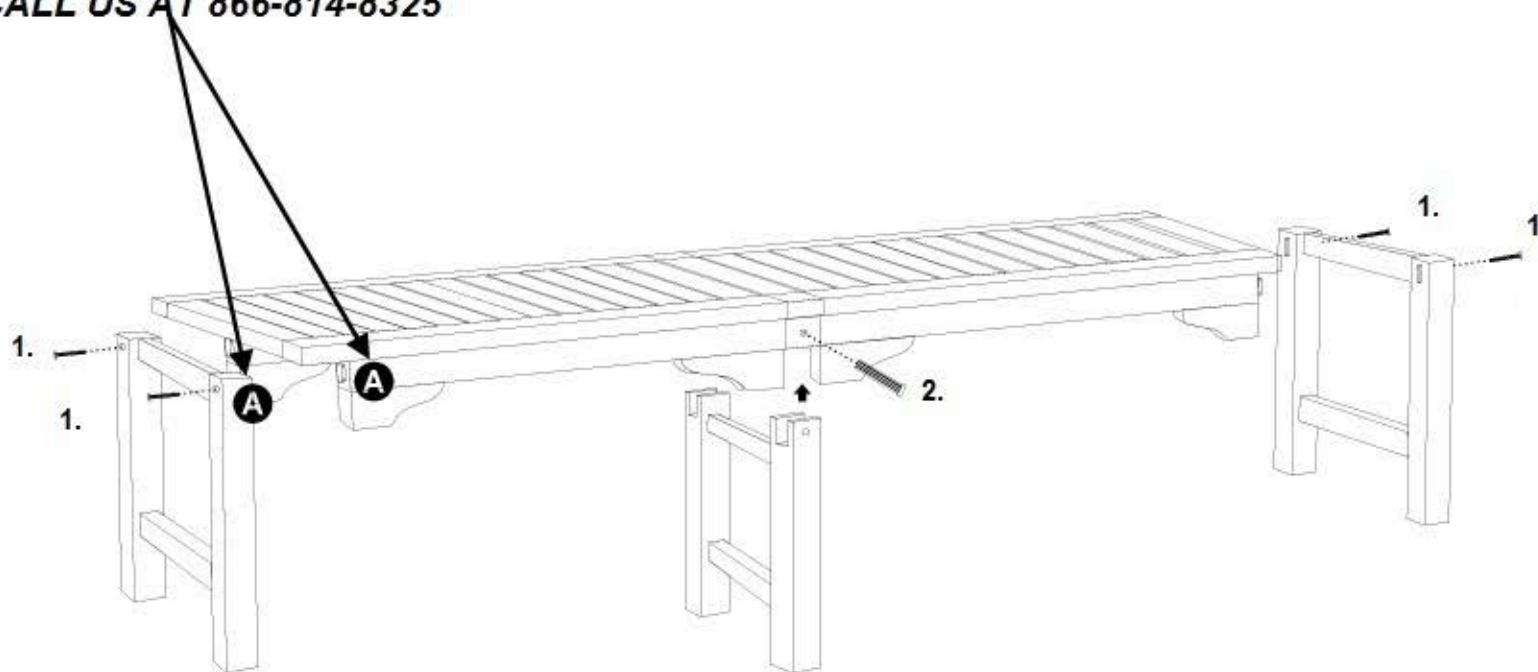

*Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly*

Code

HJ 170

Hardware



- 1. F. BOLT 60mm (4 pcs)
- 2. C. BOLT 50mm (2 pcs)

Tool



Socket Wrench 4m/m Ht

Total Section

4 Section