

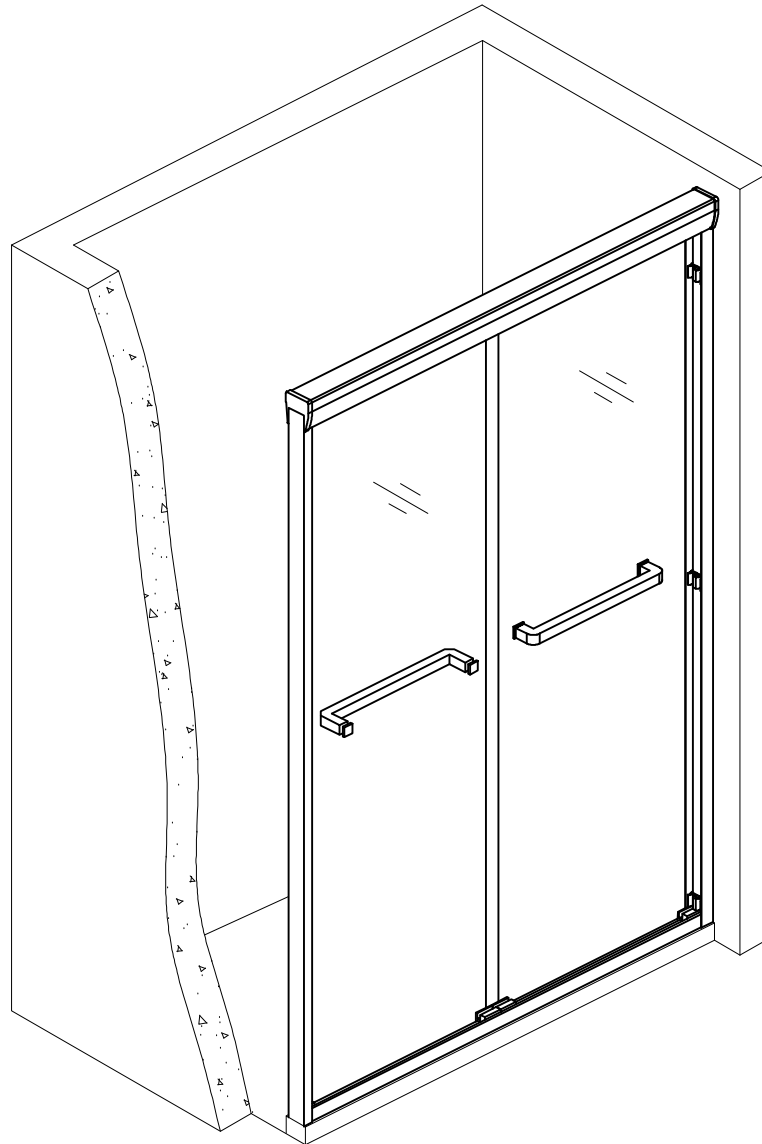
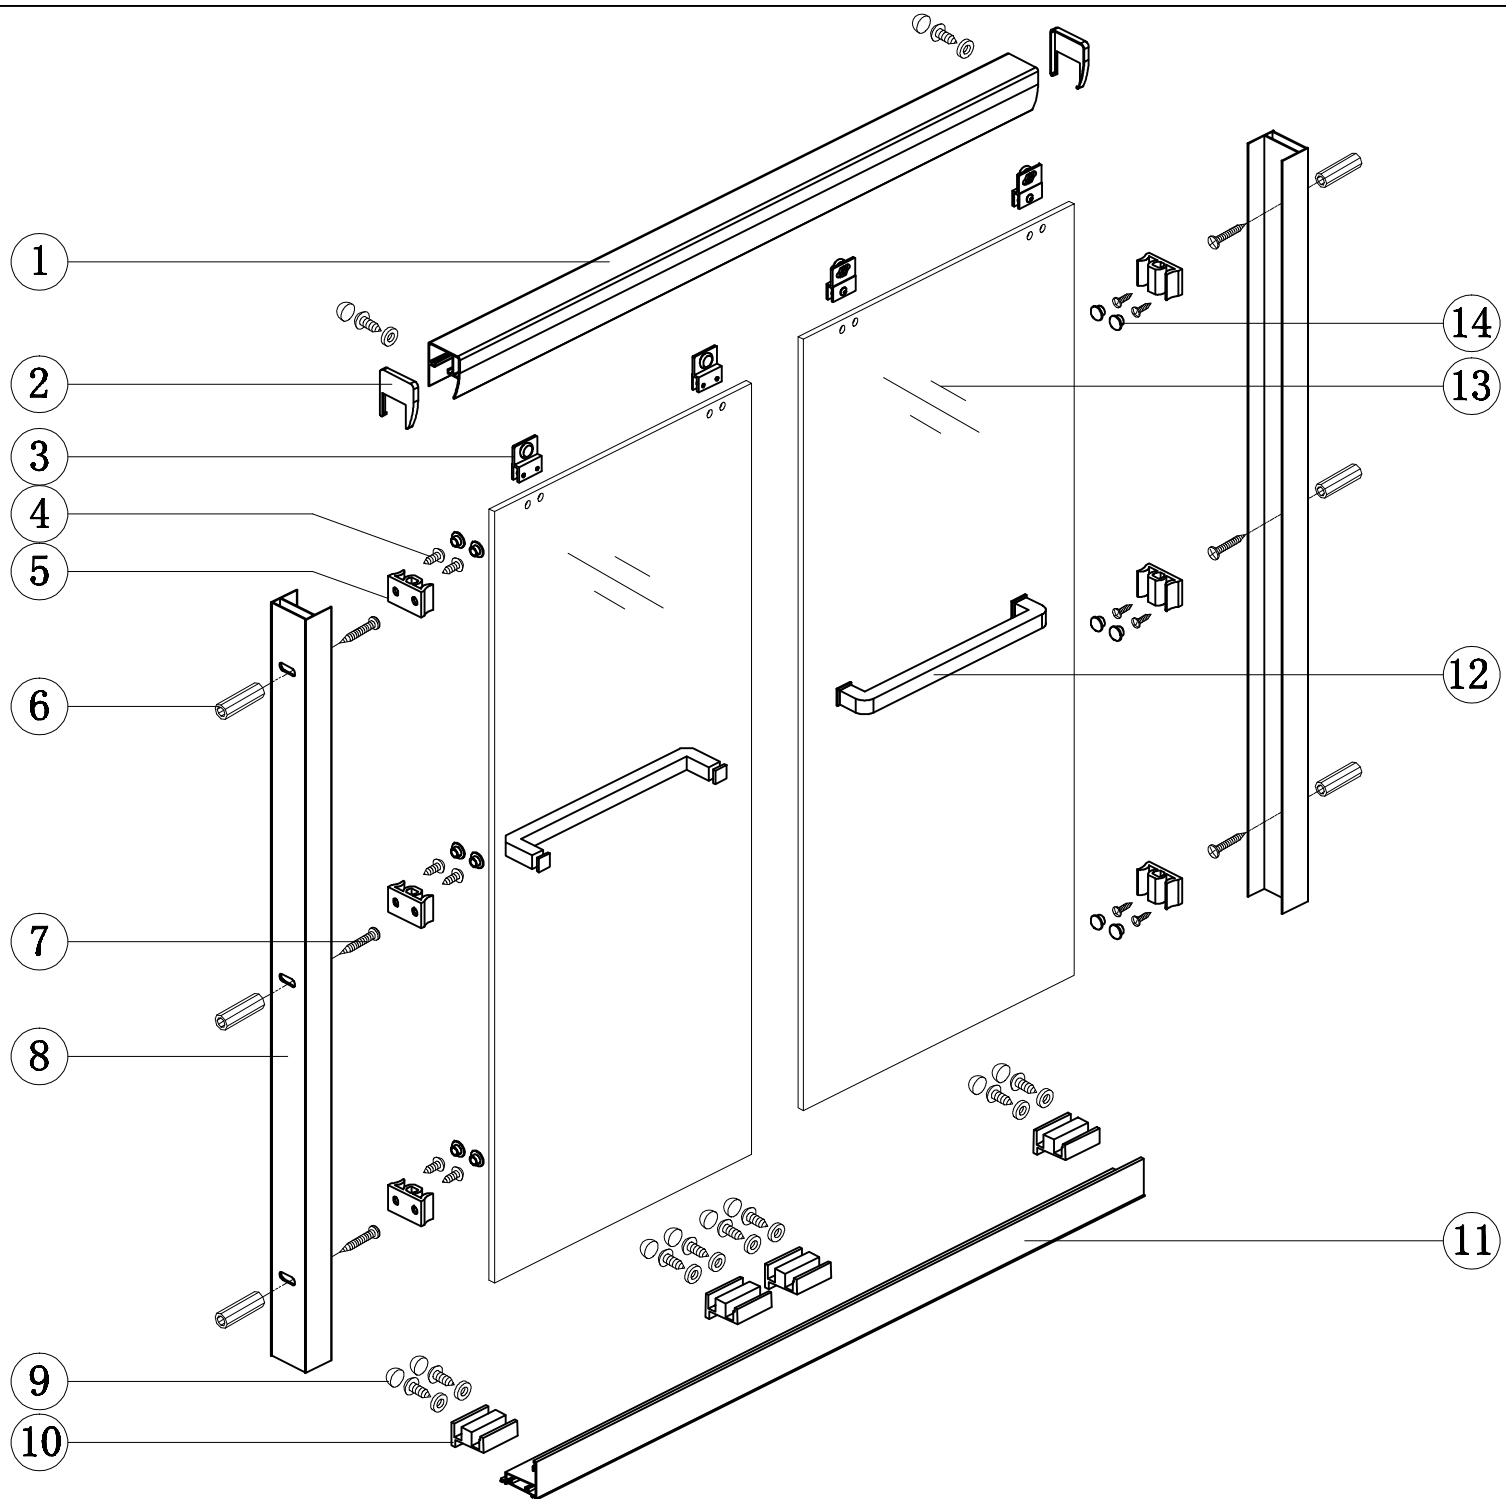
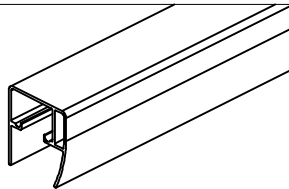
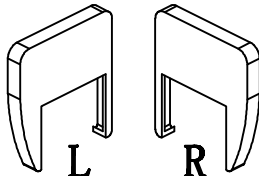
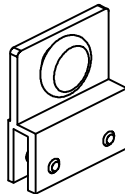
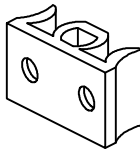


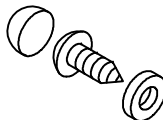




RD6A22

INSTALLATION MANUAL

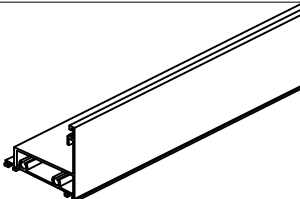


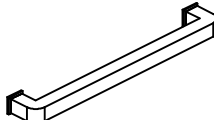

1		2	 L R	3		4	ST4x16 	5		
	1Pc		1Pair		4Pcs		12Pcs		6Pcs	
6	Ø6x30 	7	ST4x30 	8		9	ST4x16 	10	L R 	
	6Pcs		6Pcs		2Pcs		10Pairs		2Pair	
11		12		13		14		Tools:		
	1Pc		2Pcs		2Pcs		12Pcs			

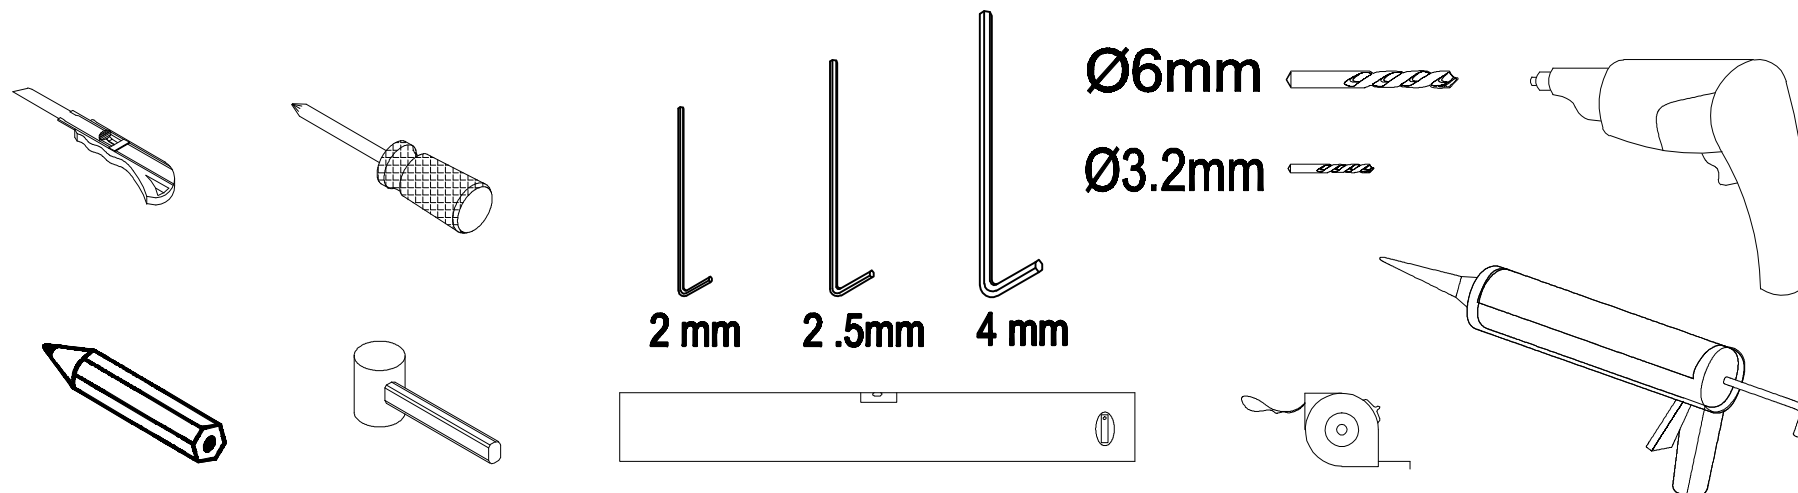

1

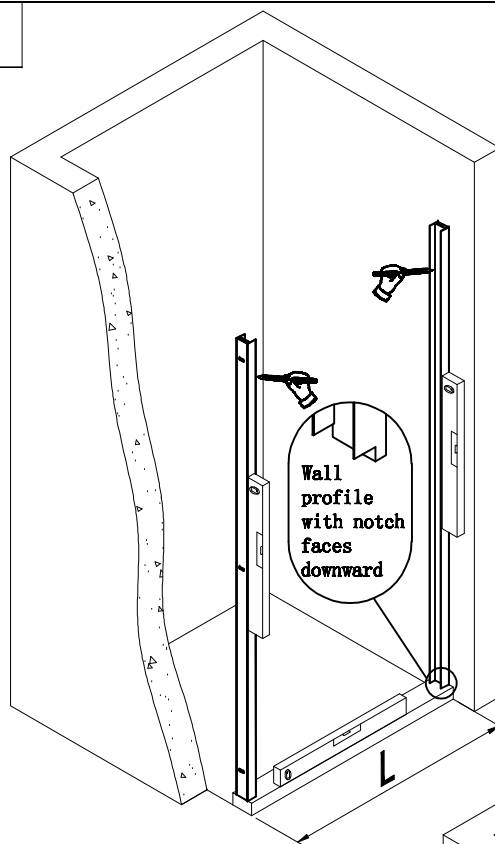


Wall
profile
with notch
faces
downward

1219

L

1209 - 1219

The top and bottom rail
can be cut short according
to the actual situation
(the bottom rail needs
to cut of both ends) when
the installation space is
less than 1209mm

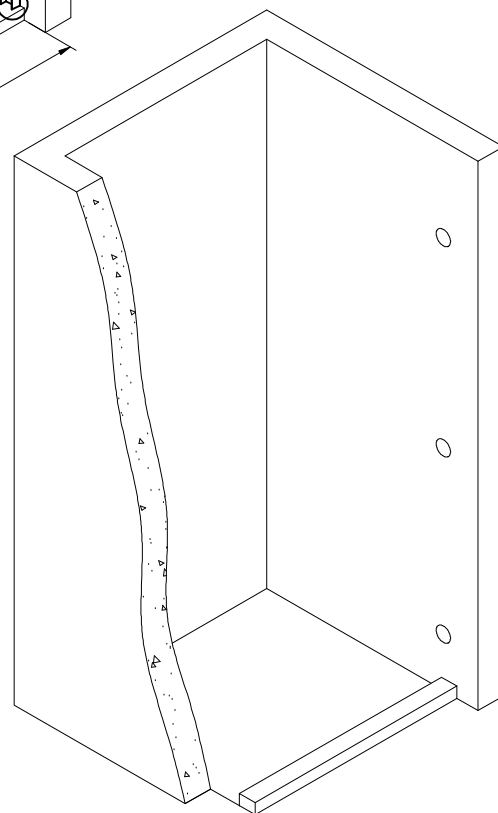

1-1


8x2

1-2


Ø6x30mm

1-3

6x6



2

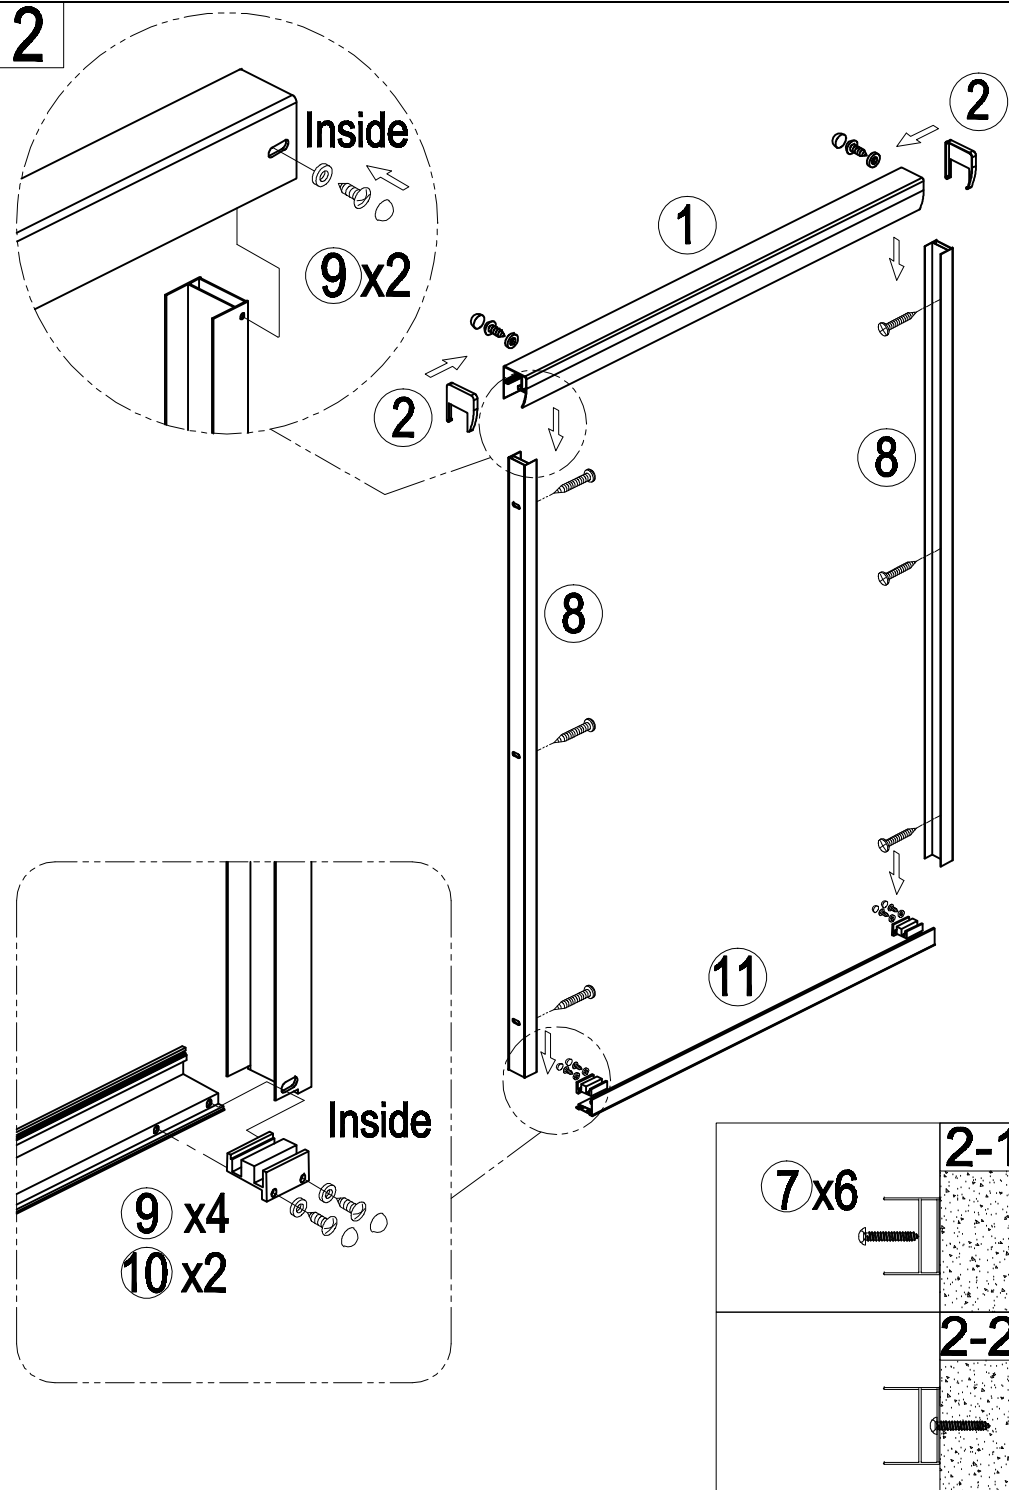

Inside

9x2

2

1

2

8

8

11

Inside


9x4

10x2


7x6

2-1

2-2




3


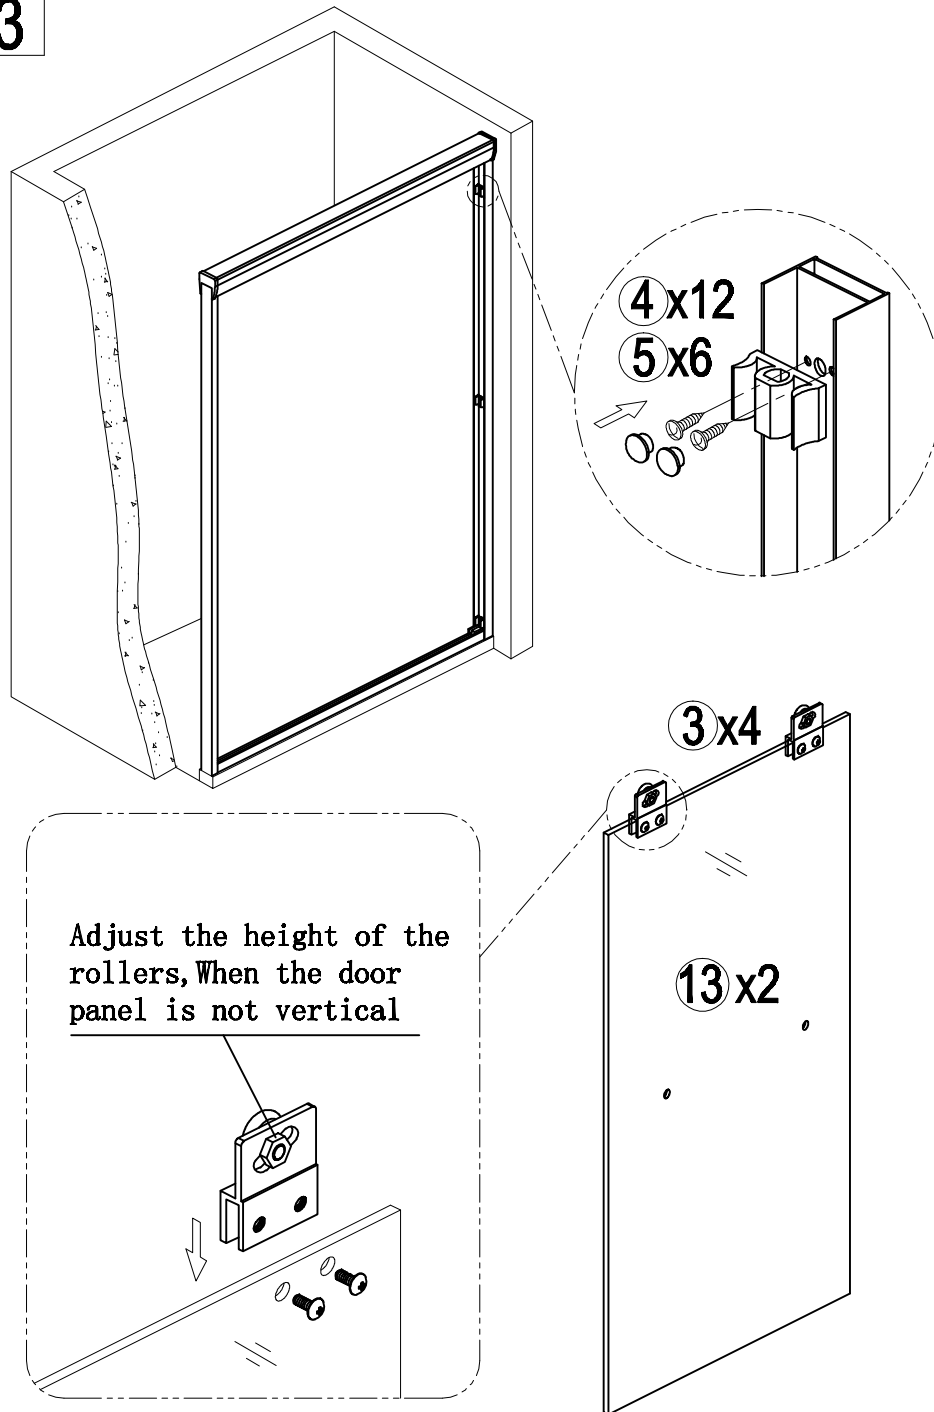


4

Easy cleaning face inside

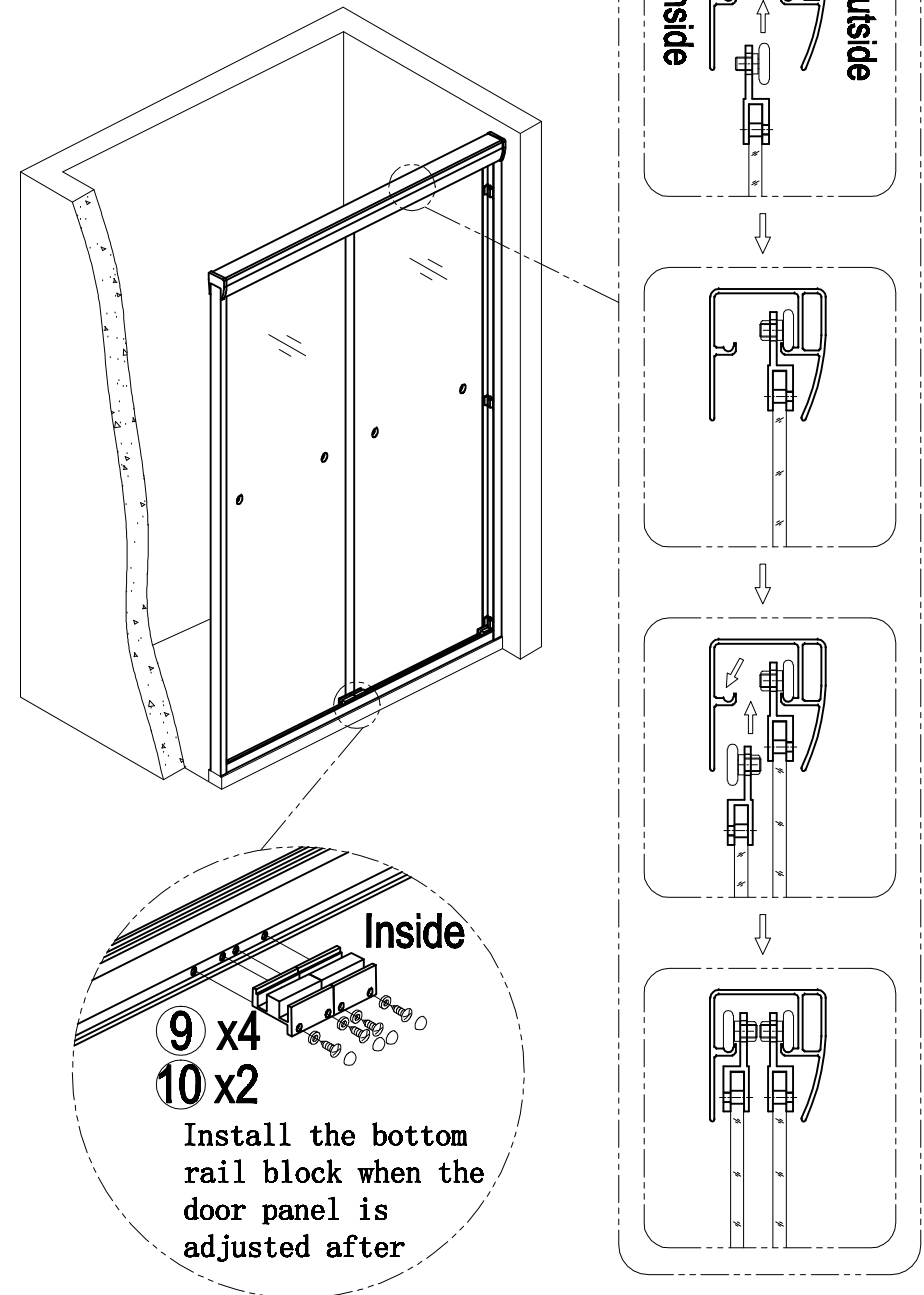

5

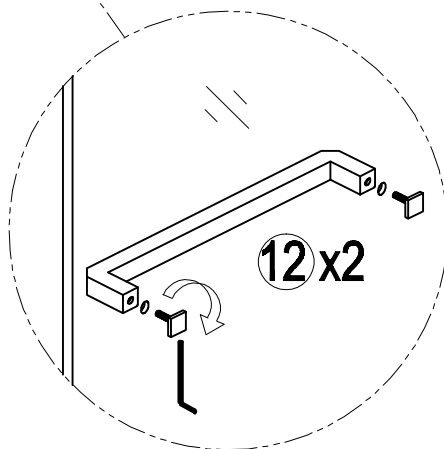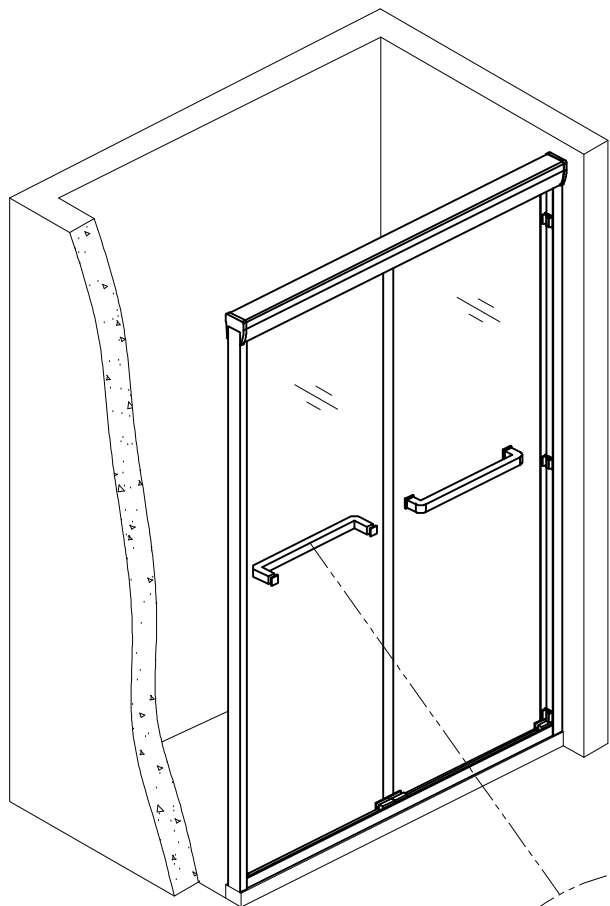

6

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when
cleaning your shower enclosure.

