



Assembly Intruction




INTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

NEED ASSEMBLY ASSISTANCE? CALL US AT 866-814-8325

1

2

3

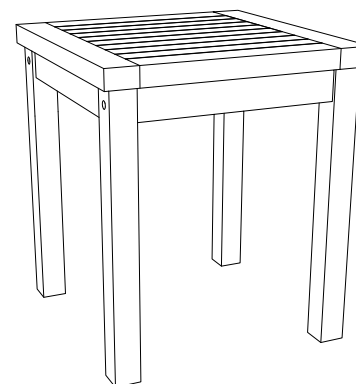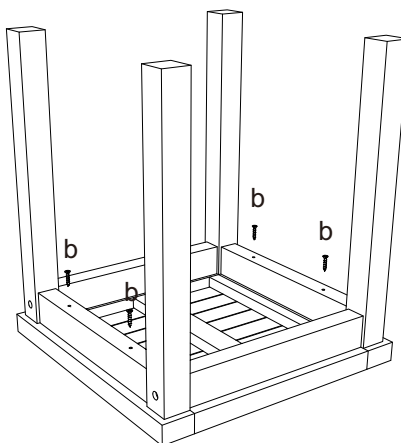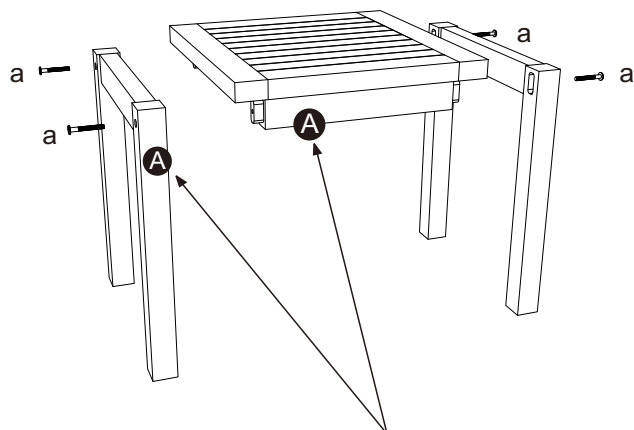

**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING**


Make sure to use Gorilla Glue (Included)
on all wood joints before assembly

Code

SST14


Hardware

a



BOLT 2' (4 pcs)

b



SCREW 1,18' (4 pcs)

Tool



Socket Wrench 4mm

Total Section

3 Section