CARE AND MAINTENCE

Wipe clean with a soft, dry cloth. The seat board can be cleaned with a mild cleaner. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

* Please make sure that you have all parts indicated before you begin assembly of this item.

* This item should be assembled on a soft surface to prevent scratching the finished product during assembly.

* This item may require periodic tightening.


* Do not tighten bolts until completely assembled.

Part List and Hardware List

Piece	Description	Picture	Quantity
А	HEADBOARD	\mathcal{O}	1X
В	L-POST	(<u> </u>	1X
С	R-POST	(<u> </u>	1X
D	FOOTBOARD		1X
E	SUPPORT LEGS OF SLATS	ø	8X
F	SUPPORT LEGS OF RAILS	8	2X
G	SLAT		4X
Н	L-RAIL	L.	2X
Ι	R-RAIL		2X
J	WOOD LEG	Ŷ	2X
K	WOOD BAR	Section .	2X
H1	BOLT 5/16"*2-1/2"	00-	12X
H2	BOLT 1/4"*2"	0)=	10X
H3	ALLEN KEY 4mm		1X
H4	SCREW Ø8*30mm	<++++++K	8X
H5	SCREW Ø8*15mm	~*****	8X
H6	METAL PLATE 50*33*1mm	6 0 8 0	2X

SAFAVIEH FURNITURE

Model# FOX6211-F Product Dimensions:82-1/4"W*58-1/4"D*54-1/4"H

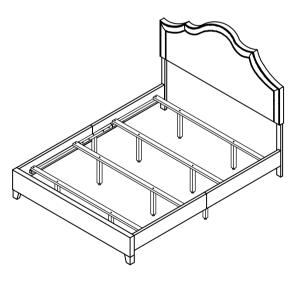




Weight capacity : 550lbs WARNING : DO NOT STAND ON THE BED

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time:15 minutes.

Tools Required for Assembly (included):Wrench.

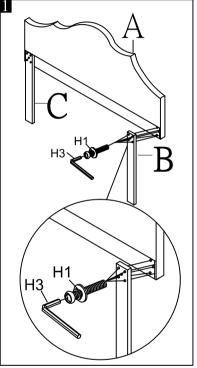


Step 1

Attach L/R posts "B" & "C" to headboard "A" by using Allen key (H3) to lock with bolts "H1".

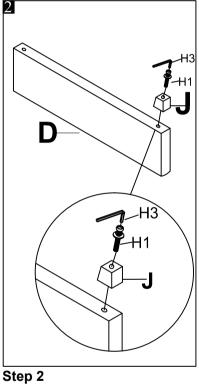


Attach wood legs "J" with footboard "D". Using Allen key (H3) to lock with bolts "H1".

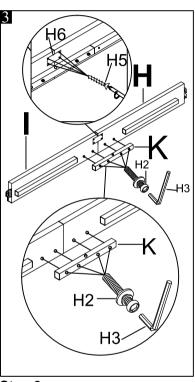



Step 3

Attach wood bar "K" to the 2 rails "H" & "I".Using Allen key (H3) to lock with bolts "H2". Lock the both side rails (H & I) (front & rear of rail) tight and alignment with metal plate (H6) by using 8x screws (H5)

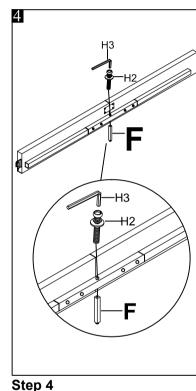

Attach support legs "F" to wood bar "K" .Using Allen key (H3) to lock with bolts "H2".



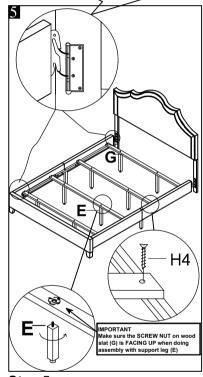

Step 5

Attach 2 rails to the L/R posts & the footboard assembled with legs. Attach 2 support legs (E) to

each slat (G). Lock the slats tight with wood bar (both inside of rails) by using 8x screws (H4).

CARE AND MAINTENCE

Wipe clean with a soft, dry cloth. The seat board can be cleaned with a mild cleaner. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

* Please make sure that you have all parts indicated before you begin assembly of this item.

* This item should be assembled on a soft surface to prevent scratching the finished product during assembly.

* This item may require periodic tightening.


* Do not tighten bolts until completely assembled.

Part List and Hardware List

Piece	Description	Picture	Quantity
A	HEADBOARD	\mathcal{O}	1X
В	L-POST		1X
С	R-POST		1X
D	FOOTBOARD		1X
E	SUPPORT LEGS OF SLATS	0	8X
F	SUPPORT LEGS OF RAILS	8	2X
G	SLAT		4X
Н	L-RAIL		2X
1	R-RAIL		2X
J	WOOD LEG	Ô	2X
K	WOOD BAR	Saffer .	2X
H1	BOLT 5/16"*2-1/2"	00-	12X
H2	BOLT 1/4"*2"	09-	10X
H3	ALLEN KEY 4mm		1X
H4	SCREW Ø8*30mm	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	8X
H5	SCREW Ø8*15mm	~****	8X
H6	METAL PLATE 50*33*1mm		2X

SAFAVIEH FURNITURE

Model# FOX6211-Q Product Dimensions:88-1/4"W*64-1/2"D*54-1/4"H

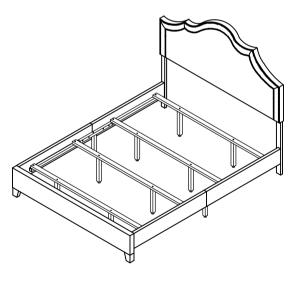




Weight capacity : 550lbs WARNING : DO NOT STAND ON THE BED

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time:15 minutes.

Tools Required for Assembly (included):Wrench.

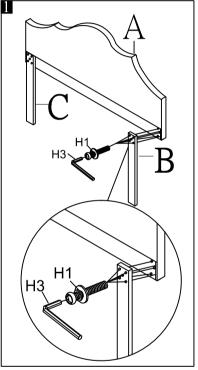




Attach L/R posts "B" & "C" to headboard "A" by using Allen key (H3) to lock with bolts "H1".

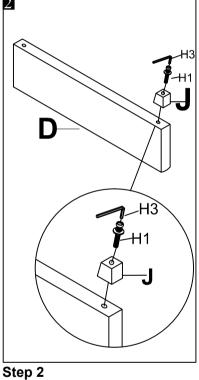


Attach wood legs "J" with footboard "D". Using Allen key (H3) to lock with bolts "H1".

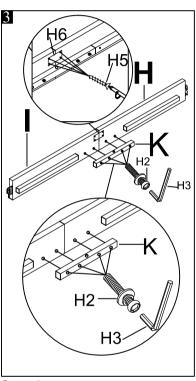



Step 3

Attach wood bar "K" to the 2 rails "H" & "I".Using Allen key (H3) to lock with bolts "H2". Lock the both side rails (H & I) (front & rear of rail) tight and alignment with metal plate (H6) by using 8x screws (H5)

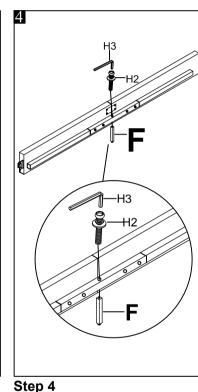

Attach support legs "F" to wood bar "K" .Using Allen key (H3) to lock with bolts "H2".



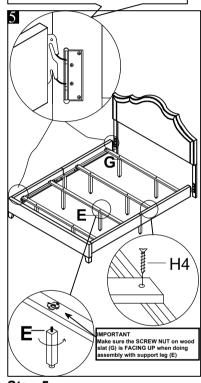

Step 5

Attach 2 rails to the L/R posts & the footboard assembled with legs. Attach 2 support legs (E) to

each slat (G). Lock the slats tight with wood

bar (both inside of rails) by using 8x screws (H4).

CARE AND MAINTENCE

Wipe clean with a soft, dry cloth. The seat board can be cleaned with a mild cleaner. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

* Please make sure that you have all parts indicated before you begin assembly of this item.

* This item should be assembled on a soft surface to prevent scratching the finish during assembly.


- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.

Part List and Hardware List

Piece	Description	Picture	Quantity
A	HEADBOARD		1X
В	L-POST		1X
С	R-POST	 	1X
D	FOOTBOARD		1X
E	SUPPORT LEGS OF SLATS	÷	6X
F	SUPPORT LEGS OF RAILS	ø	2X
G	SLAT		3X
Н	L-RAIL		2X
1	R-RAIL	and the second se	2X
J	WOOD LEG		2X
K	WOOD BAR		2X
H1	BOLT 5/16"*2-1/2"	De la compañía de la comp	12X
H2	BOLT 1/4"*2"	M	10X
H3	WRENCH		1X
H4	SCREW	() and the second se	6×

SAFAVIEH FURNITURE

Model# FOX6211-T Product Dimensions:83-3/4"W*42-1/2"D*54-1/4"H

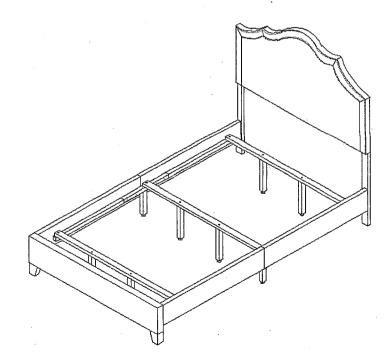


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time:15 minutes.

Tools Required for Assembly (included):Wrench.

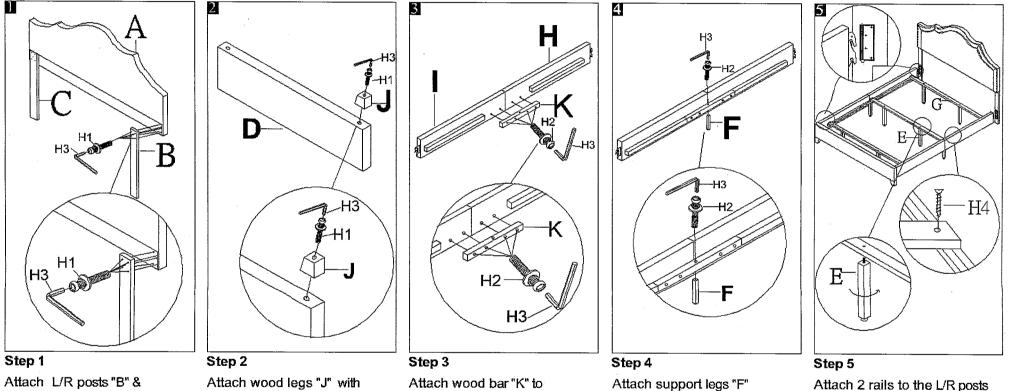

Attach L/R posts "B" & "C" to headboard "A" by using wrench (H3) to lock with bolts "H1". Attach wood legs "J" with footboard "D". Using wrench (H3) to lock with bolts "H1". Attach wood bar "K" to the 2 rails "H" & "I".Using wrench (H3) to lock with bolts "H2". Attach support legs "F" to wood bar "K" .Using wrench (H3) to lock with bolts "H2".

& the footboard assembled

Attach 2 support legs(E) to

Lock the slats tight with wood bar(both inside of rails) by using 6x screws(H4).

with legs.

each slat(G).