




MANHATTAN
COMFORT



888-230-2225
help@manhattancomfort.com

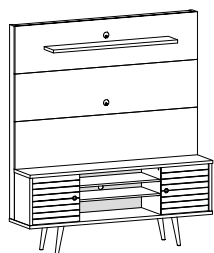

Liberty Freestanding 63.00



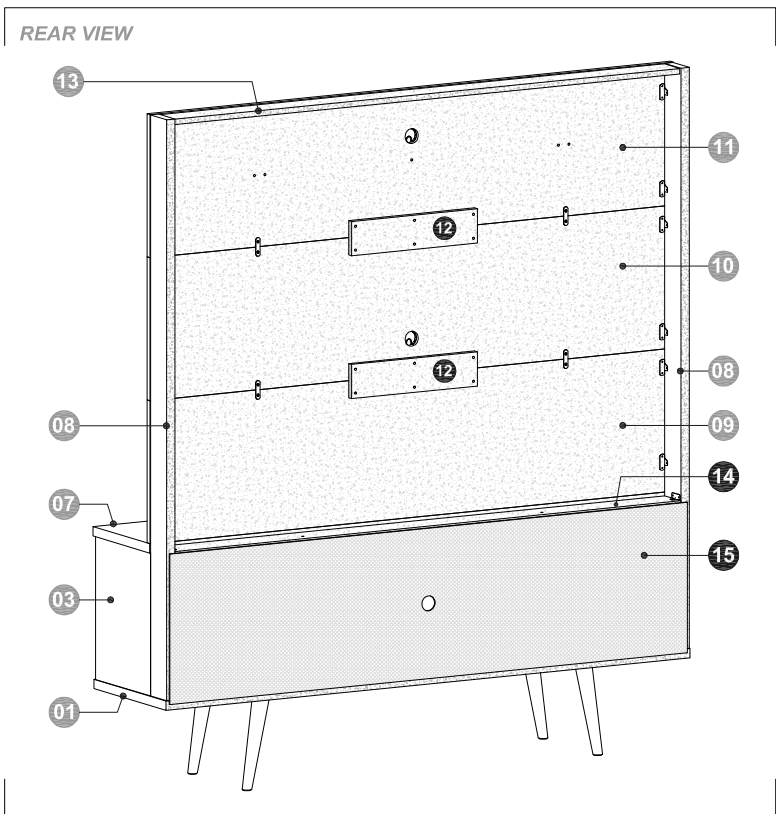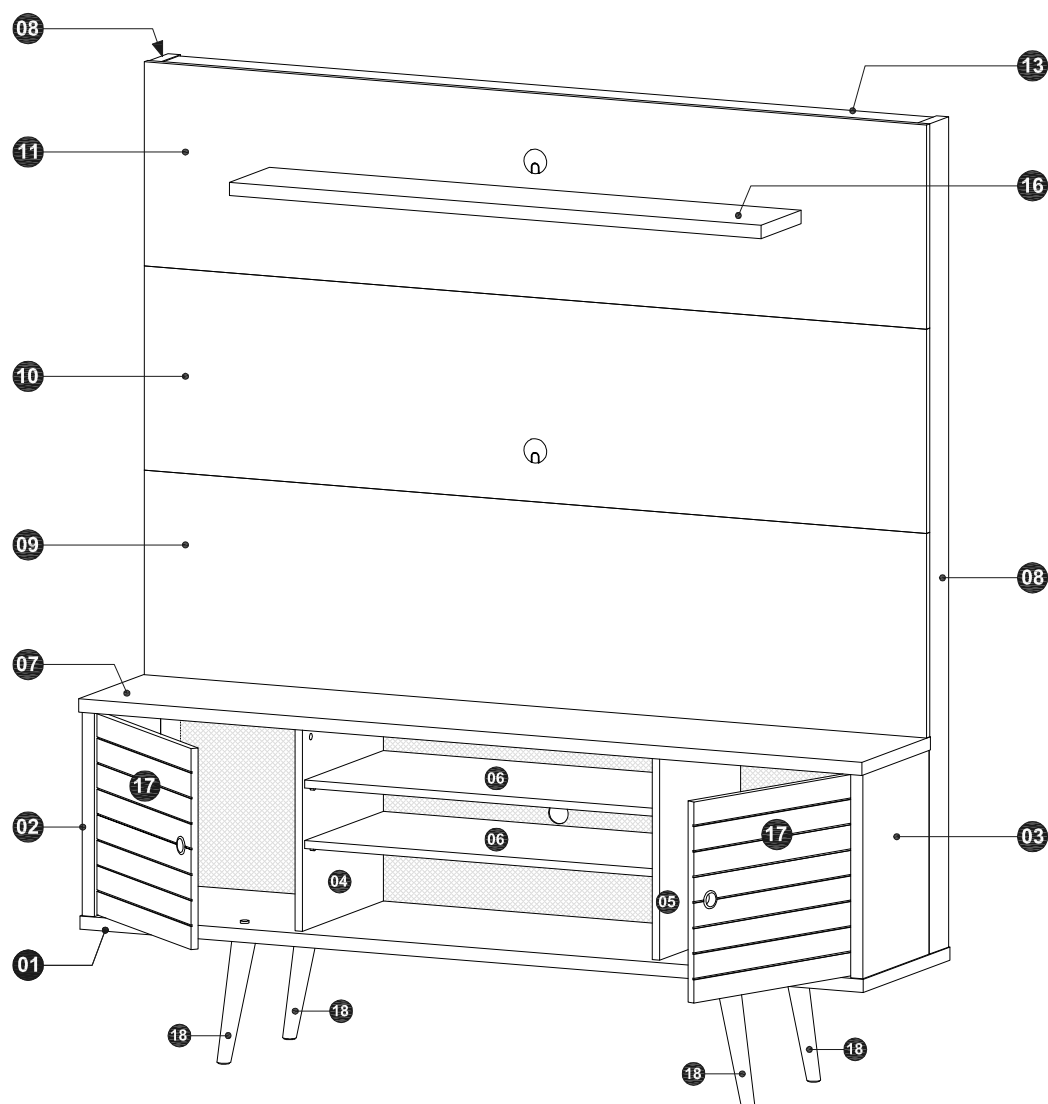

Model # 213BMC6, 213BMC63, 213BMC64, 213BMC67, 213BMC68, 213BMC69,
213BMC9, 213BMC93, 213BMC94, 213BMC96, 213BMC97, 213BMC98

INCLUDED IN THE PACKAGE

















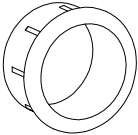
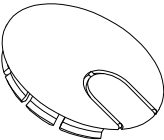


| n.° ID | Parts Identification (Description) | Quantity |
|--------|------------------------------------|----------|
| 01 | Base | 1 |
| 02 | Left Side Panel | 1 |
| 03 | Right Side Panel | 1 |
| 04 | Left Partition | 1 |
| 05 | Right Partition | 1 |
| 06 | Lower Shelf | 2 |
| 07 | Middle Shelf | 1 |
| 08 | Rear Column | 2 |
| 09 | Lower Panel | 1 |
| 10 | Middle Panel | 1 |
| 11 | Upper Panel | 1 |
| 12 | Middle Rear Bar | 2 |
| 13 | Upper Rear Bar | 1 |
| 14 | Lower Rear Bar | 1 |
| 15 | Back Panel | 1 |
| 16 | Upper Shelf | 1 |
| 17 | Door | 2 |
| 18 | Wood Feet | 4 |


TOOLS NEEDED

| | |
|--|---|
|    |  |
|--|---|

INCLUDED IN THE PACKAGE

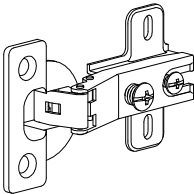
| | | | |
|---|--|--|---|
| A 4x  | B 4x  | C 4x  | D 32x  |
| E 21x  | F 8x  | G 8x  | H 8x  |
| I 12x  | J 6x  | K 19x  | L 70x  |
| M 50x  | N 4x  | O 16x  | P 8x  |
| Q 2x  | R 2x  | | |

STEP 1

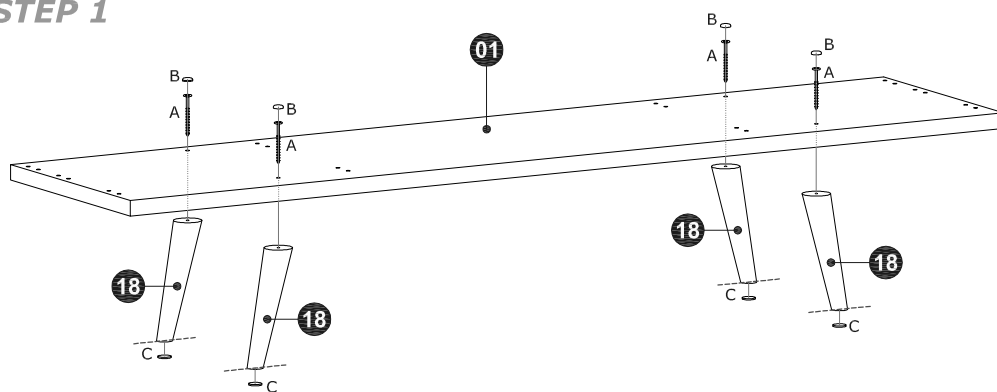


- Fix the feet (18) under the Base (01) with bolts 5.5 x 65mm (A).
- Apply the protective felt (C) at the lower end of the feet (18).
- Apply the plastic cover (B) on top of the bolts (A).

STEP 2

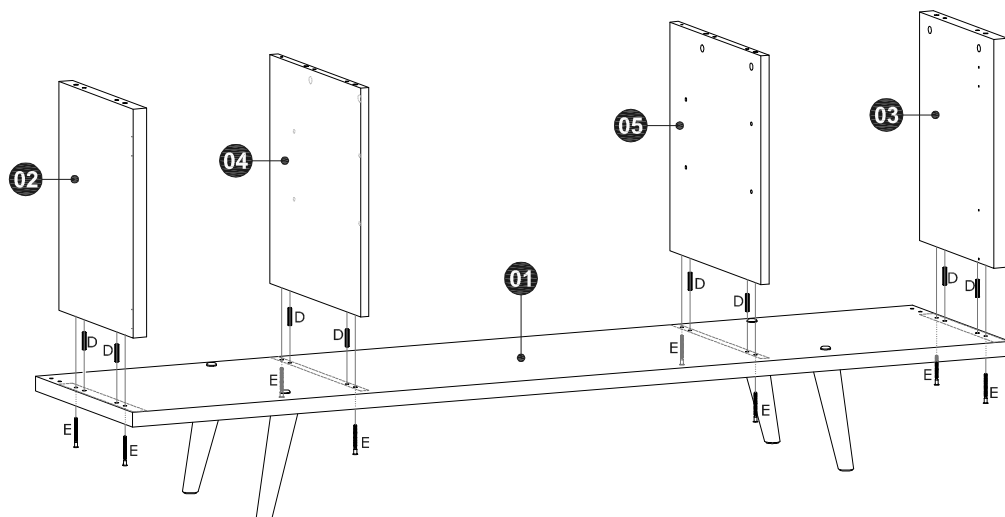


- Connect the Side Panels (02) and (03) and the Partitions (04) and (05) onto the Base (01) with dowels (D) and bolts (E).

STEP 3

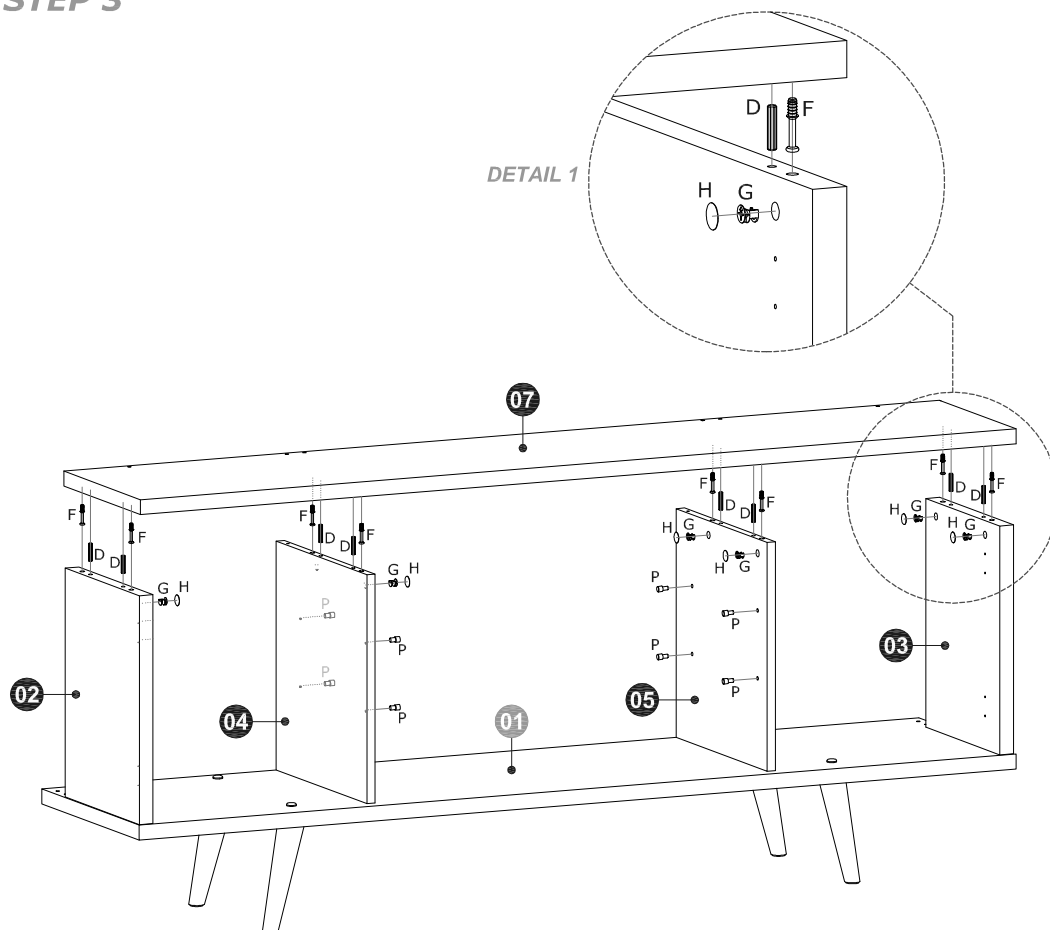

- Connect the Middle Shelf (07) on the Side Panels (02) and (03) and the Partitions (04) and (05) with dowels (D) and Minifix hardware (F + G). At the end the fixing, apply the adhesive covers (H).
- Apply the supports (P) in the Partitions (04) and (05), for later installation of the Shelves (06).

STEP 4

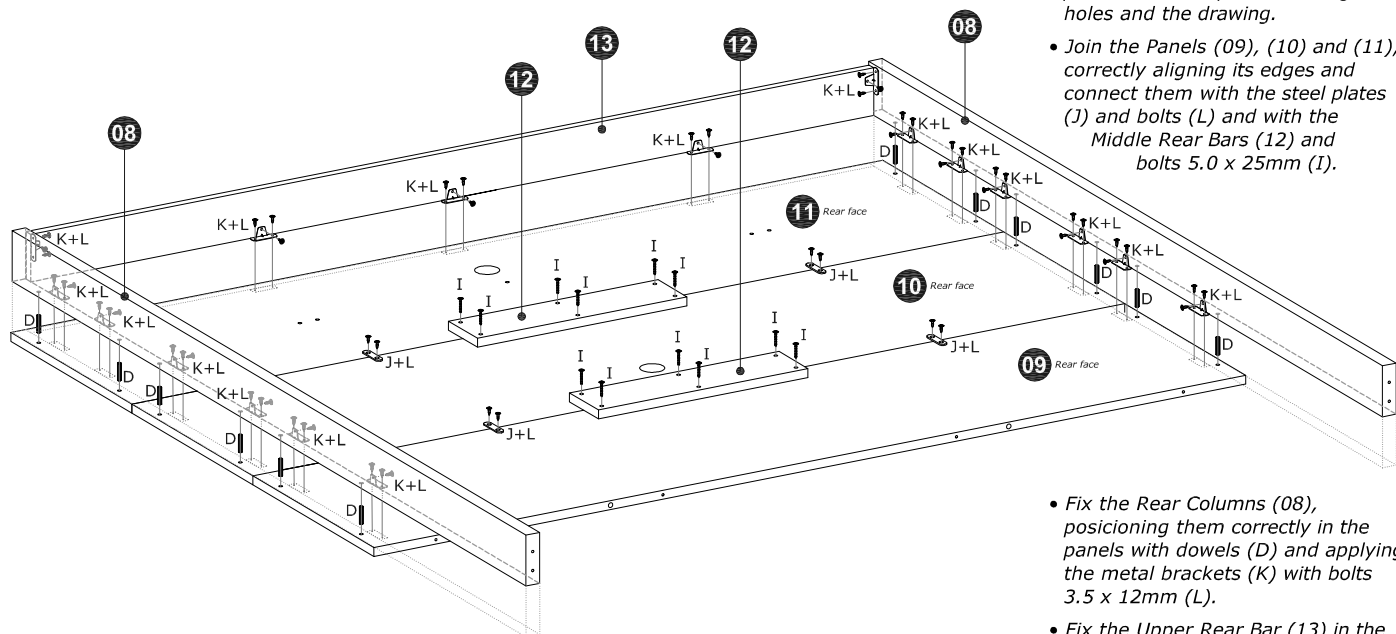


- Line the floor with the cardboard and the foam mantle of the packing to protect the parts and arrange the Lower Panel (09), Middle Panel (10) and Upper Panel (11) with the rear face upwards, checking correctly the position of each part according to the holes and the drawing.

- Join the Panels (09), (10) and (11), correctly aligning its edges and connect them with the steel plates (J) and bolts (L) and with the Middle Rear Bars (12) and bolts 5.0 x 25mm (I).

- Fix the Rear Columns (08), positioning them correctly in the panels with dowels (D) and applying the metal brackets (K) with bolts 3.5 x 12mm (L).


- Fix the Upper Rear Bar (13) in the Panel (11) and in the Columns (08) with metal brackets (K) and bolts (L).

STEP 5

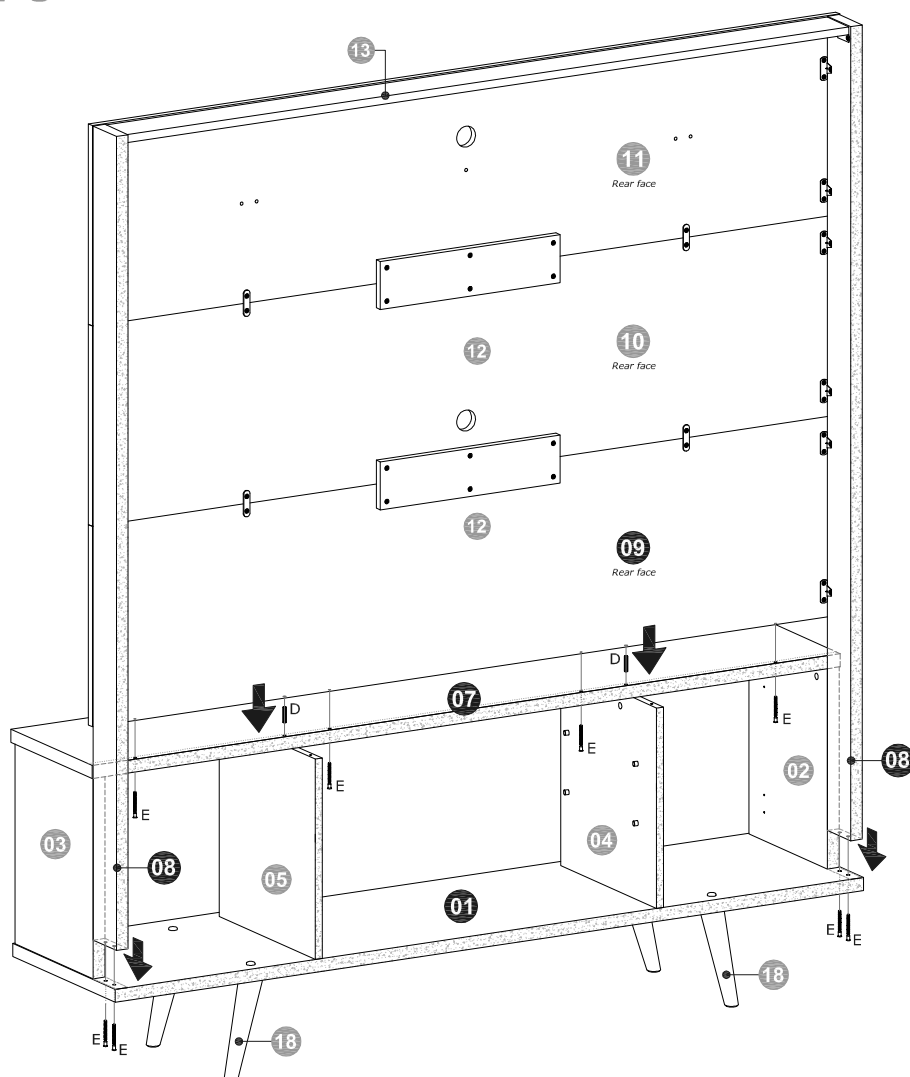


- Connect the Lower Panel (09) onto Middle Shelf (07) with dowels (D) and apply bolts 5.0 x 50mm (E) to fix the lower end of Columns (08) on the Base (01) and the Lower Panel (09) on the Middle Shelf (07).

STEP 6

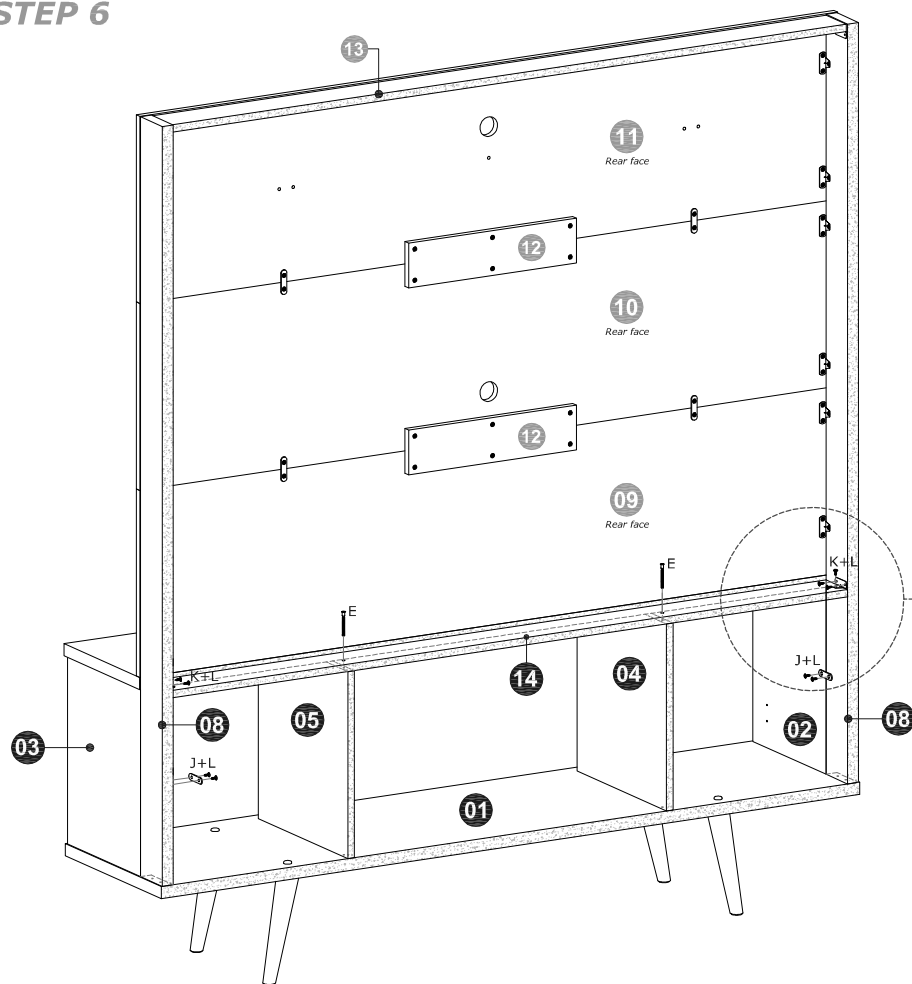


- Fix the Rear Columns (08) in the Side Panels (02) and (03), applying the steel plates (12) with bolts (L), as shown in drawing.
- Fix the Lower Rear Bar (14) on the Partitions (04) and (05) with bolts (E); and in the Columns (08) with metal brackets (K) and bolts (L).

STEP 7

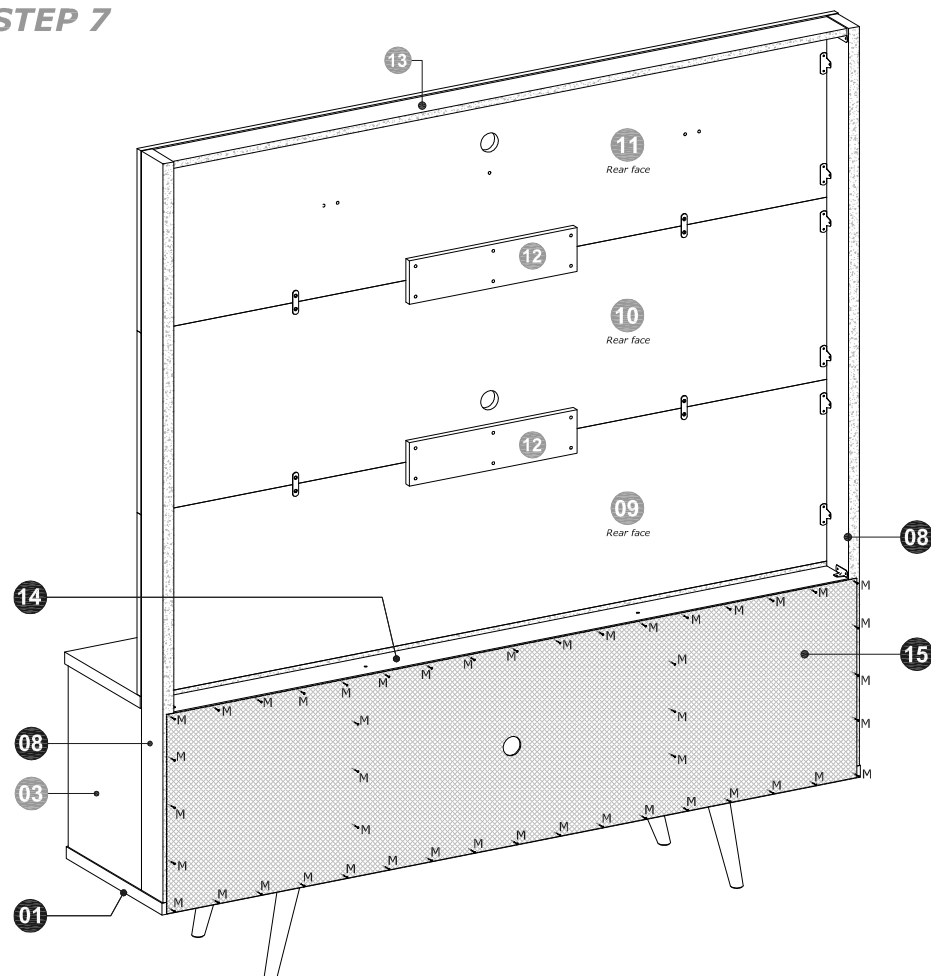

- Fix the Back Panel (15) with nails (M).


STEP 8

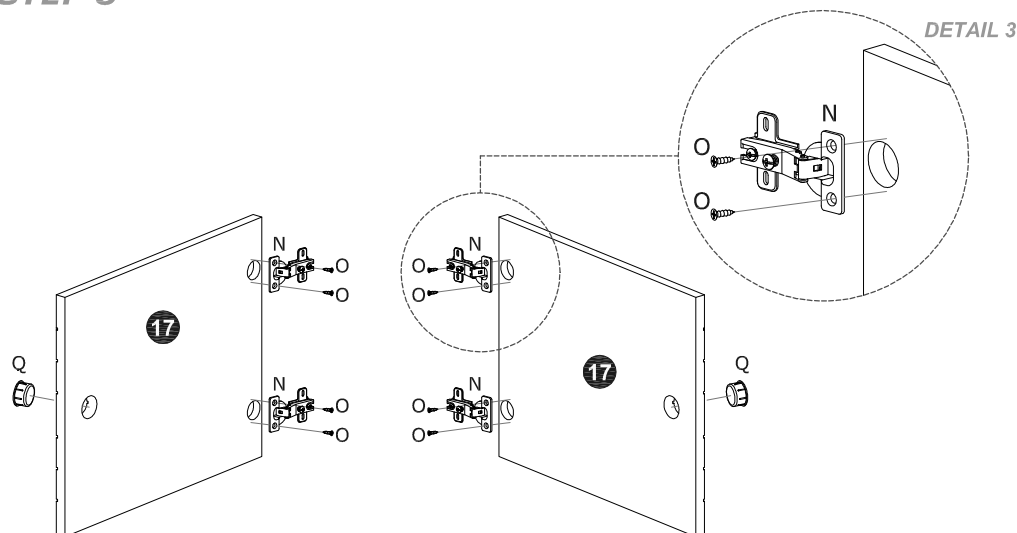

Preparing the Doors (17):

- Insert the plastic ring (Q) in the Doors (17).
- Fix the hinges (N) on the Doors (17) with bolts 3.5 x 14mm (O), as shown in the DETAIL 3.

STEP 9

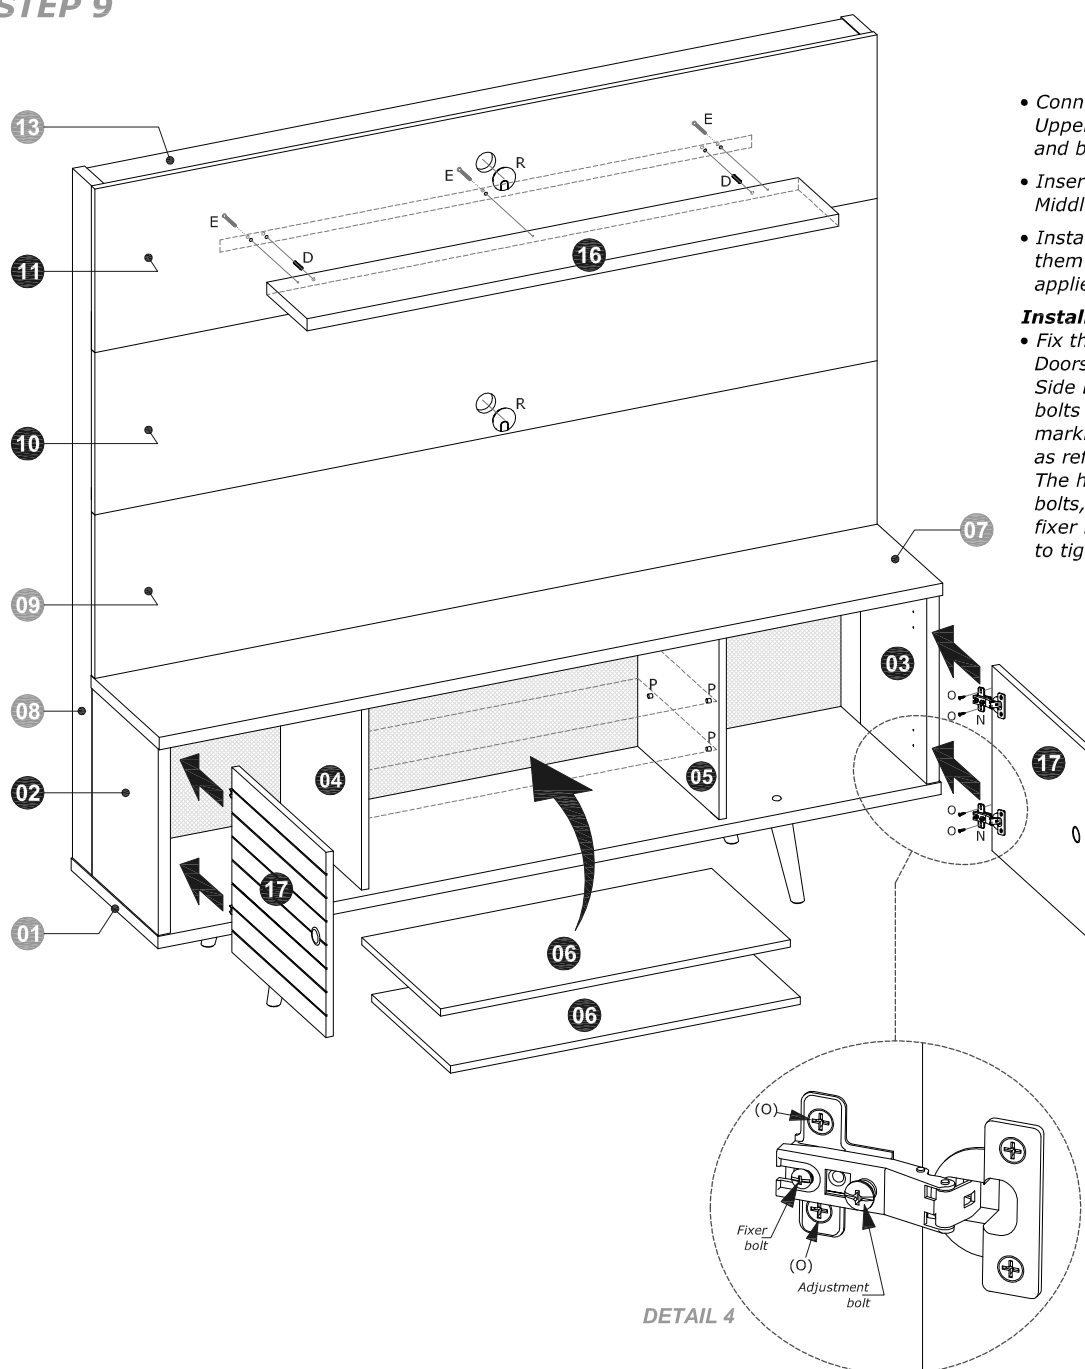

- Connect the Upper Shelf (16) in the Upper Panel (11) with dowels (D) and bolts 5.0 x 50mm (E).
- Insert the plastic parts (R) in the Middle and Upper Panels (10) and (11).
- Install the Shelves (06) by supporting them on the supports (P) already applied in the Partitions (04) and (05).

Installing the Doors (17):

- Fix the hinge connectors (N) of the Doors (17) on the Left and Right Side Panels (02) and (03) with bolts 3.5 x 14mm (O), taking the markings on the parts (02) and (03) as reference for correct positioning. The hinge connector includes two bolts, shown in DETAIL 4. Use the fixer bolt and the adjustment bolt to tighten, adjust and align the doors.

