




Appy a bid of silicone and hang the cabinet (D) on the brackets.

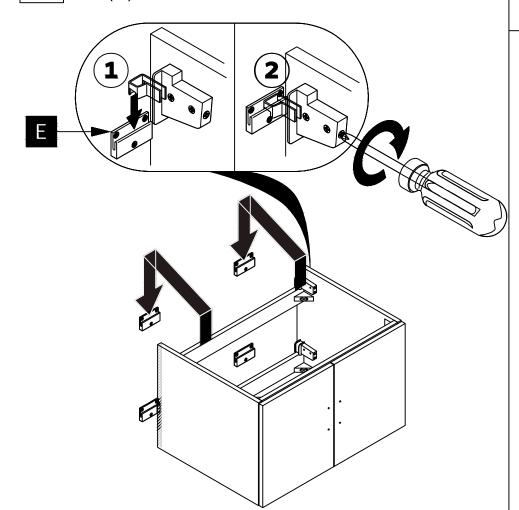



Put a bead of silicone on the top of the cabinte(G) then place sink (H) on the top of it.

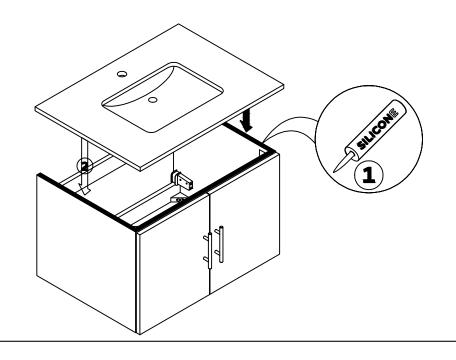

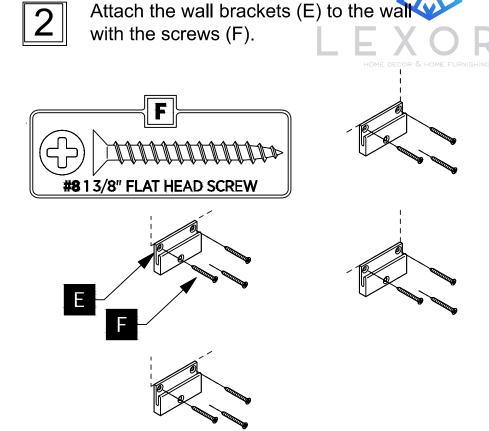


IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types. Anchors are not required if brackets are installed in stud.

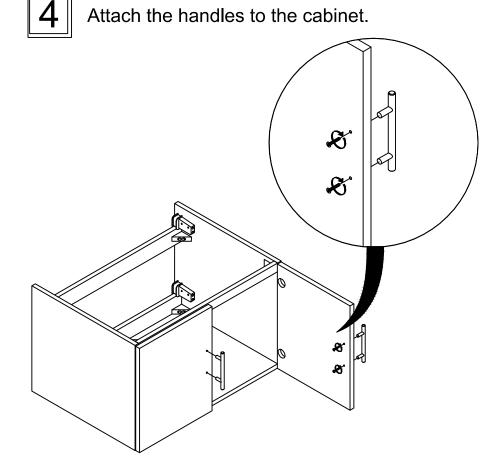

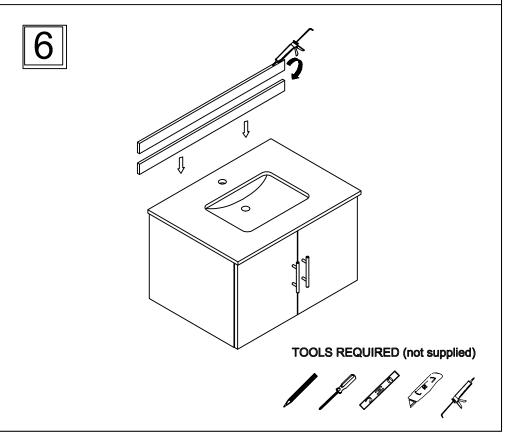




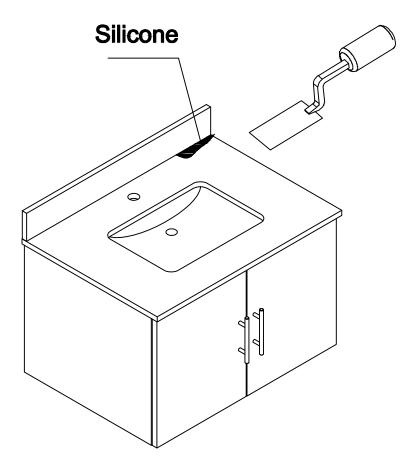

INSTALLATION


8



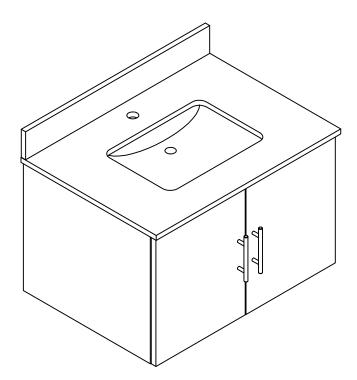


INSTALLATION



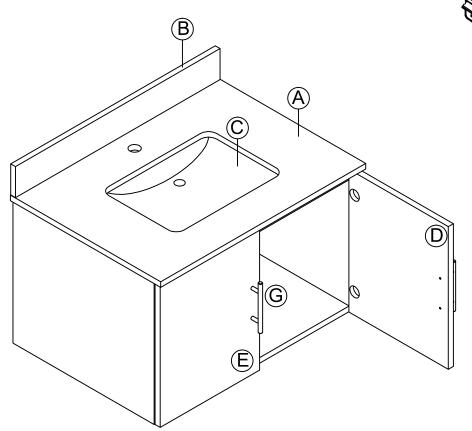





| PART# | DESCRIOTION  | QUANTITY |
|-------|--------------|----------|
| Α     | Countertop   | 1        |
| В     | Backsplash   | 1        |
| С     | Basin        | 1        |
| D     | Door (right) | 1        |
| E     | Door (left)  | 1        |
| F     | Hinge (door) | 4        |
| G     | handle       | 2        |

PART LIST