Assembly Instructions Style Number 1937xxX

## SPECIALTY COMPANY 8200 SOUTH CHICAGO AVE., CHICAGO, IL 60617

## **PACKAGED**

(A) 4 -Bolts dia 5/16"\*1-1/4" (F) 1 -Spiral Middle Post

(B) 4 –Spring Washer

(G) 1 –Upper Post

(C) 4 -Washer

(H) 4 -Hook

(D) 1 –Base Assembly

(I) 8 -Wood Screw 6#\*5/8"

(E) 1 -Lower Post


## Read all instructions before starting assembly.

**Step#1** Remove all the contents from the package checking that all of the components listed in "Packaged" are included. Prepare a flat, protected work surface where the product can be assembled.

**Step #2** Place the Lower hexagonal post (E) upside down with the larger diameter facing upward. Assemble the Base Assembly (D) to the Lower hexagonal post (E) with Bolt (A), Spring Washer (B) and Washer (C), but loosely tightened. Repeat the same procedure for remaining Bolts (I), Spring Washer (B) and Washer (C) and then securely tighten.

Step #3 Place Base and Lower hexagonal Post Assembly into upright postion. Align Spiral middle post (F) over the top of Lower Hexagonal Post (E), Upper Post (G) over the top to Spiral Middle Post (F) and carefully turn counterclockwise until securely tightened.

Step #4 Align one Hook (H) over pilot holes on Upper Post (G) and install with two Wood Screws (I). Repeat with remaining hooks and securely tighten all screws.

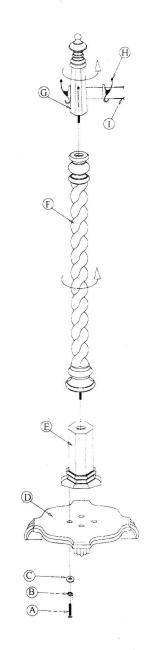

(\*) Caution: DO NOT OVERTIGHTEN.

any correspondence regarding this product, please include the complete Butler identification number located on the underside of the product.

We hope this Costumer will be a useful and decorative addition to your home for years to come.

Copyright © Butler Specialty Company, 10/07