
# **User's Manual**




# **INSTALLATION INSTRUCTIONS**

# **Installation Manual**







#### IAPMO RESEARCH AND TESTING, INC.













#### IAPMO RESEARCH AND TESTING, INC.













#### IAPMO RESEARCH AND TESTING, INC.













# **BEFORE INSTALLATION**

|     | T                   |     |
|-----|---------------------|-----|
| NO. |                     | Qty |
| 1   | Hand shower         | 1   |
| 2   | Hand shower bracket | 1   |
| 3   | Shower hose         | 1   |
| 4   | Spout Cover Plate   | 1   |
| 5   | Spout               | 1   |
| 6   | Embedded Body       | 1   |
| 7   | Plate               | 1   |
| 8   | Diverter Cap        | 1   |
| 9   | Handle              | 1   |
| 10  | Accessory bag       | 1   |
| ,   | 9                   |     |
| 6   |                     |     |

## Check accessories

Standard List of Accessories:

When you open the product packaging, please check whether the objects in it are consistent with the main body and accessories you purchased. If there is any inconsistency, please contact our company or our distributor.


Note: 1.Accessories are subject to change without prior notice if the change does

not affect usage;


2. The appearance of the product is subject to the physical objects you receive, and the schematic diagram is only for reference.

# **INSTALLATION STEPS**


This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.




1. Dig pipe grooves for pre-burying pipes.

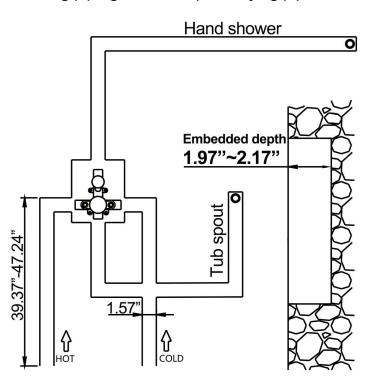


3. Stick the tiles. (Refer to Figure 4 for important dimensions)

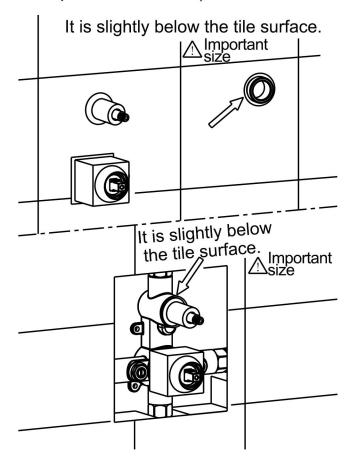


Before installing the faucet, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the faucet.




2. Install the shower body and faucet body.

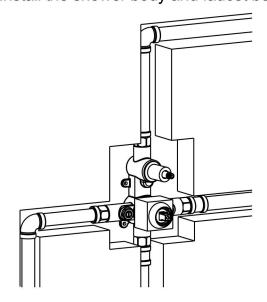

4. The water outlet of the hand shower is slightly lower than the tile surface.

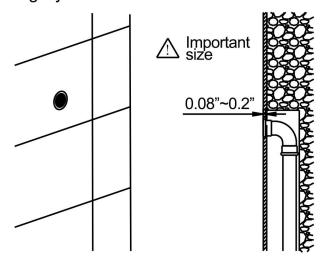


5. Install the hand shower bracket. (wrap the PTFE tape on the thread).

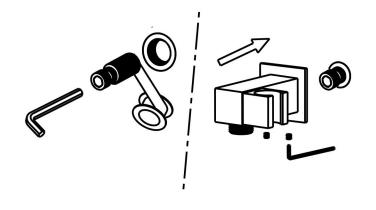


# **INSTALLATION STEPS**


6. Install the plate and handle.

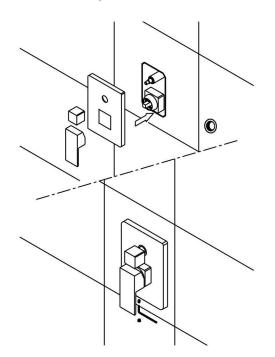

7. Install the spout.(wrap the PTFE tape on the thread).

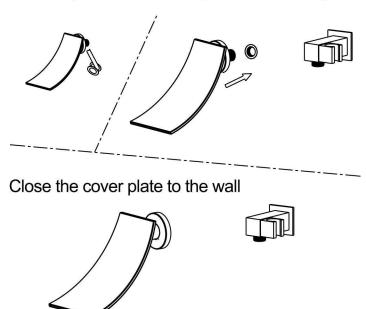


#### INSTALLATION DIMENSION

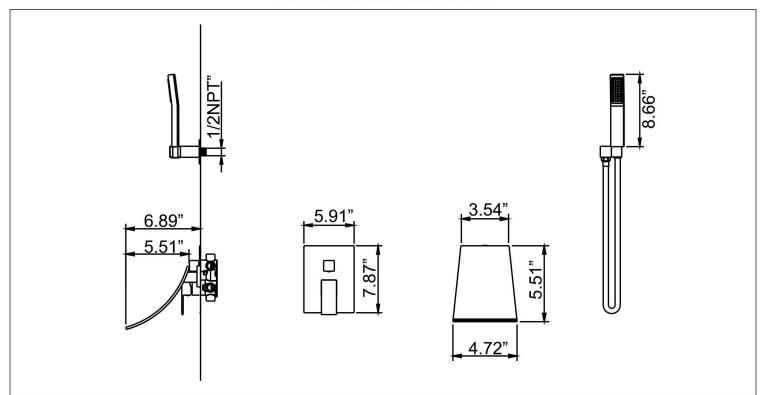

### **CLEANING CARE**

In order to keep the appearance of faucet clean, bright and good performance, please take care of the faucet as follows;



- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc.;
- 4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc.;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water, and then installed back in place.



