

ASSEMBLY INSTRUCTIONS



ATTENTION

- DO NOT TIGHTEN ANY BOLT UNTIL ALL BOLTS HAVE BEEN INSERTED INTO RESPECTIVE HOLES. THEN TIGHTEN ALL BOLTS BY HAND AS MUCH AS IT IS POSSIBLE. FINALLY, TIGHTEN ALL BOLTS EQUALLY USING A SCREWDRIVER. FAILING TO USE THIS PROCEDURE, THE PRODUCT WILL NOT BE ASSEMBLED WELL.
- IT IS RECOMMENDED THAT A MINIMUM OF 2 PERSONS SHOULD BE USED TO ASSEMBLE THE PRODUCT.

HARDWARE KIT CONTENTS :-



G. Allen Bolt 6x16mm 24 Pcs.
H. Allen Bolt 6x20mm 24 Pcs.
I. Flat Washer 6mm 48 Pcs.
J. Allen Key 4mm 1 Pc



KIT CONTENTS :-

REF	DESCRIPTIONS	QTY	REF	DESCRIPTIONS	QTY
A	COFFEE TABLE TOP	1	L	END TABLE TOP	2
B	METAL RING	1	M	METAL RING	2
C	LEG C	2	N	LEG N	8
D	LEG D	2	P	LEG P	8
E	LEG E	2			
F	LEG F	2			

COFFEE TABLE

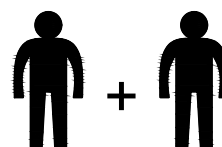
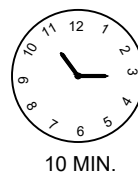


A x 1 	B x 1 	C x 2 	D x 2
E x 2 	F x 2 		

END TABLE



L x 2 	M x 2 	N x 8 	P x 8
-----------	-----------	-----------	-----------

1

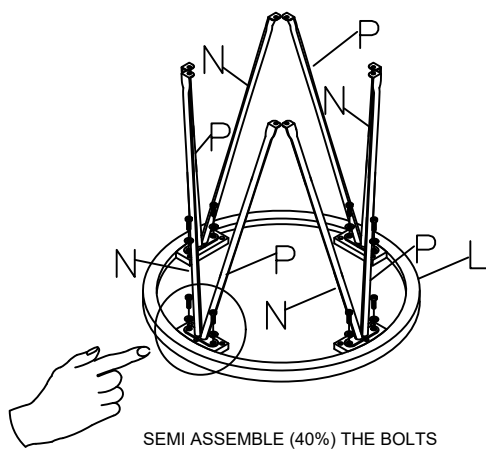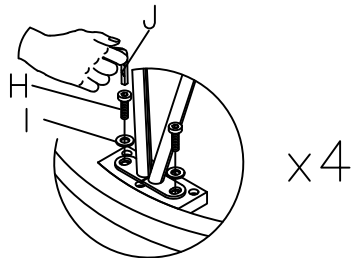



SEMI ASSEMBLE (40%) THE BOLTS OF LEGS & METAL FRAME

2

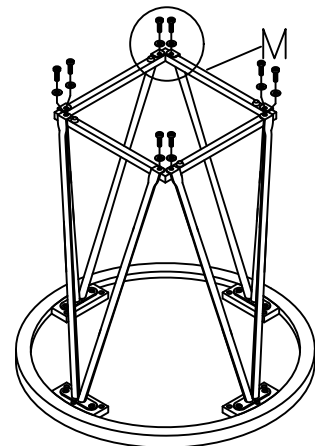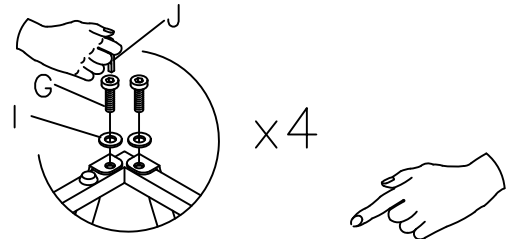



SEMI ASSEMBLE (40%) THE BOLTS OF LEGS & METAL FRAME

3

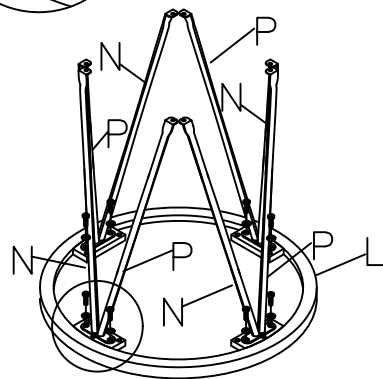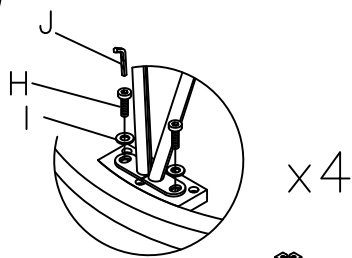


ALLING THE LEGS WITH METAL FRAME IN PROPER SYMMETRY & TIGHTEN THE BOLTS (100%) COMPLETELY

4

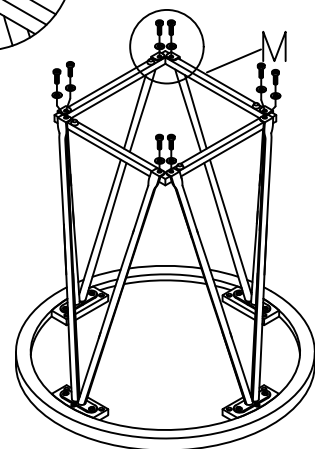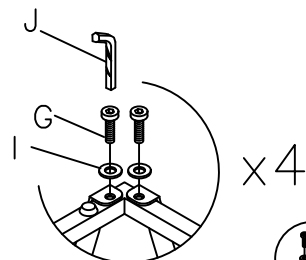


ALLING THE LEGS WITH METAL FRAME IN PROPER SYMMETRY & TIGHTEN THE BOLTS (100%) COMPLETELY




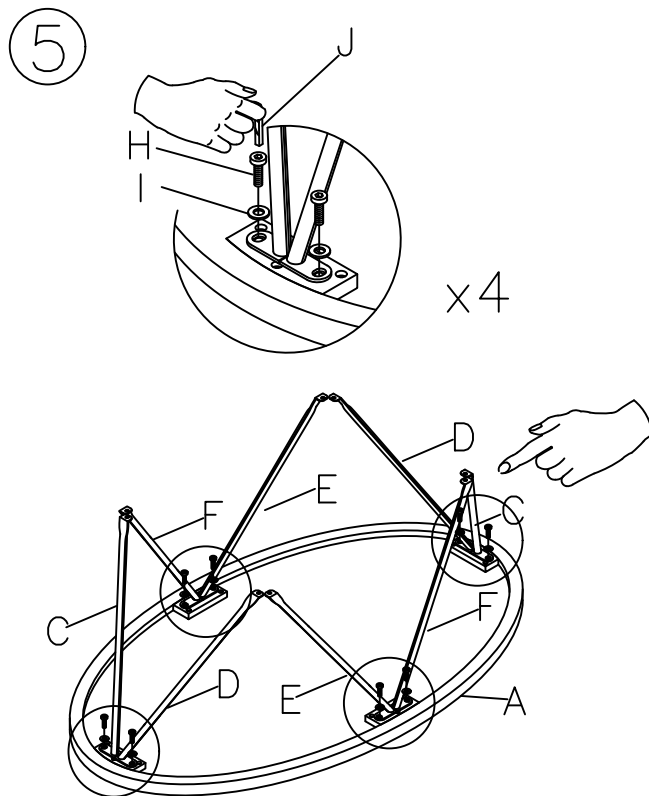


SEMI ASSEMBLE (40%) THE BOLTS
OF LEGS & METAL FRAME

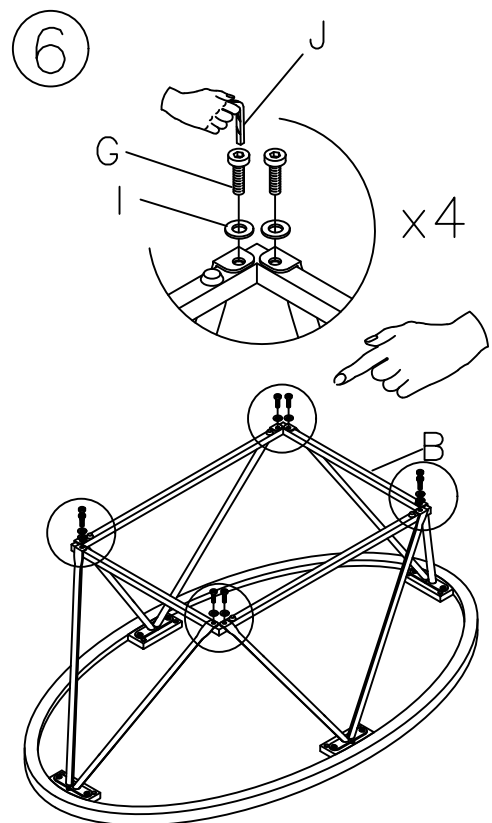

SEMI ASSEMBLE (40%) THE BOLTS
OF LEGS & METAL FRAME

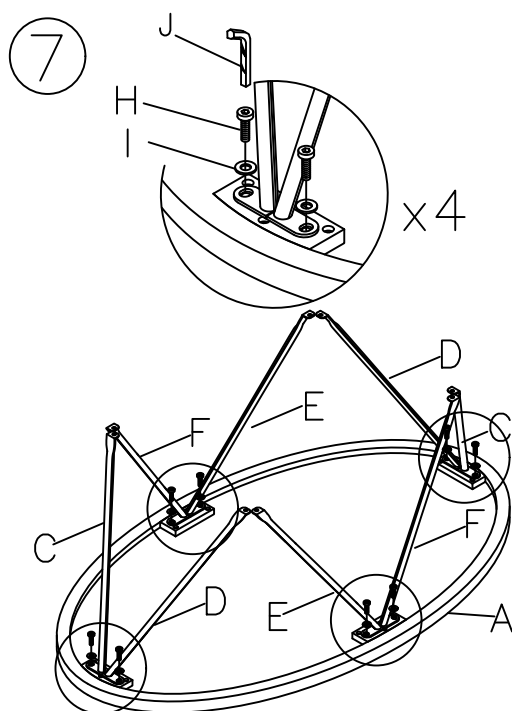


ALLING THE LEGS WITH METAL FRAME IN PROPER
SYMMETRY & TIGHTEN THE BOLTS (100%) COMPLETELY

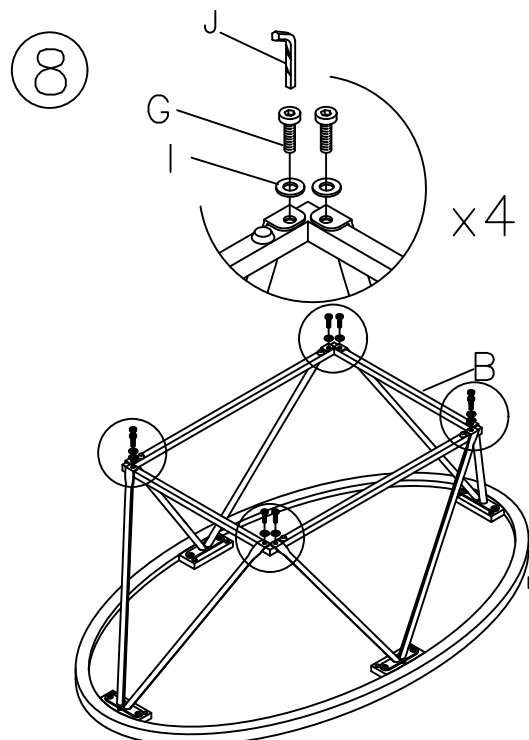

ALLING THE LEGS WITH METAL FRAME IN PROPER
SYMMETRY & TIGHTEN THE BOLTS (100%) COMPLETELY



9

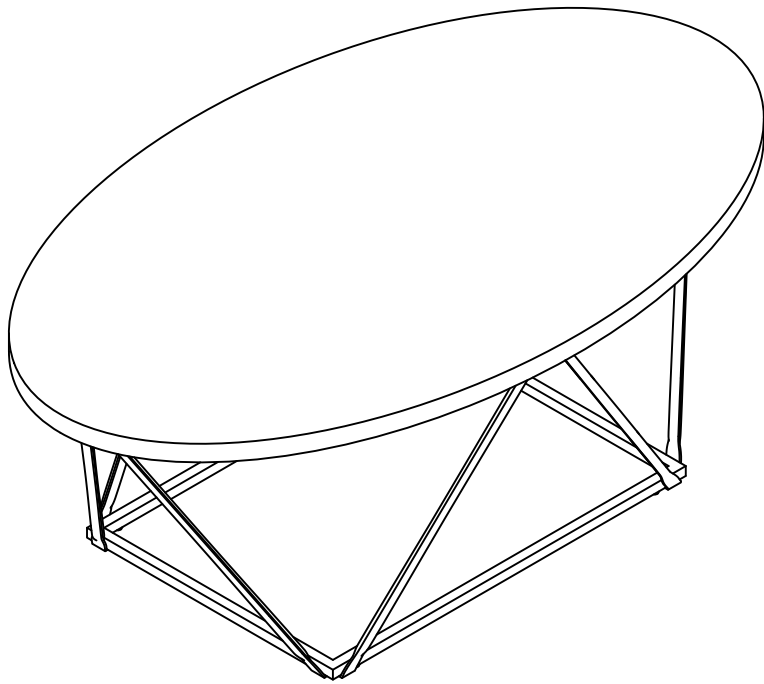

10

