

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help.






PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any parts is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time : 10 minutes.
- * Tools Required for Assembly (included) : Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents, and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water.

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Leg A		2X
B	Leg B		1X
C	Box		1X
HW1	Bolt		16X
HW2	Allen key		1X

SAFAVIEH

C O U T U R E

Model# SFV6015

Product Dimensions: 71x18x33 inch

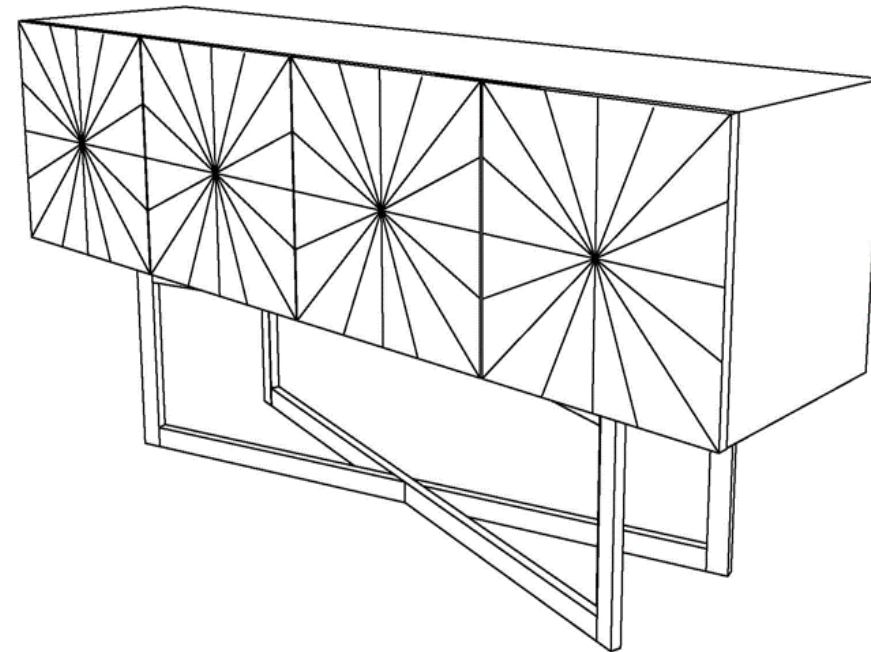


WARNING


Weight Capacity - 55LBS
Warning: Do not stand on the buffet.
Warning: Do not over torque bolts.

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 20 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

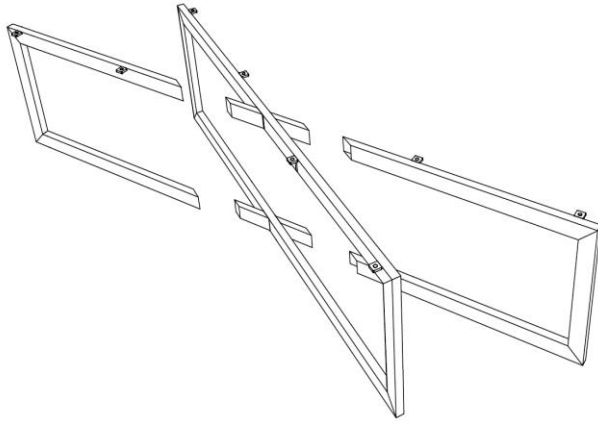


STEP 1: PREPARE THE LEGS (A & B) AS SHOWN.

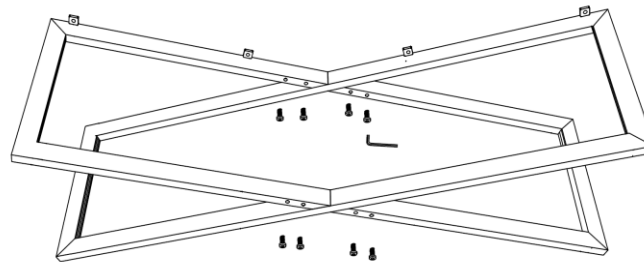


STEP 2: ATTACH THE LEGS (A & B) TOGETHER BY USING THE ALLEN KEY (HW2) TO SCREW IN THE BOLTS (HW1) AS SHOWN.

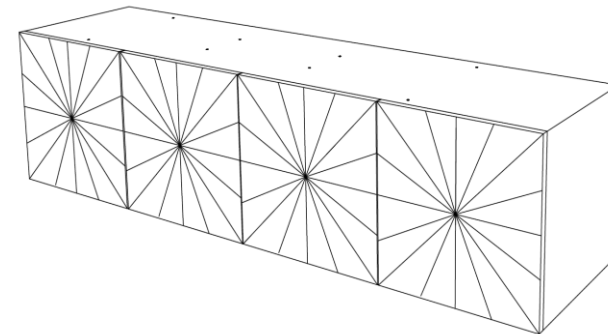

STEP 3: PUT THE BOX (C) UPSIDE DOWN ON A PADDED AREA.

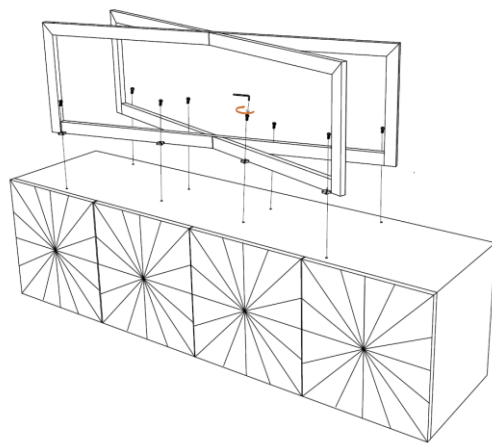

STEP 4: PLACE THE ASSEMBLED LEGS (A & B) ON TO THE BOX (C) AND LINE UP THE HOLES. ATTACH THE LEGS TO THE BOX WITH THE REST OF THE BOLTS (HW1) BY USING THE ALLEN KEY (HW2) TO SCREW

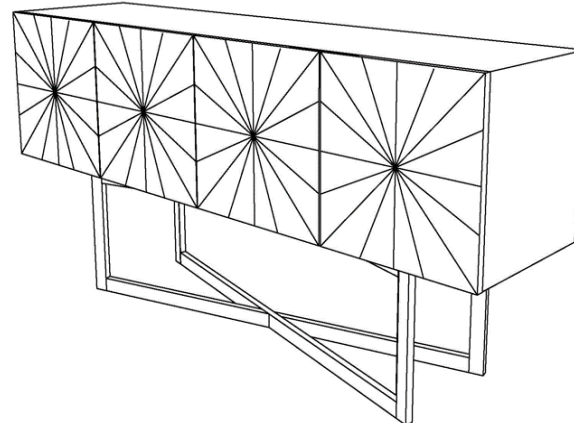

STEP 5: THE BUFFET IS READY TO USE