



BED ASSEMBLY INSTRUCTIONS, NO NEEDED TOOLS.

PARTS IDENTIFICATION

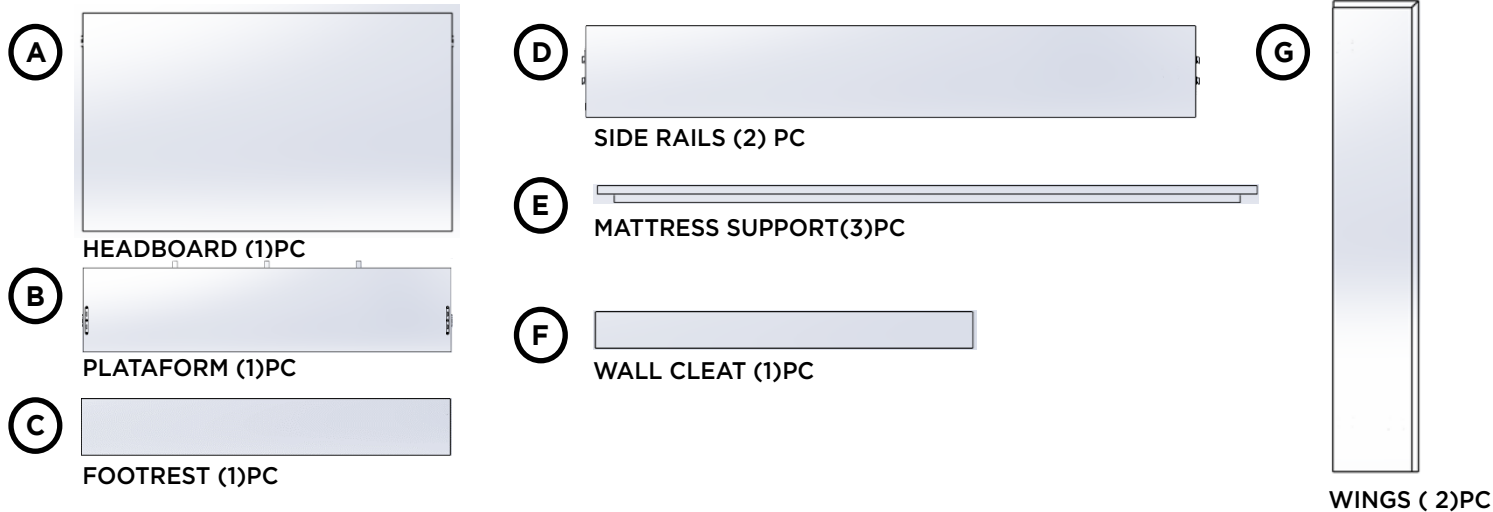


ASSEMBLY INSTRUCTIONS

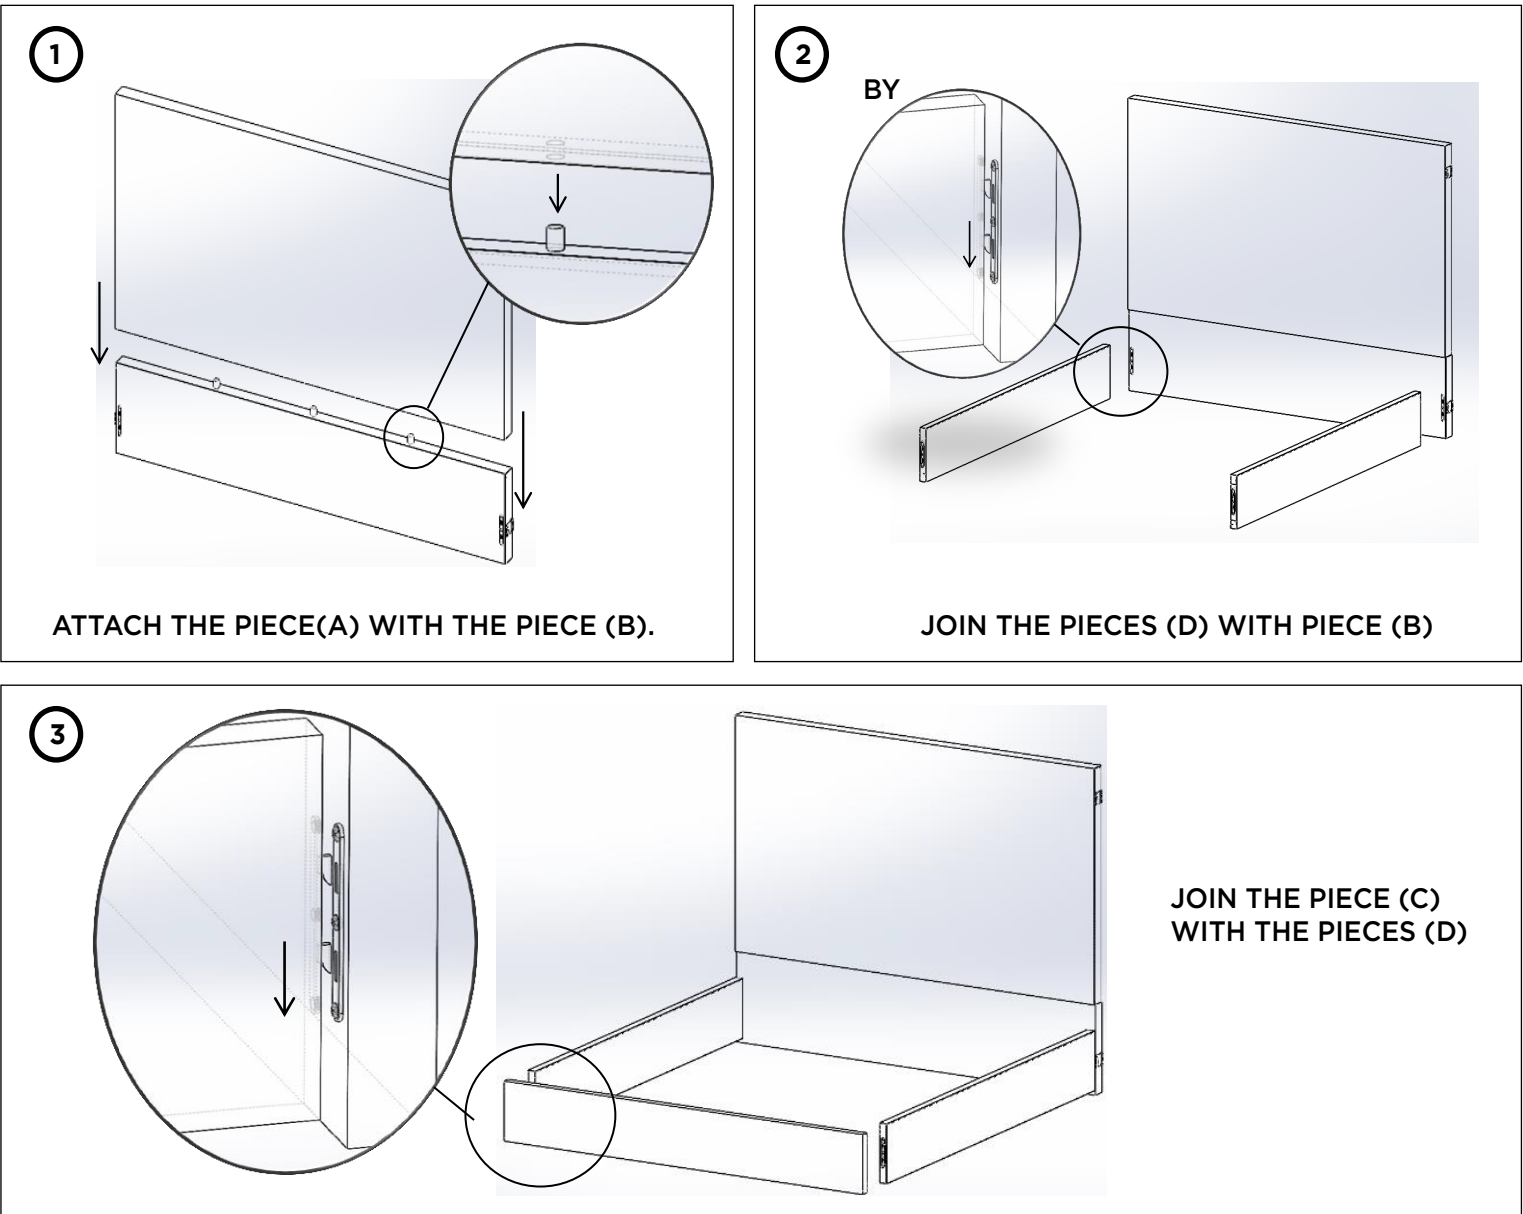


# BED ASSEMBLY INSTRUCTIONS, NO NEEDED TOOLS.

4

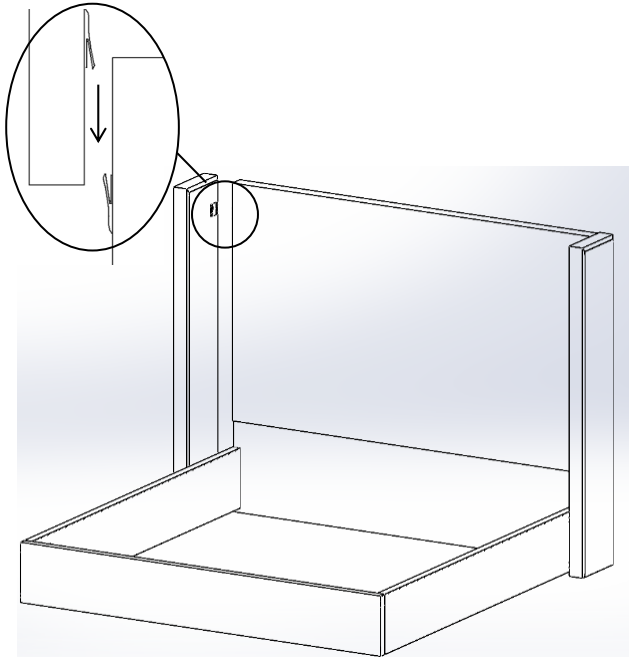


SET THE PIECES (G) AS SHOWN


5

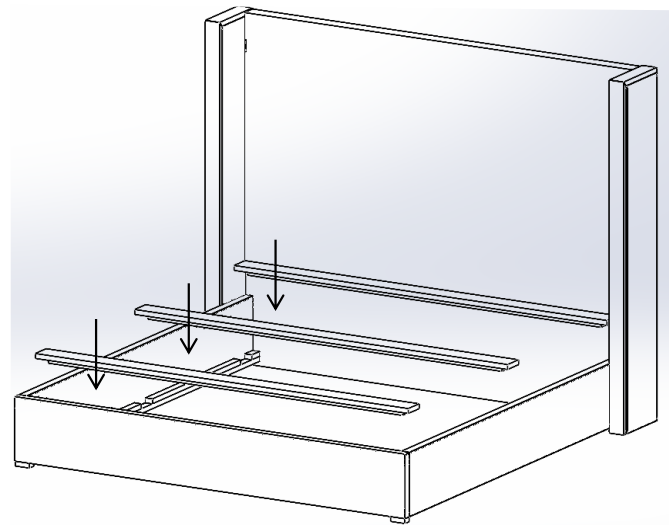

WE SUGGEST THE CUSTOMER TO LEAVE THE HEADBOARD FIXED TO THE WALL.

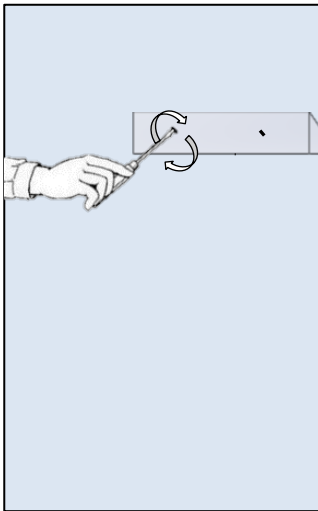

INSTALL PIECE (F)  
TO THE WALL AND  
THEN SET THE  
HEADBOARD ON IT.

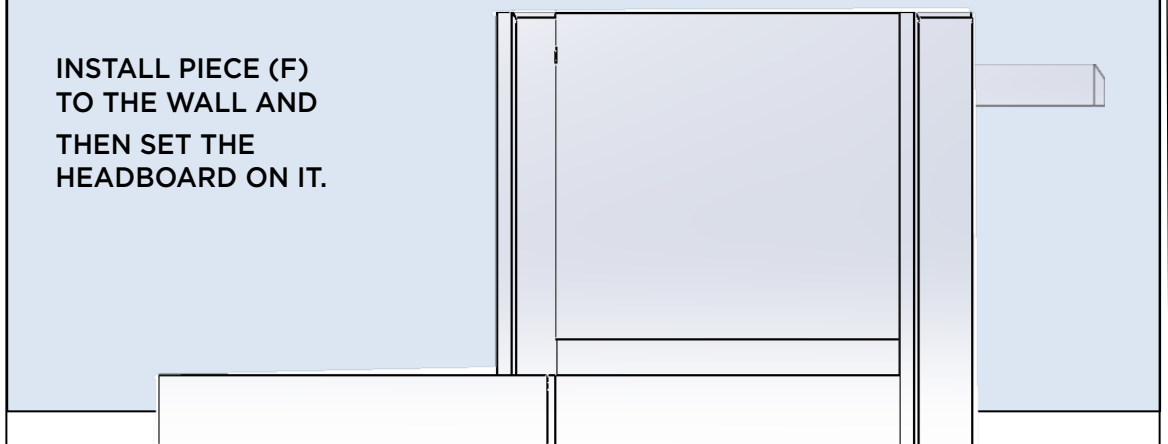

**NATIVA**<sup>™</sup>  
INTERIORS

**La Jolla:**  
7770 Girard Ave. 92037  
(858) 454 1874  
**Solana beach:**  
143 S. Cedros Ave. #P 92075  
(858) 794 0003

[www.nativainteriors.com](http://www.nativainteriors.com)

WHERE LUXURY LIVES.