






ASSEMBLY INSTRUCTIONS

ITEM# 67050

PART LIST


			
GLASS FRAME	BODY PANEL	BOLT NUT	WRENCH
1 PC.	1 PC.	5 PCS.	1 PC.

STEP 1

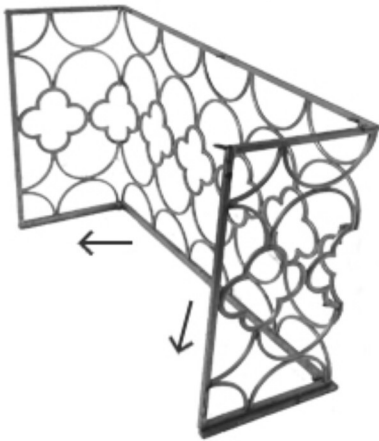


OPEN THE FOLDED BODY PANEL
LIKE THIS

STEP 2

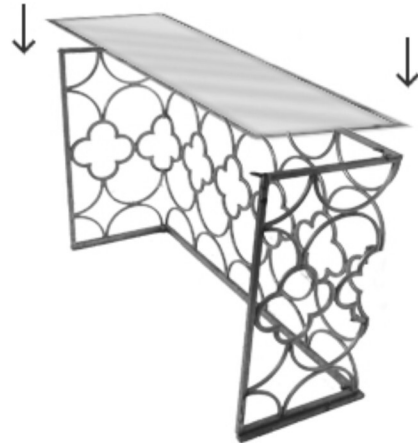

PUT THE GLASS FRAME ON TOP OF THE
BODY PANEL CORRESPONDING
THE HOLES TO THE HOLES

STEP 3

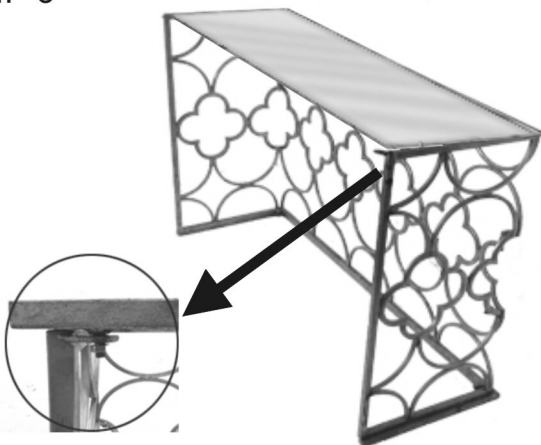

PUT THE BOLT NUTS IN THE
CORRESPONDING SCREWS AND
TIGHTEN IT WITH A WRENCH

STEP 4

