

# ACME


## FURNITURE

### ASSEMBLY INSTRUCTIONS

Item No: BD01912






\*\*\* Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with parts list below.

\*\*\* Assemble product on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Read all instruction and study the drawings carefully before starting the assembly process.

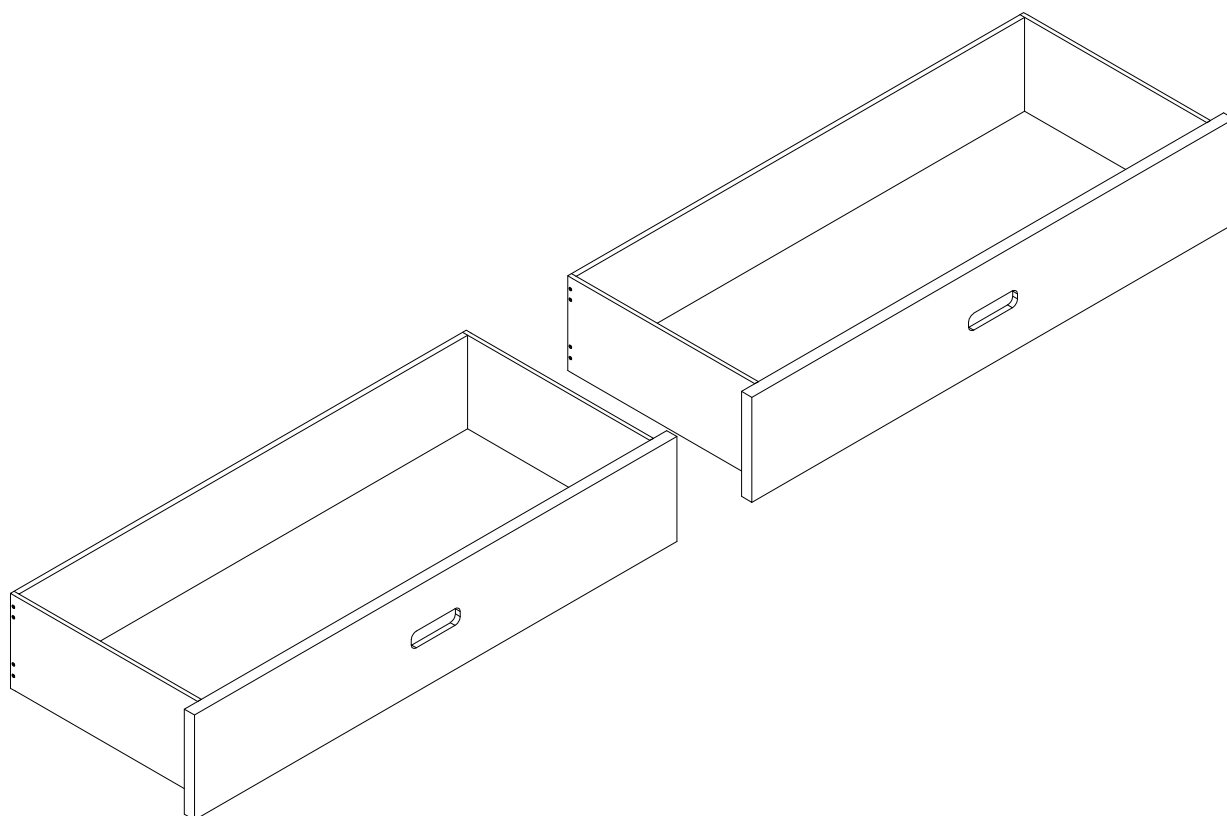


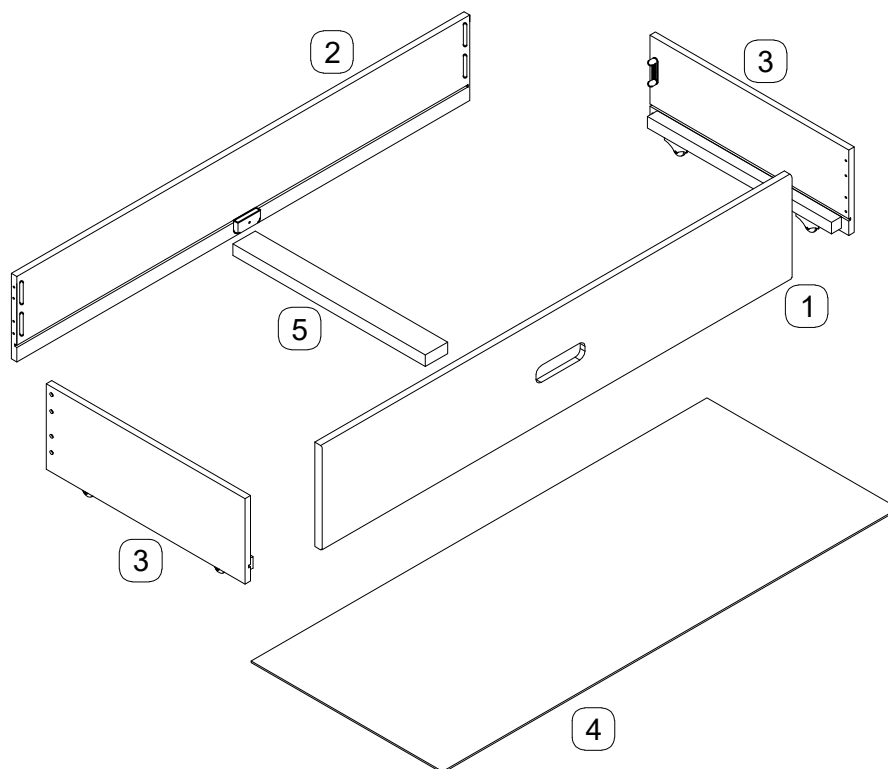
**IMPORTANT:** Do not tighten bolts completely until all bolts are completely lined up and inserted into holes

## PARTS LIST

NO.	DIAGRAM	PART NAME	Q'Ty
1		Front drawer panel	2 pcs
2		Back drawer panel	2 pcs
3		Side drawer panel	4 pcs
4		Bottom drawer panel	2 pcs
5		Bottom side drawer	2 pcs

## HARDWARE LIST


NO.	DIAGRAM	PART NAME	Q'Ty
A		Screw 4 x 30 (mm)	16 pcs



**x 2**


**STEP 1: FRONT DRAWER PANEL & SIDE DRAWER ASSEMBLY**

**x 2**

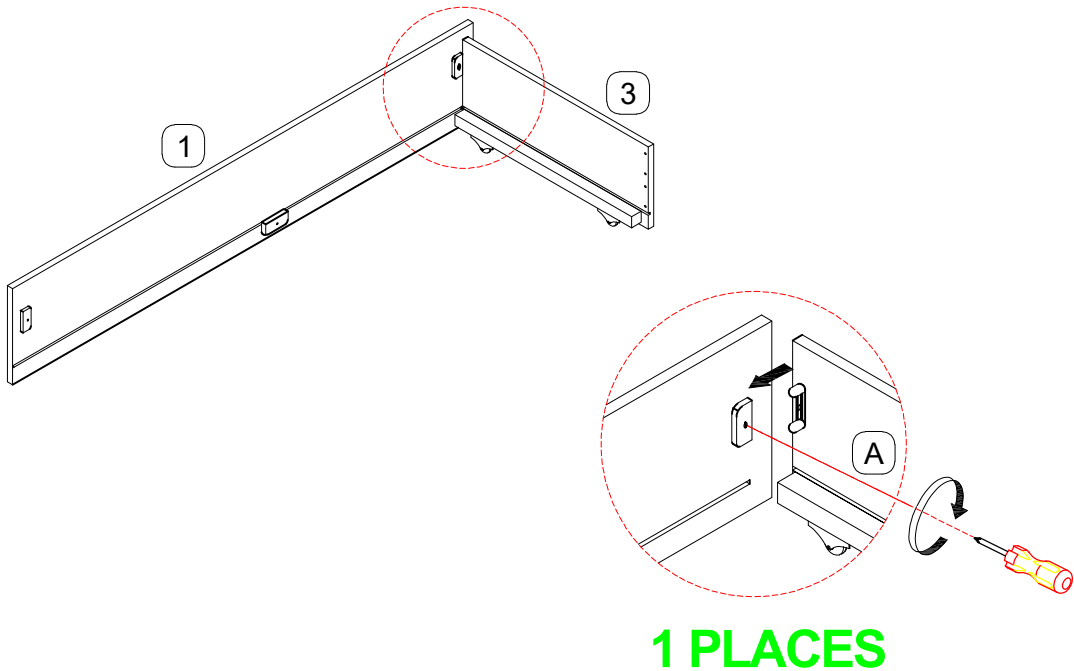


**STEP 2: BOTTOM SIDE DRAWER ASSEMBLY**


**x 2**

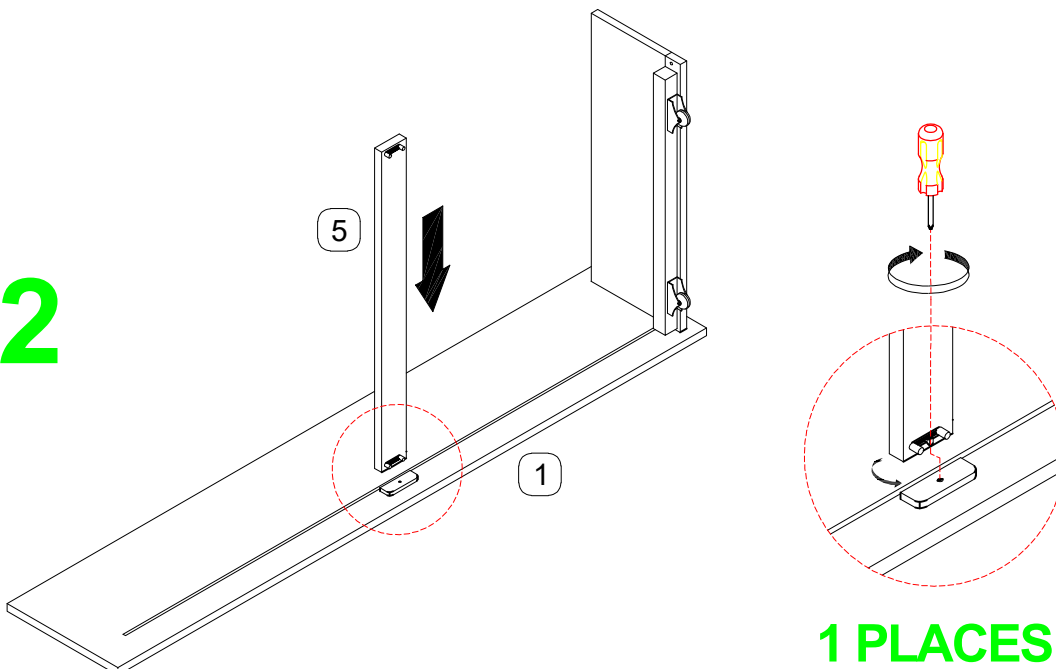


**STEP 3: BOTTOM DRAWER PANEL ASSEMBLY**

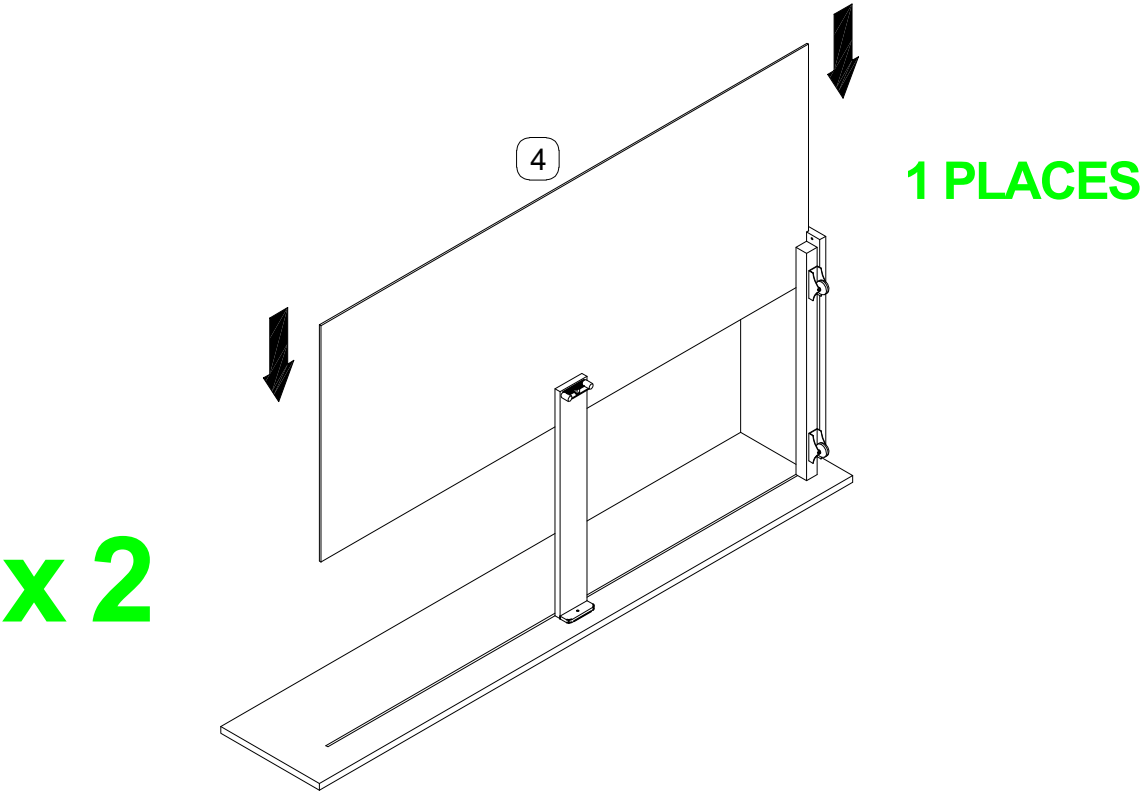

**STEP 4: BACK DRAWER ASSEMBLY**

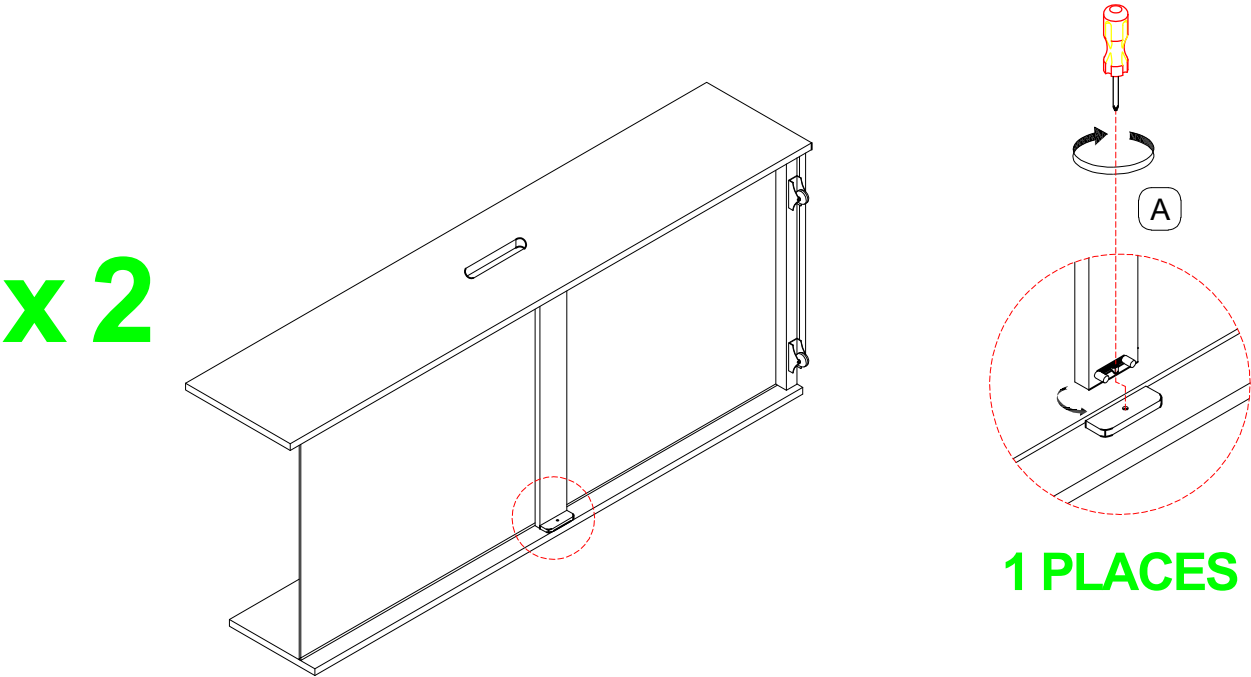

**STEP 5: BACK & SIDE DRAWER ASSEMBLY**

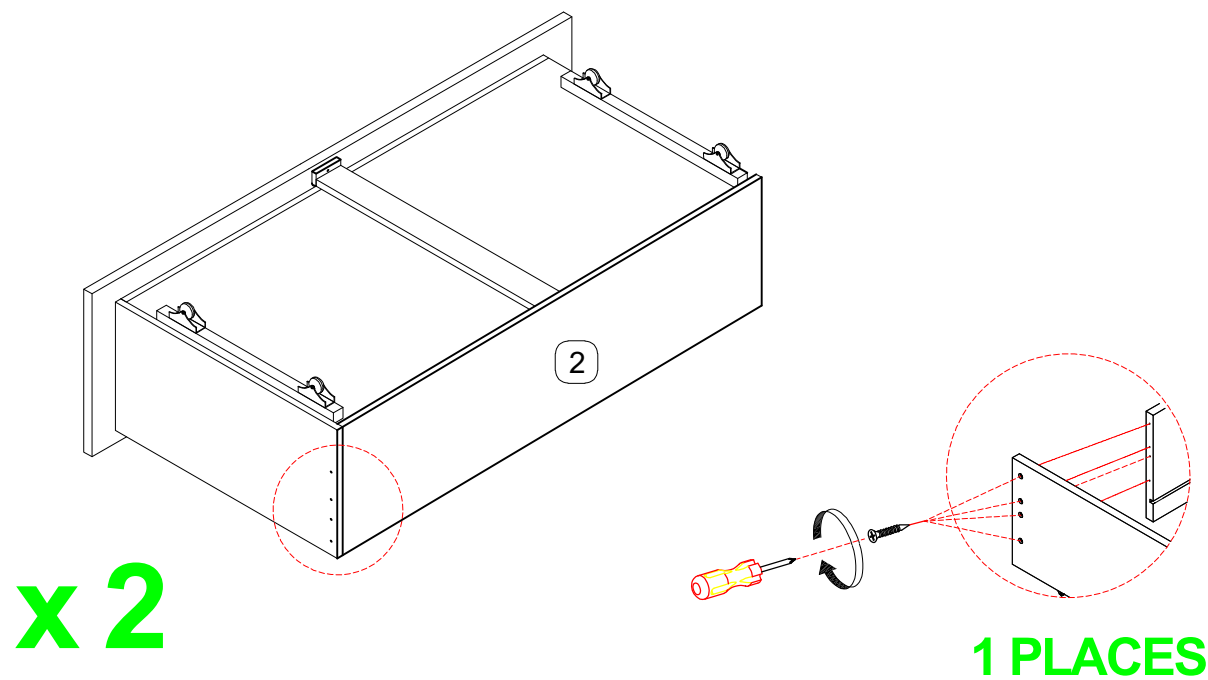

**STEP 6: SIDE DRAWER ASSEMBLY**

