


INSTALLATION INSTRUCTIONS

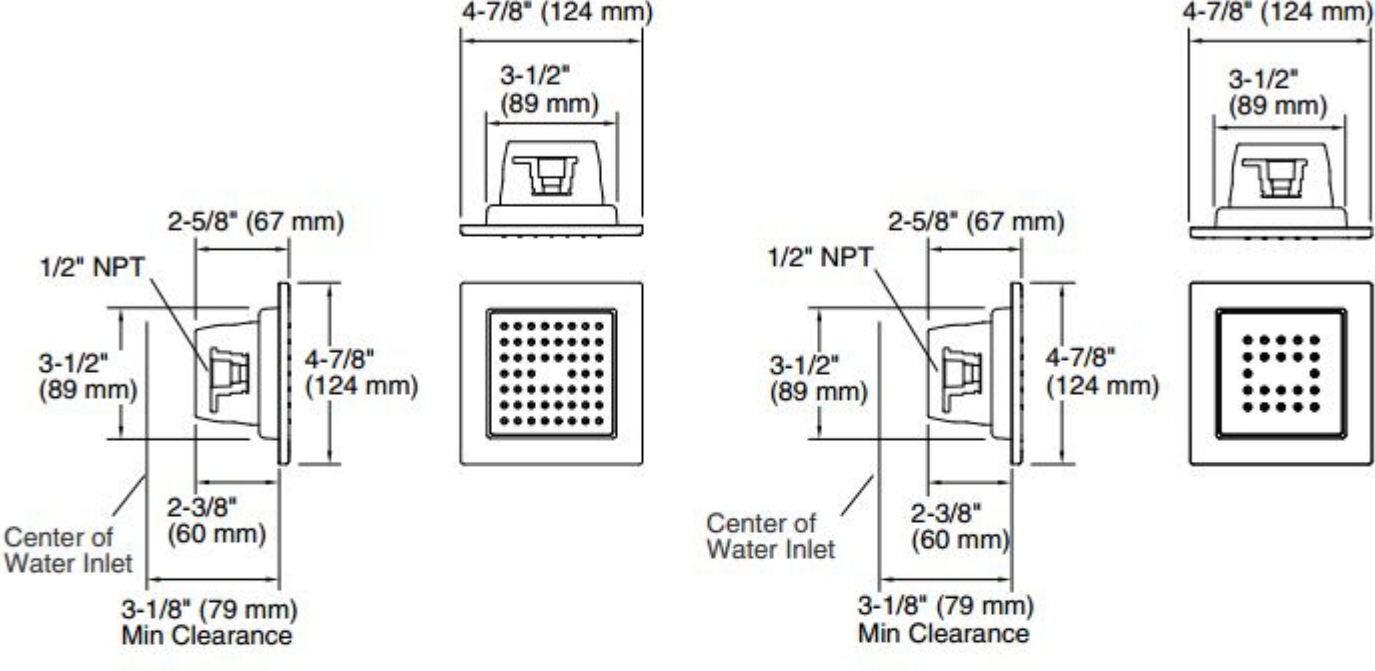


Product Diagram

1. Install the Supply Piping

**Multiple Bodyspray Installation**  
Installations de jets corporels multiples  
Instalación de múltiples rociadores corporales

**Single Bodyspray Installation**  
Installations d'un seul jet corporel  
Instalación de un solo rociador corporal

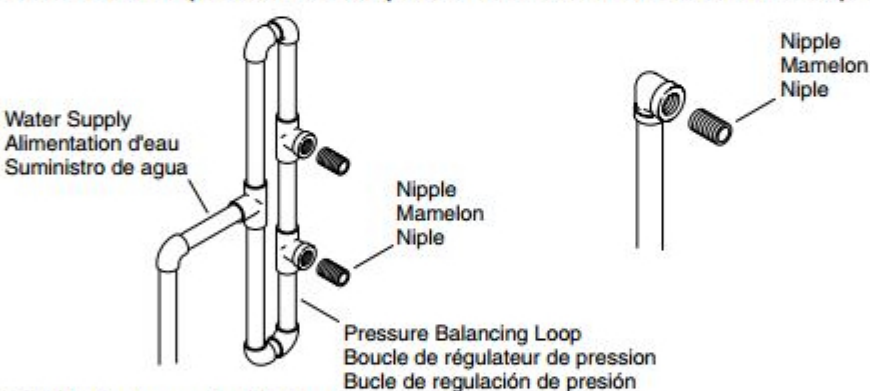

Multiple Bodyspray Installations


- Route the water supply lines.
- If installing more than one bodyspray off the same supply line, construct a pressure balancing loop. Locate a tee along the loop at each bodyspray installation location.
- Do not strap the pipes at this time.

Single Bodyspray Installations

- Route the water supply line.
- Install an elbow to the end of the supply pipe at the bodyspray installation location.

2. Install the Plaster Guard

**Install the Plaster Guard**  
Installer le renfort de plâtre  
Instale el protector de yeso

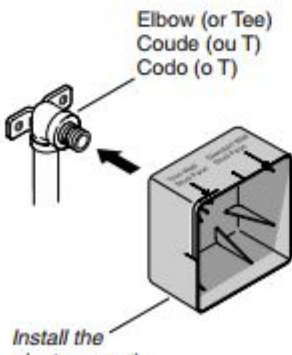


**Set Piping Depth**  
Établir la profondeur de la tuyauterie  
Establezca la profundidad de la tubería

Align mark with front of the stud face.  
Aligner la marque avec l'avant de la face du montant.  
Alinee el punto marcado con el frente de la cara del poste de madera.


**Thin Wall**  
Mur fin  
Pared delgada

Align mark with front of the stud face.  
Aligner la marque avec l'avant de la face du montant.  
Alinee el punto marcado con el frente de la cara del poste de madera.

**Standard Wall**  
Mur standard  
Pared estándar

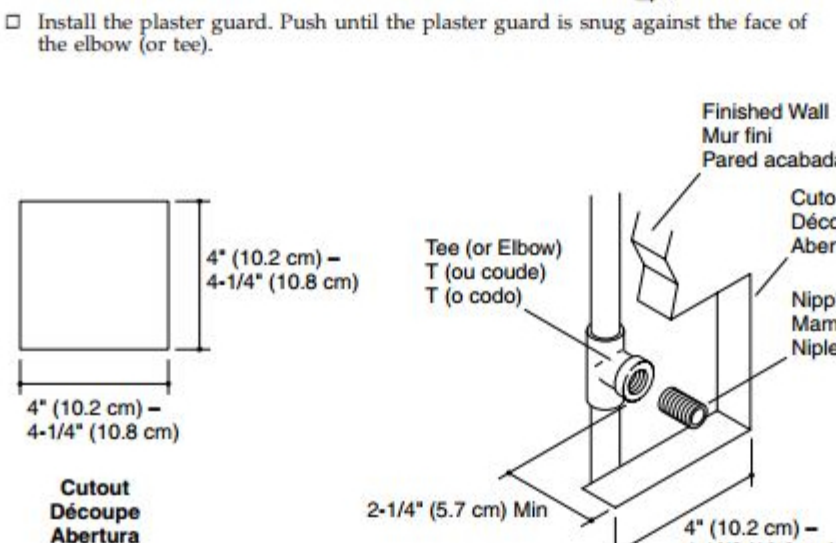

- Install the water-resistant wall board.
- Cut out a 4" (10.2 cm) to 4-1/4" (10.8 cm) square at each tile installation location.
- Install the finished wall material.

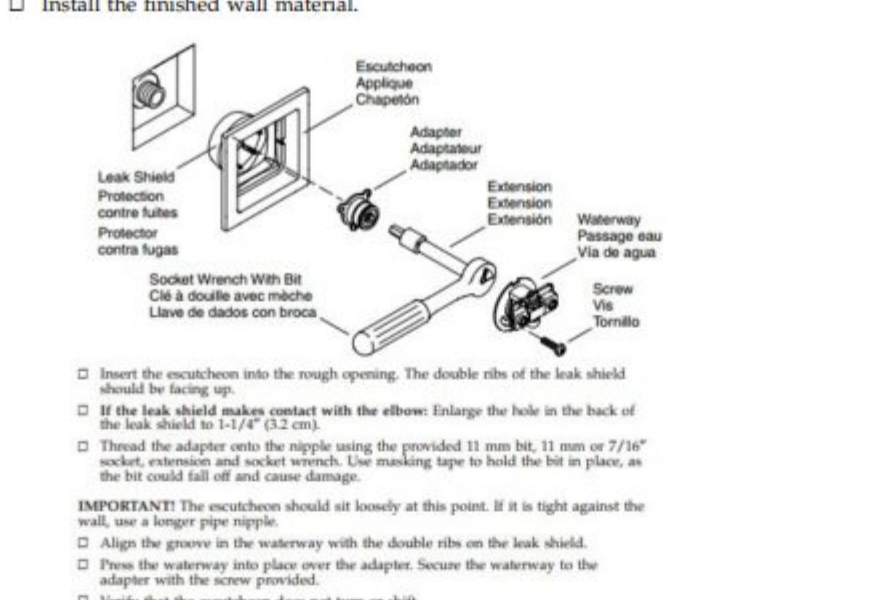

- Insert the escutcheon into the rough opening. The double ribs of the leak shield should be facing up.
- If the leak shield makes contact with the elbow: Enlarge the hole in the back of the leak shield to 1-1/4" (3.2 cm).
- Thread the adapter onto the nipple using the provided 11 mm bit, 11 mm or 7/16" socket, extension and socket wrench. Use masking tape to hold the bit in place, as the bit could fall off and cause damage.

**IMPORTANT!** The escutcheon should sit loosely at this point. If it is tight against the wall, use a longer pipe nipple.

- Align the groove in the waterway with the double ribs on the leak shield.
- Press the waterway into place over the adapter. Secure the waterway to the adapter with the screw provided.
- Verify that the escutcheon does not turn or shift.

**Attach the Sprayhead**  
Attacher la tête du vaporisateur  
Instale la cabeza del rociador

**Attach the Sprayface**  
Attacher la face du vaporisateur  
Instale la placa exterior del rociador

- With the ribs of the sprayhead facing up, install the sprayhead to the waterway.

**Attach the Sprayhead**

**Attach the Sprayface**

**Attach the Sprayhead**

**Attach the Sprayface**

**Attach the Sprayhead**

**Attach the Sprayface**

**Attach the Sprayhead**

**Attach the Sprayface**

**Attach the Sprayhead**

**Attach the Sprayface**

**Attach the Sprayhead**

**Attach the Sprayface**

**Attach the Sprayhead**

**Attach the Sprayface**

**Attach the Sprayhead**

**Attach the Sprayface**

**Attach the Sprayhead**

**Attach the Sprayface**

**Attach the Sprayhead**

**Attach the Sprayface**

**Attach the Sprayhead**

**Attach the Sprayface**

**Attach the Sprayhead**

**Attach the Sprayface**

**Attach the Sprayhead**

**Attach the Sprayface**

**Attach the Sprayhead**

**Attach the Sprayface**