









BUTLER

Assembly Instruction

ITEM : 9300288 SIDEBORD



| Hardware list | | | | |
|---------------|---|--|---------------|------|
| A |  |  | Brackets | 4PCS |
| | |  | Plastic Cable | 2PCS |
| | |  | Anchor | 2PCS |
| | |  | Srew Ø8x5/8" | 2PCS |
| | |  | Srew Ø8x2" | 2PCS |

Anti-Tipping
Restraint Kit
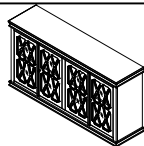
| Part list | | | |
|-----------|--|------|-------------|
| No. | Drawing | Qty. | Description |
| P1 |  | 1 | Sideboard |
| P2 |  | 5 | Bun Feet |


ASSEMBLY STEPS:

1. Open the box from the bottom, and remove the skids and bun feet

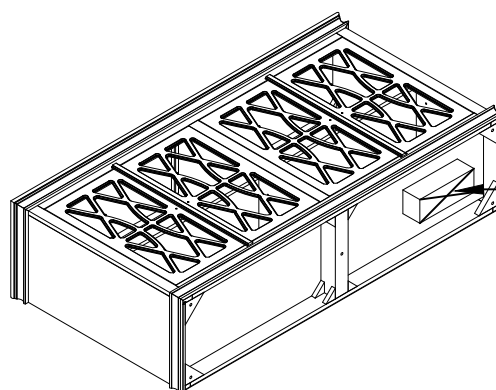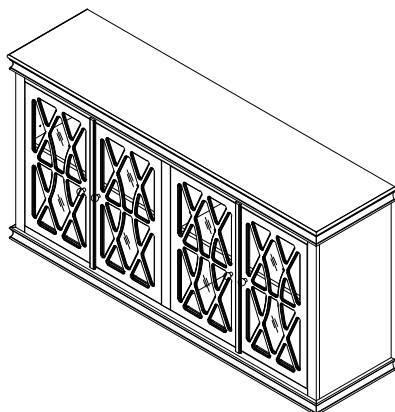


**Bun Feet Box:
Do Not Throw Away**



2. Place the unit on its backside, on a clean and soft surface.
Assemble the four Bun Feet (P2) to the unit . (As shown)

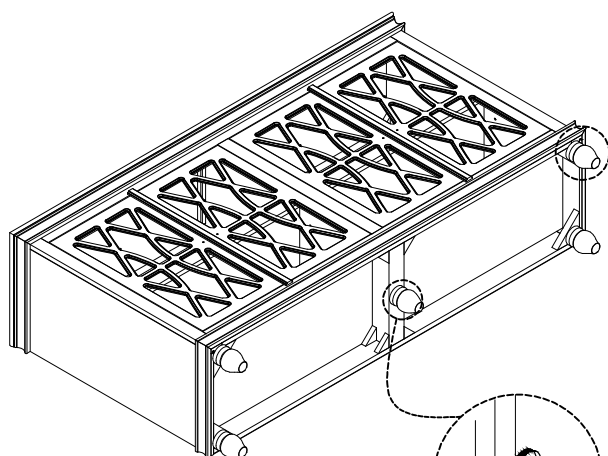

Step 1

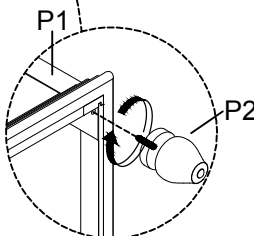

Step 2

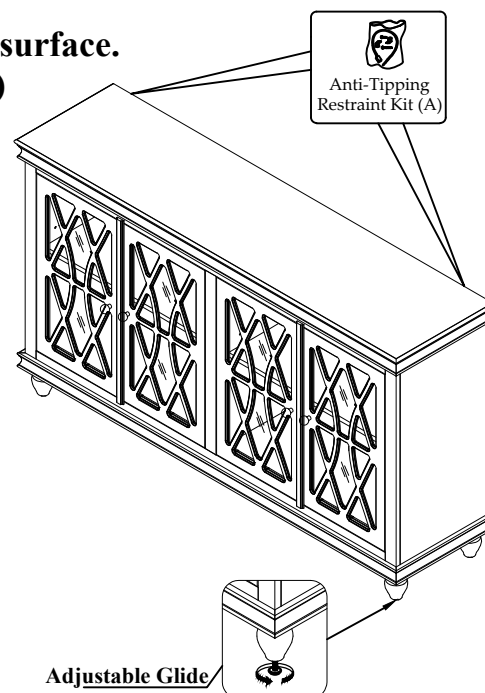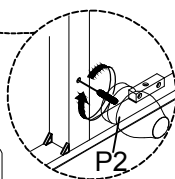

Adjustable Glide

3. Carefully lift the unit upright . Now you have finished the assembly of the unit.
Note: The levelers installed at the bottom of the Bun Feet, can be adjusted to compensate for uneven flooring.

Assembly completed

MADE IN VIETNAM