

Rivera Tempered Glass Vessel Vanity Sink with Matching Faucet &



INSTALLATION INSTRUCTIONS



RECOMMENDED TOOLS



Tape Measure



Drill



Plumber's Putty
or Caulking




Pencil

STEP #1

- o Prepare countertop by drilling a 1 3/4" (4.445cm) diameter drain hole in the desired location
- o Make sure you leave enough room in between the wall and the vessel for faucet placement
- o Line up the hole that was drilled in the countertop and the drain hole in the vessel. Place the vessel onto the countertop.
- o Install Drain, Trap and faucet according to manufactures specifications

Figure A

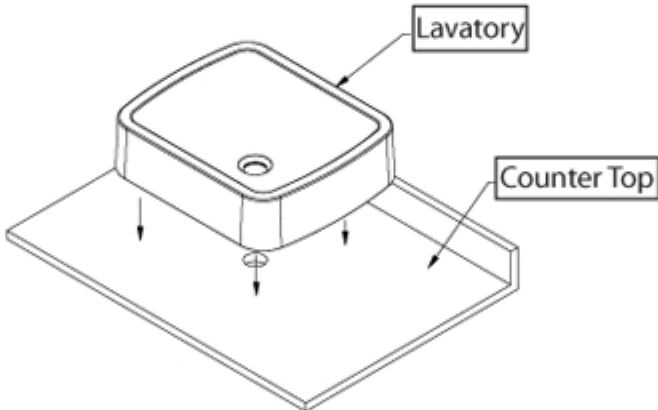


Notes:

- o Sink style, shape and cutout may vary from the actual product. This document is for instructional purposes only.
- o Decolav will not be held responsible if supplied cutout template is not followed

STEP #1

- o Prepare countertop by making a cutout in the counter top using the supplied cutout template.
- o Make sure you leave enough room in between the wall and the vessel for faucet placement
- o Put a little bit of sealant or plumbers putty on the bottom side of vessel, this is to keep the vessel from turning or moving once drain is installed.
- o Line up the cutout in the countertop and the drain hole in the vessel. Place the vessel on the countertop and press firmly.
- o Install Drain, Trap and faucet according to manufactures specifications

Figure A

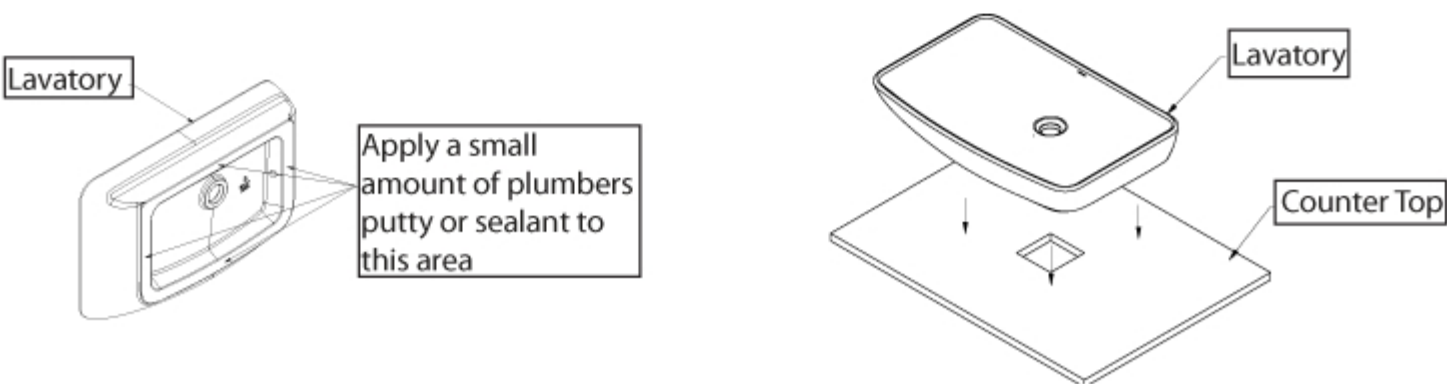

Notes:

- o Sink style, shape and cutout may vary from the actual product. This document is for instructional purposes only.
- o Decolav will not be held responsible if supplied cutout template is not followed

Figure B

This General diagram and installation instructions are not intended for any specific model, but is presented as a general guideline for Installations!