

**Model:** 011223-F08 011231-L-H01  
 011223-H01 011236-L-F08  
 011231-L-F08 011236-L-H01


Wall Hung Collection

**Notes :** (U.S. Customers) Please disregard Plastic Anchors in hardware kit.



When installing cabinet onto a hollow wall, the use of a horizontal reinforcement beam such as a 2" x 8" or 2" x 10" spanning at least two vertical studs is required.

Cabinets that are installed onto a hollow wall without a reinforcement beam will void the manufacturer warranty.

**Step 1 :**

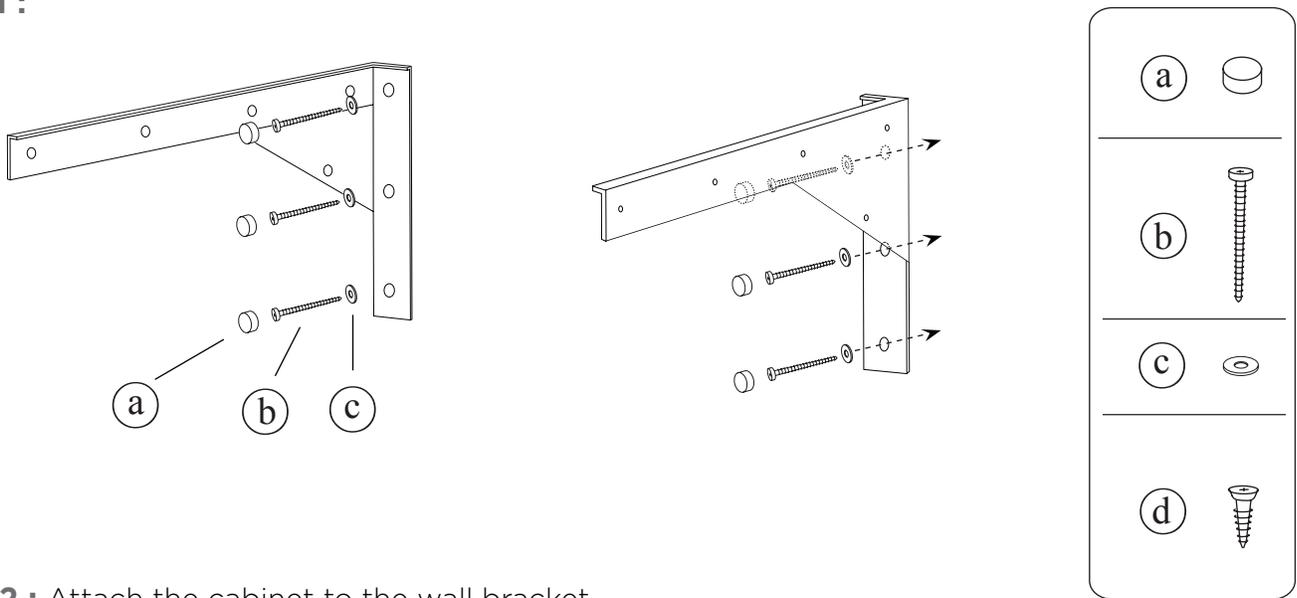

**Step 2 :** Attach the cabinet to the wall bracket.

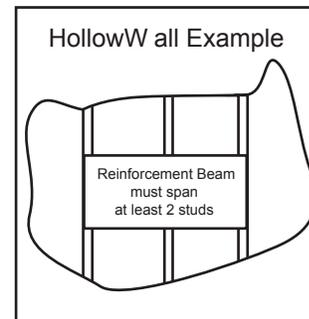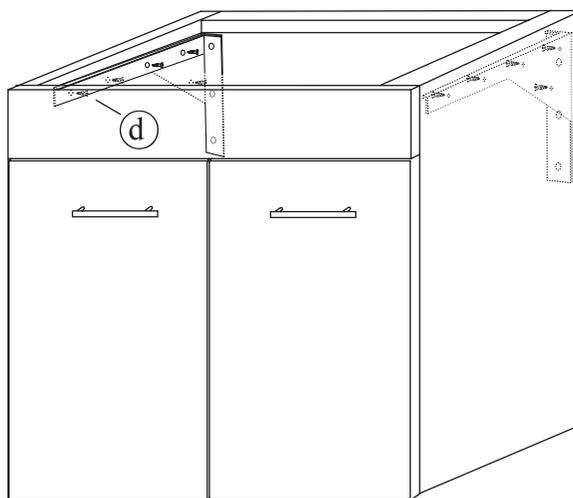

MODEL: 037023  
037031  
037036

CONTEMPO COLLECTION

**NOTE:** For installing under counter sink with counter top.


**STEP 1:** Apply adhesive caulking around the topside of rim near the edge. Carefully raise sink in place, align, and press firmly.

See Figure 1.

**STEP 2:** Attach 4 undermount-clips to hold lavatory in place

See Figure 2.


**Figure 2.**

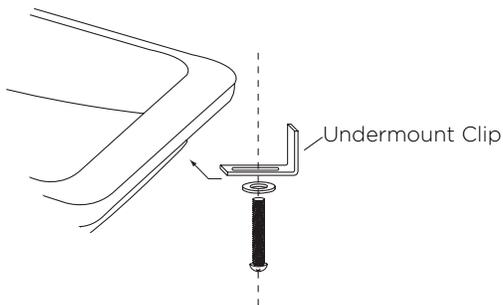


**STEP 3:** Secure top & back splash to cabinet by using adhesive caulk

See Figure 3.

**Figure 1.**

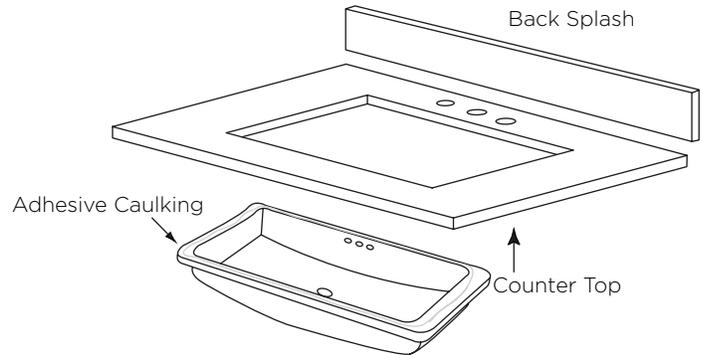

**Figure 3.**

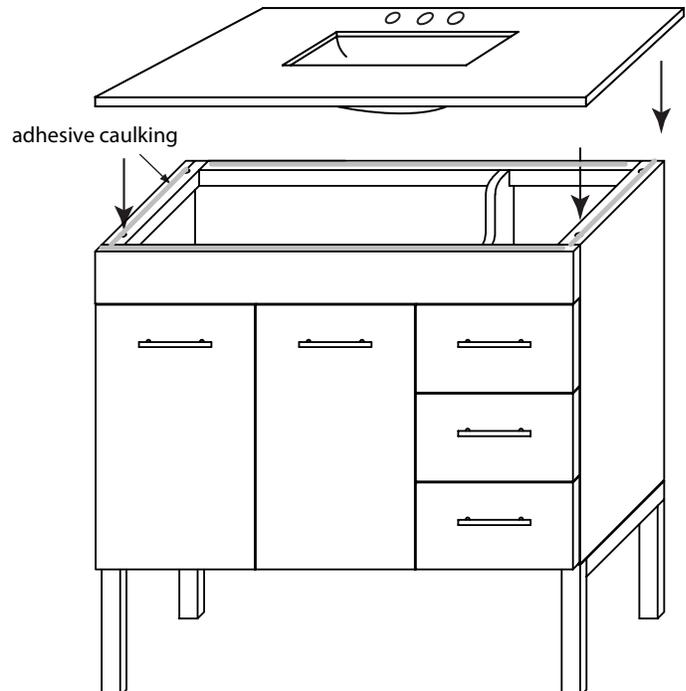


MODEL: 037023  
037031  
037036

CONTEMPO COLLECTION

**STEP 4:** Attach p-trap to tailpiece

See Figure 4.

**Figure 4.**

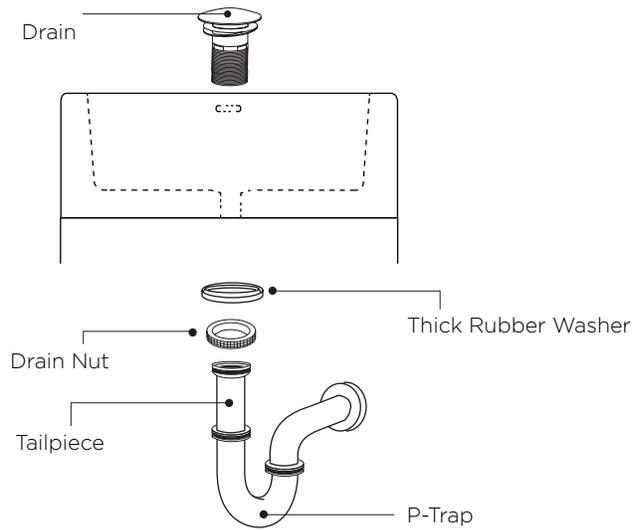

MODEL: 037023  
037031  
037036

CONTEMPO COLLECTION


**NOTE:** For installing under counter sink with WideAppeal Top.

**STEP 1: DO NOT DISCARD WOODEN INSTALLATION BRACKET!**

- Make sure wooden installation bracket is safely secure
- Install under counter sink by following specific sink installation

See Figure 1.


**Figure 1.**

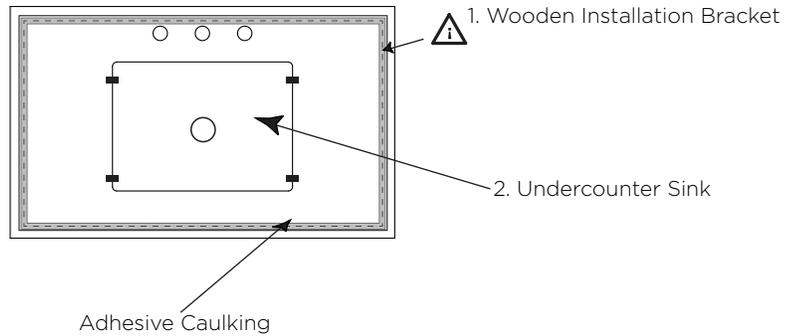

**STEP 2:**

- For best results, clean the mounting surfaces with a dry cleaning cloth
- To prevent over flow of adhesive, use masking tape to tape off the edges of the


**Figure 2.**

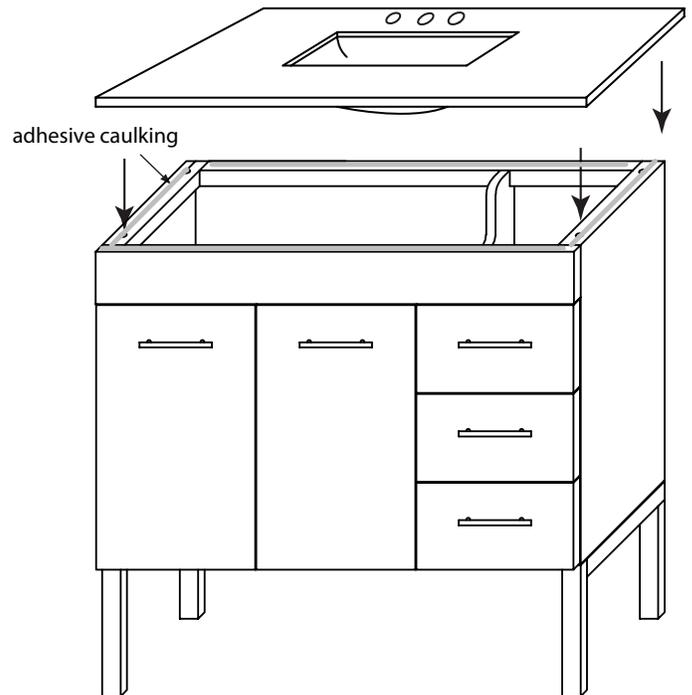

**STEP 3:** Apply adhesive on wood bracket and mounting surfaces of the cabinet

See Figure 2.

**Figure 3.**

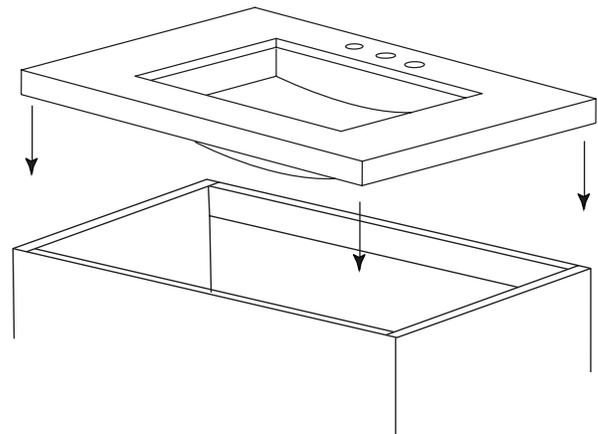

**STEP 4:** Carefully place countertop on to the cabinet, align, and press firmly

See Figure 3.

MODEL: 037023  
037031  
037036


CONTEMPO COLLECTION

**NOTE:** For installing Ceramic Sinktop.

**STEP 1:** Place adhesive around top of cabinet.

*See Figure 1.*

**Figure 1.**

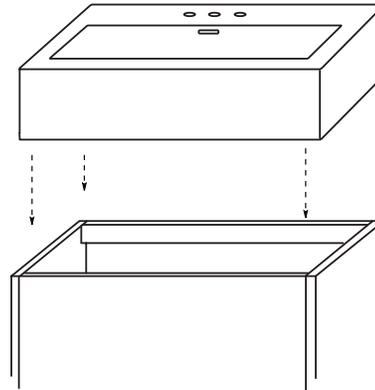


**STEP 2:** Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop.

(There may be a small beveled rubber washer packaged with your drain, please discard this and use plumbers' putty instead.)

*See Figure 2.*


**Figure 2.**

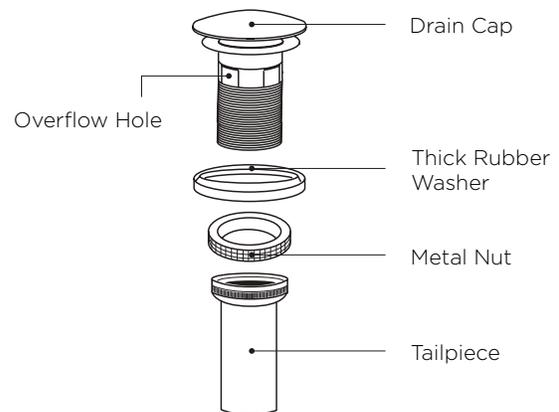

**STEP 3:** From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty.

*See Figure 3.*

**Figure 3.**

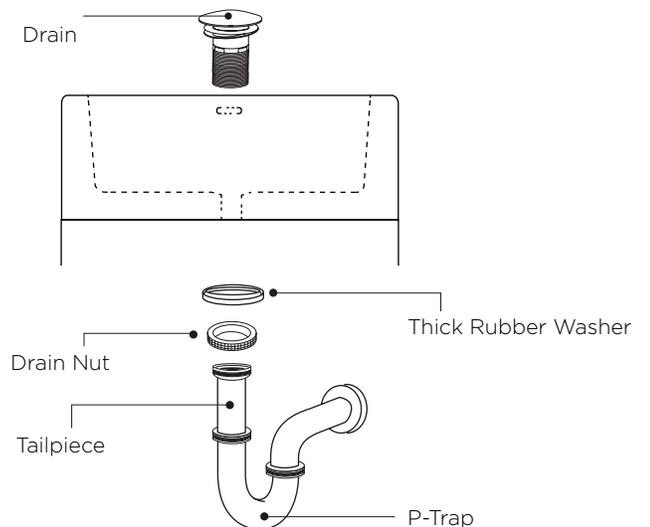

**STEP 4:** Attach p-trap to tailpiece.