





Window Curtain Rod and Finial Set	Finials	Brackets	Wall Screws	Anchors
 28-48"	2		4	4
 48-86"	2		6	6
 86-120"	2	1	6	6

Installation overview


1 Measure the Location:

Using left finial as a guide, adjust to desired height and mark drill points on wall for mounting screws and anchors (Be sure marks of each finial at the same height).




2 Drilling Holes:

Drill holes at the marked drill points on the wall.

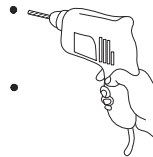


3 Measure the Location:

If mount on the dry wall, please drill a 1/4" hole and tap anchors into the holes. If mount on wood, just drive the screw into the wood with a lead hole directly, no need to use anchors.

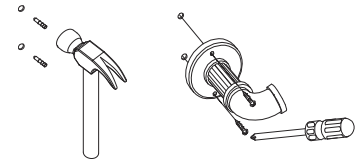


4 Bracket & Rod Mounting:


Align the brackets against the predrilled holes, use the screwdriver and the hardware set to mount the bracket onto the walls tightly. Hang the curtains onto the rod and put it into the brackets.

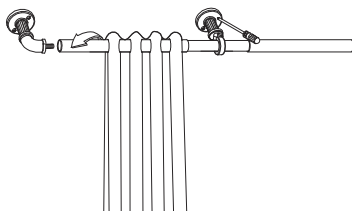


5 Attach the right finial to the wall using screws providing.

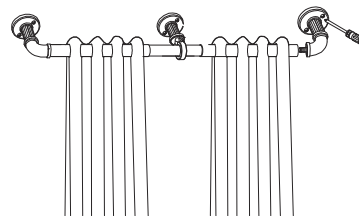

6 Completed

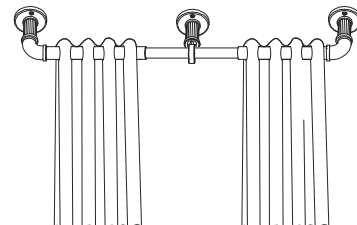

The plastic sleeves as shown below are to retain the rods from sagging.
Be sure to have them in place.

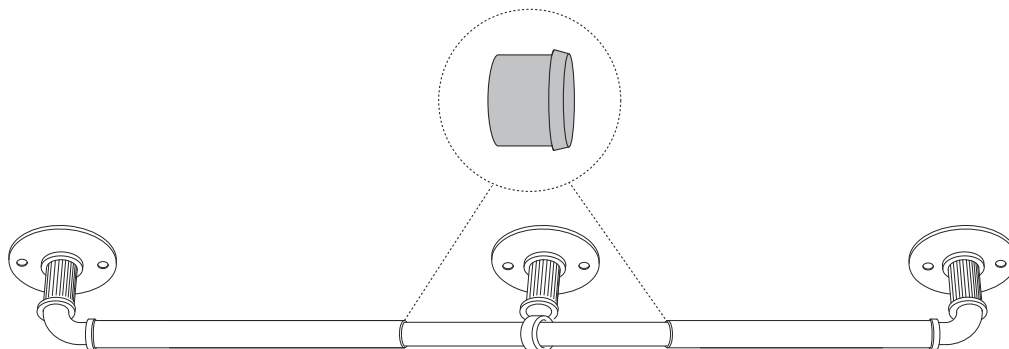

⚠ WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

Thank you for purchasing Utopia Alley Products. Please contact us if you have difficulty with assembly or need replacement parts. Utopia Alley customer service is here to assist you.

Email: CustomerService@utopiaalley.com

Please attach your name and Order ID so that we can assist you better.