

MOE'S

home collection

ASSEMBLY INSTRUCTIONS.


MEDICI SIDEBOARD

ER-2011-07



THANK YOU FOR YOUR PURCHASE!

PARTS AND HARDWARE.


| | |
|--|---|
| 1. CABINET x 1  | SCREW DRIVER (NOT INCLUDED)  |
| A. SCREW M4*16 x 1  | B. FLAT WASHER DIA 12MM x 2  |
| C. ANTI PRERVENTION DEVICE x 1  | D. WALL FIXING DEVICE x 1  |
| E. SCREW M4*25 x 1  | F. HANDLE x 5  |
| G. SCREW M4*12 x 10  | |

NOTES.


Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: The item is heavy, assembly should be performed by two people.


STEP 1.

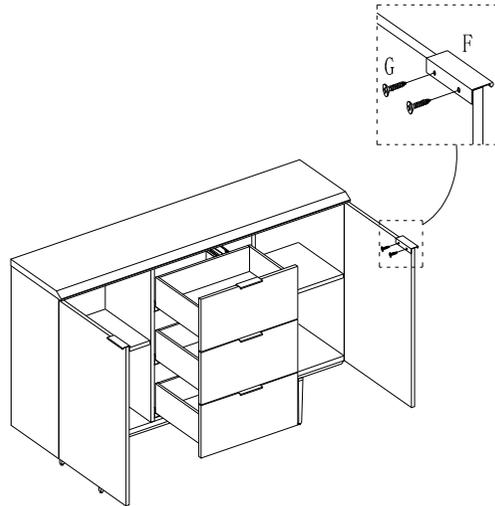

STEP 2.

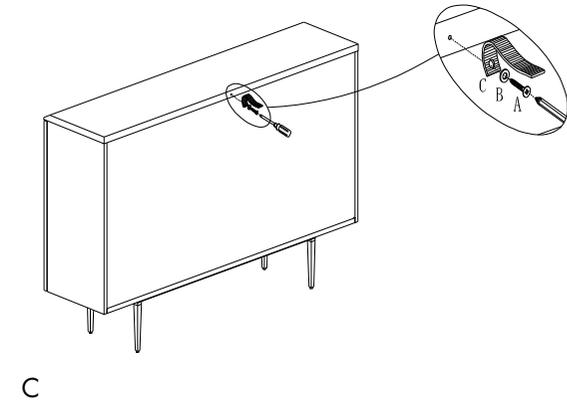

STEP 3.

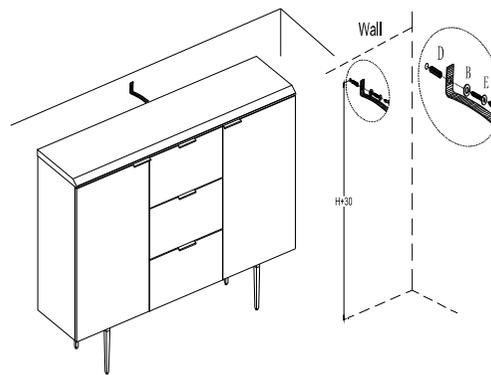

STEP 4.

