
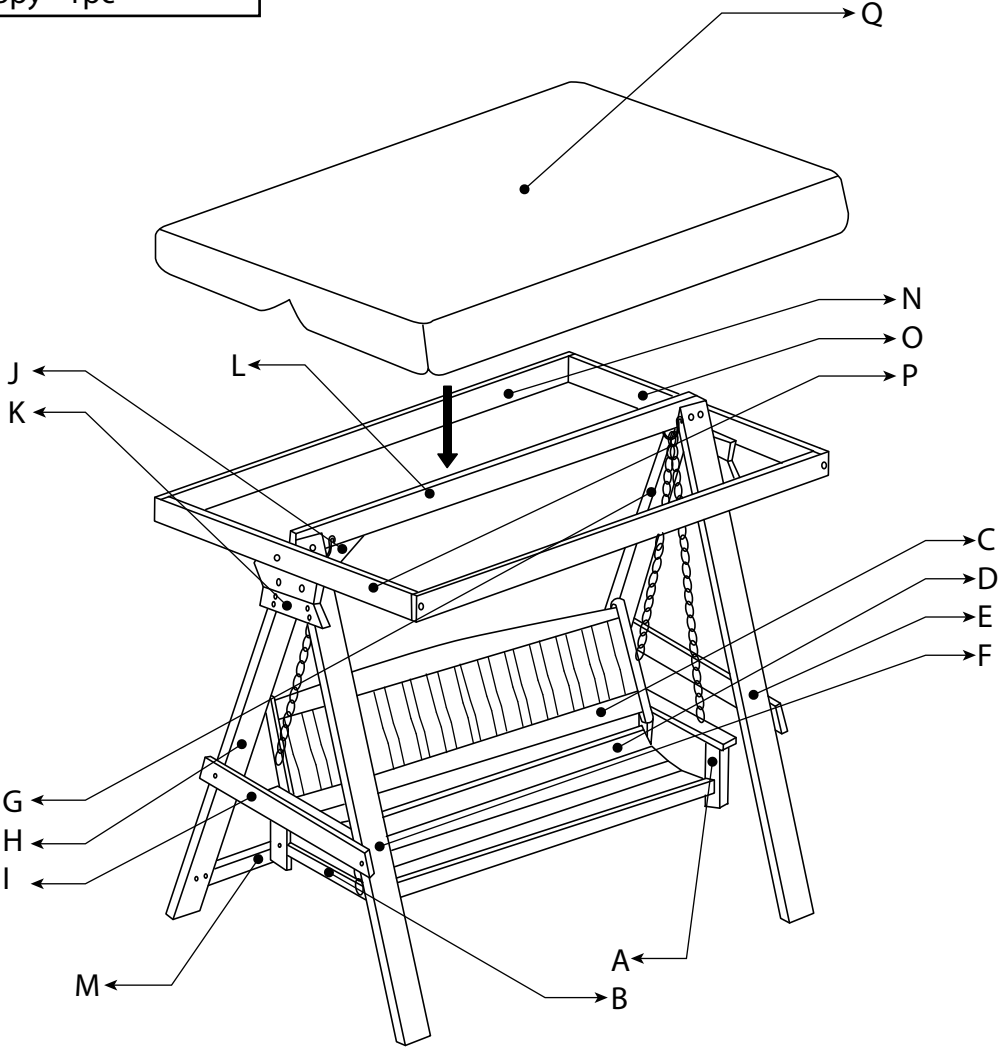

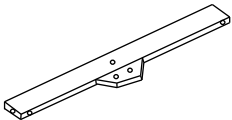
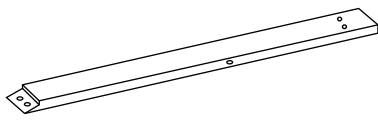

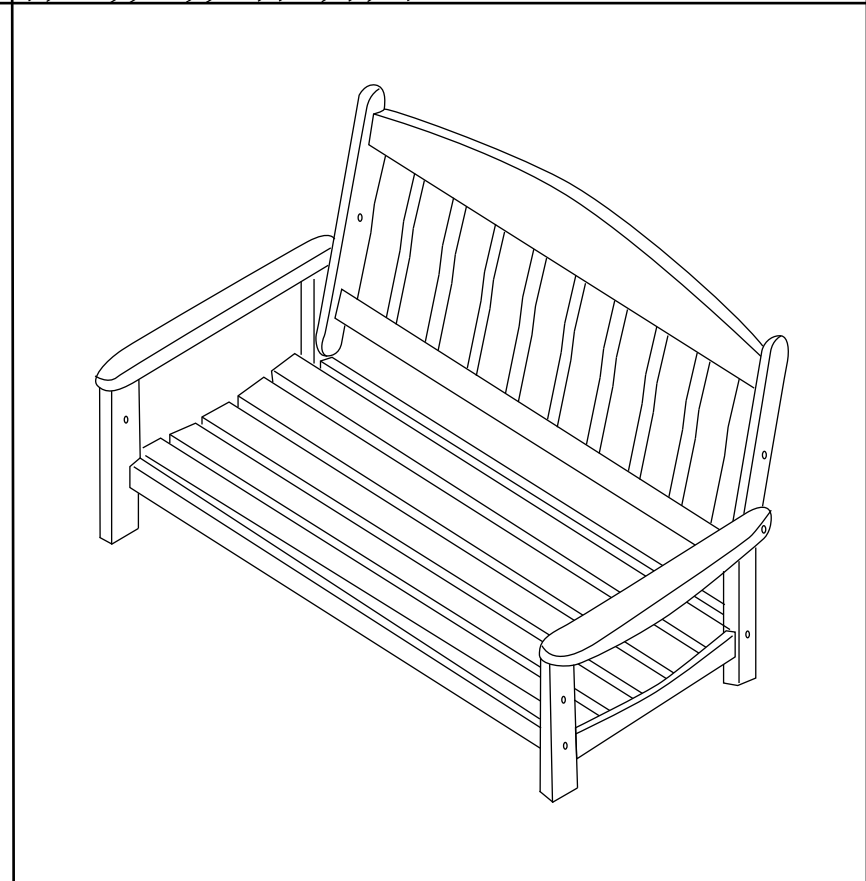
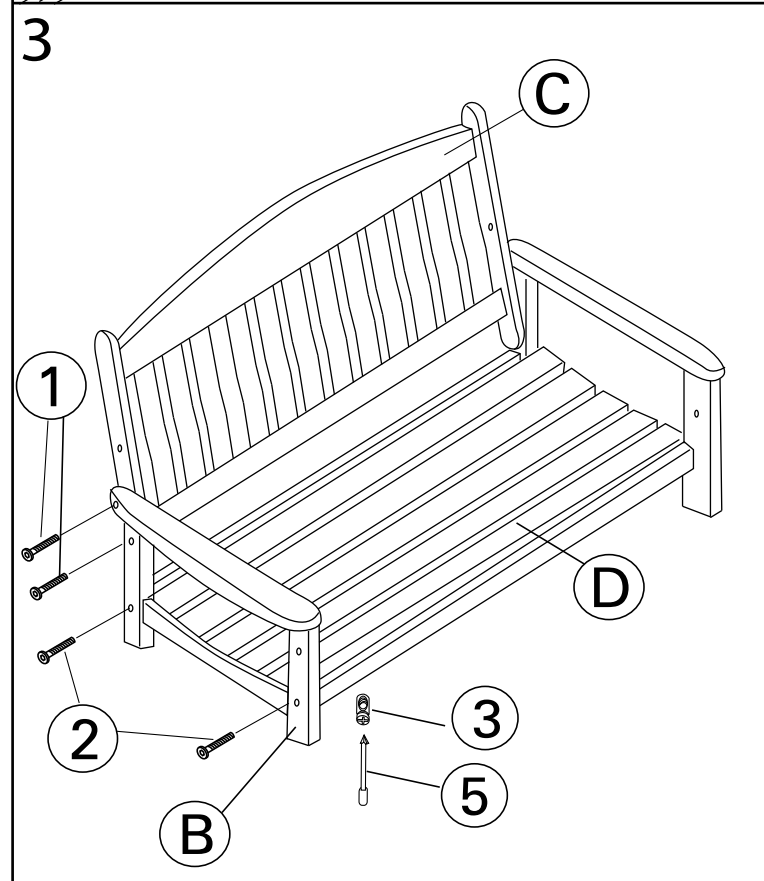
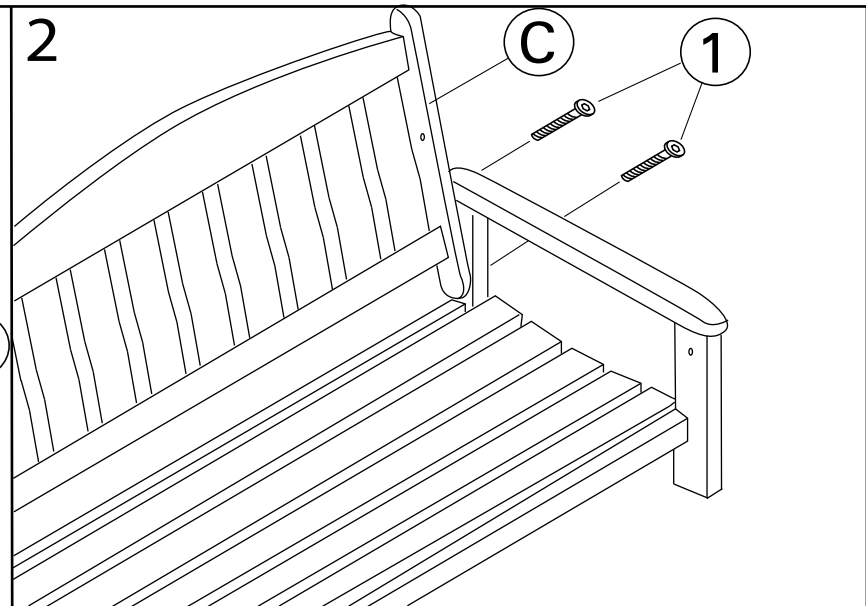
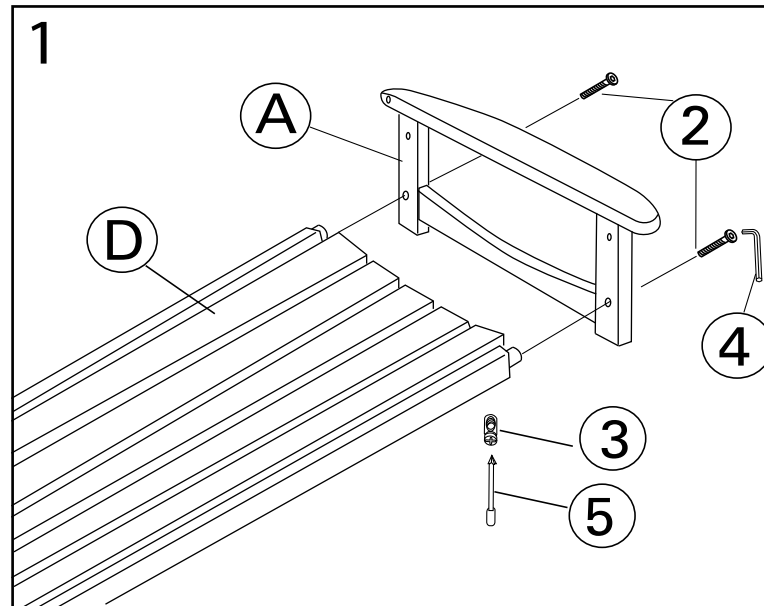
	
		
		

PART 1 : BENCH ASSEMBLY

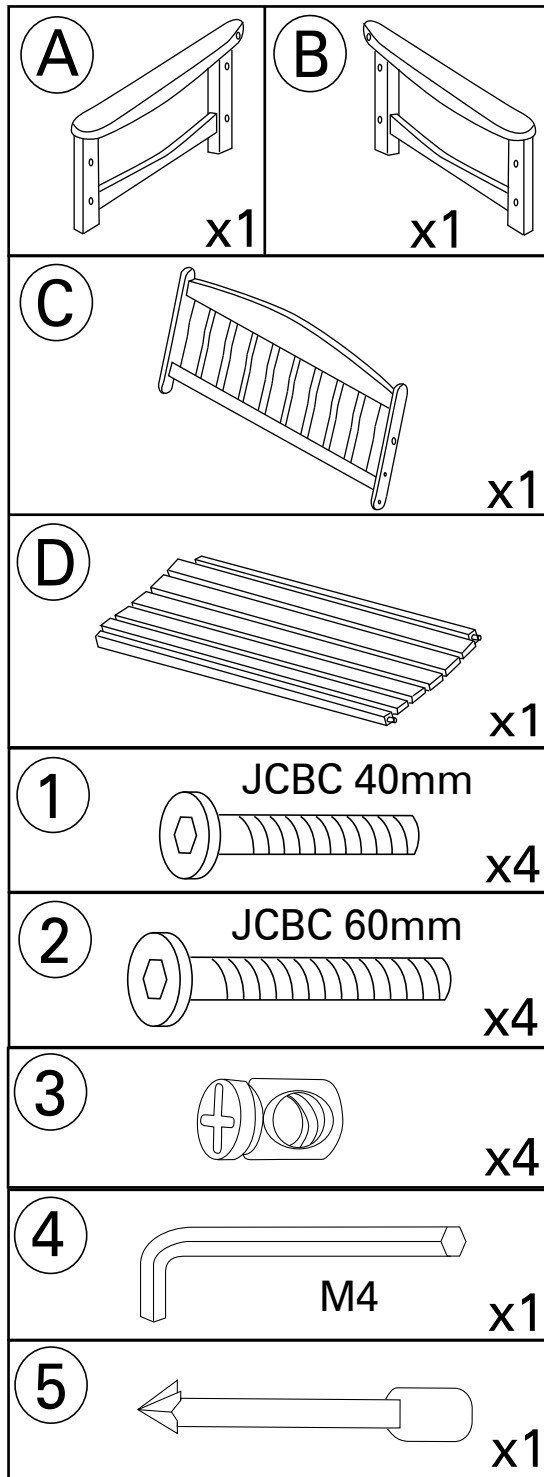


ASSEMBLY INSTRUCTION SHEET

PART 2: A-Leg Assembly


Step 1

Screw in the Top Rail (L) to Leg Assembly

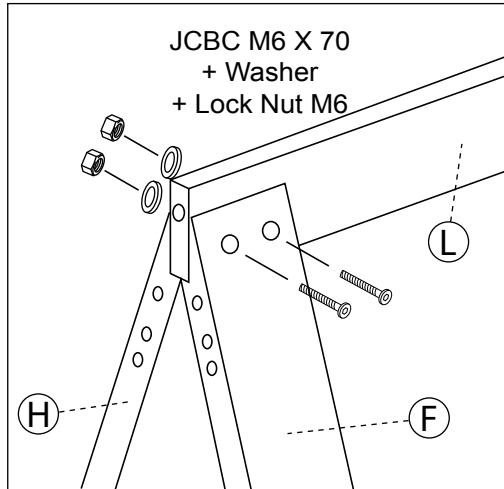


Step 2

Screw in Side Rail (I) to Leg (E&G / F&H)

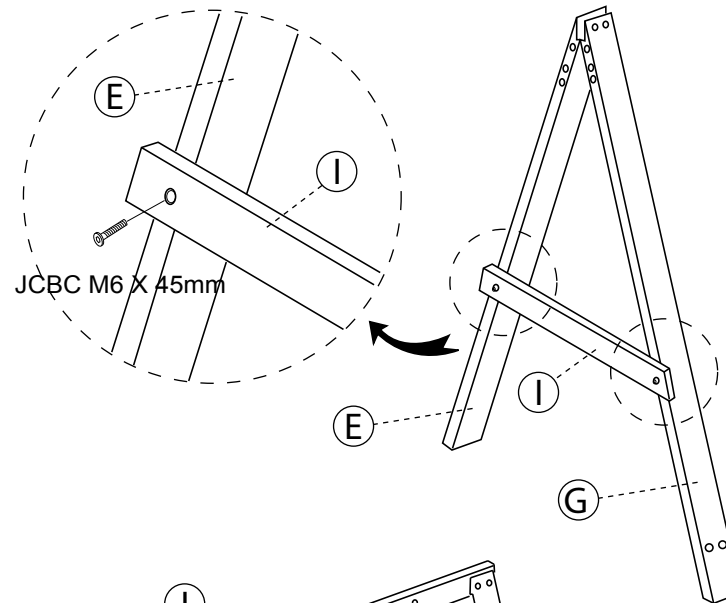


Step 3

Screw in Bottom Rail (M) to Back Leg (G&H)




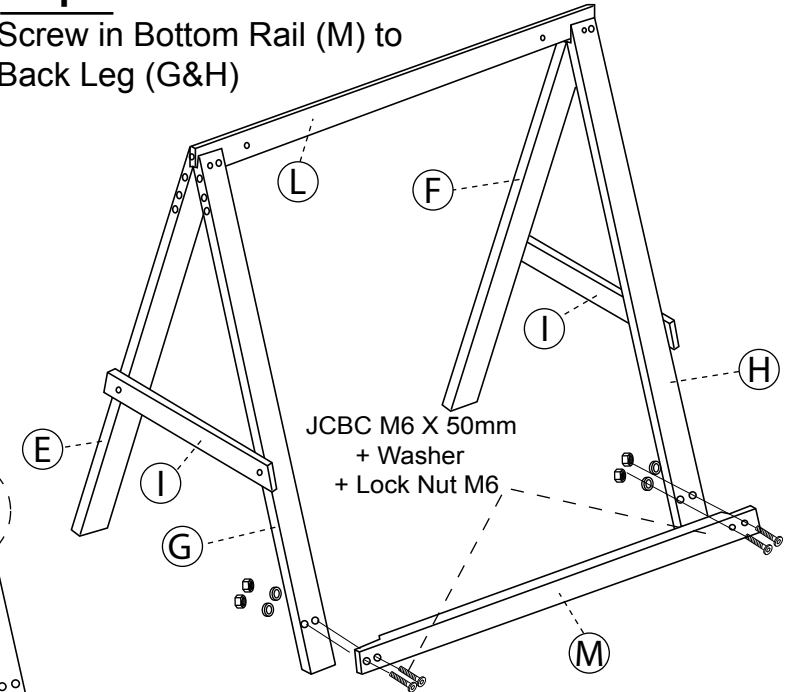


Step 4

Screw in the Top Bar (J) to Leg Assembly

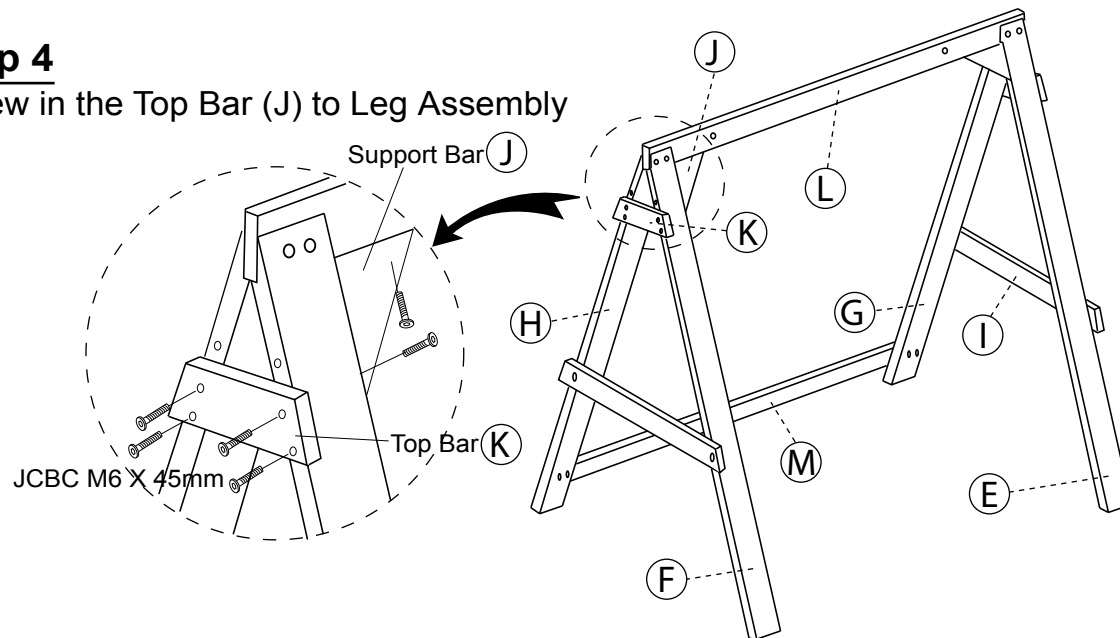

HARDWARE

- | | | |
|--------------------|---|----------|
| 1. JCBC M6 X 70mm |  | - 4 pcs |
| 2. JCBC M6 X 45mm |  | - 20 pcs |
| 3. Lock Nut M6 |  | - 8 pcs |
| 4. Flat Washer Ø13 |  | - 8 pcs |
| 5. Spanner |  | - 1 pc |
| 6. JCBC M6x50mm |  | - 4 pcs |


* Do not fasten bolt and nuts with wrench until assembly is completed.

ASSEMBLY INSTRUCTION SHEET

PART 3


Step 1

Screw in Chain to Seat Deck

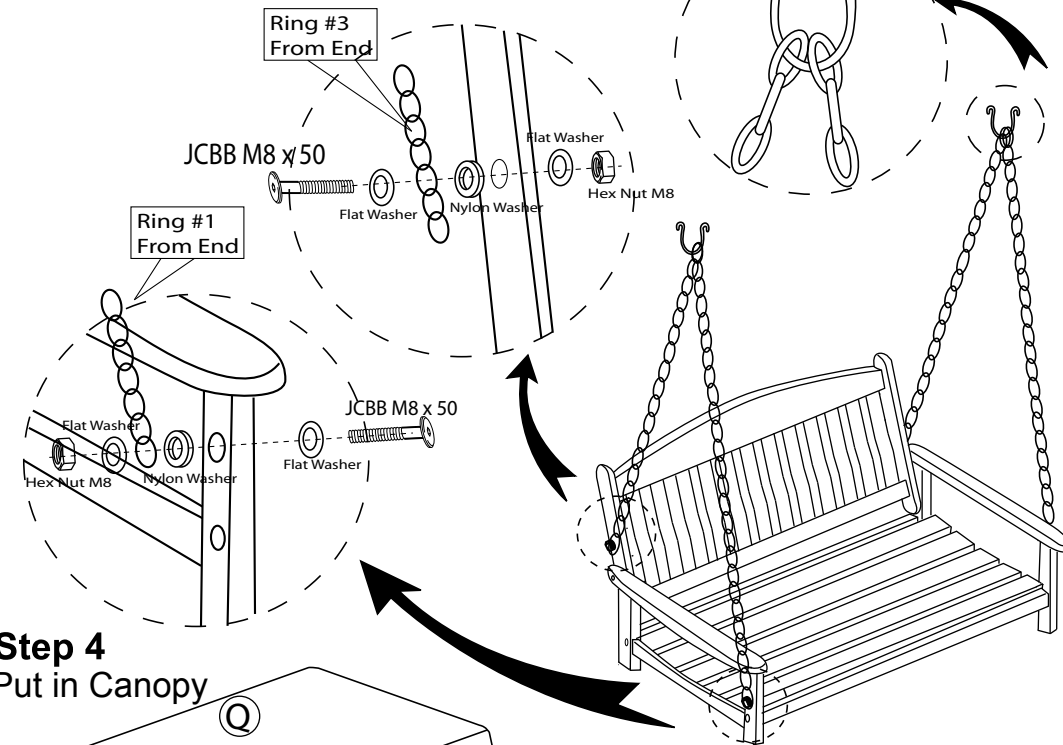


Step 4

Put in Canopy

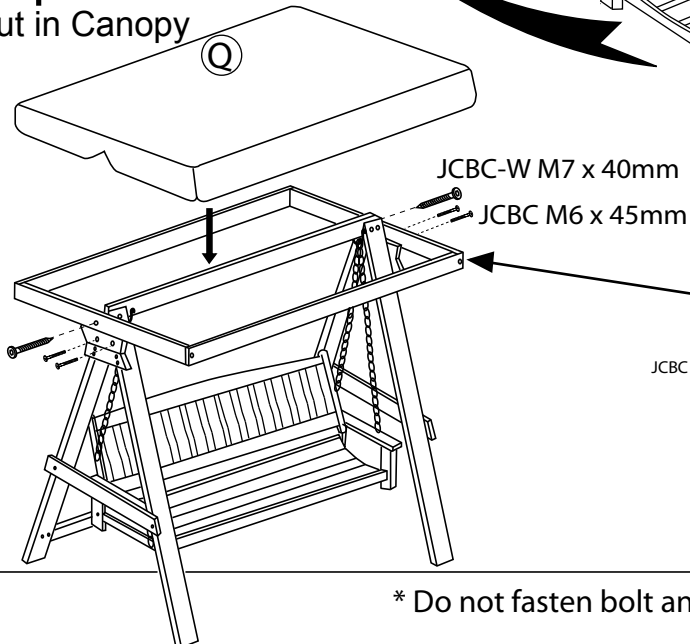


Step 2

Screw in Chain to Top Rail








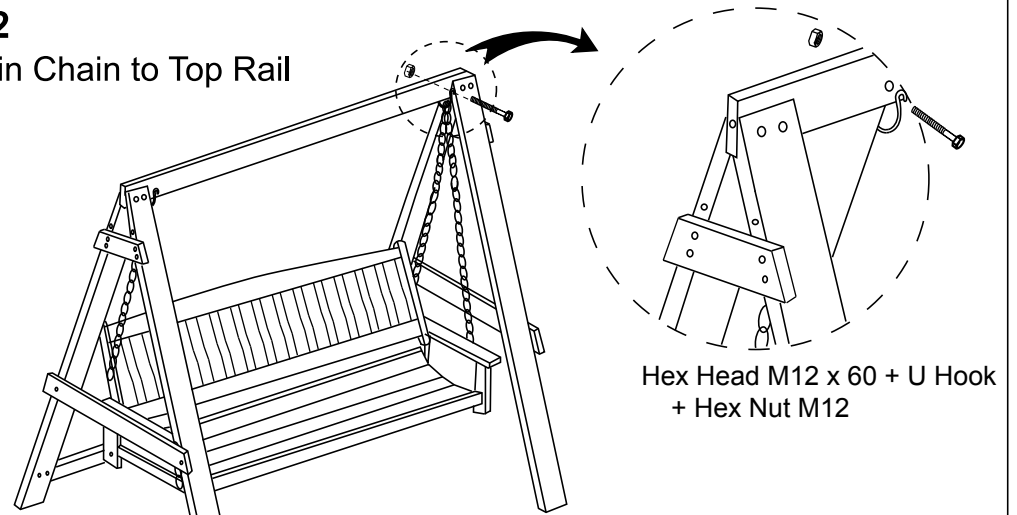


Step 3

Screw in Canopy Frame (N + O + P)

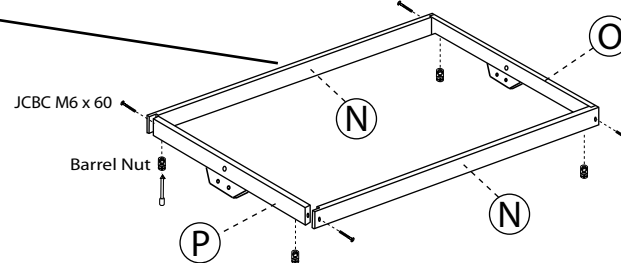

HARDWARE

- | | | |
|----------------------------|---|---------|
| 1. Hex Head M12 x 60 |  | - 2 pcs |
| 2. Hex Nut M12 |  | - 2 pcs |
| 3. U Hook |  | - 2 pcs |
| 4. Chain : Short |  | - 2 pcs |
| : Long |  | - 2 pcs |
| 5. Hex Nut M8 |  | - 4 pcs |
| 6. Allen Key M5 |  | - 1 pcs |
| 7. JCBC M6 X 60mm |  | - 4 pcs |
| 8. JCBC-W M7 X 40mm |  | - 2 pcs |
| 9. Barrel Nut |  | - 4 pcs |
| 10. M19 Spanner |  | - 1 pc |
| 11. M13 Spanner |  | - 1 pc |
| 12. Nylon Washer |  | - 4 pcs |
| 13. JCBB M8x50mm |  | - 4 pcs |
| 14. Flat Washer (M8x22x12) |  | - 8 pcs |

* Do not fasten bolt and nuts with wrench until assembly is completed.