


# Bracket Install Instructions




1. Drywall anchors are not provided so a studfinder should be used to locate studs in the wall.

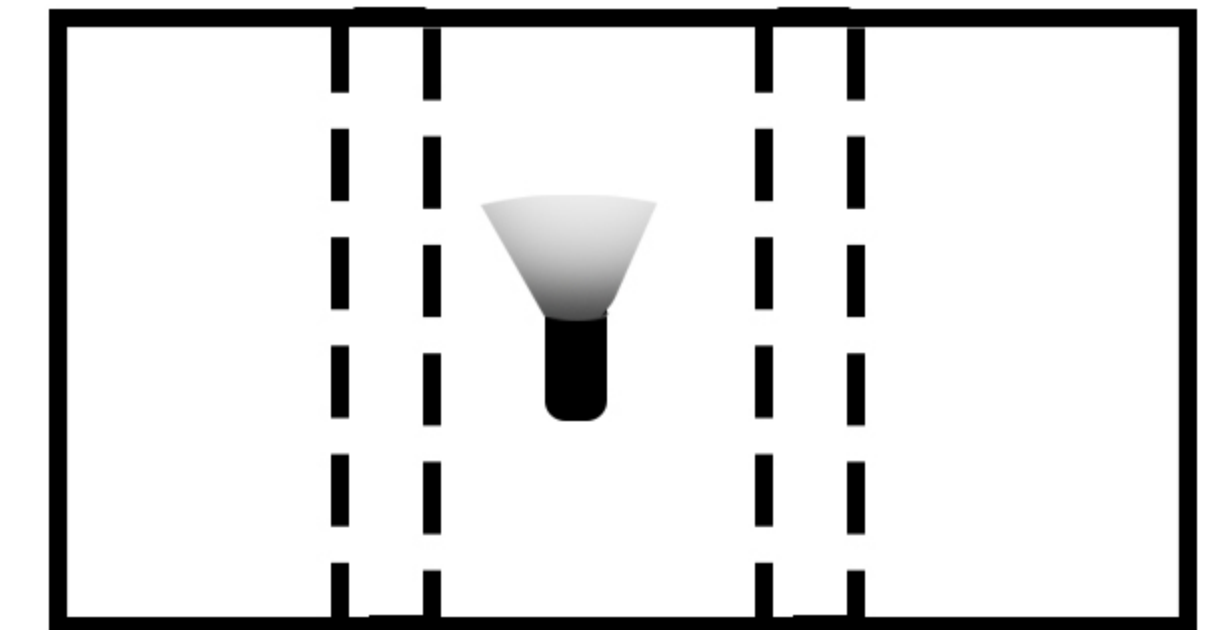

2. Place bracket on wall where there is a stud, at the height that you would like to mount it. The side with the most mounting holes attaches to the wall. Some brackets can be mounted on either side. Mark holes with a pencil.



3. Drill pilot holes with 1/16" drill bit to 3/4 of depth of screw.

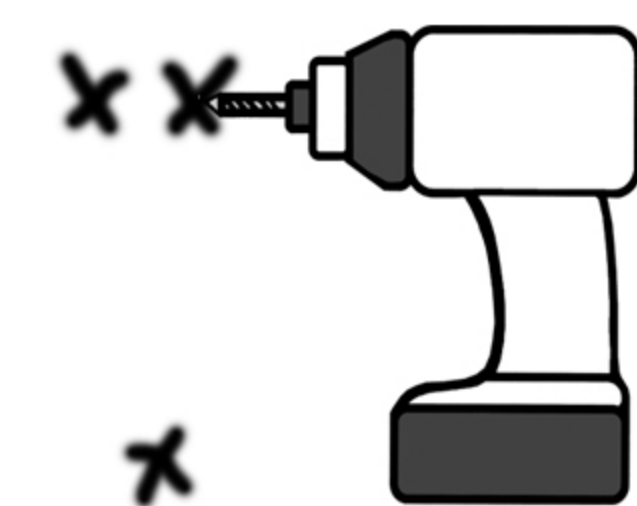

4. Use appropriate screw head/bit to mount brackets to wall.



5. Attach shelf to top of brackets using screws or adhesive.

