
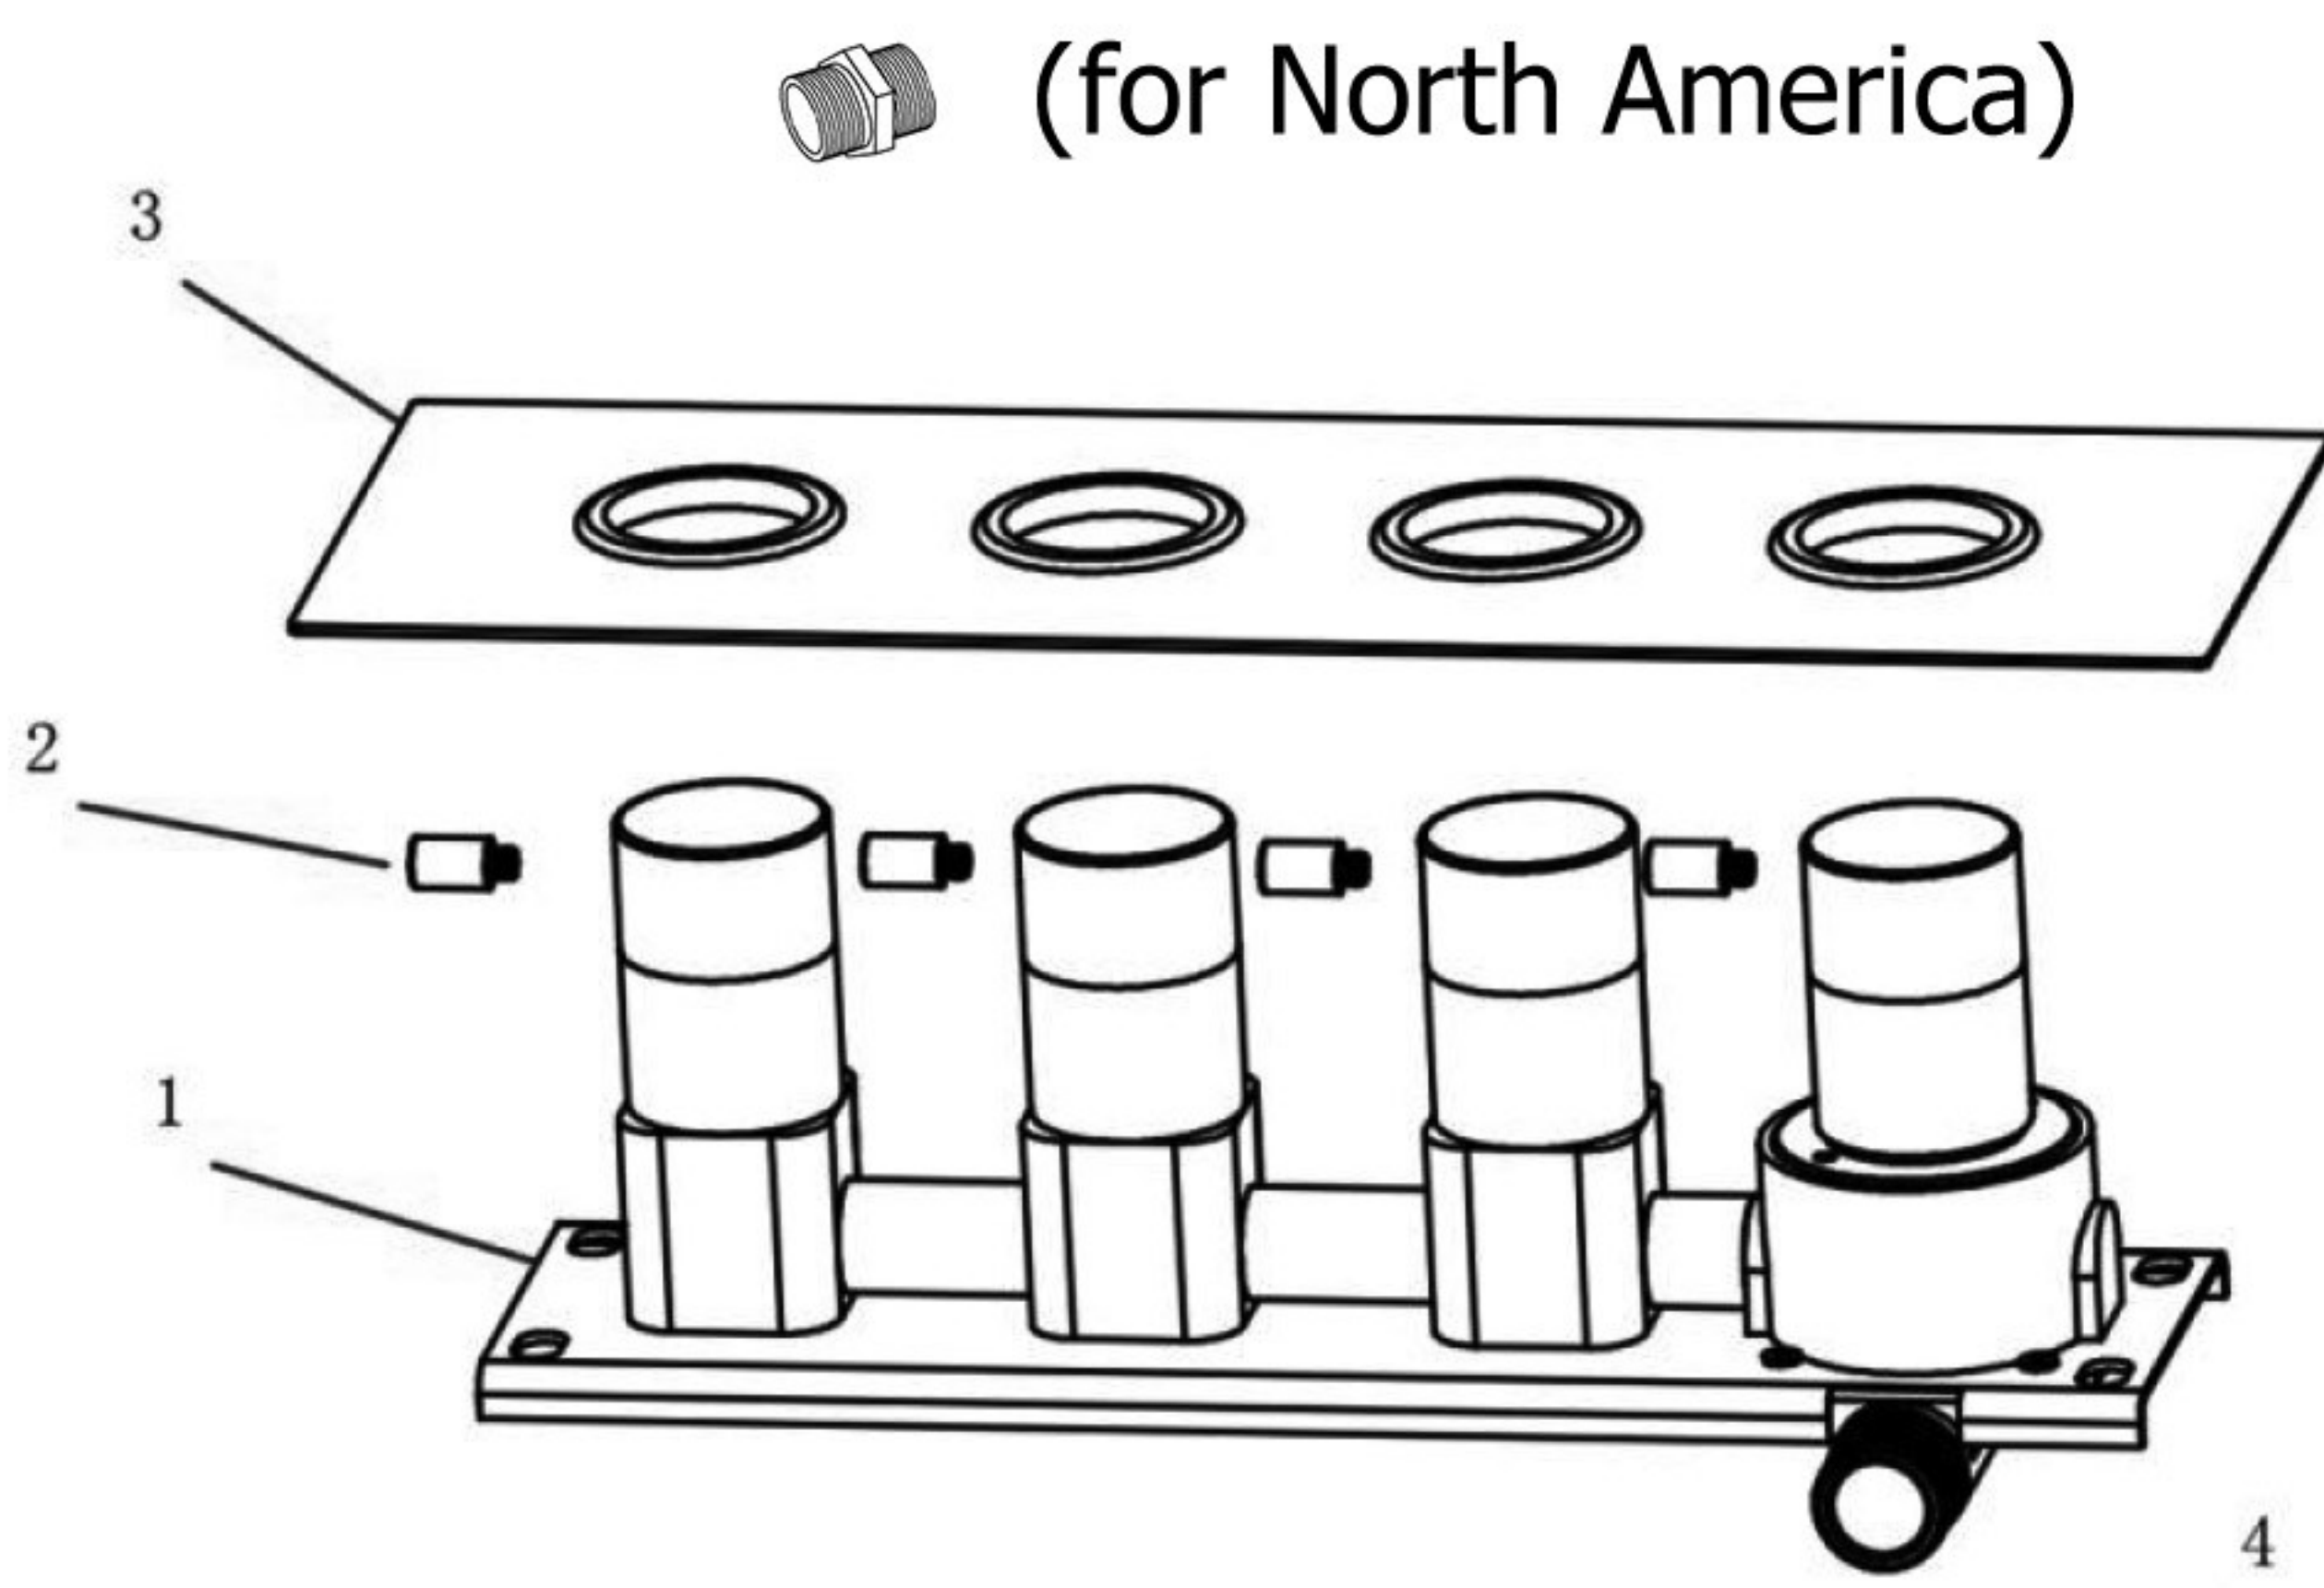
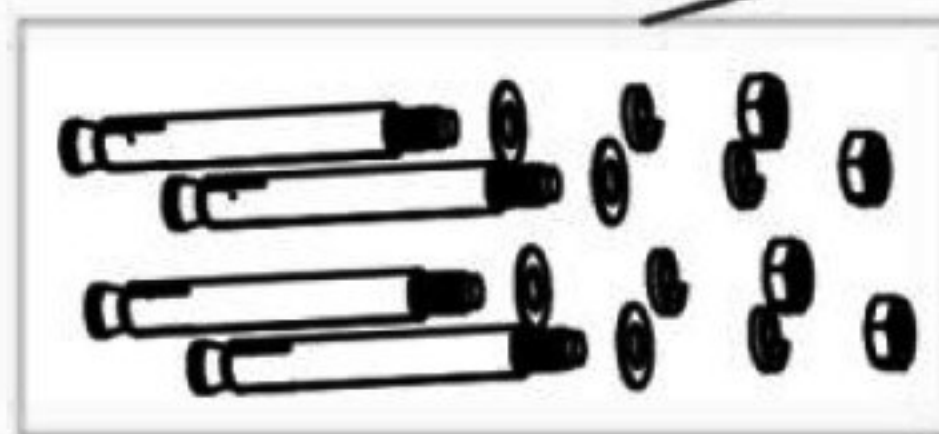
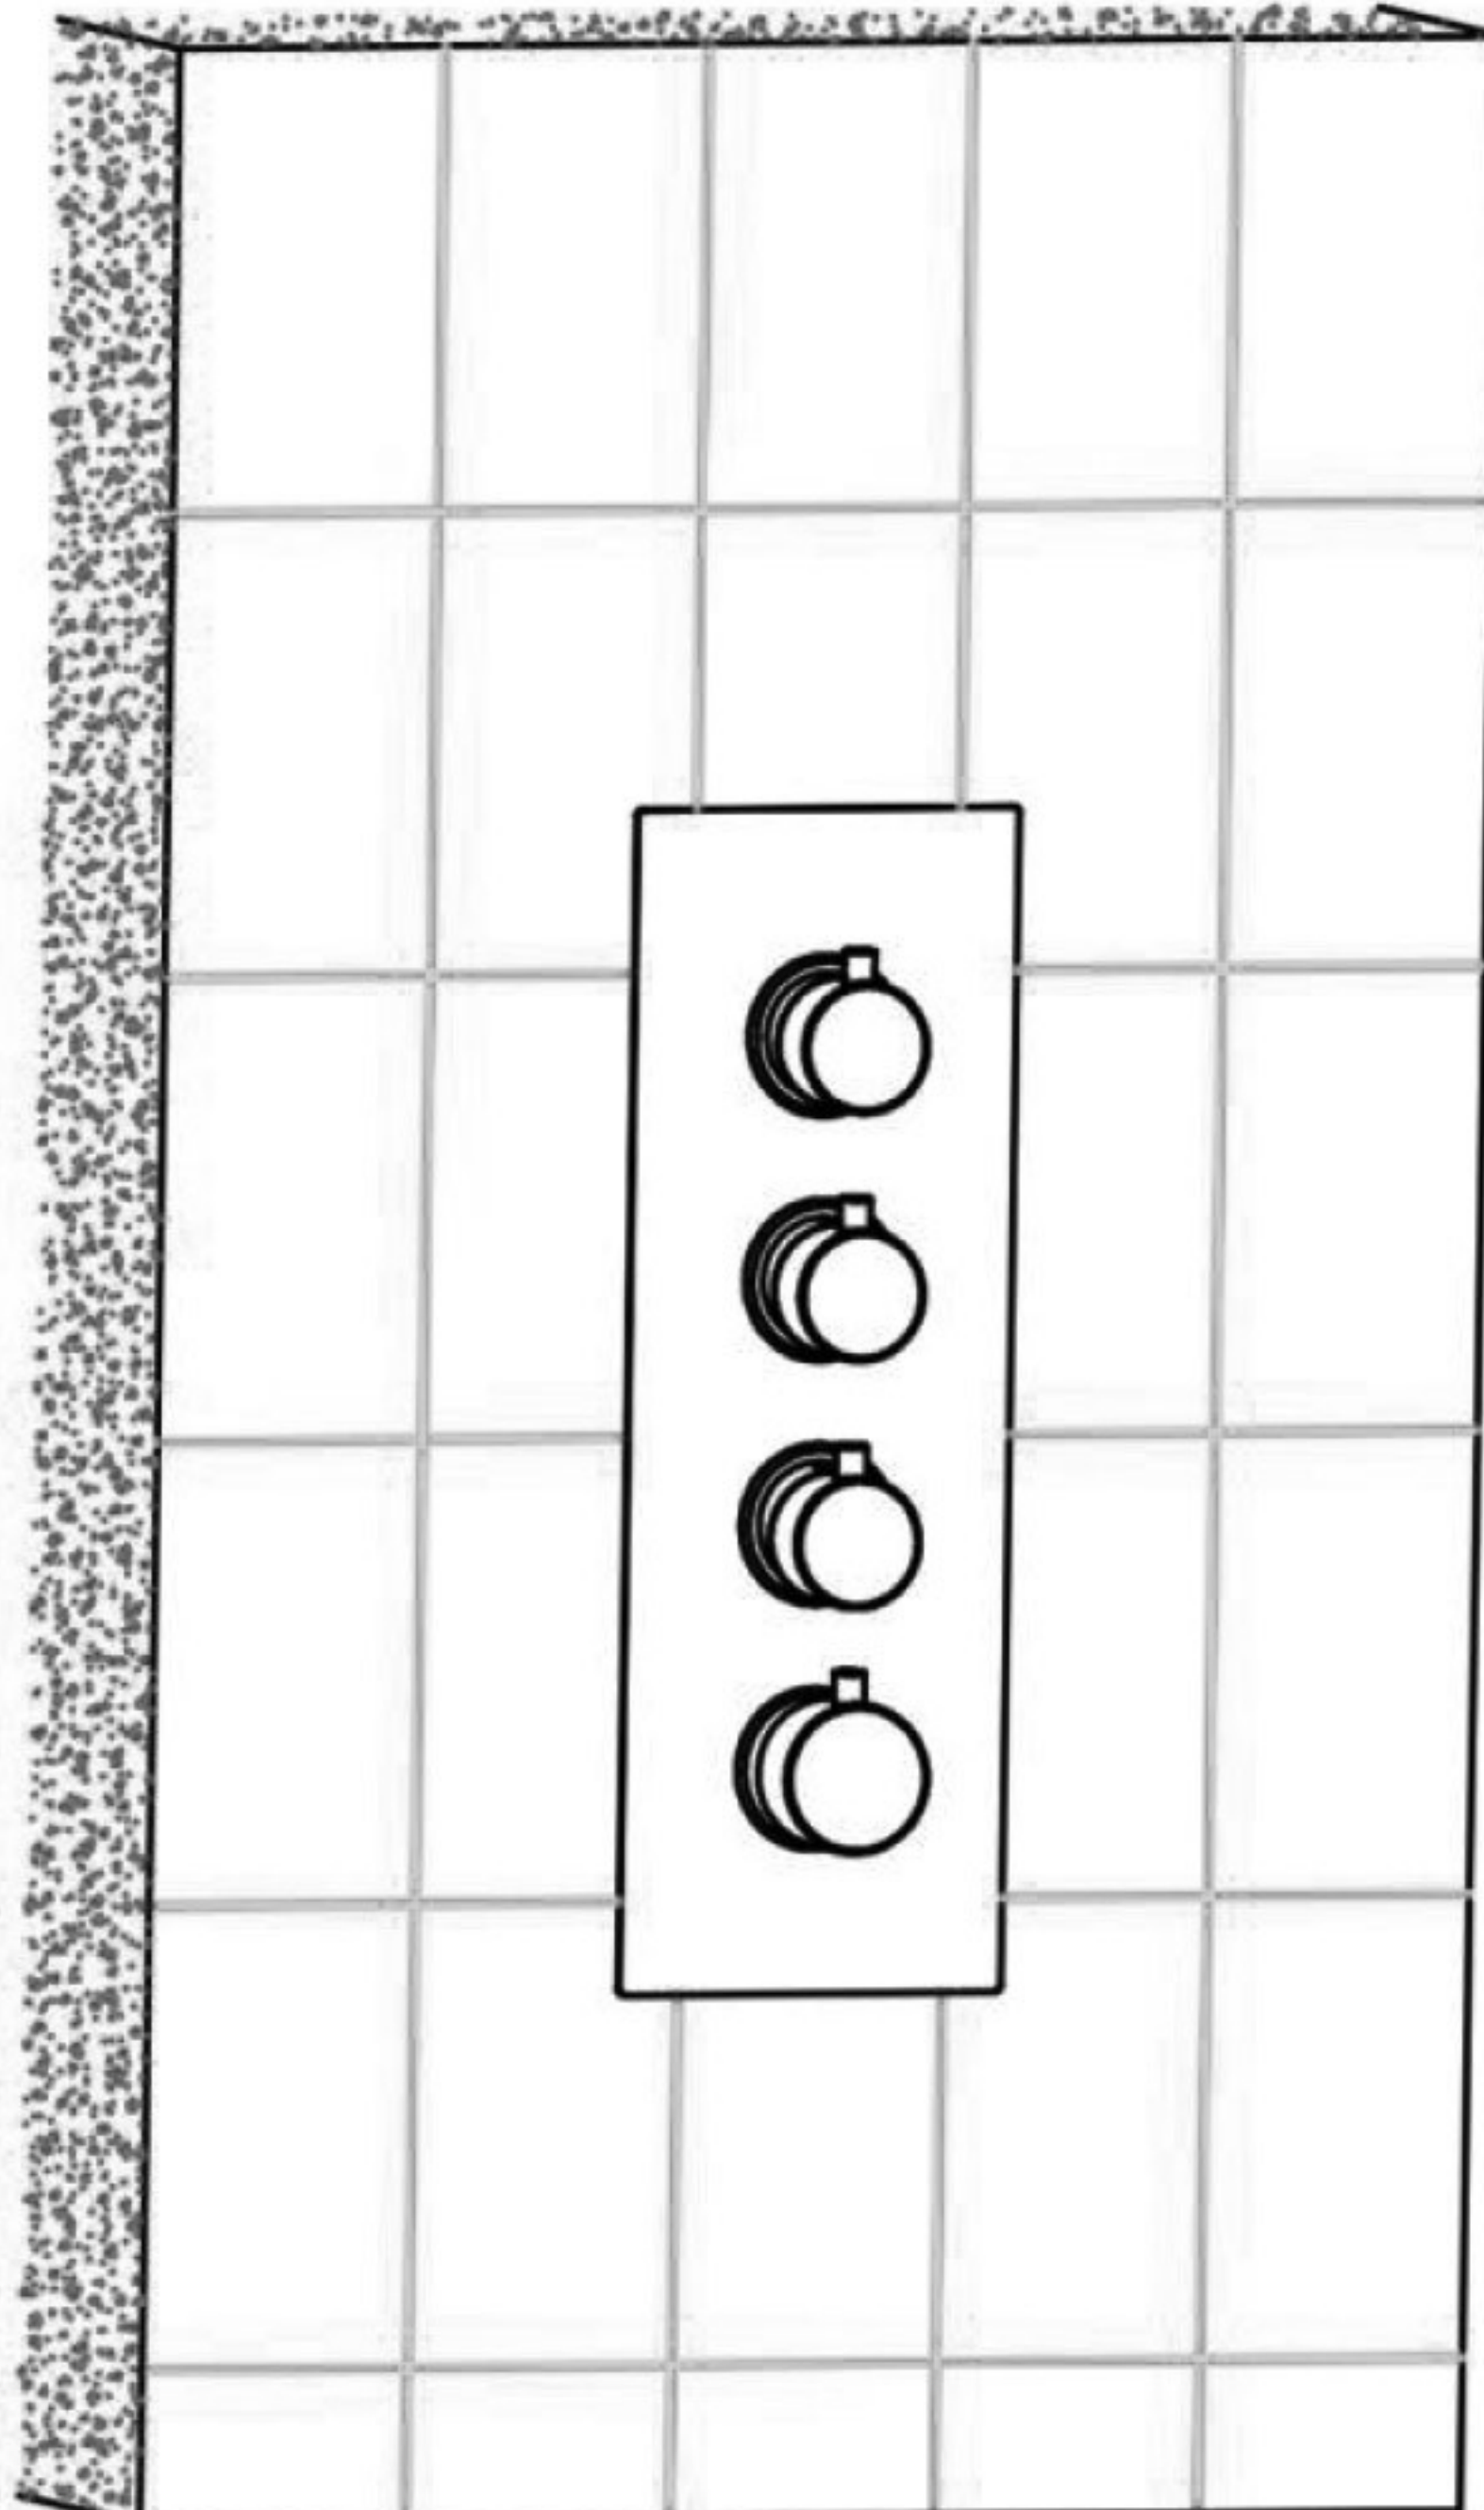
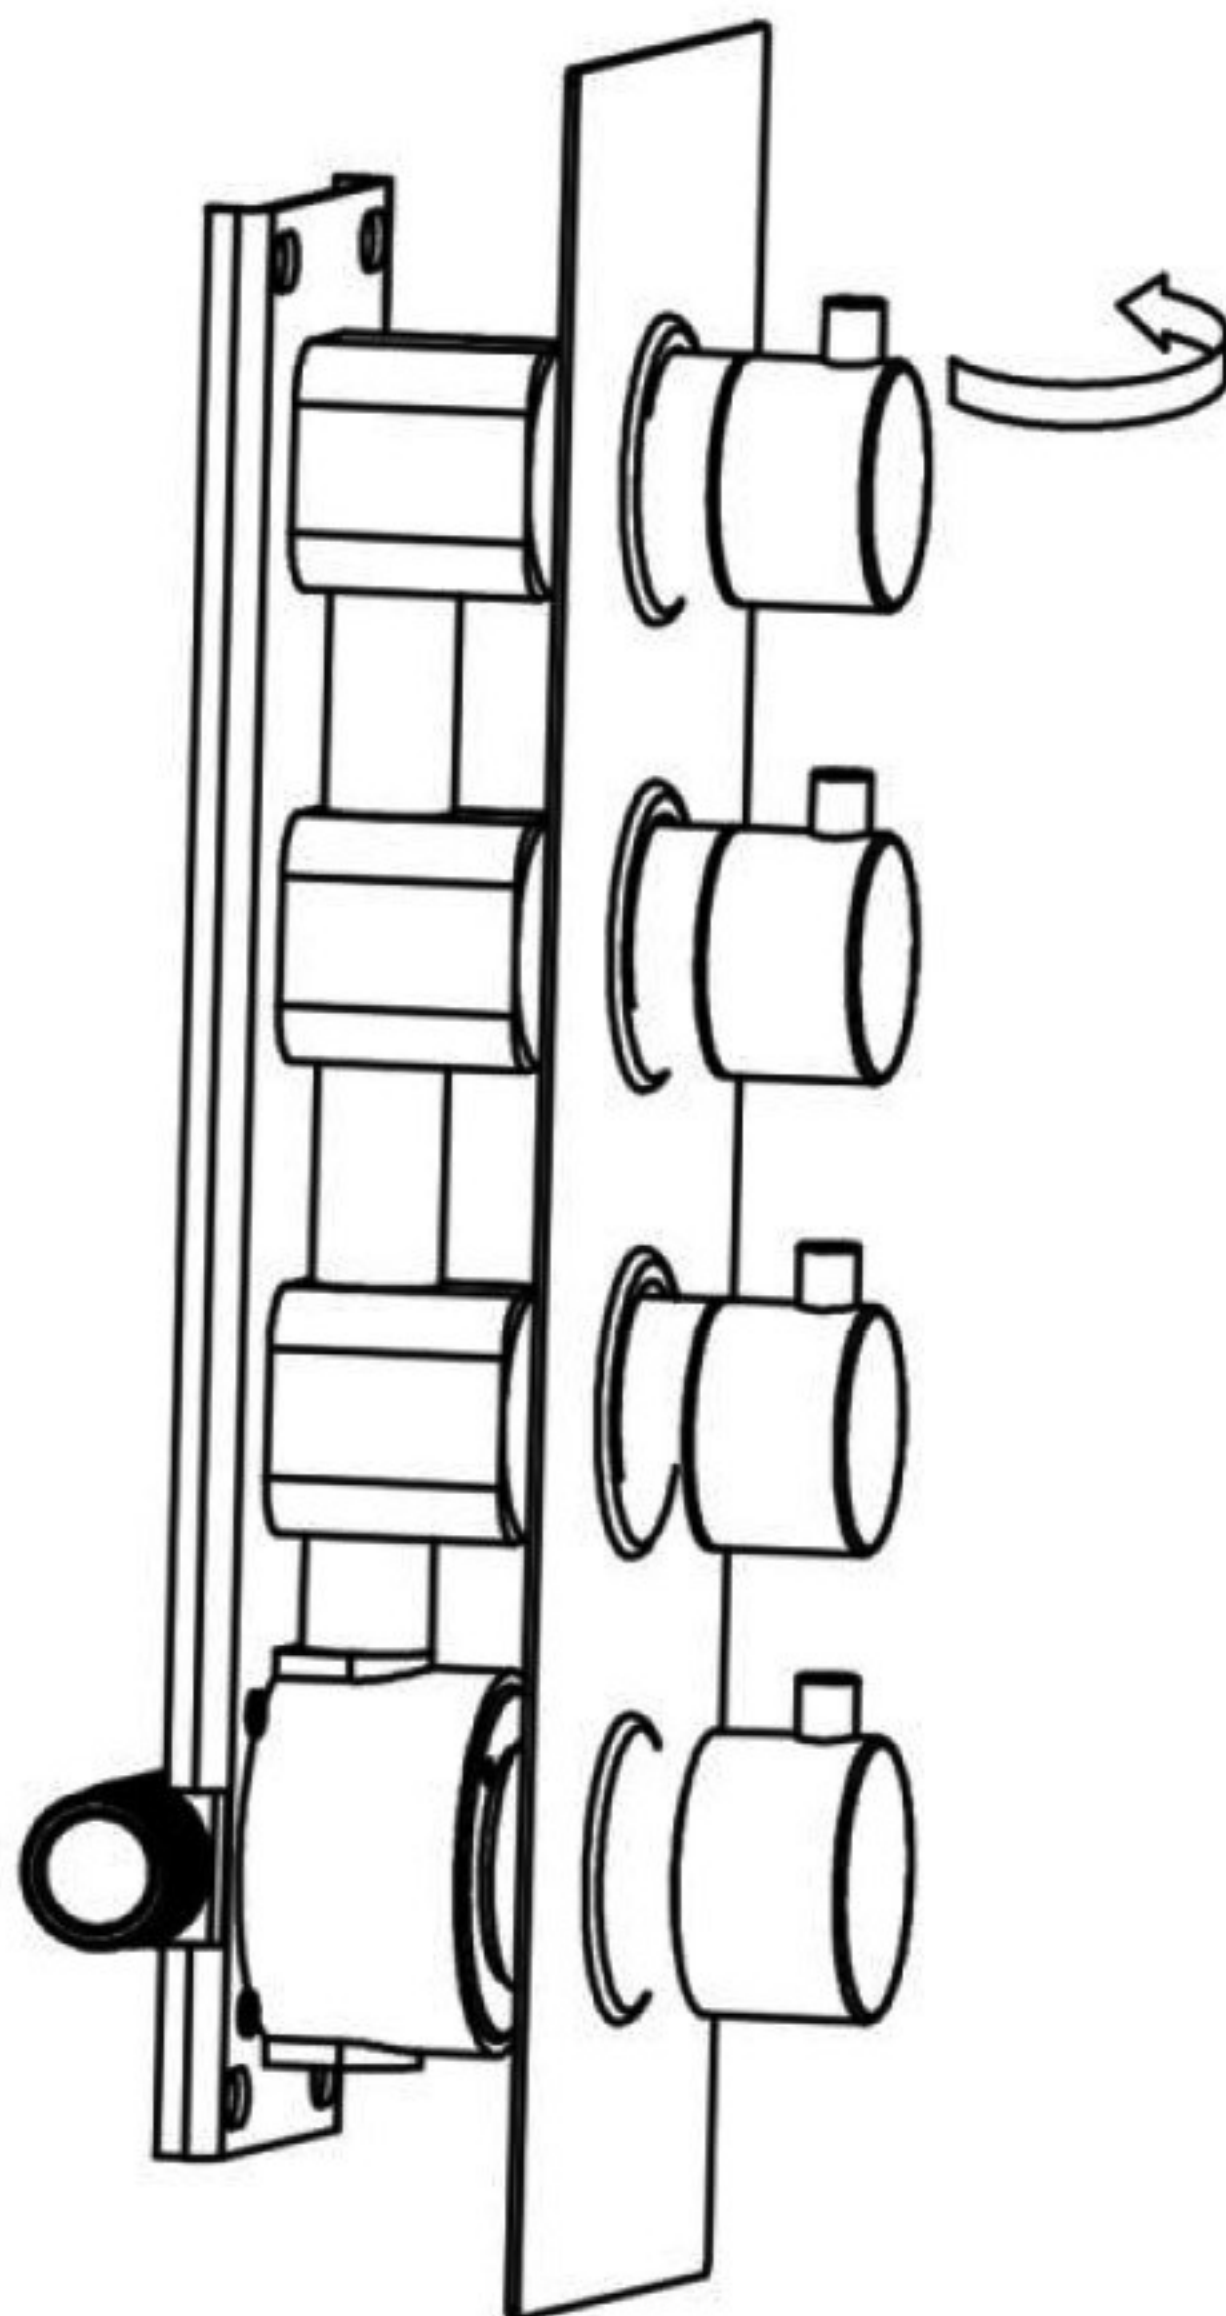
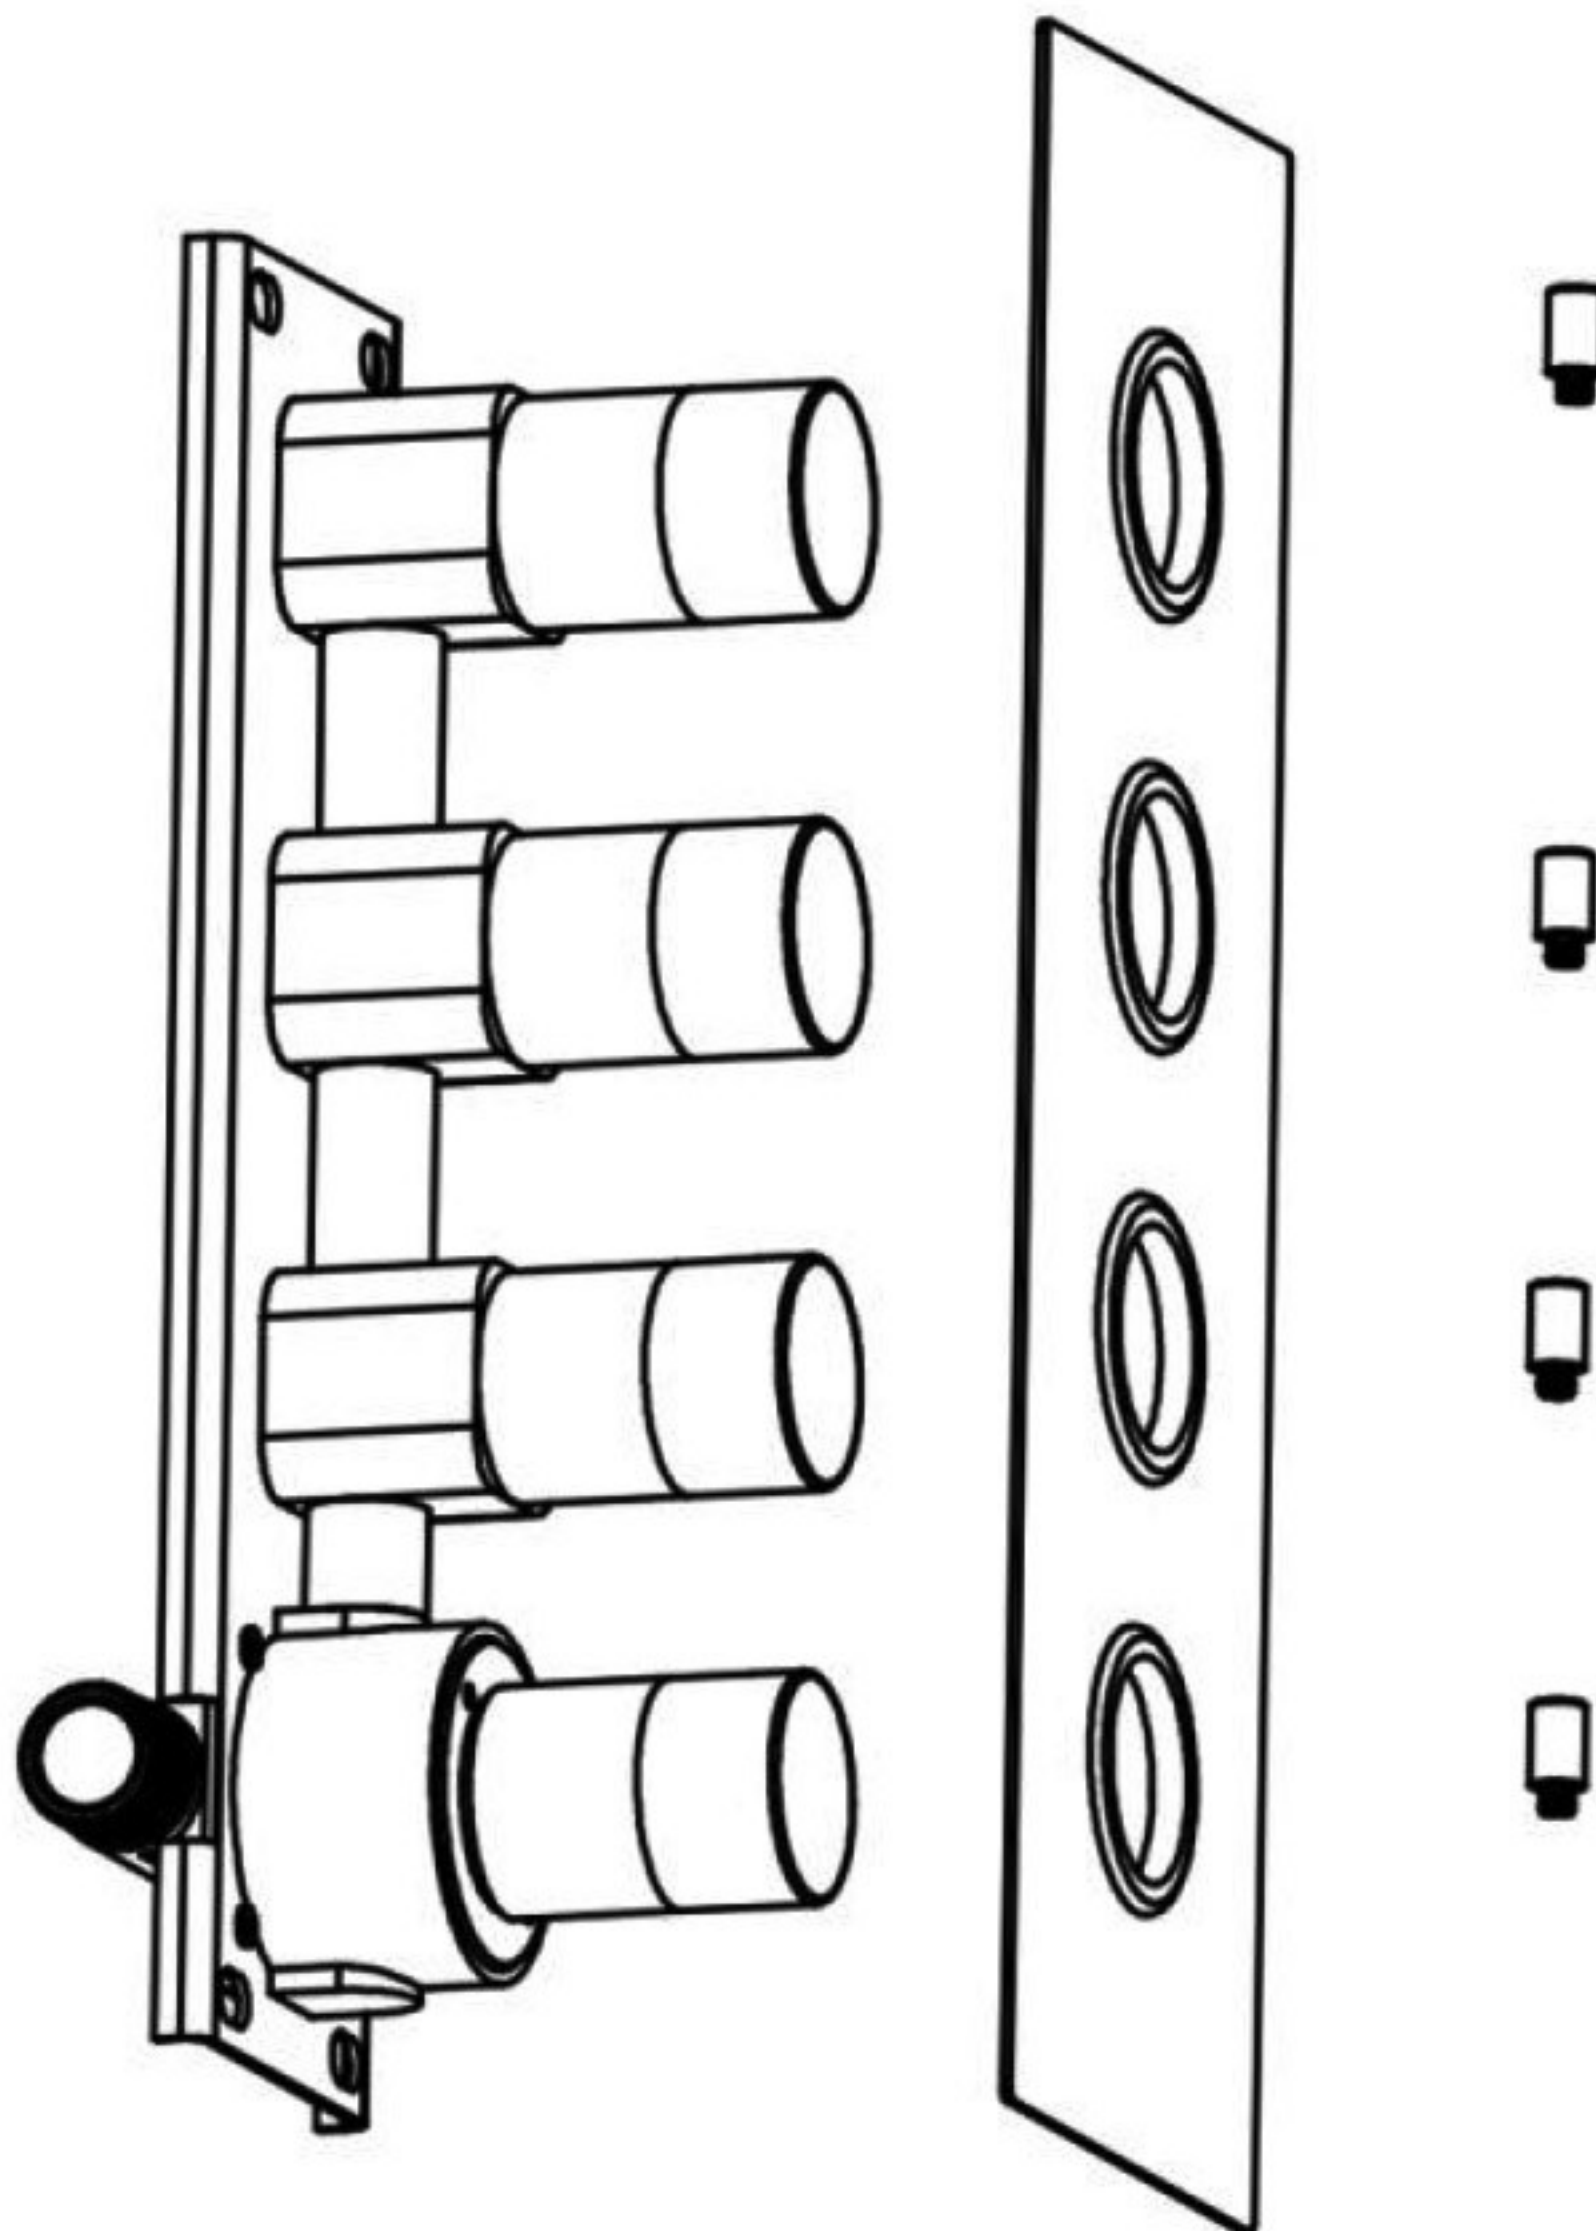


Wall Mounted Shower System Installation

Step 1 (Body Valve)


Parts List			Installation diagram																			
 (for North America) <table><tr><td>5</td><td>connector</td><td>5</td></tr><tr><td>4</td><td>expansion bolt</td><td>4</td></tr><tr><td>3</td><td>board</td><td>1</td></tr><tr><td>2</td><td>handle</td><td>4</td></tr><tr><td>1</td><td>faucet body</td><td>1</td></tr><tr><td>NO.</td><td>Name</td><td>Quantity</td></tr></table> 			5	connector	5	4	expansion bolt	4	3	board	1	2	handle	4	1	faucet body	1	NO.	Name	Quantity		
5	connector	5																				
4	expansion bolt	4																				
3	board	1																				
2	handle	4																				
1	faucet body	1																				
NO.	Name	Quantity																				
																						
1.Please screw the handles out according to the above direction.			2.Take board and four handles out of the faucet body																			

3

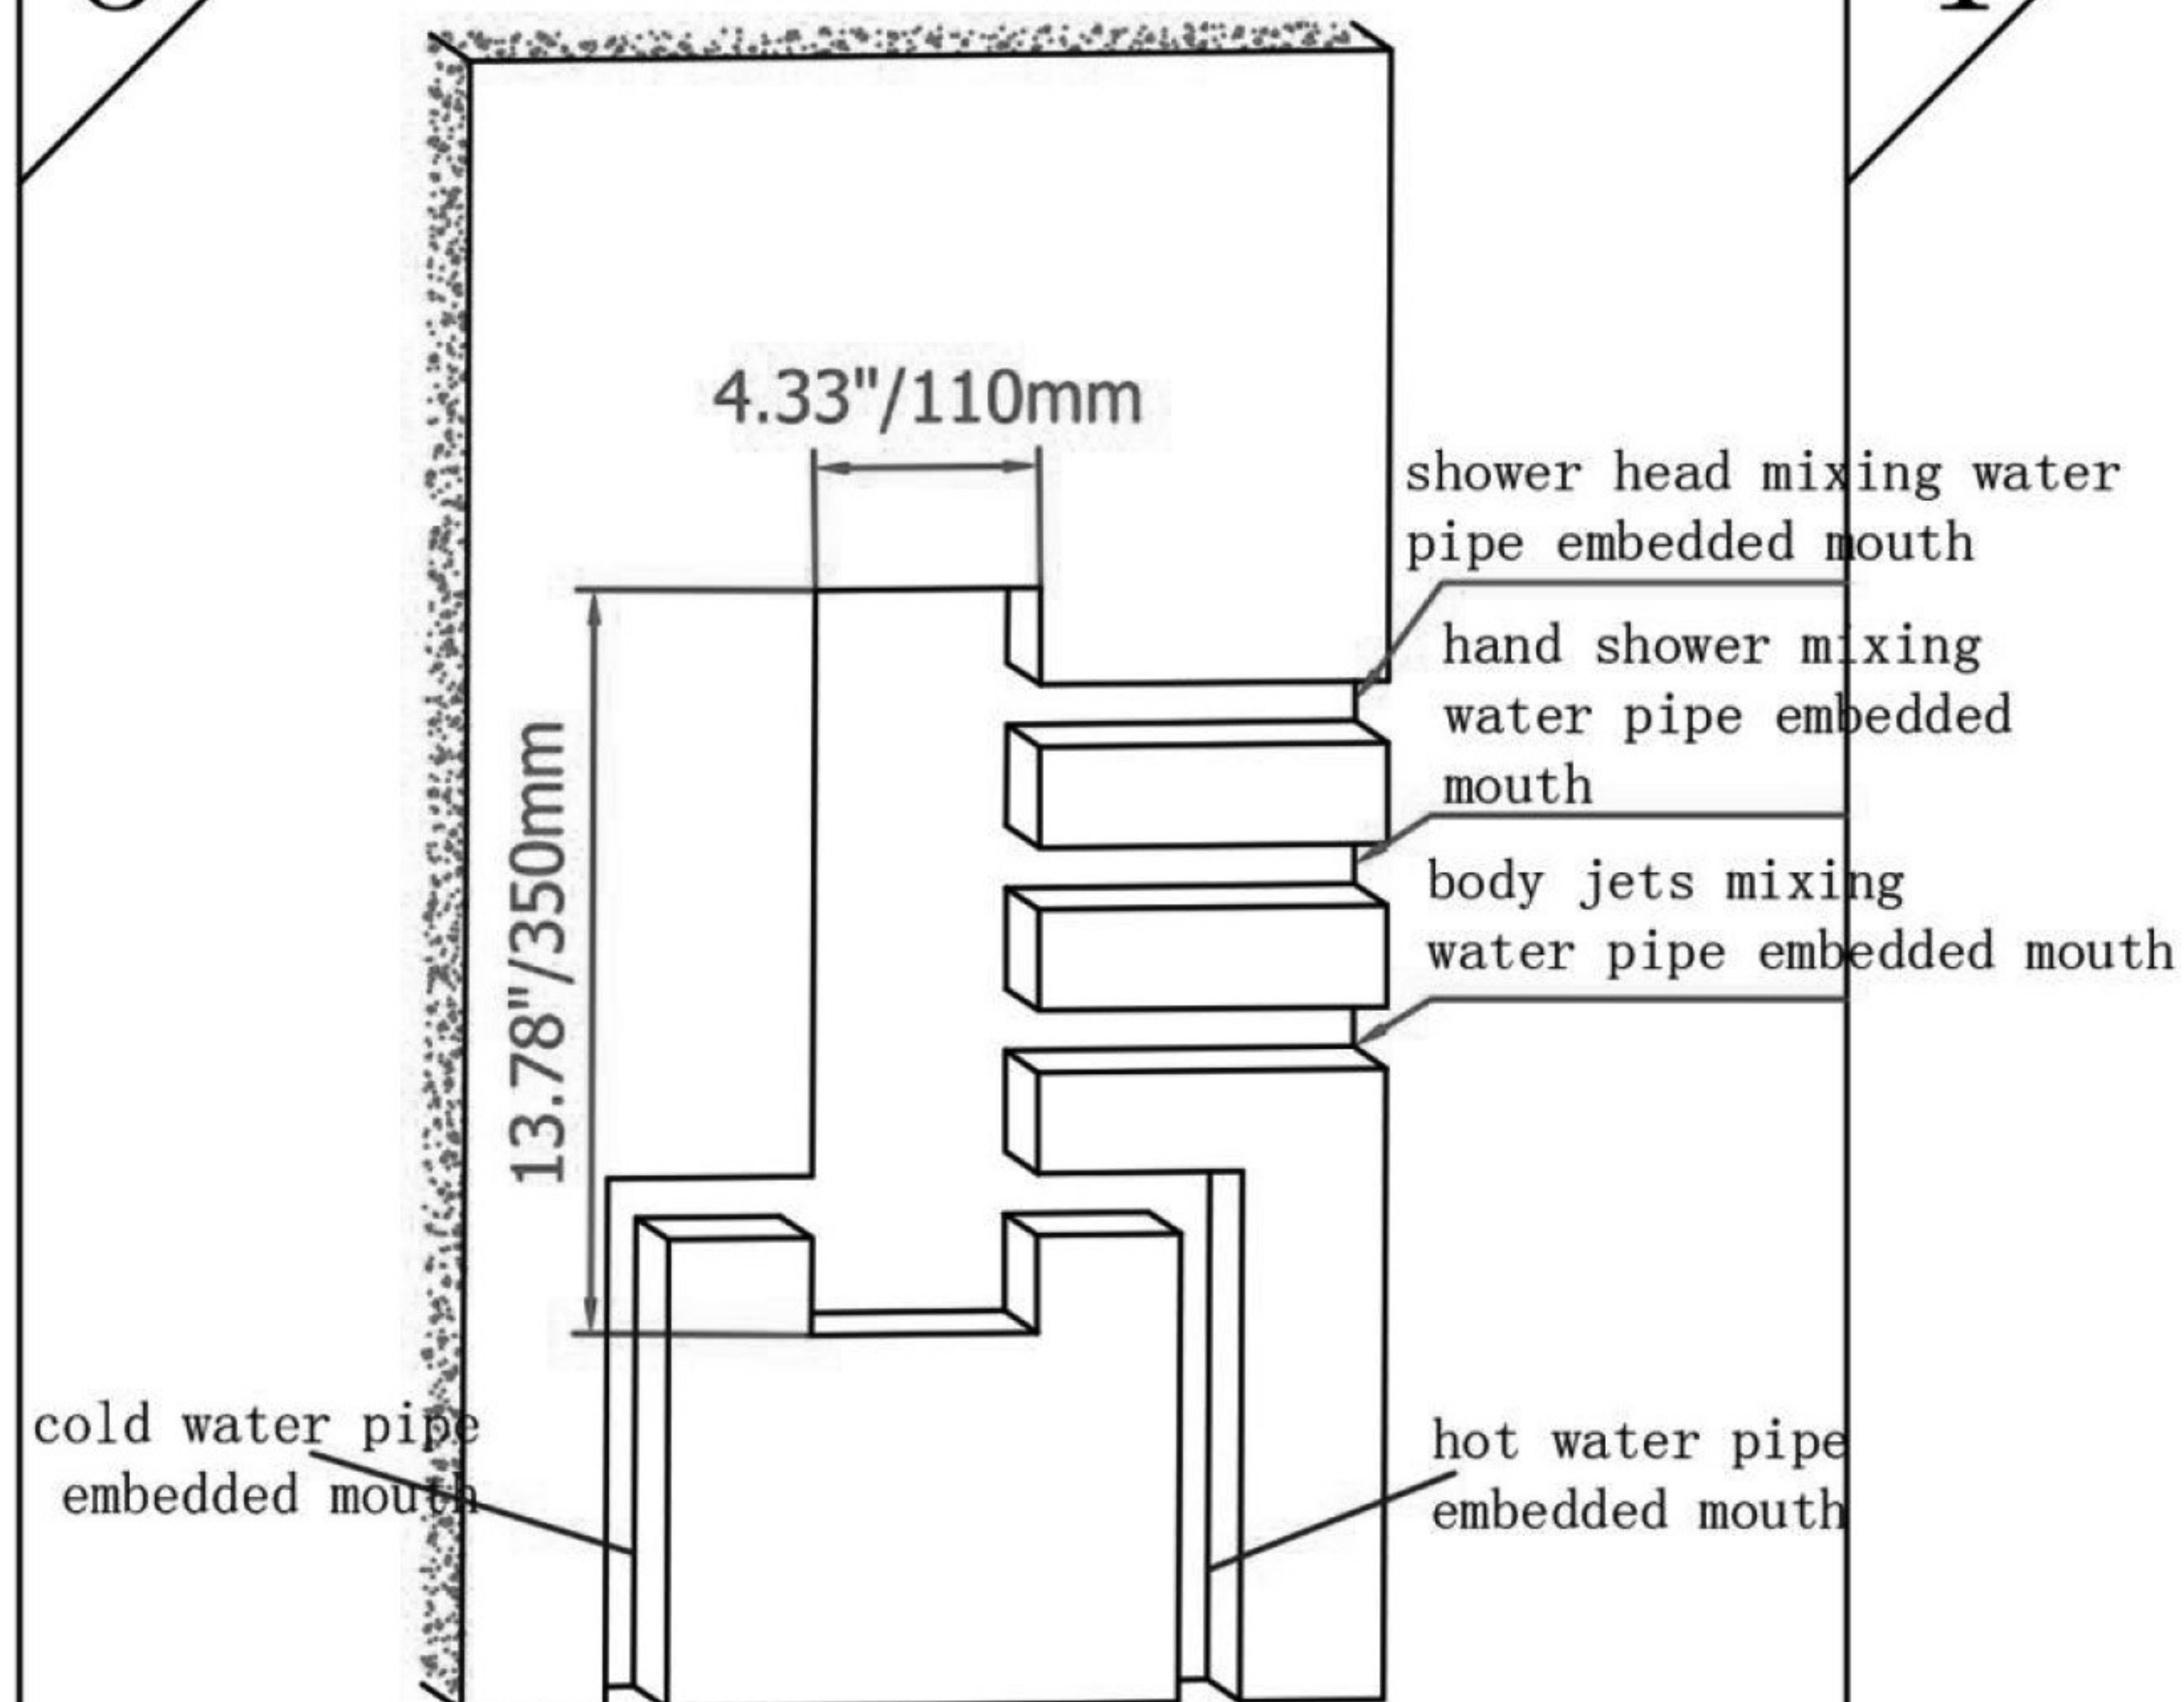


3. According to the actual size, get all pipe embedded mounts well ready.

4

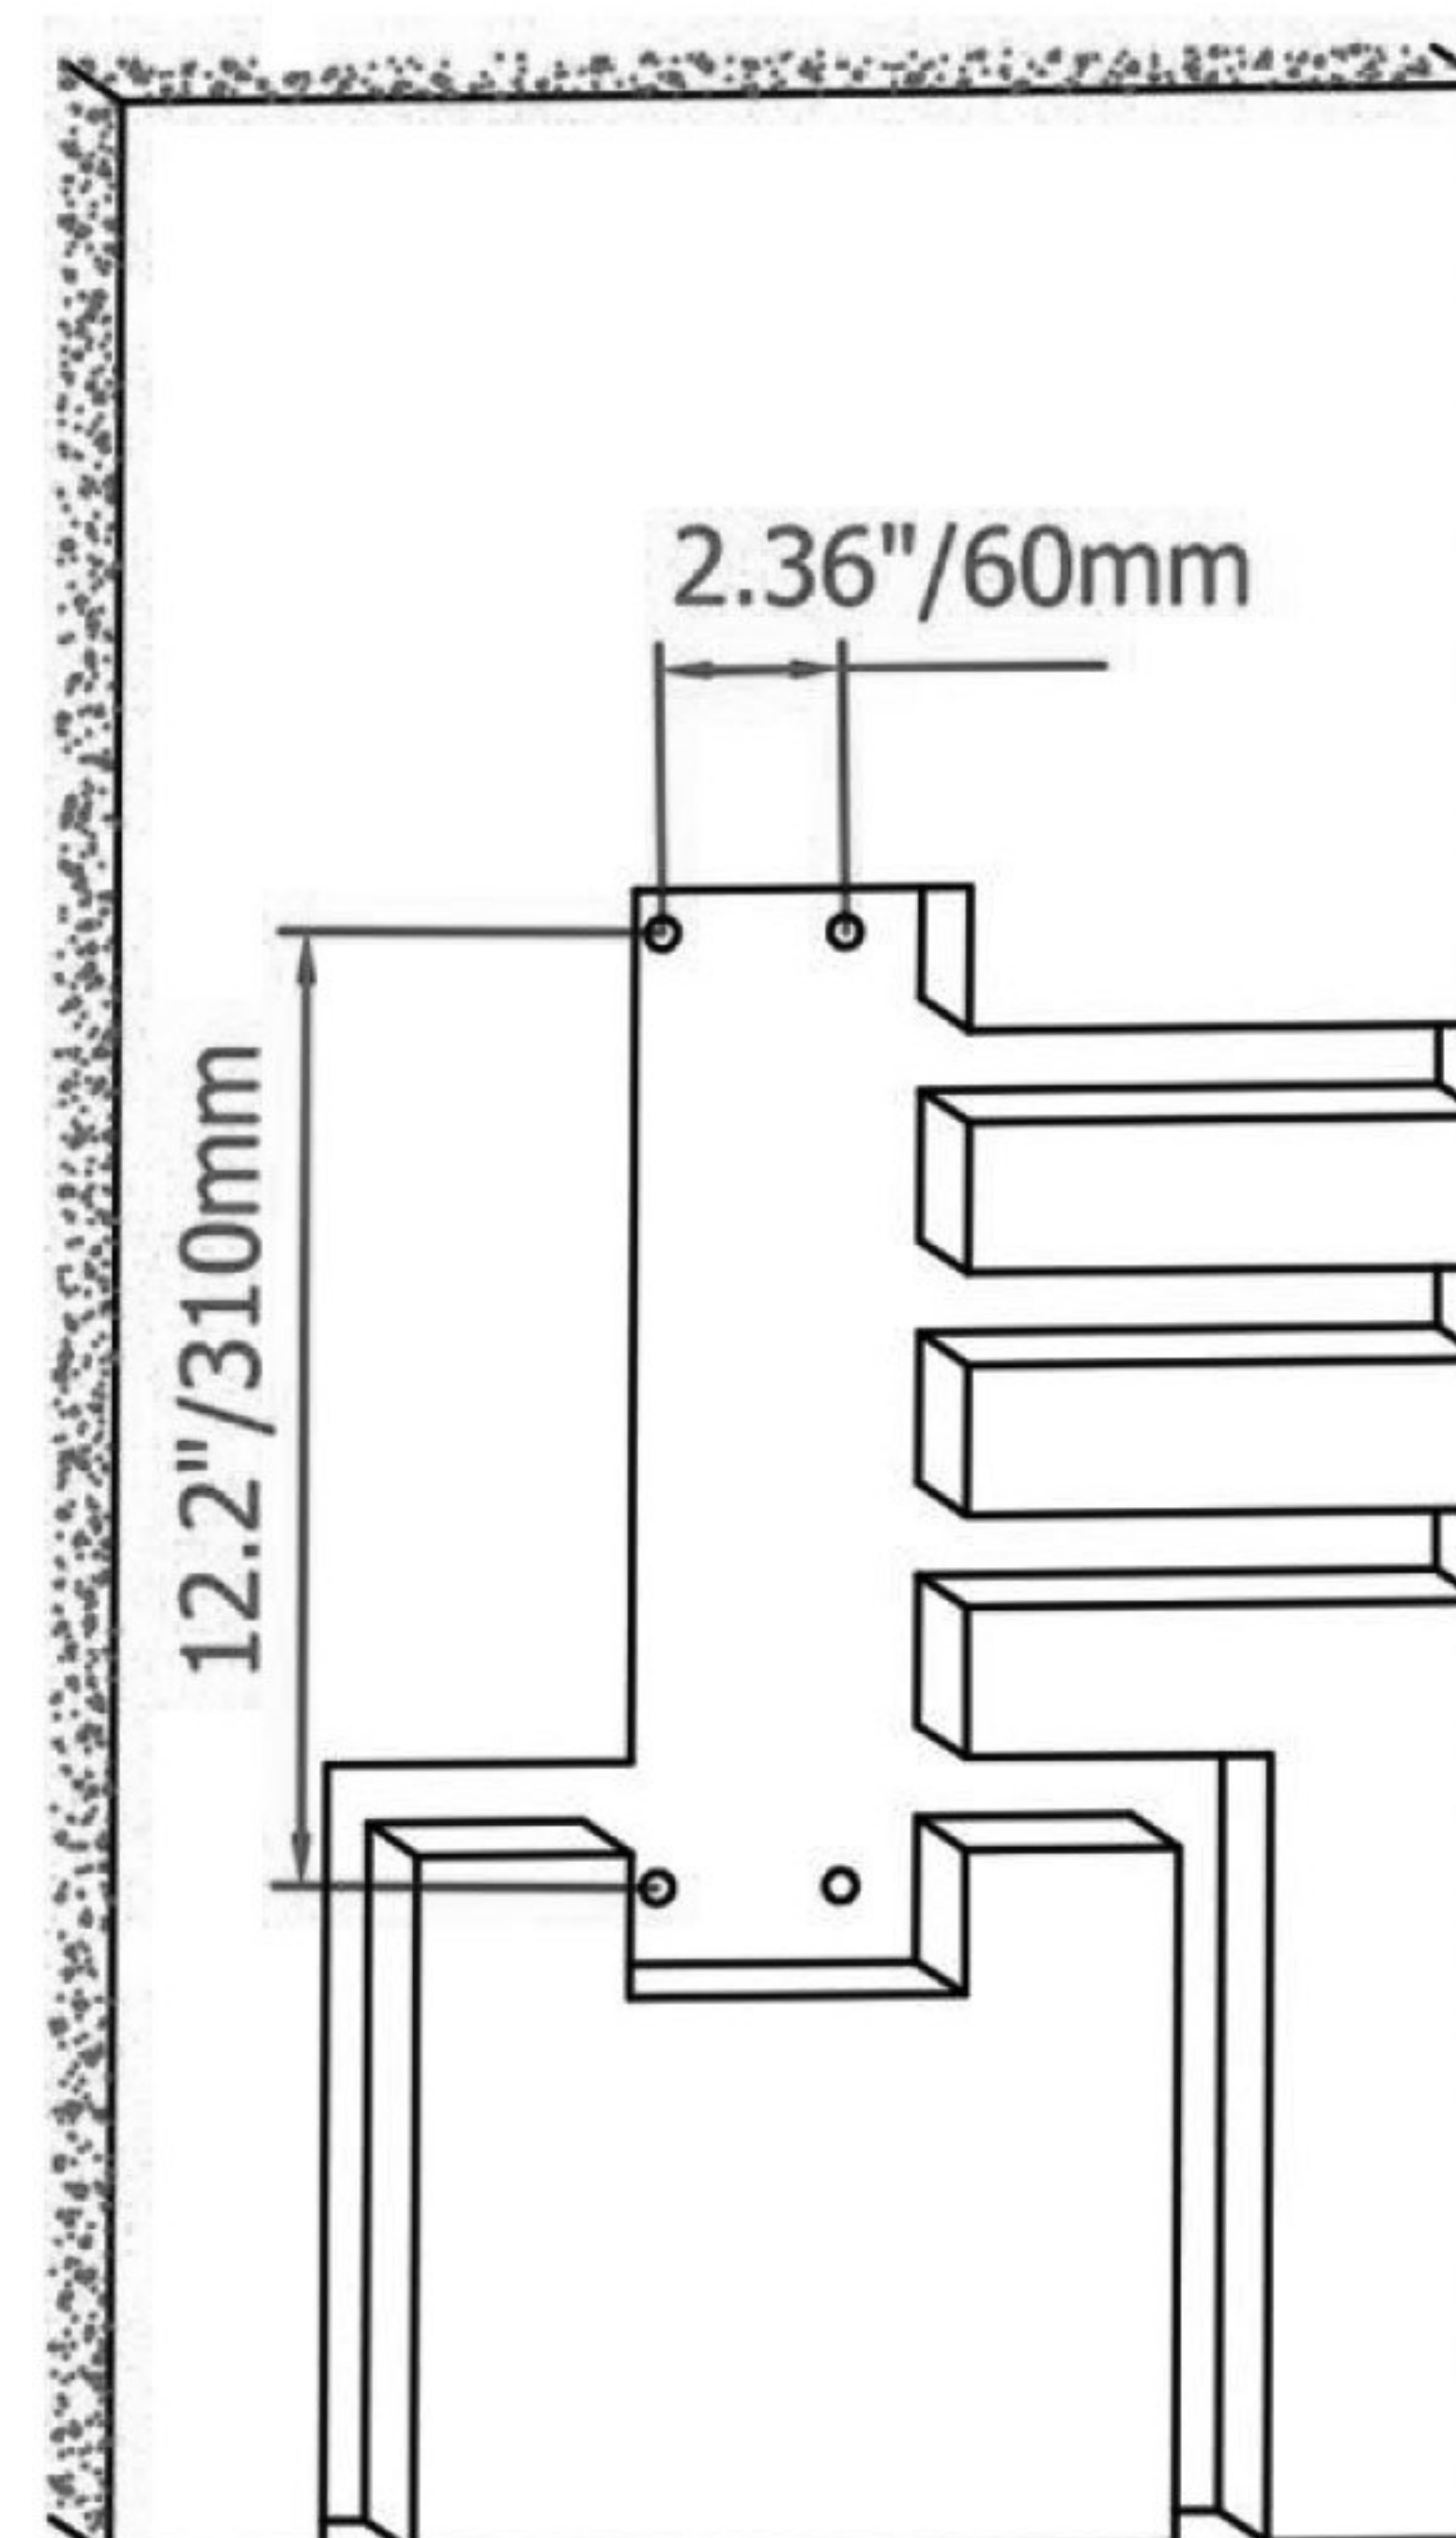


4. According to the product basic size, dig four $\varnothing 10$ holes on the ideal place of the wall.

5

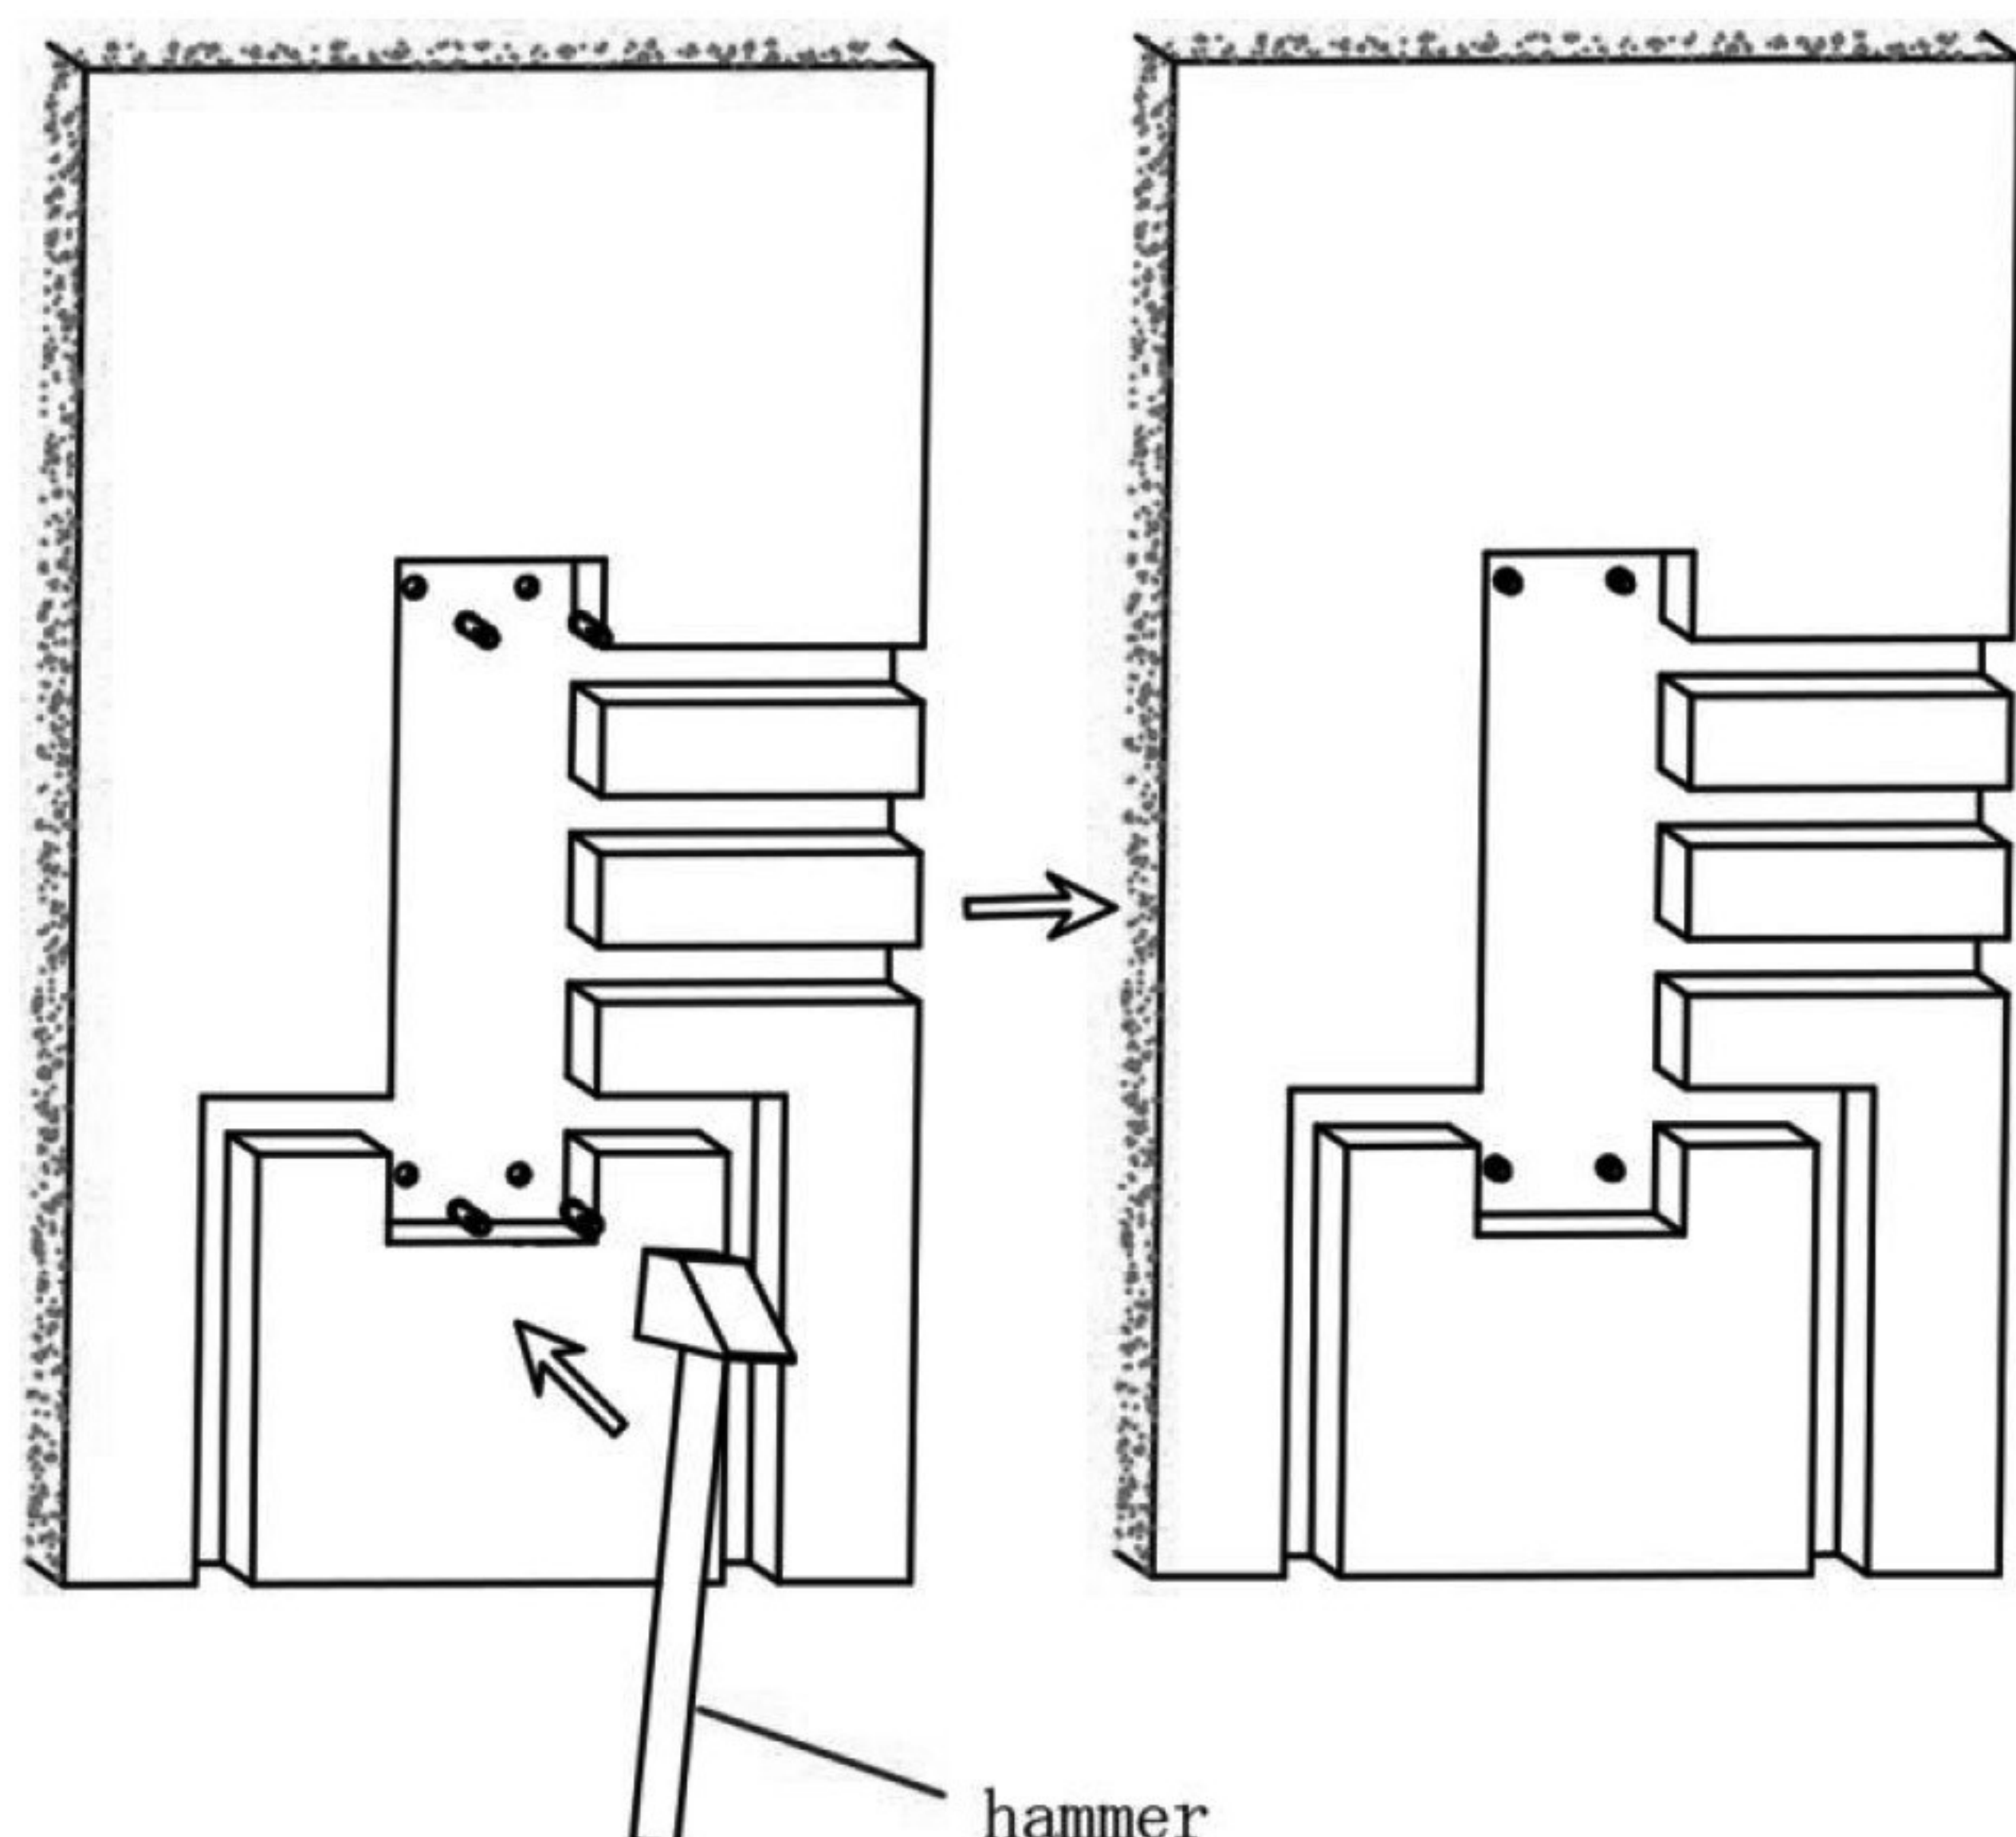


5. Place 4 tapping screws into the holes using hammer.

6

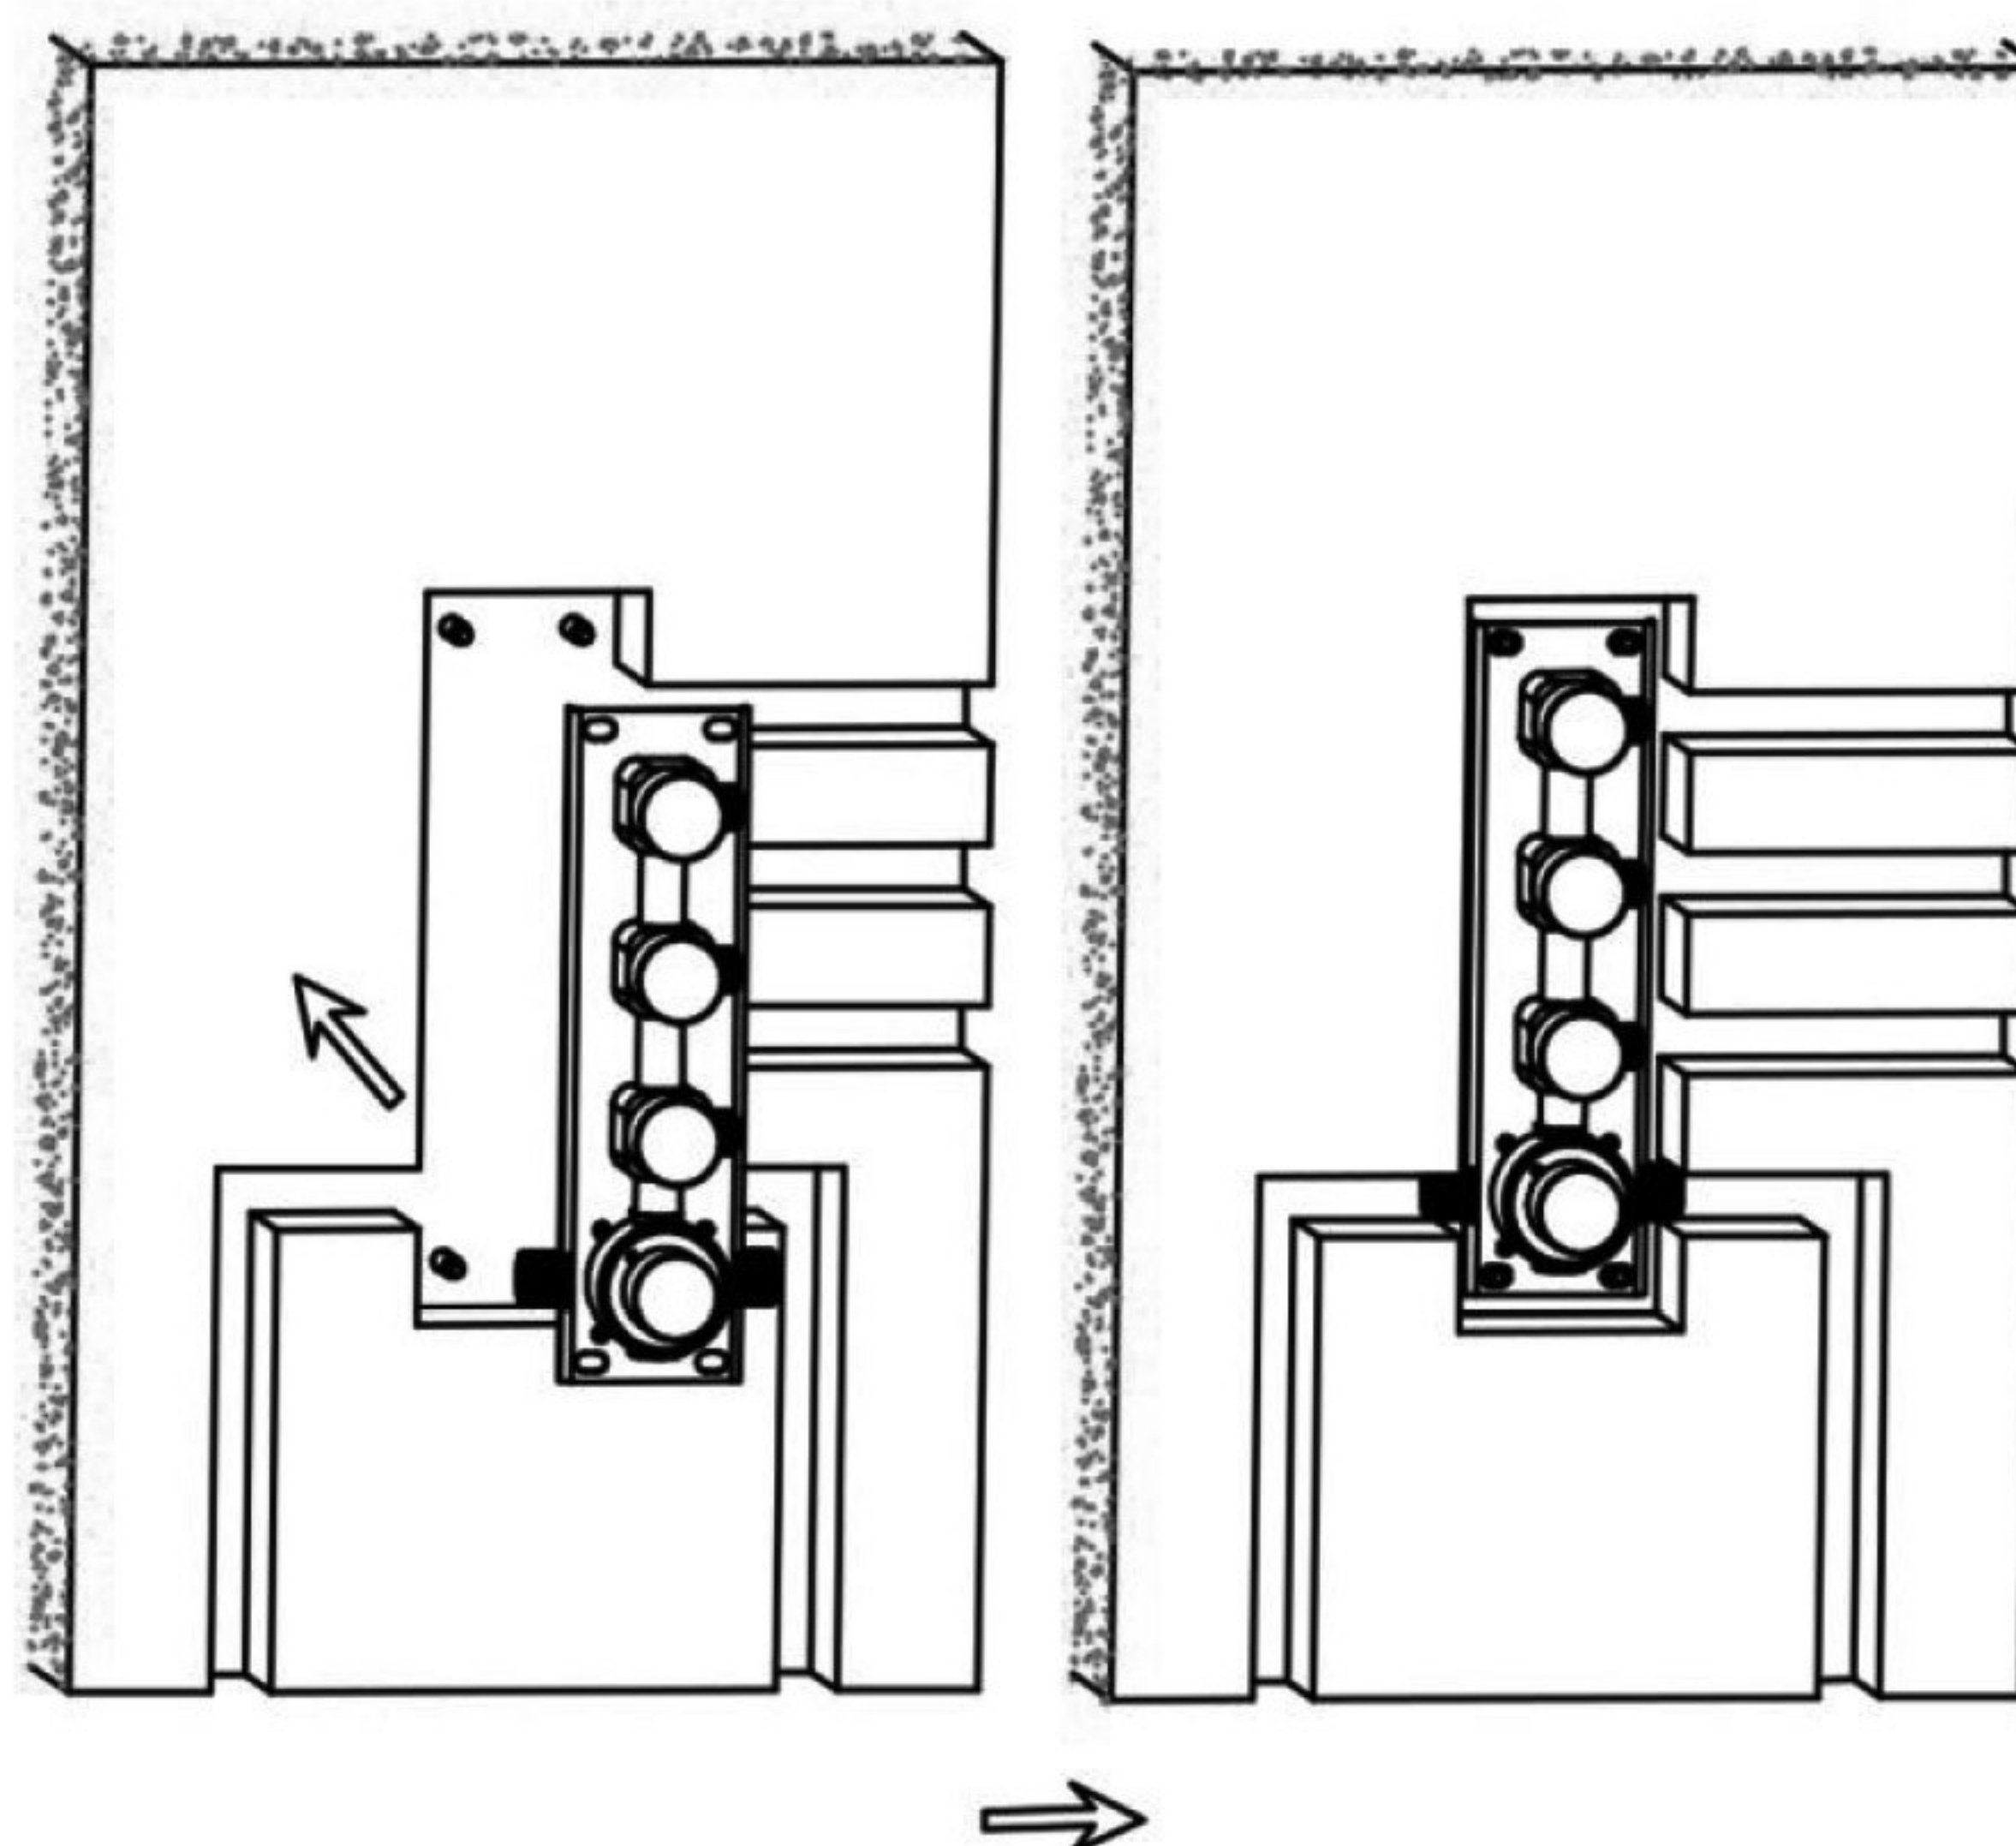


6. Screw the G thread end (without the plastic cover) of the adapter to the faucet body. (only for North America)
Fix the faucet body by hand. And then take it into the four tapping screws.

7

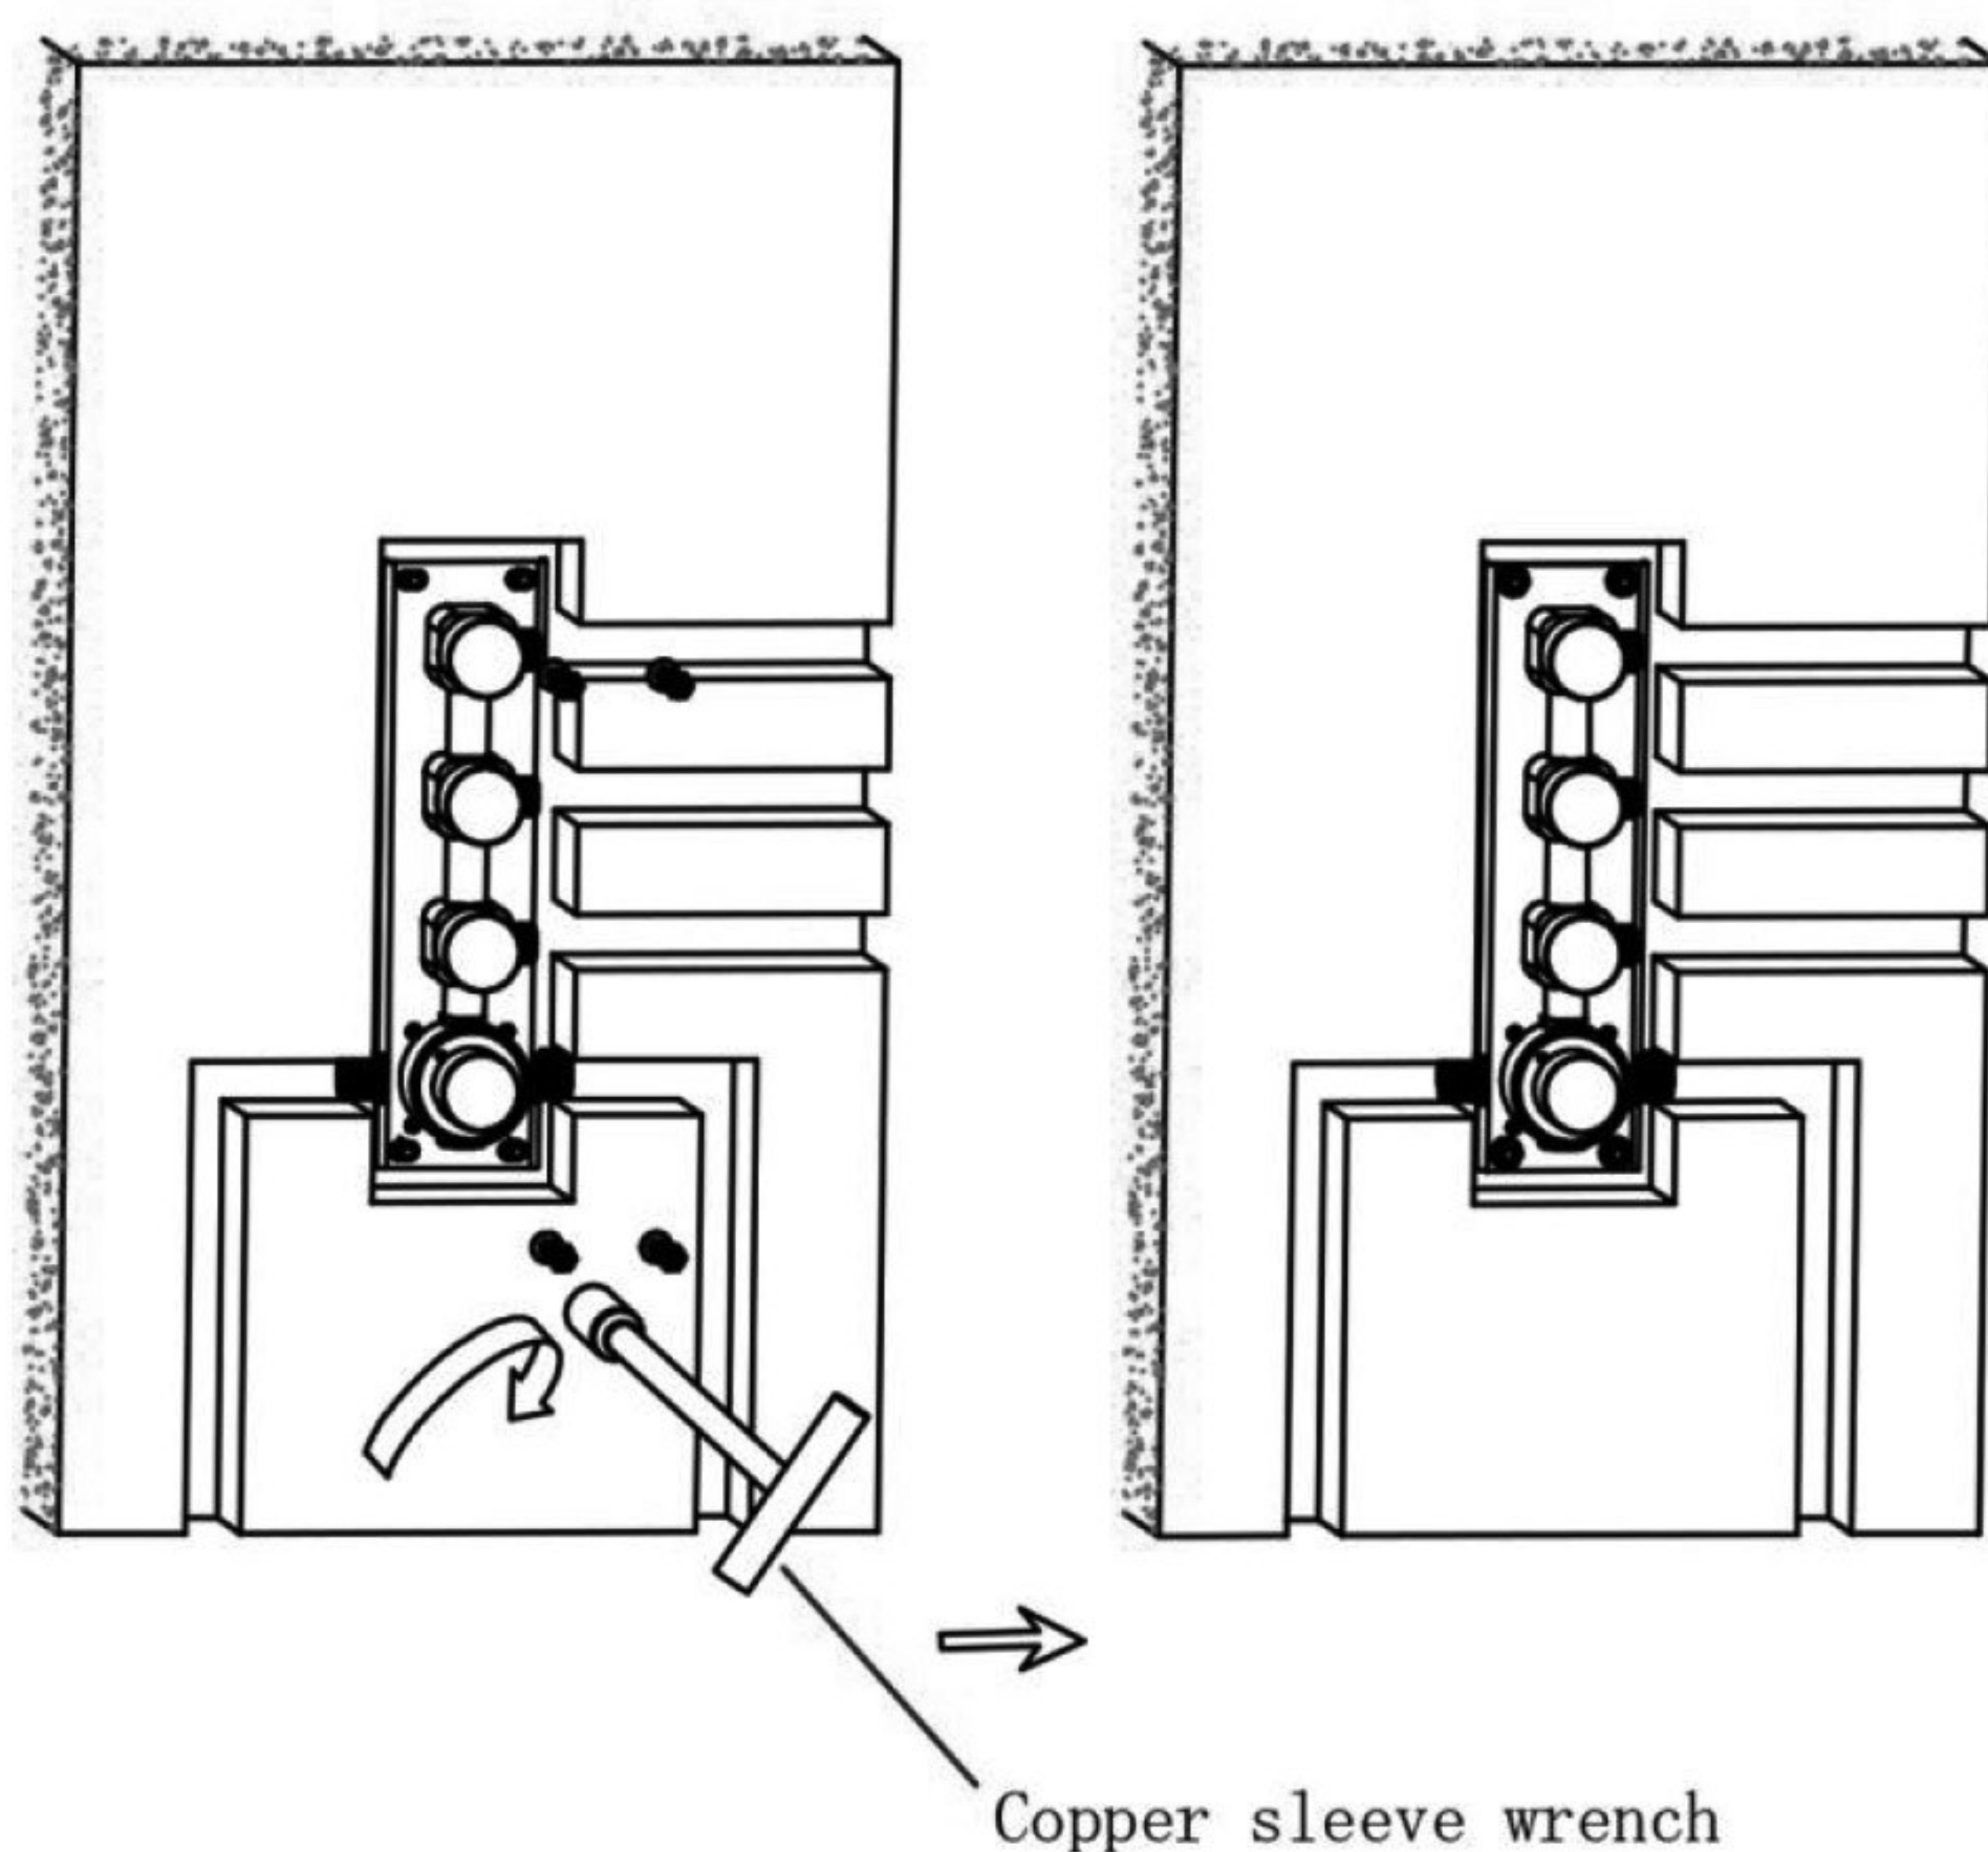


7. Take gaskets and spring gaskets onto the tapping screws. And then lock the nuts by copper sleeve wrench.

8

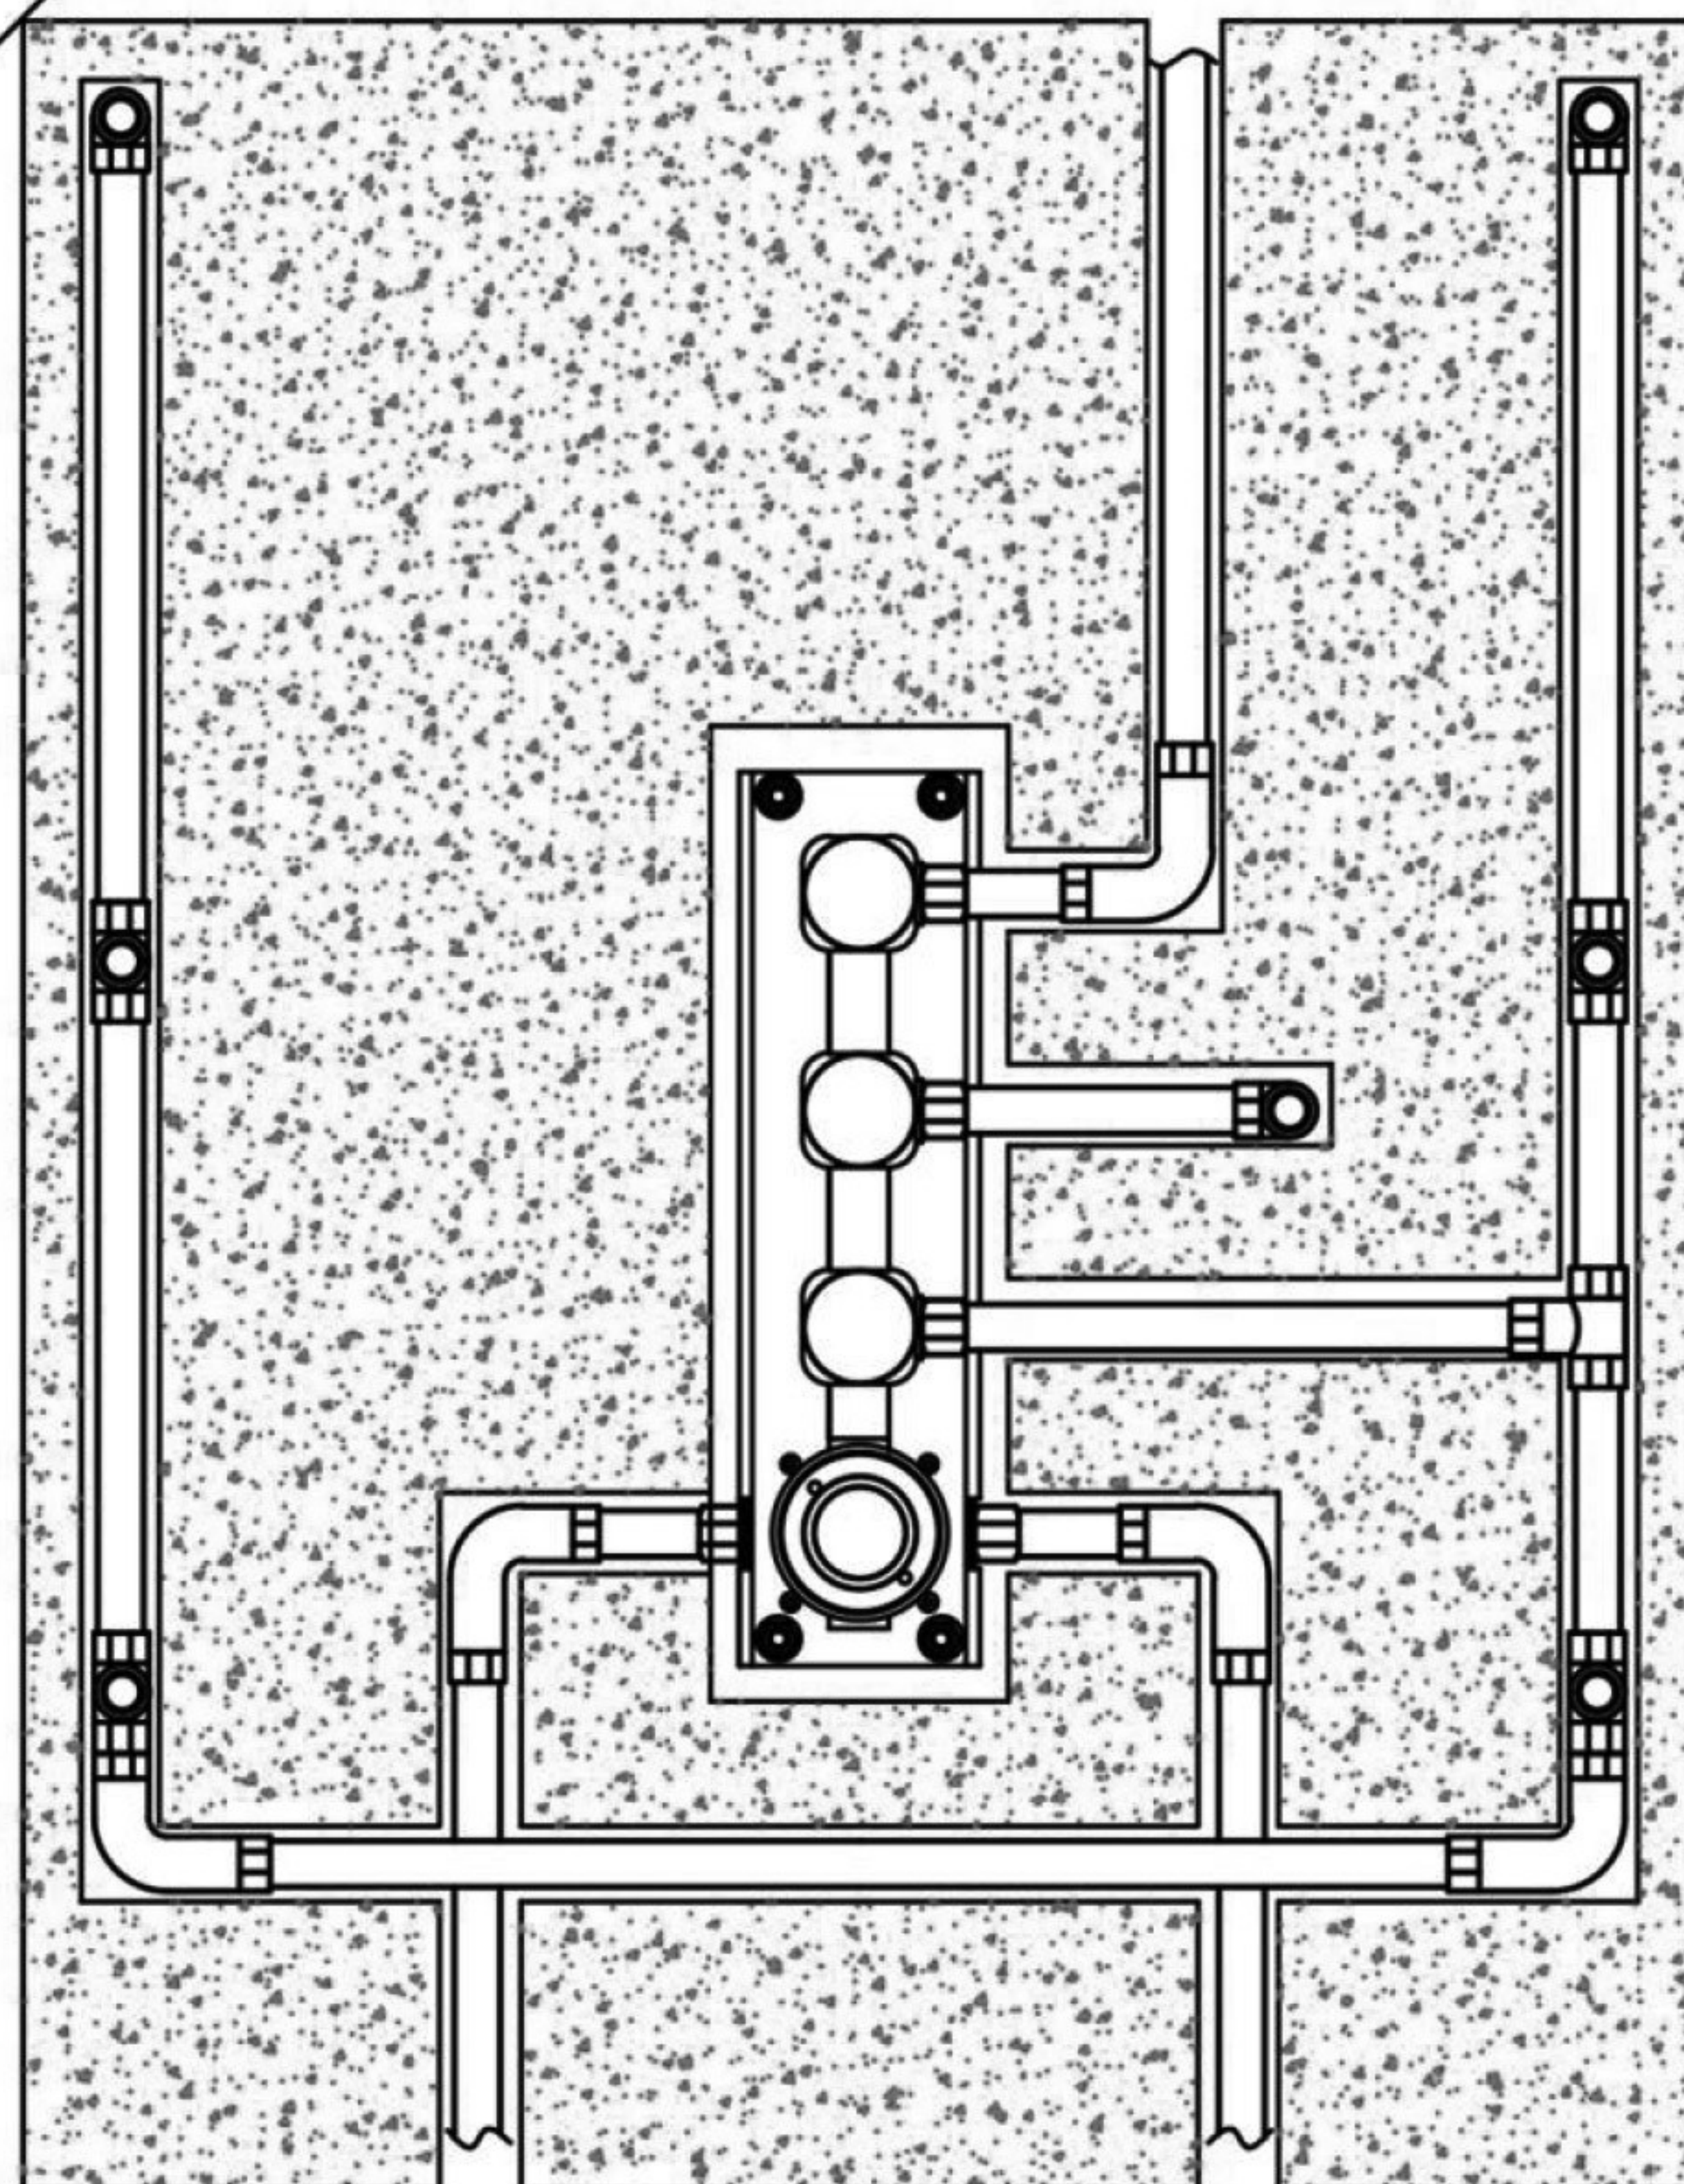


8. Connect hot & cold supply water pipes (not provided) and other water pipes. After that, open the water to test if all pipes have leakage or not. At last, seal the wall.

9


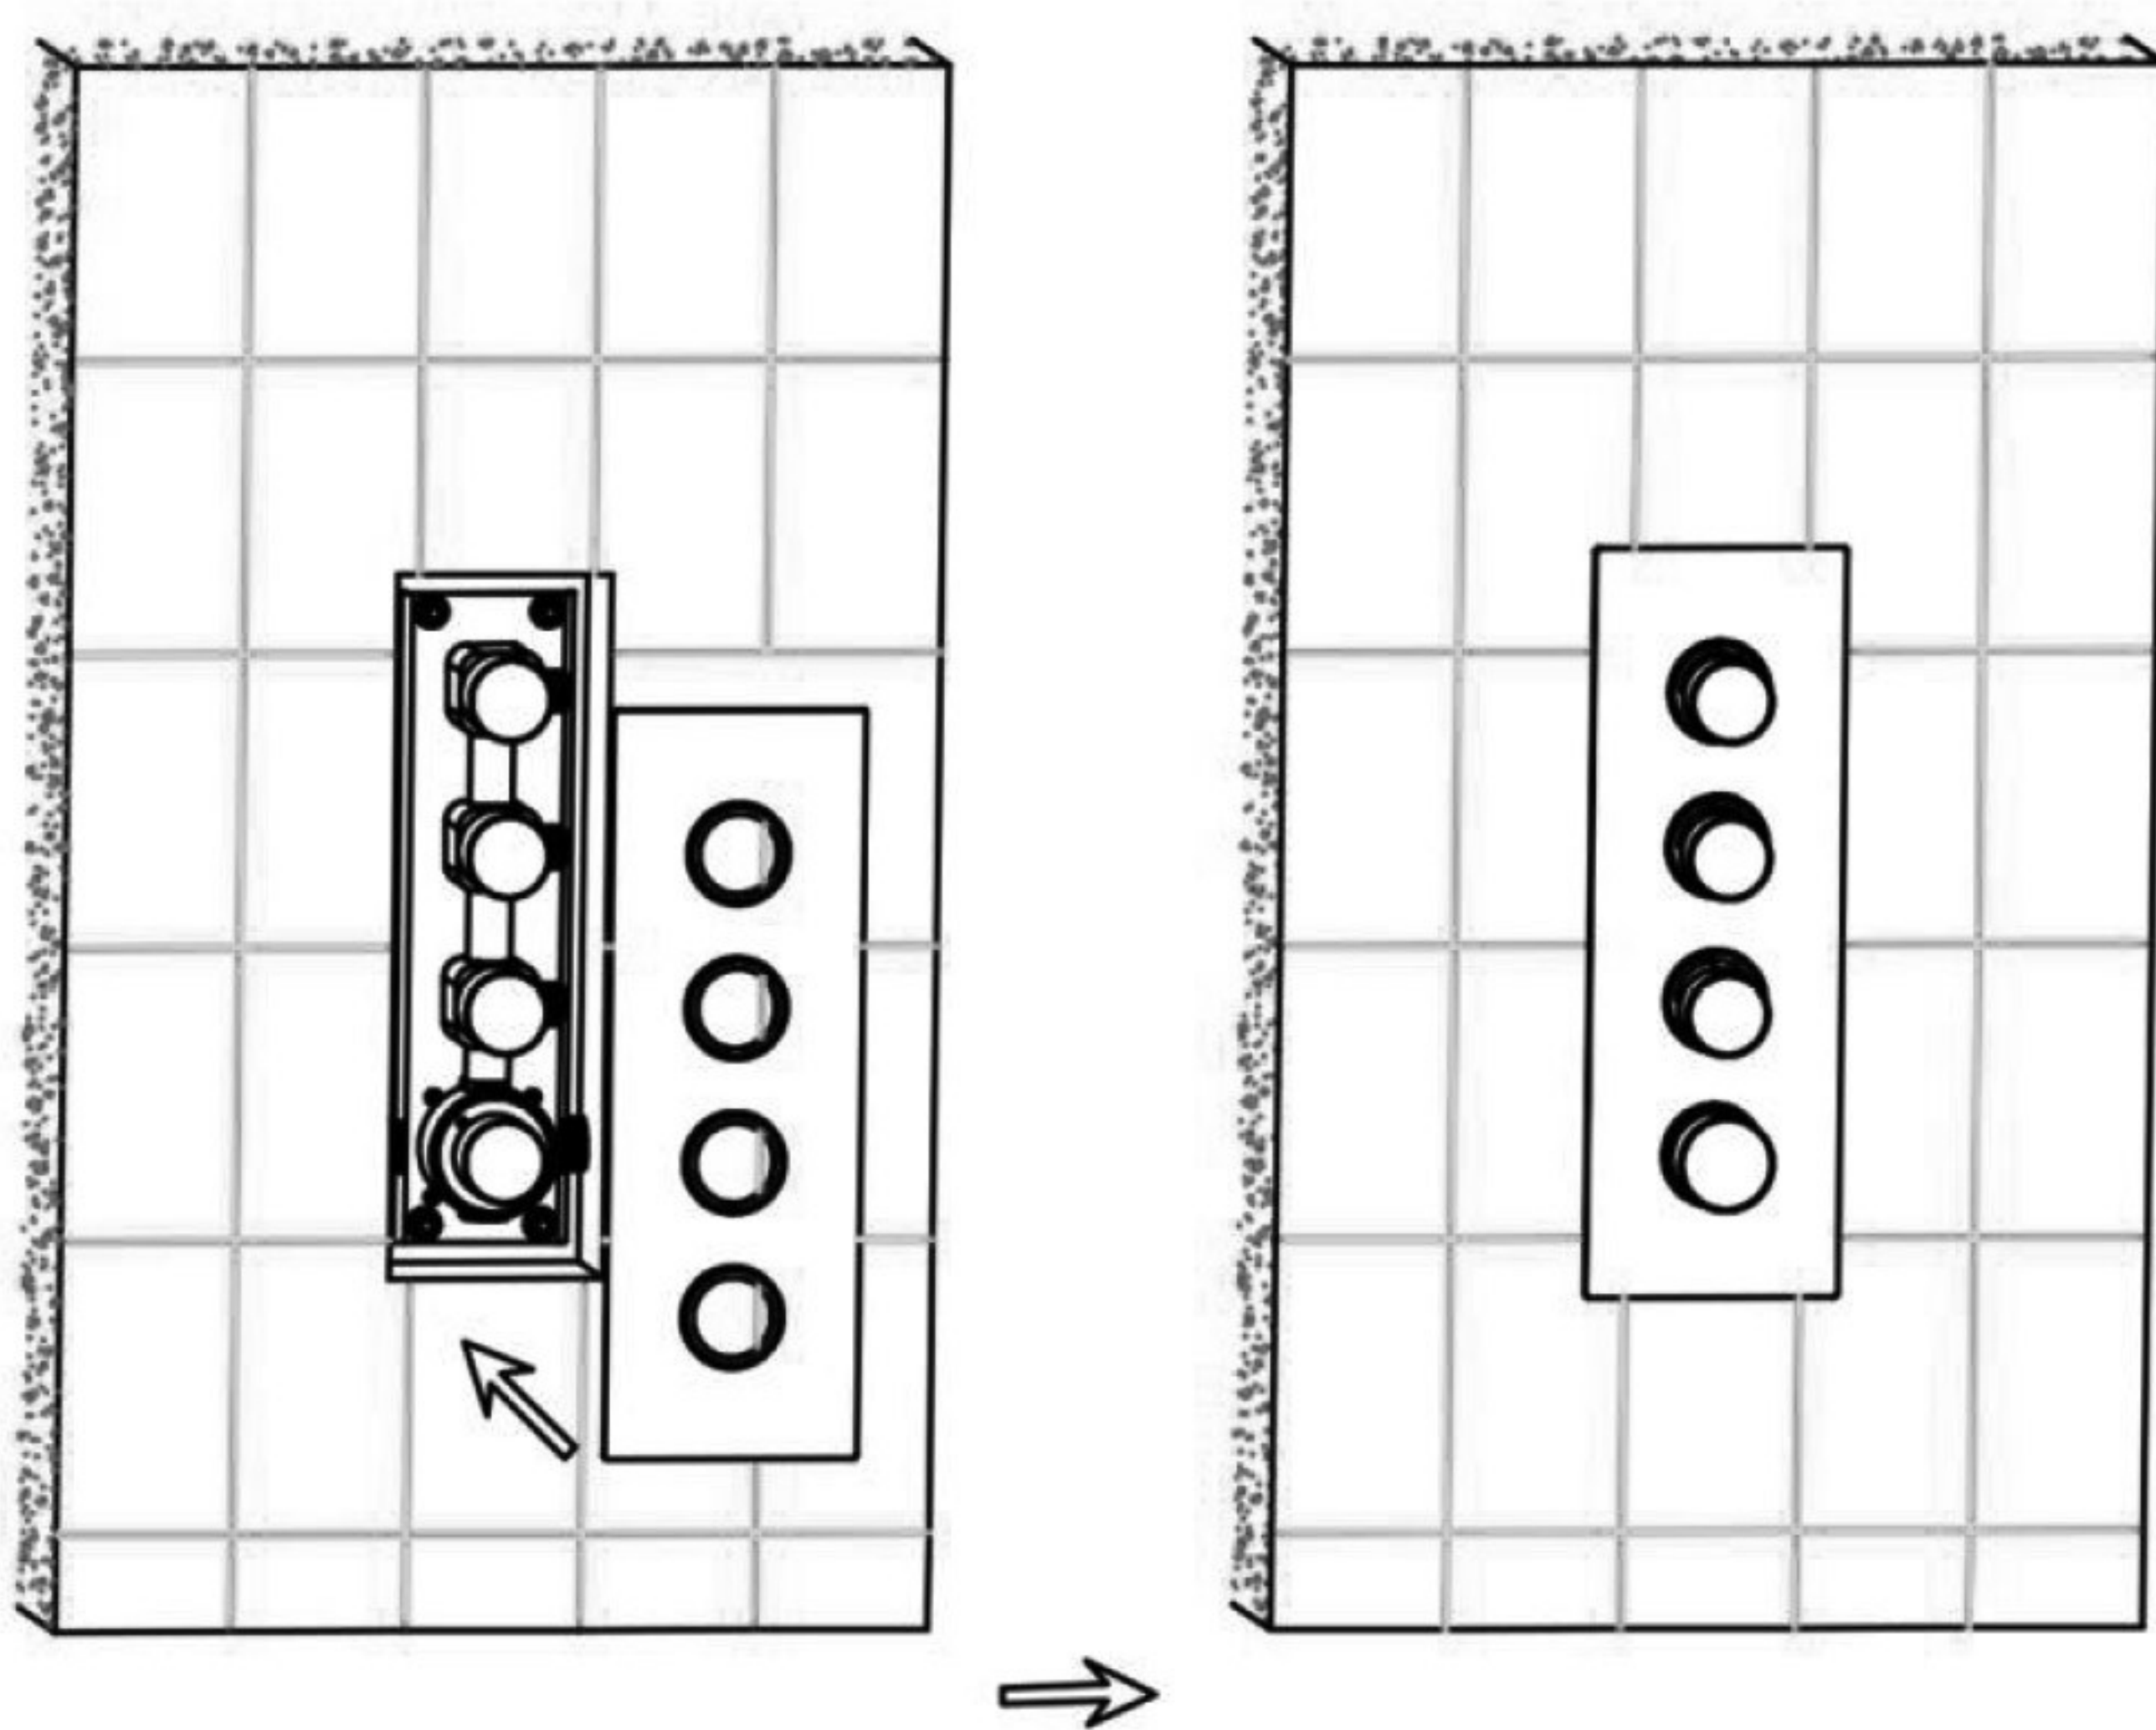


9. Take the board onto the faucet body.





10

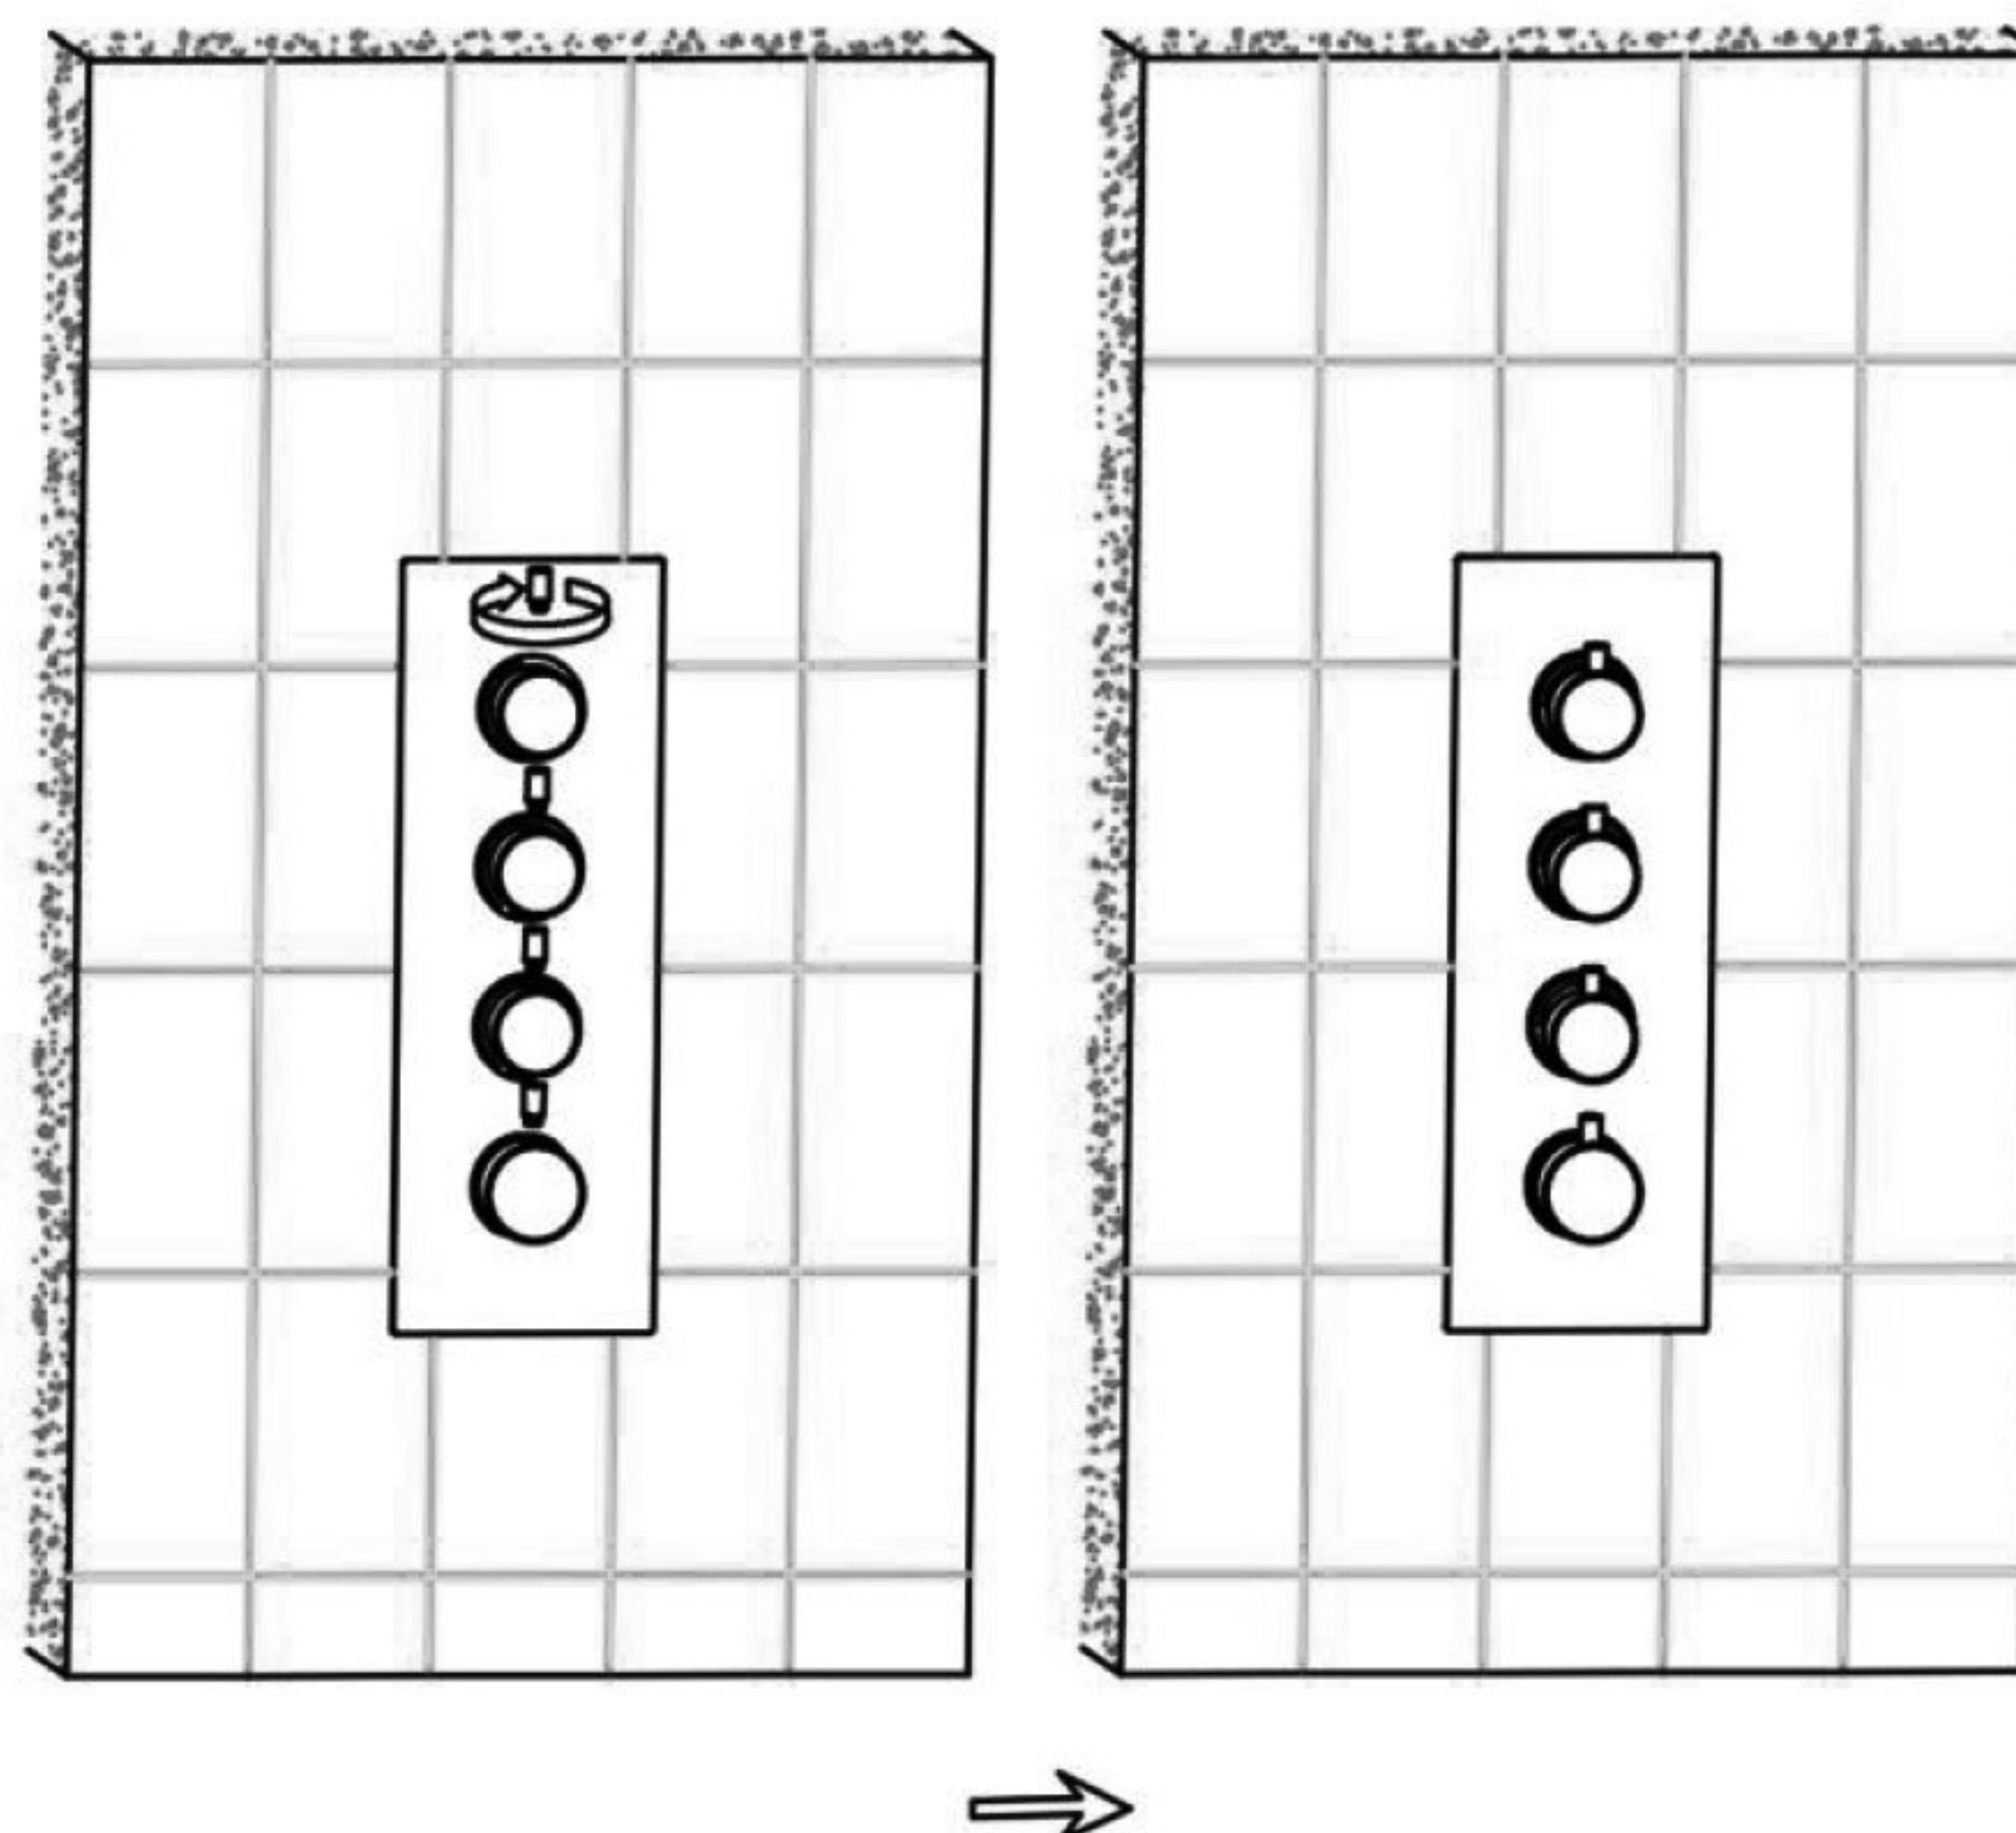



10. Screw the handles into the handwheels.

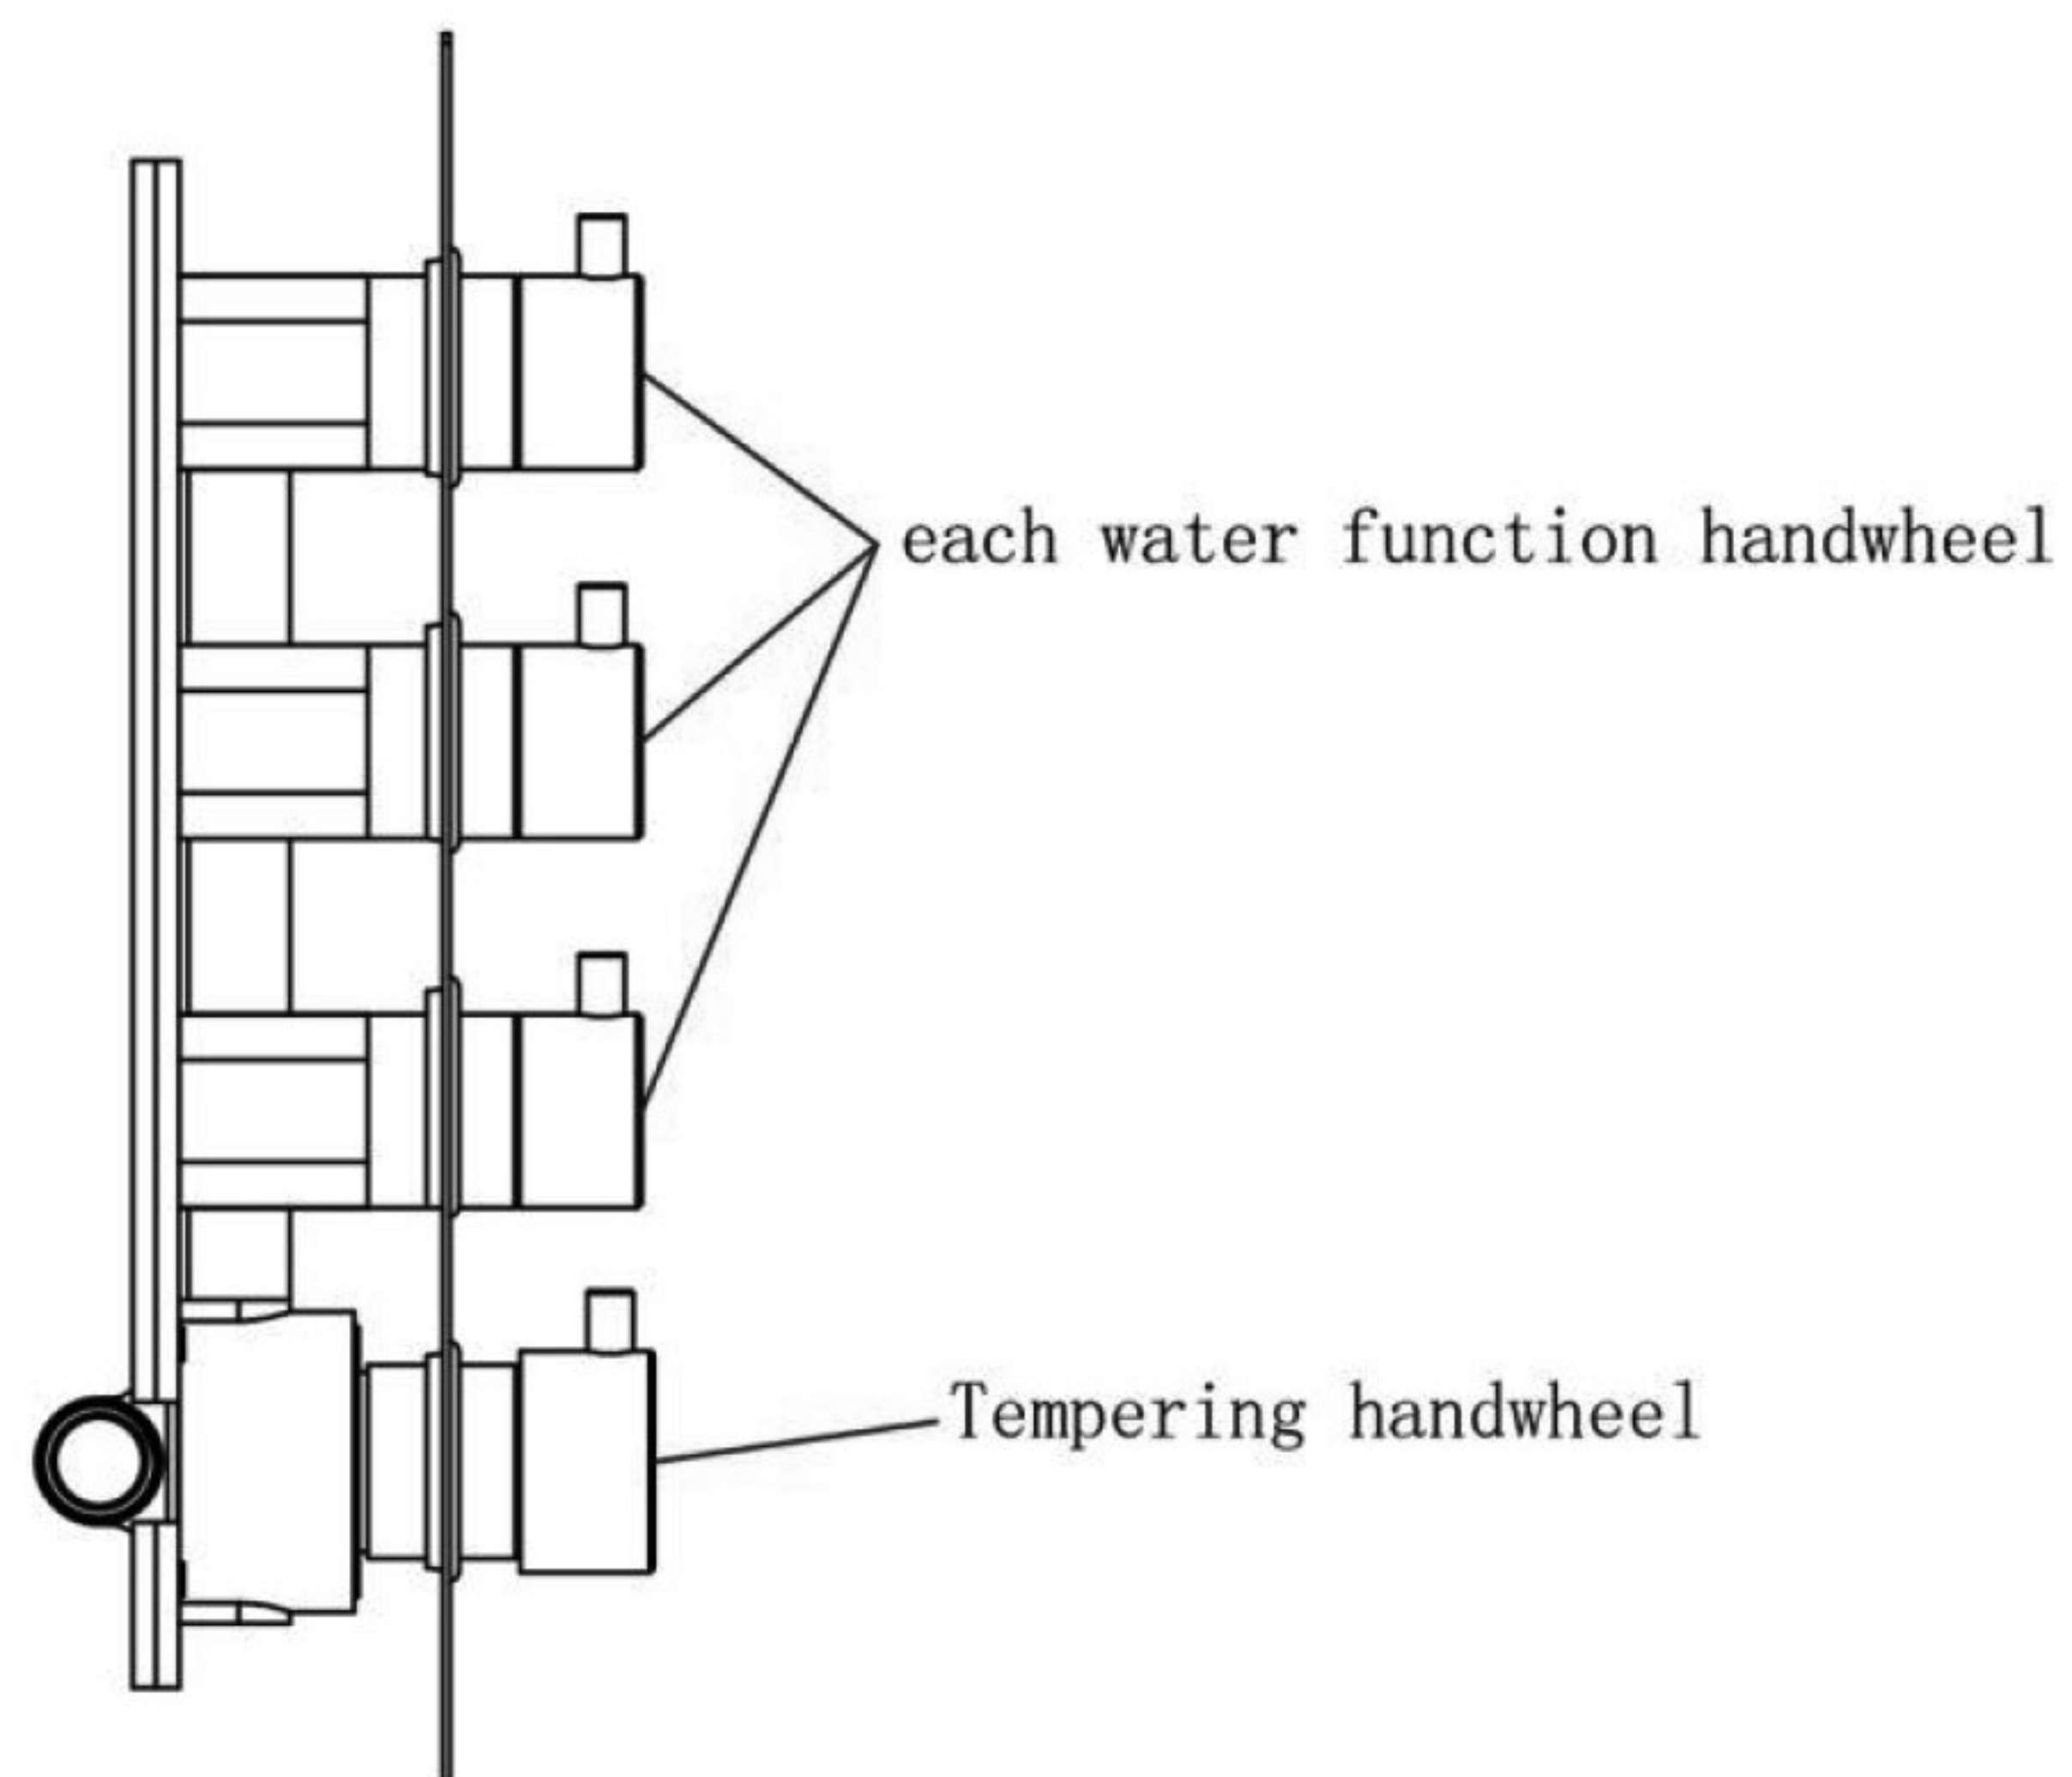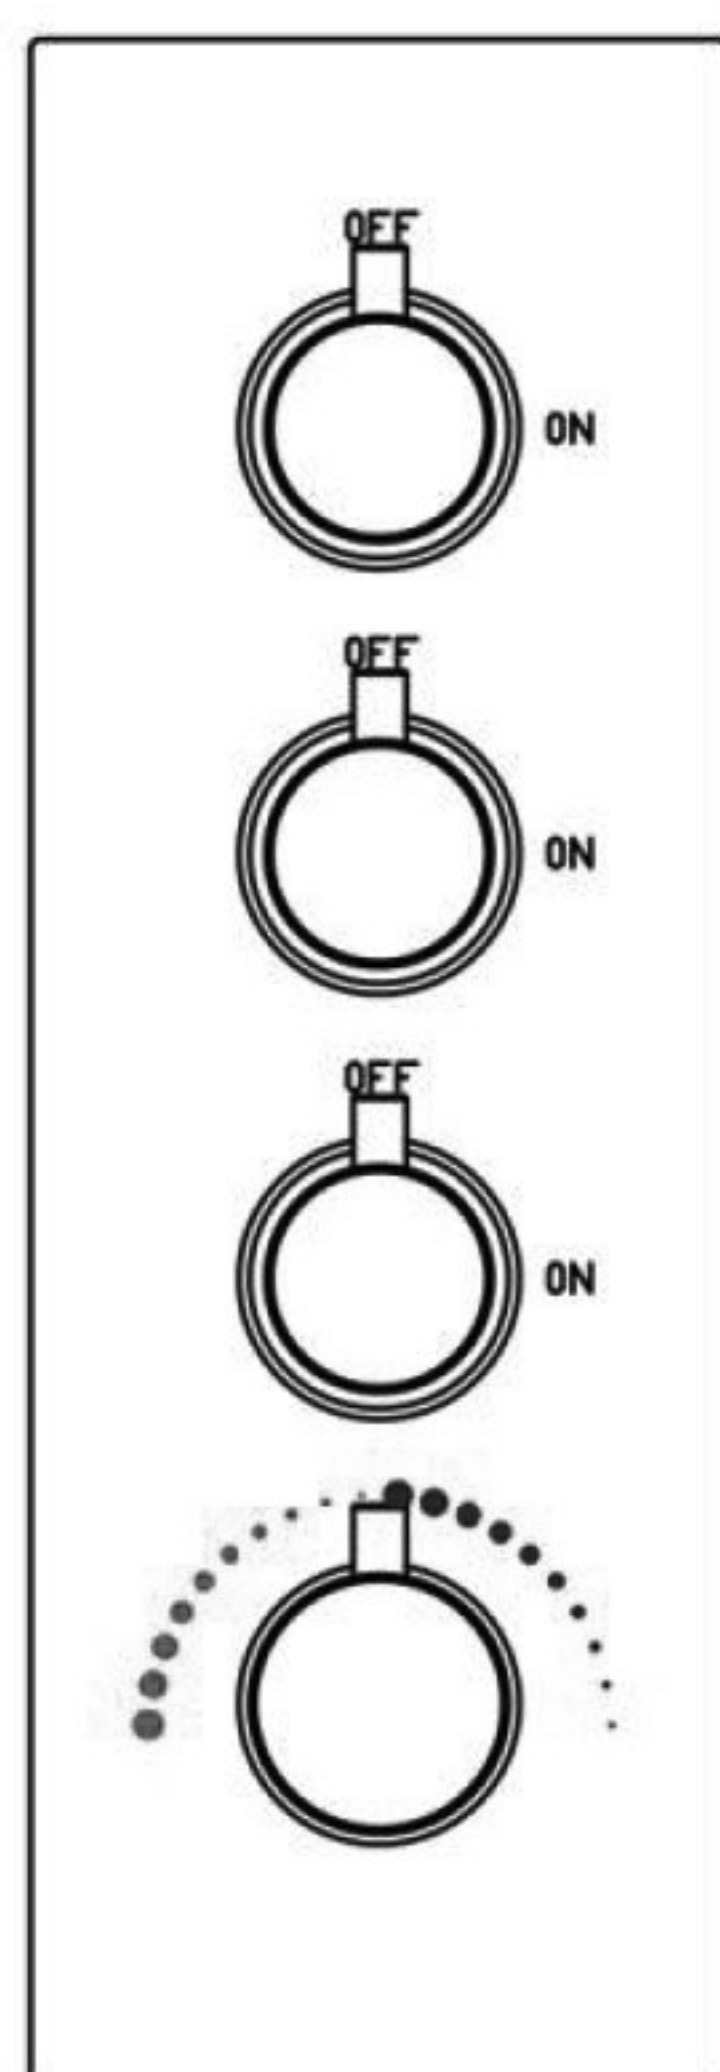

Step 2(Shower Head)

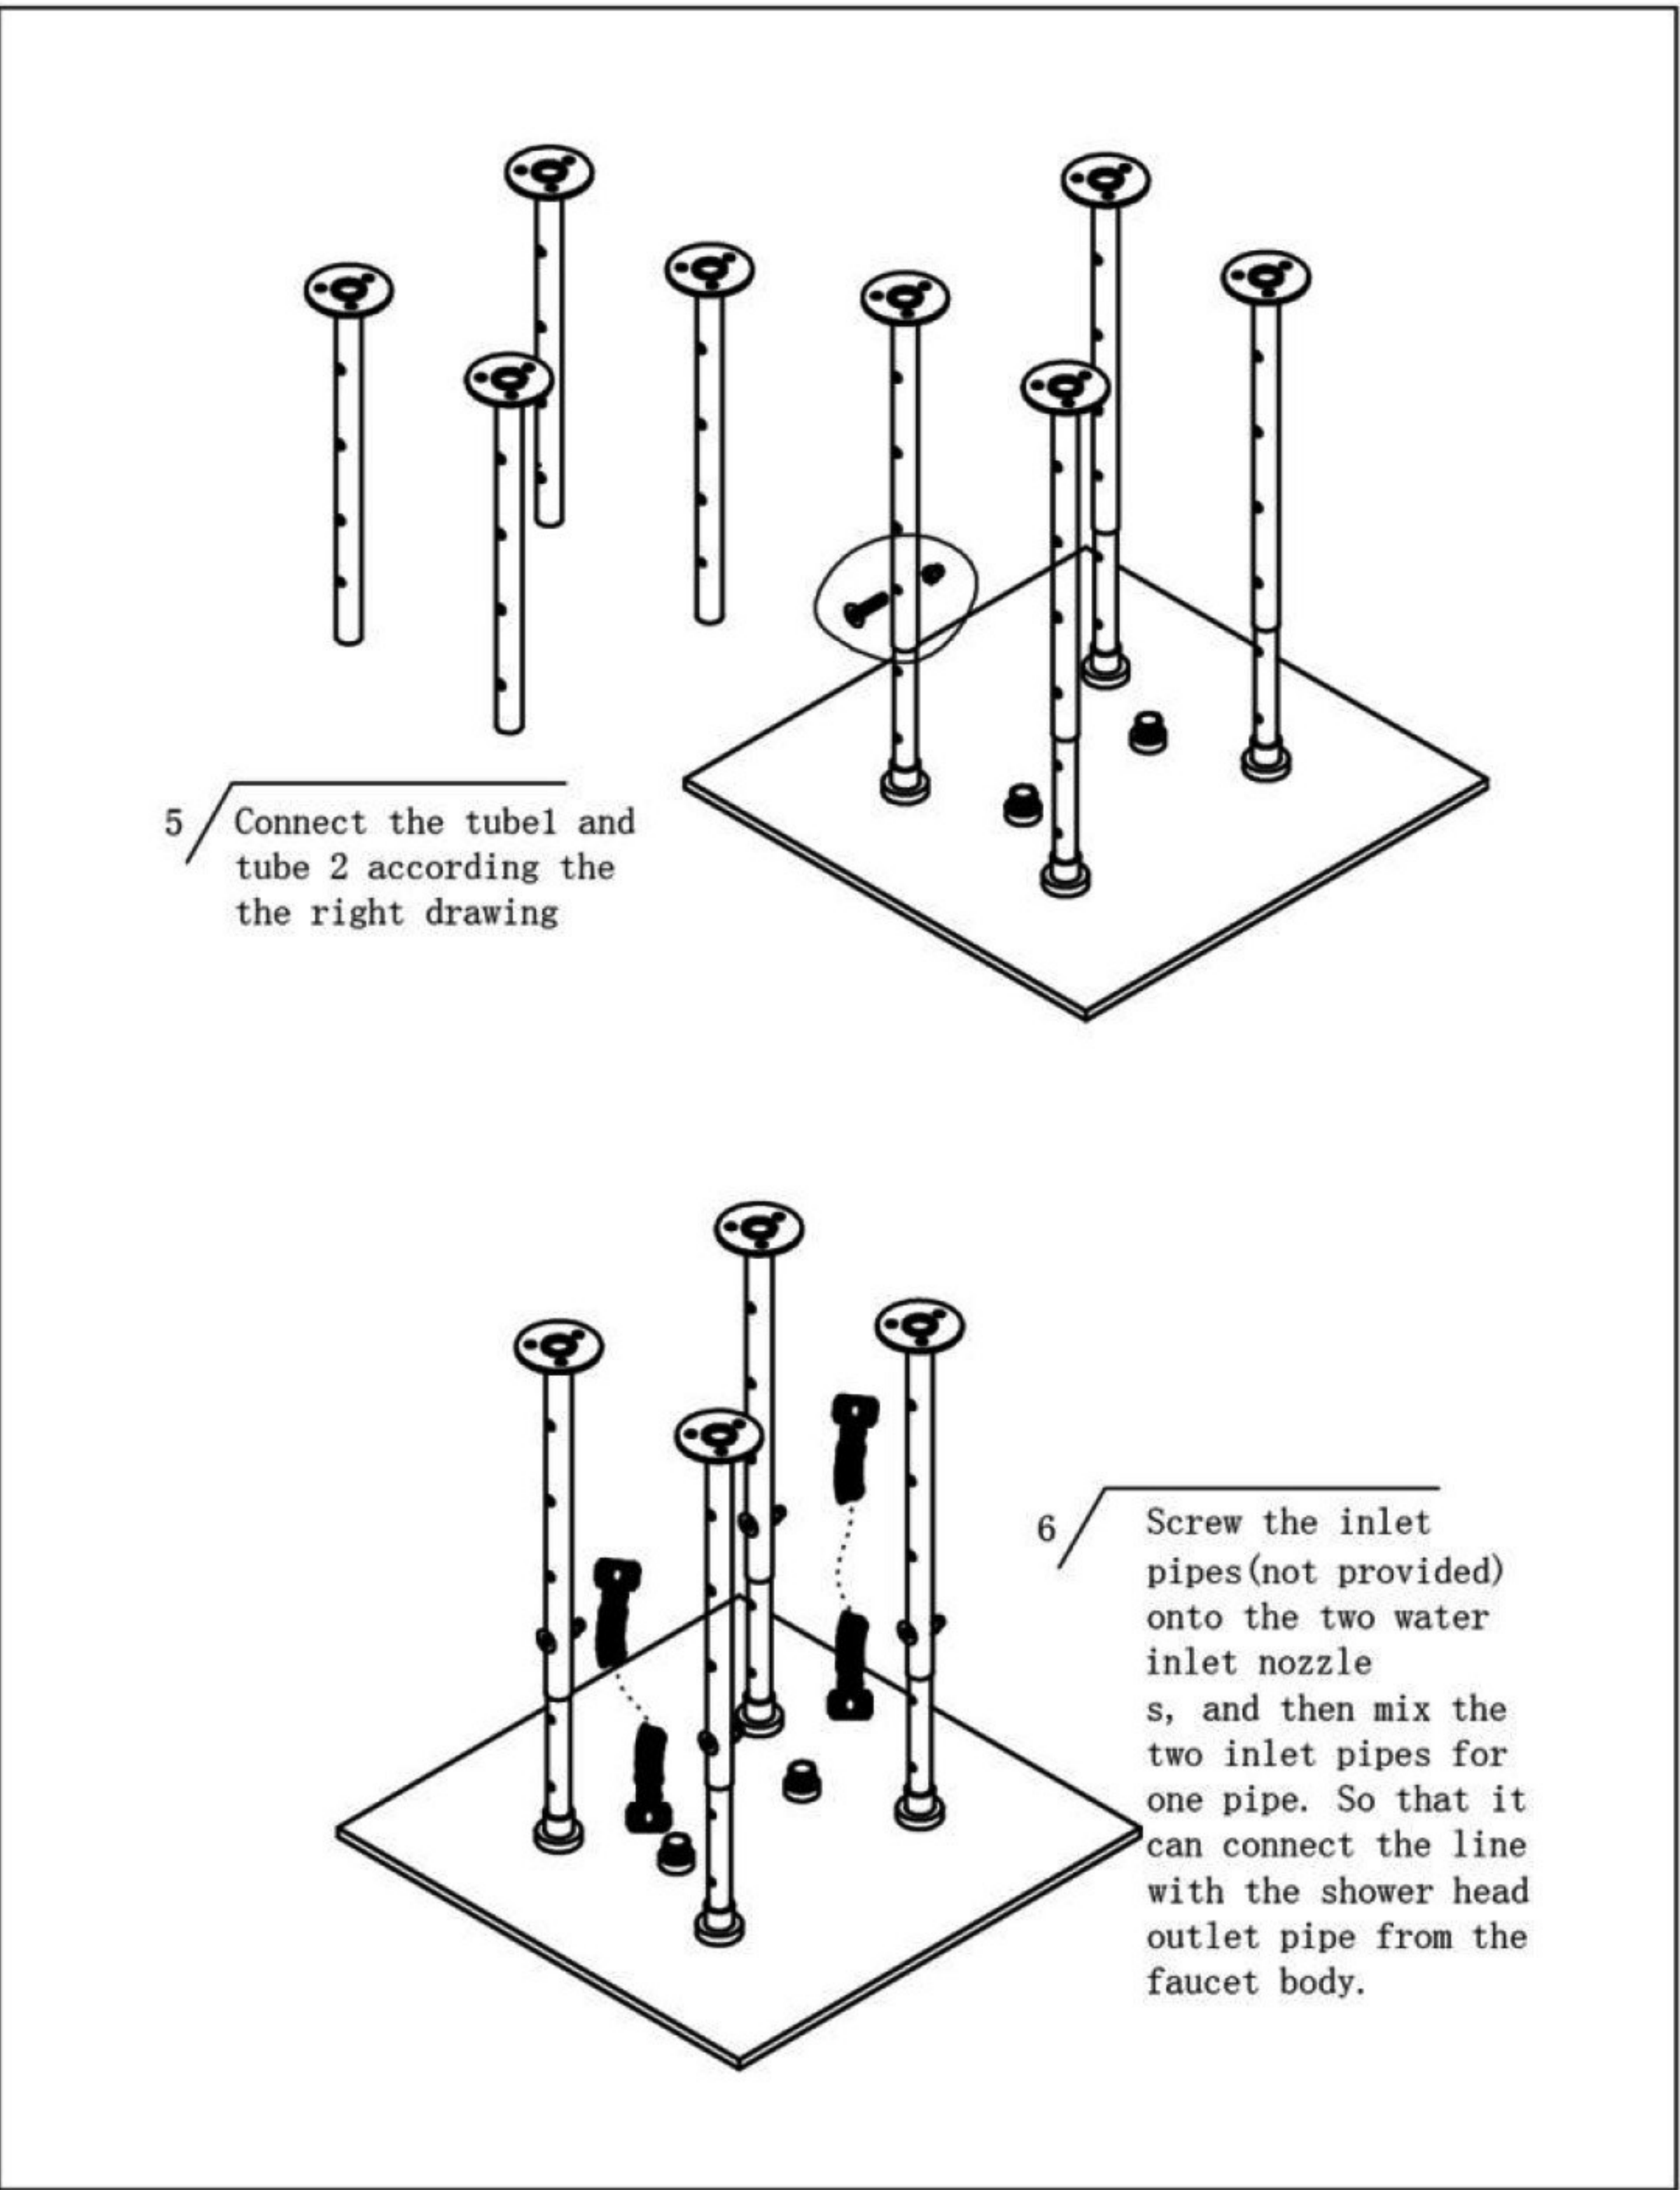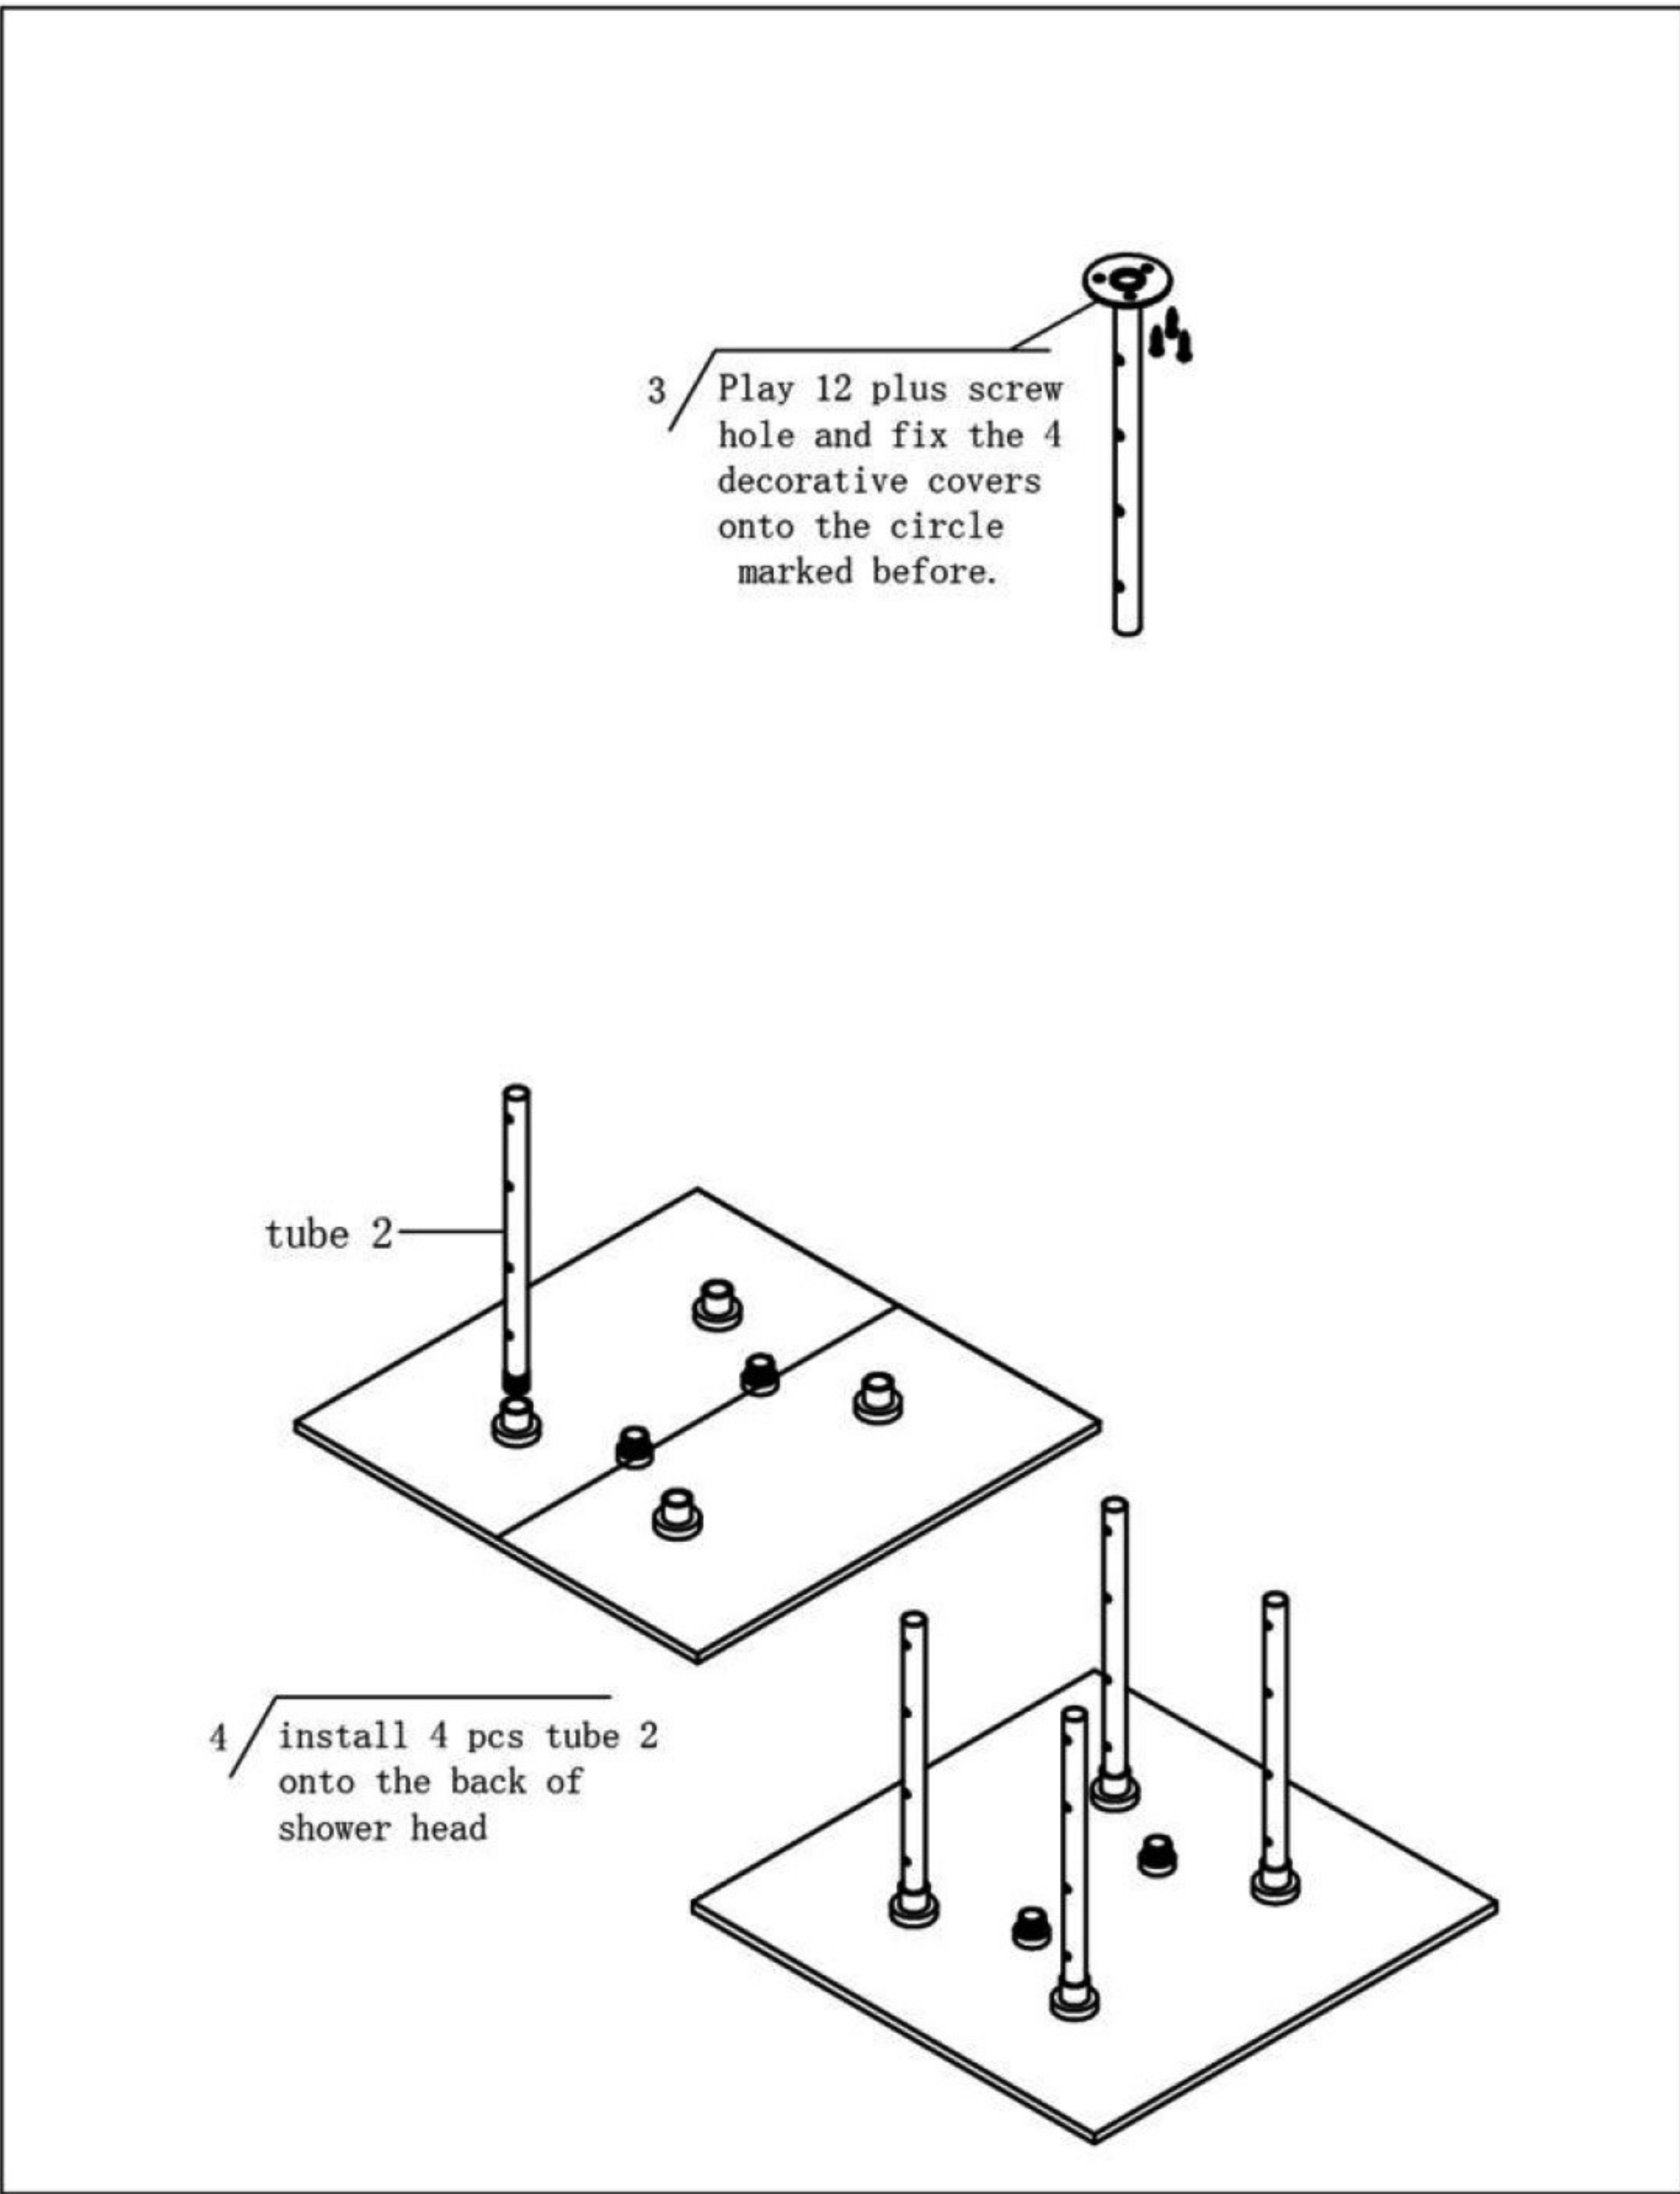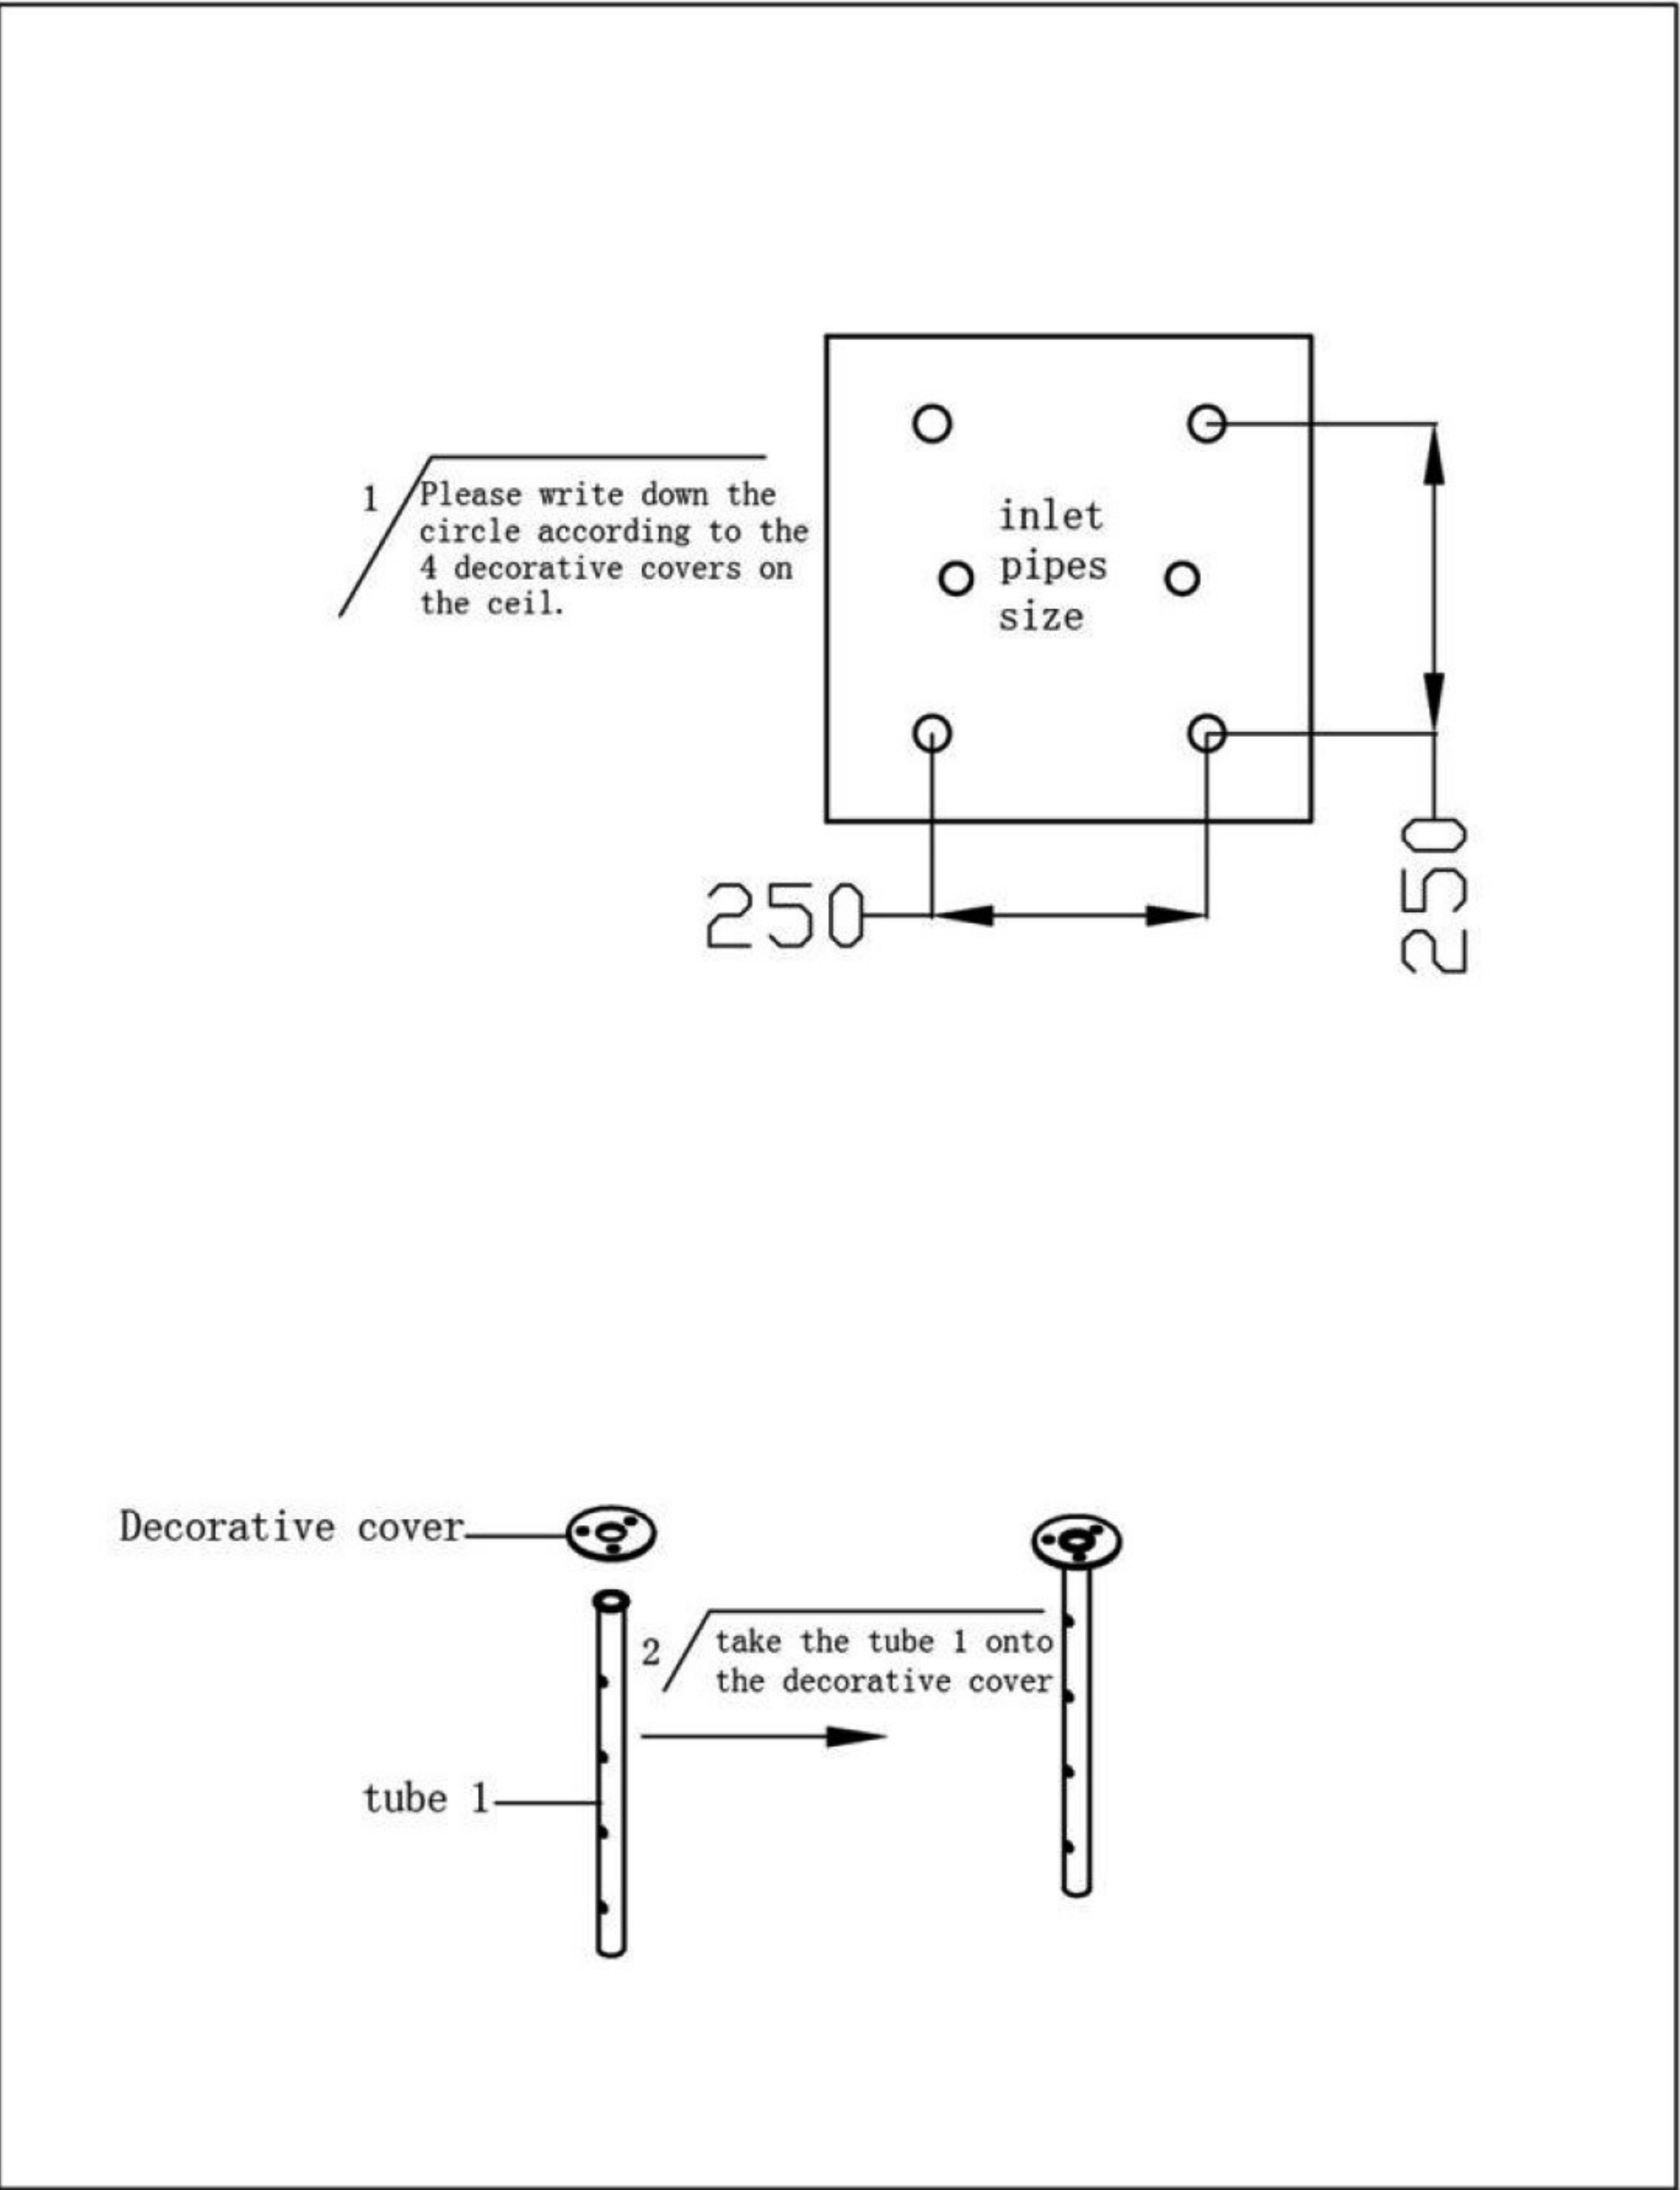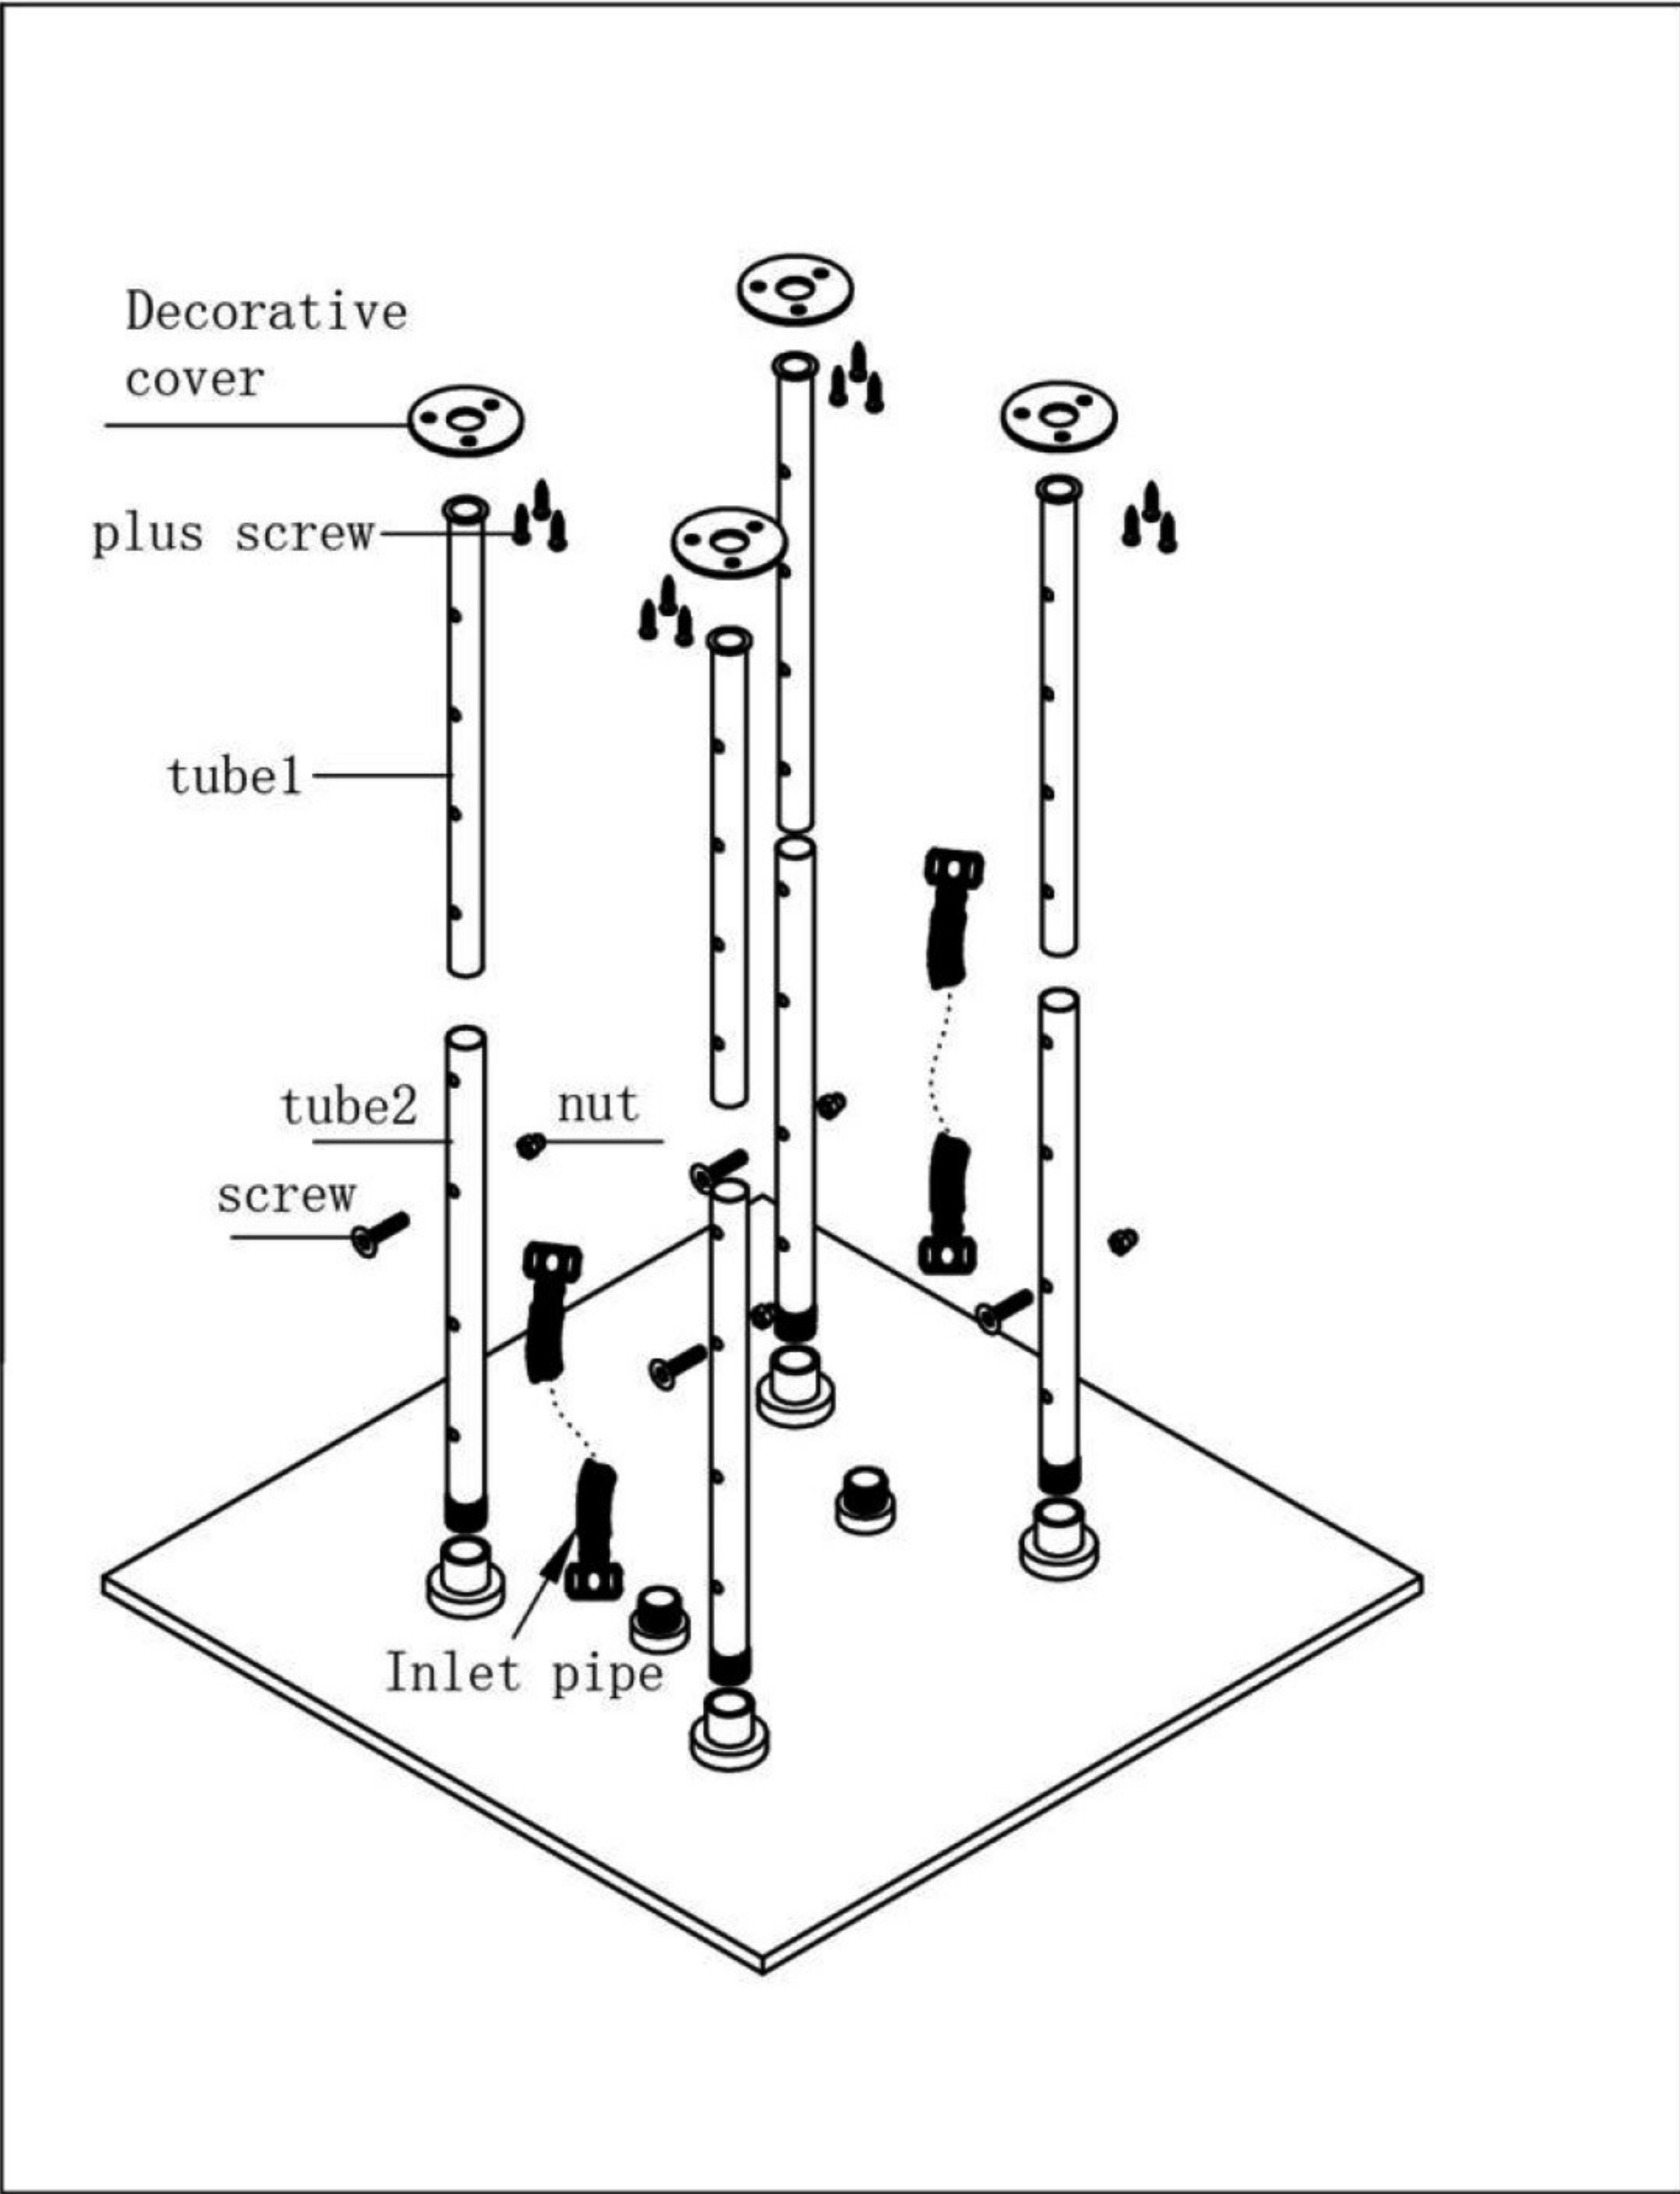



Step 3 (Body Jets)

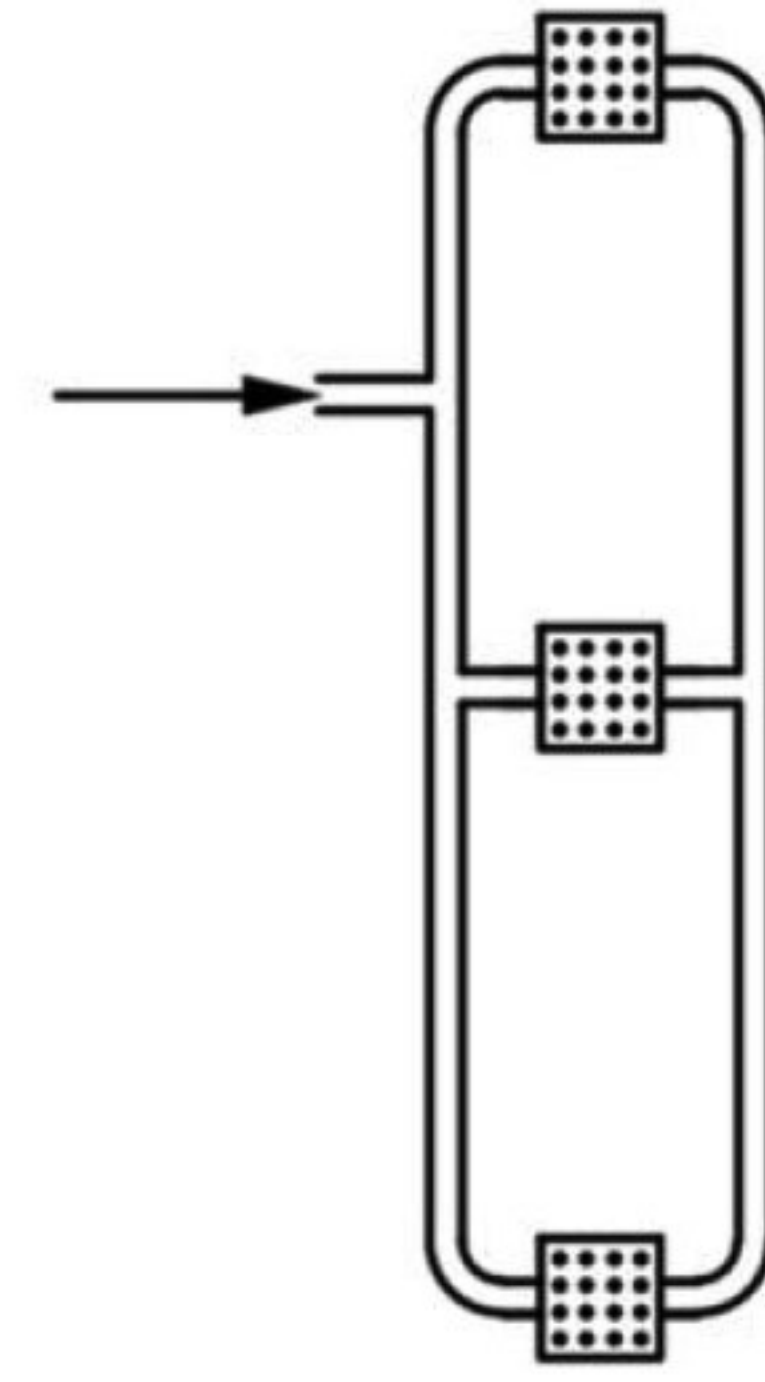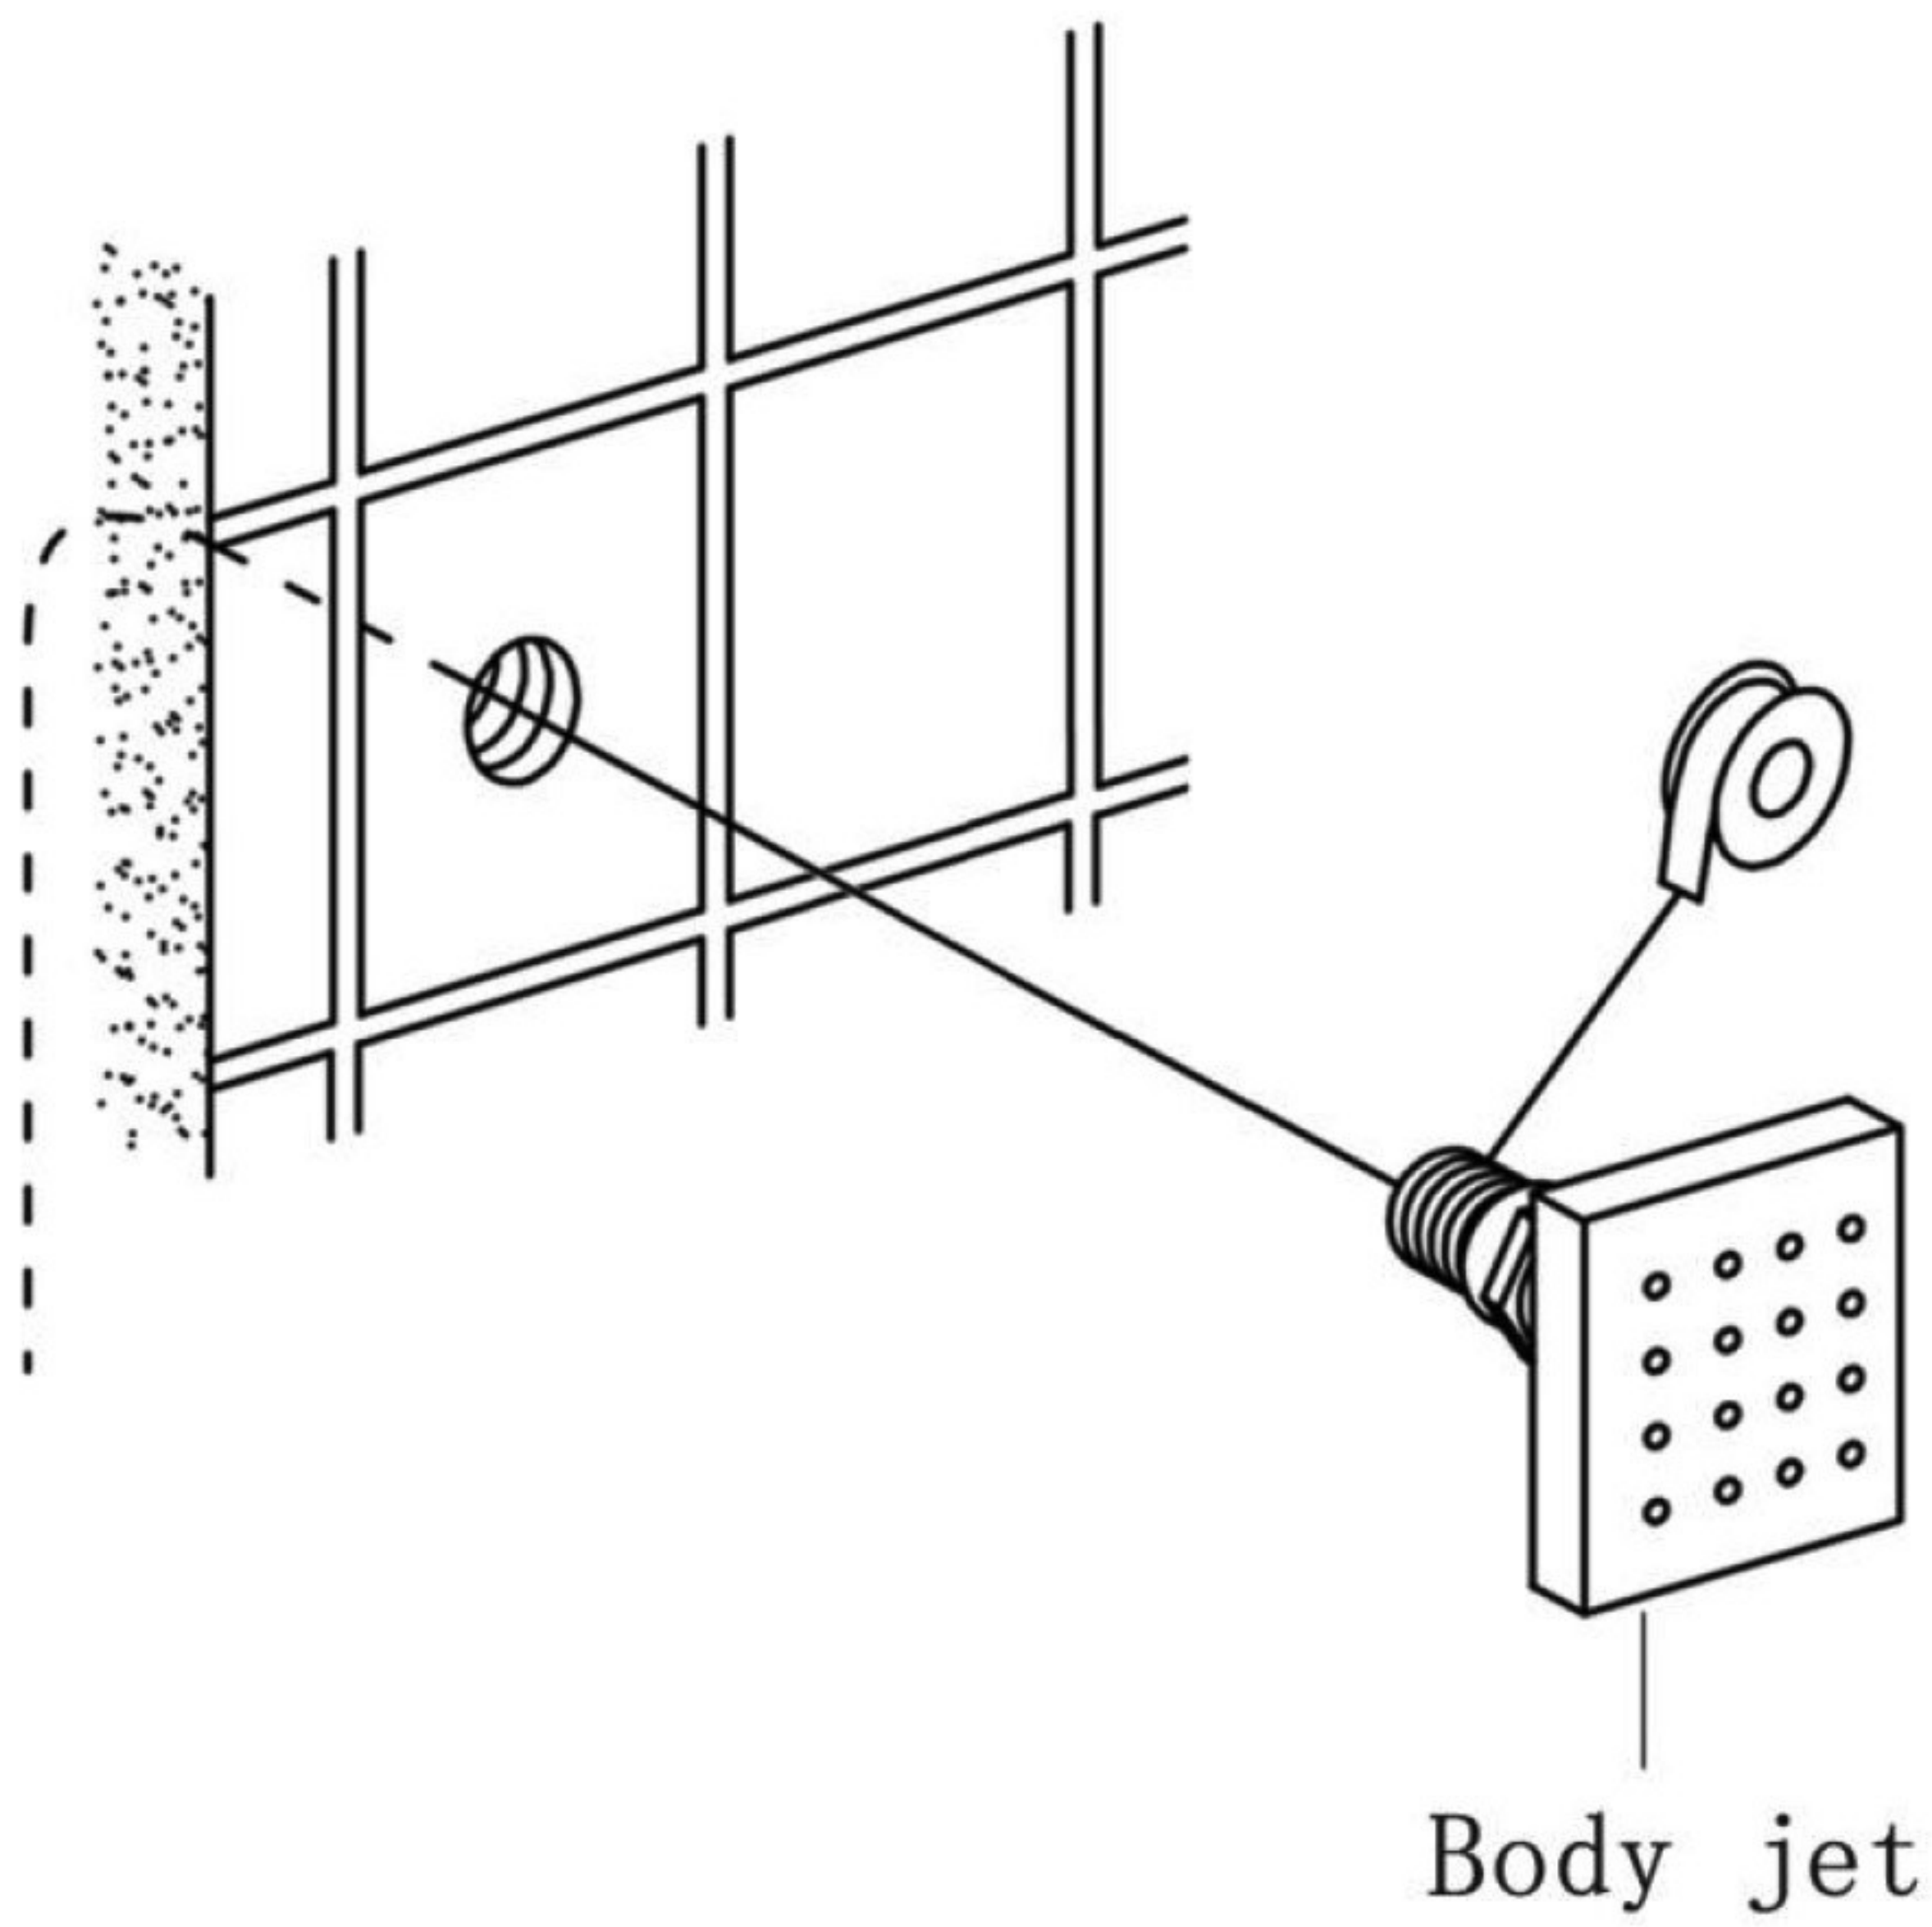

Multiple body jets will require installation in parallel using a pressure balancing loop(not included).


1. Apply Teflon tape to the threaded pipe of body jet.
2. Screw the body jet tightly into the female fitting in the wall.

Step 4 (Holder and Hand Shower/Bidet)

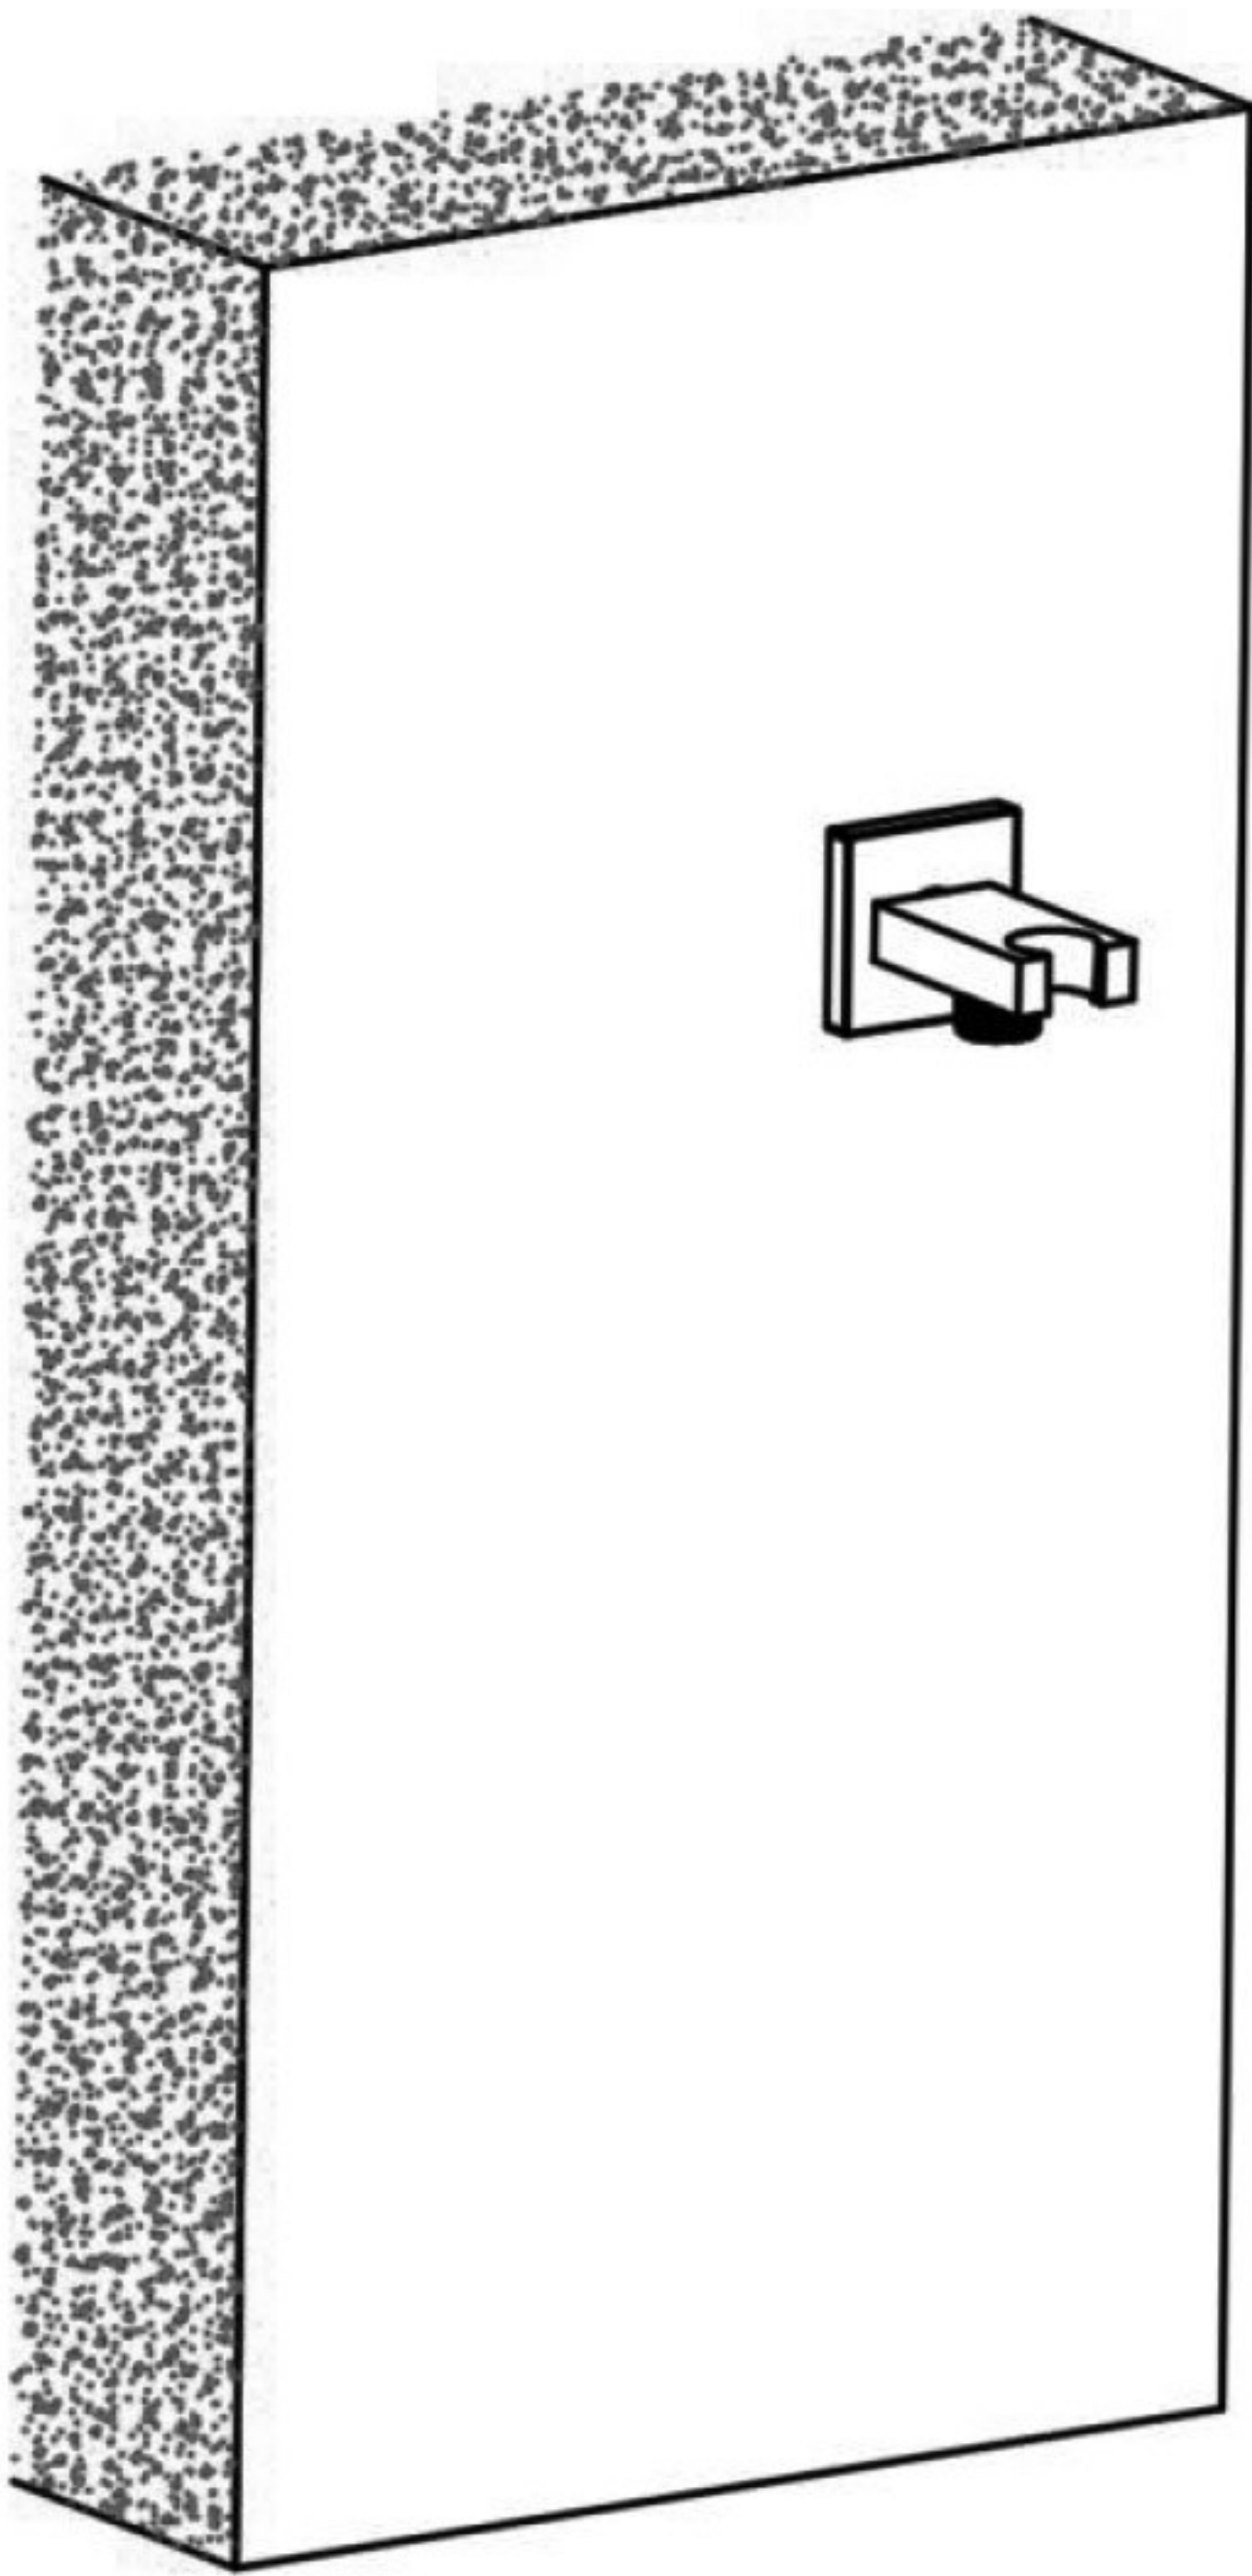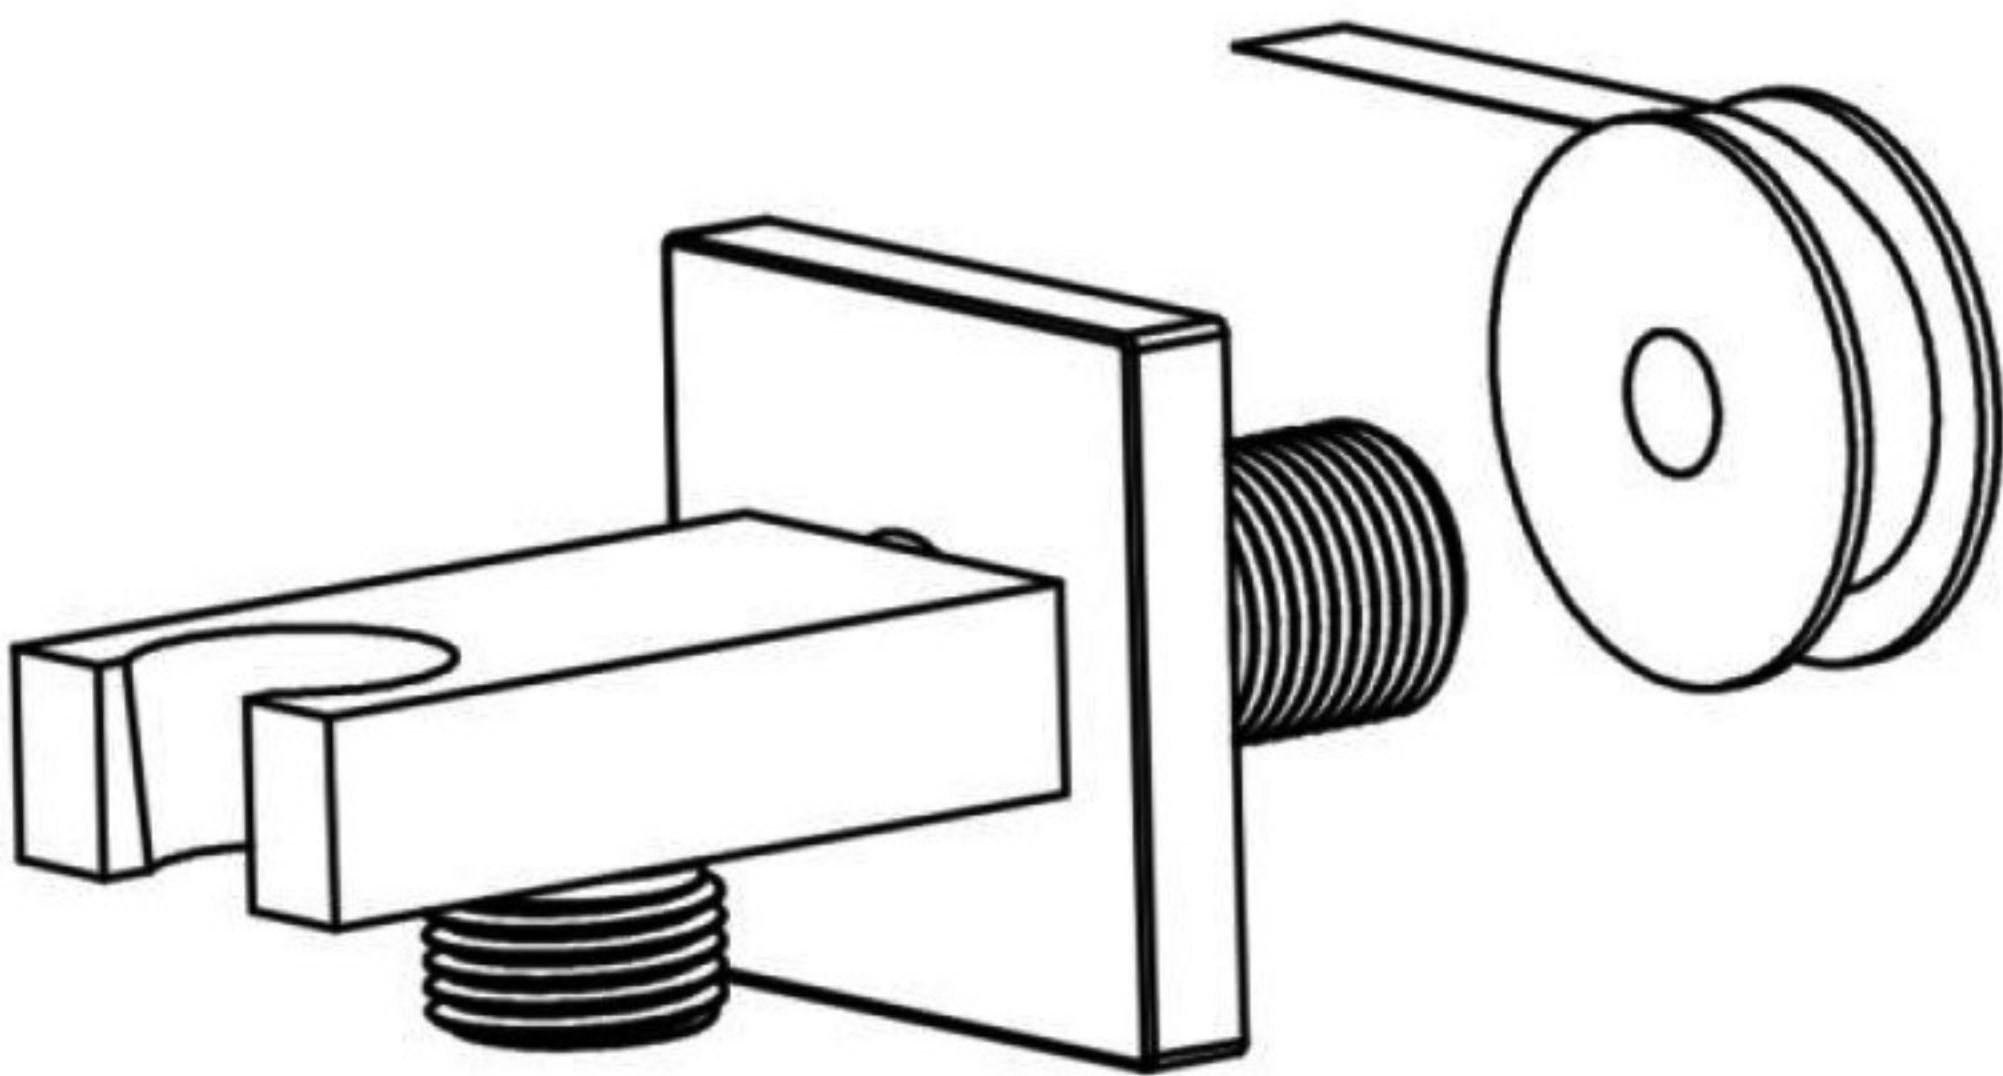

1.Wrap the 1/2 screw of holder with teflon tape to ensure a watertight seal

2.Fix holder on the nozzle drainage hole at clockwise direction .

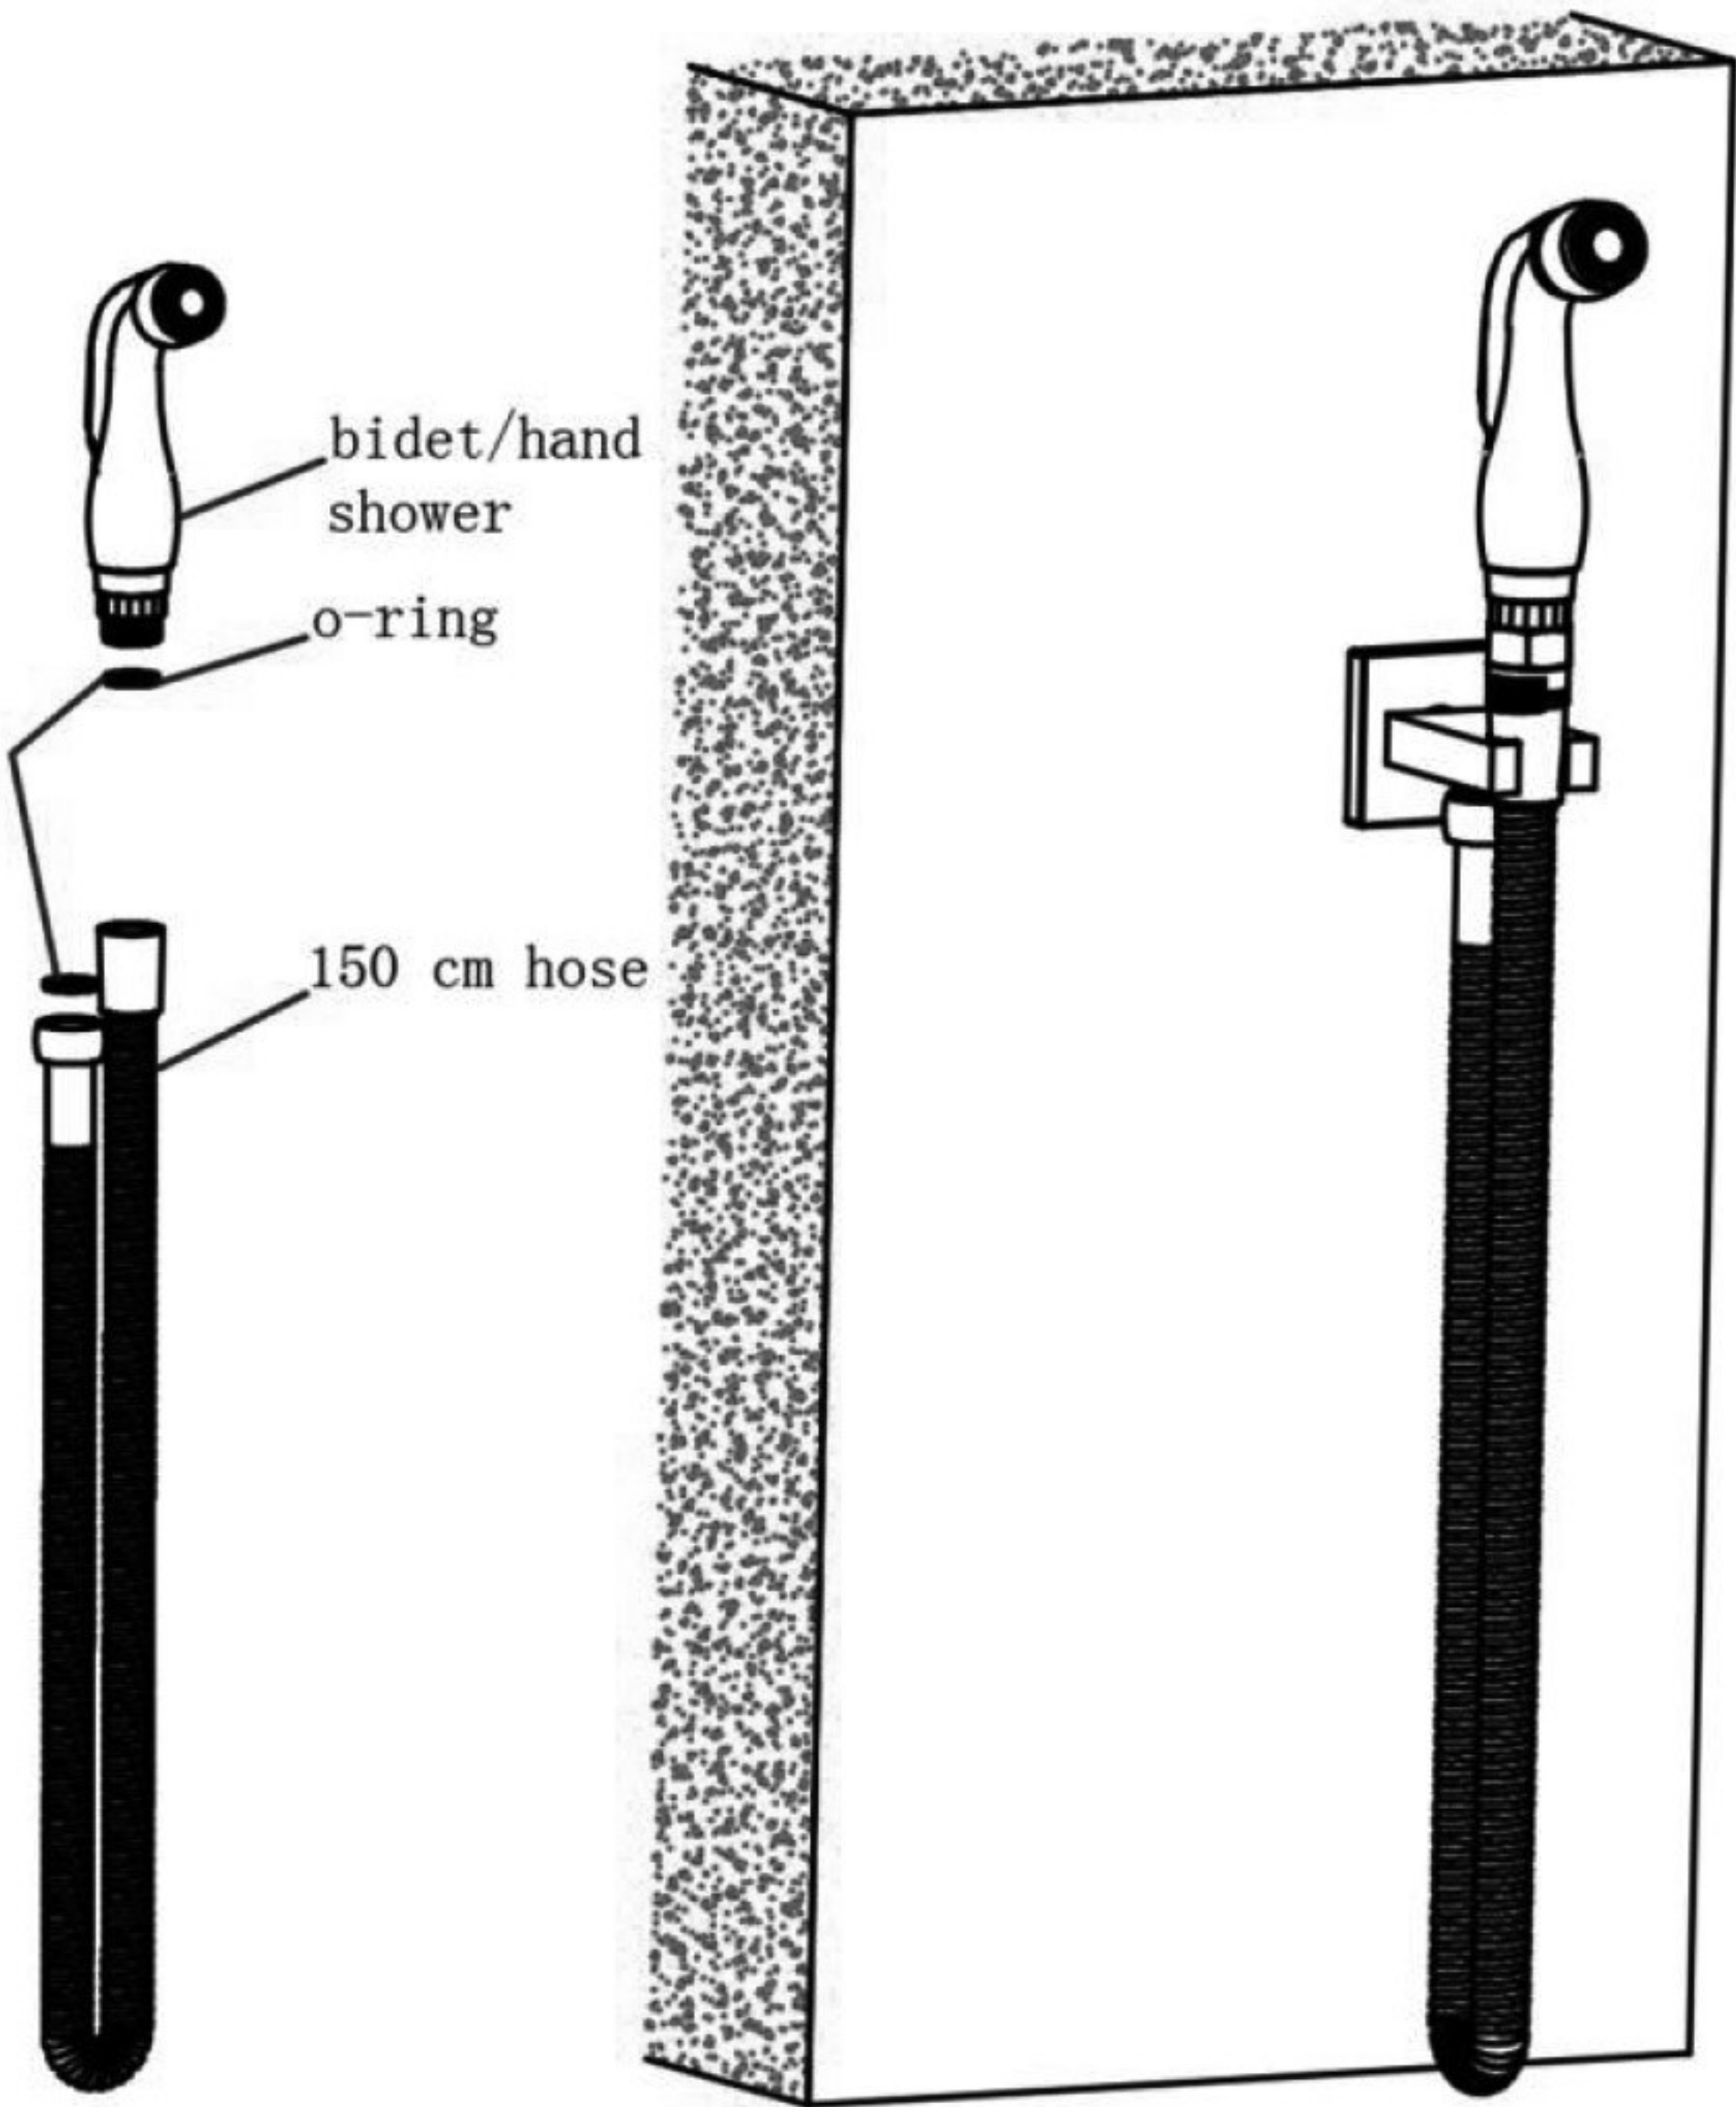

3.Connect the holder with 150 cm hose. And then set the hand shower/bidet or hand shower onto the to the holder.