

## **Assembly Instruction**

INSTRUCTION DE MONTAGE MONTAGEANLEITUNG SAMLEVEJLEDNING

MAKE SURE THE LETTERS MATCH BEFORE ASSEMBLING NEED ASSEMBLY ASSISTANCE? CALL US AT 866-814-8325


Code

**SST 33** 

1




2

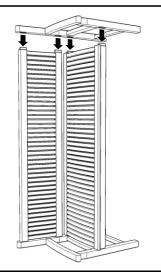


Hardware




BOLT 2,36' (8 Pcs)

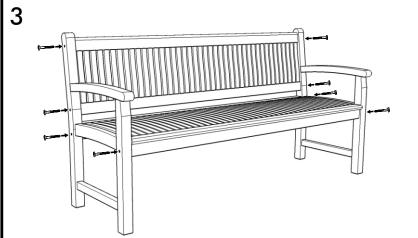

4

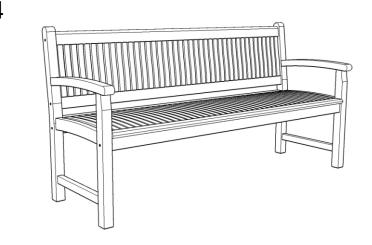

Tool



Socket Wrench 4m

Total Section

4 Section

Make sure to use Gorilla Glue (Included) on all wood joints before assembly