







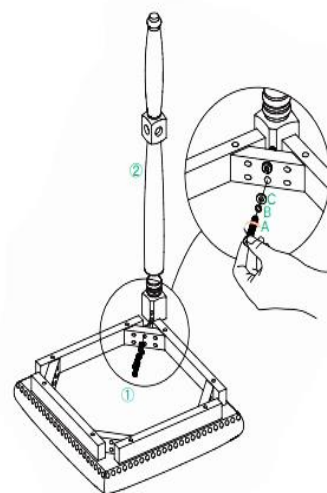
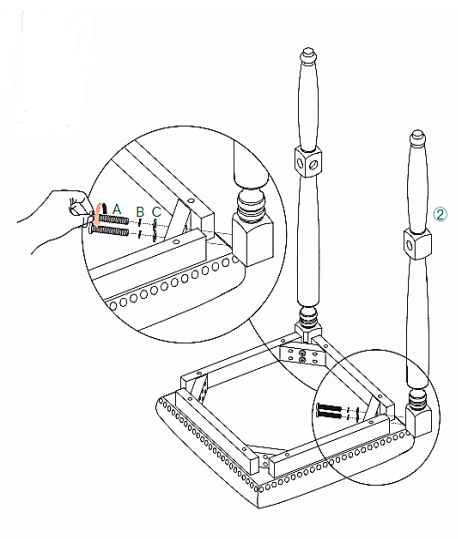


ITEM	PART	PICTURE	QTY
1	Seat		1
2	Leg		4
3	Foot Rest		4

ITEM	PART	PICTURE	QTY
A	Bolt	 M8x50 mm	8
B	Spring washer		8
C	Flat washer		8
D	Screw	 M5x50 mm	8
E	Allen wrench		1

Step 1

Align a leg ② with the opening on the seat ① bottom and make sure the bolt holes on each side overlap. Fit a spring washer B to a bolt A followed by a flat washer C. Insert the bolt into a hole and tighten it with your hand. Repeat this for the other hole and leave the leg loosely attached





Step 2

Repeat **Step 1** and loosely attach a leg ② to the opening next to the first one.

Step 3

Attach a foot rest ③ to both legs and **make sure the screw holes on the foot rest face you (in the direction that would be toward the ground when standing upright).**

Repeat step 1-3 for the rest of the legs and foot rests.

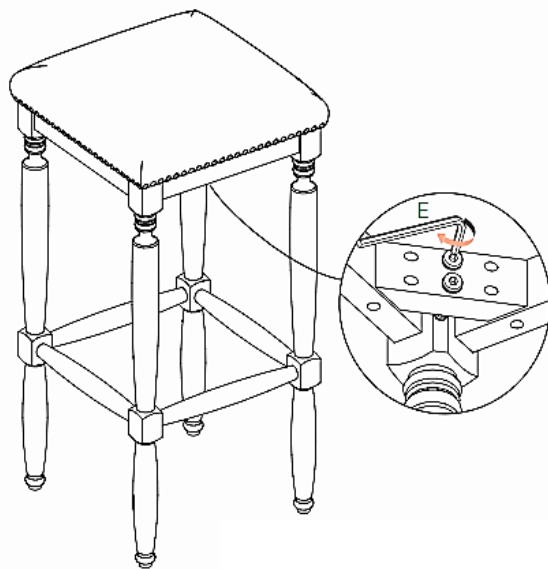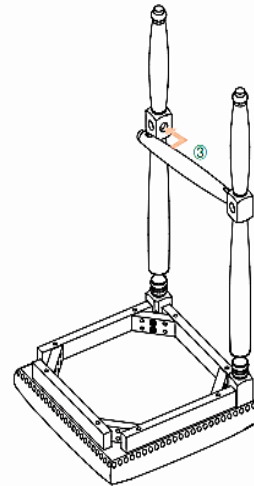

Step 4

Tighten all bolts with the Allen key E.

Step 5

Insert a screw D into a hole on the foot rest and tighten it with a drill or a screwdriver.

Repeat this for all holes on the foot rests.

