















ITEM NO.98295    BAR CART

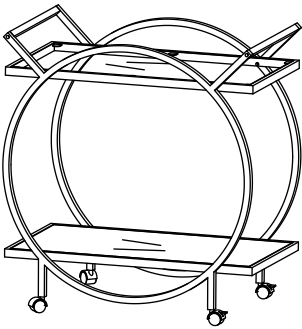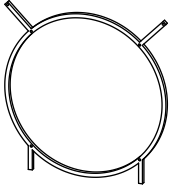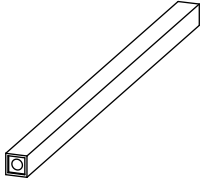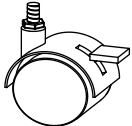


ASSEMBLY    INSTRUCTIONS

<p>1</p>  <p>SIDE PANEL 2PCS</p>	<p>2</p>  <p>METAL FRAME 2PCS</p>	<p>3</p>  <p>STRETCHER 2PCS</p>
<p>4</p>  <p>GLASS TOP 1PC</p>	<p>5</p>  <p>MIRROR SHELF 1PC</p>	
<p>A</p>  <p>BOLT 1/4" x 7/8" 8PCS</p>	<p>B</p>  <p>BOLT 1/4" x 1-1/2" 4PCS</p>	<p>C</p>  <p>CASTER 2PCS</p>
<p>D</p>  <p>CASTER WITH BRAKE 2PCS</p>	<p>E</p>  <p>BOLT COVER CAP 4PCS</p>	<p>F</p>  <p>GLASS PAD 12PCS</p>
<p>G</p>  <p>ALLEN WRENCH 1PC</p>	<p>H</p>  <p>PEN WRENCH 1PC</p>	


**\*\*\* Do not tighten screws & bolts until the entire unit is completely assembled. \*\*\***

## STEP 1

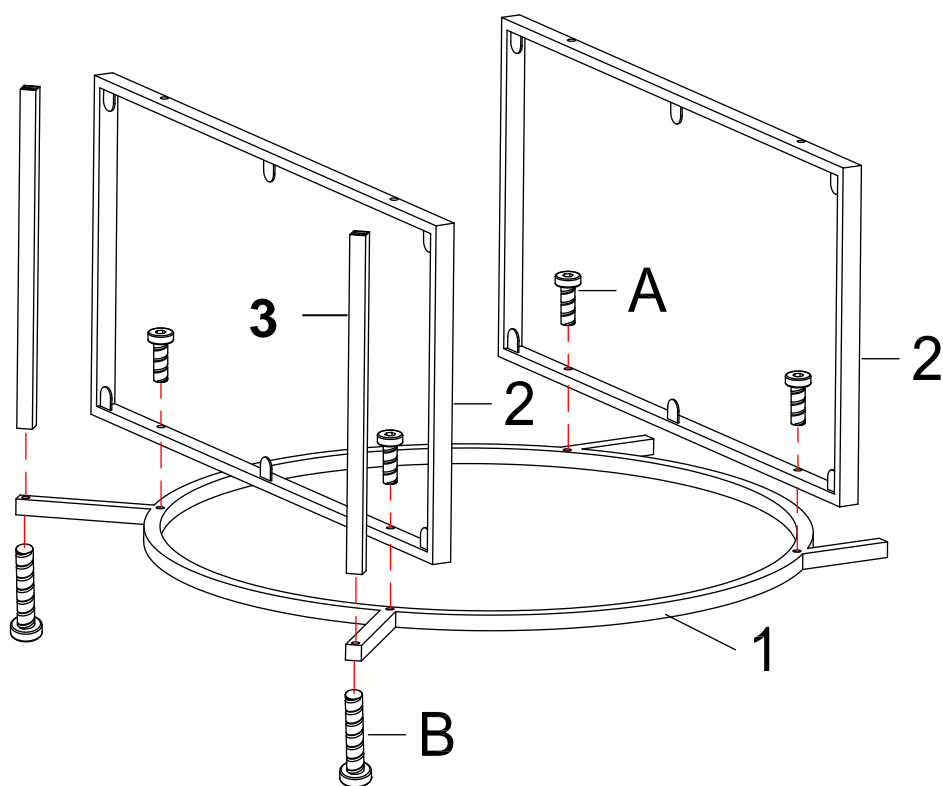


Attach metal frame (2) to side panel (1) using bolts (A), and attach stretcher (3) to side panel using bolt (B) as shown.

## STEP 2

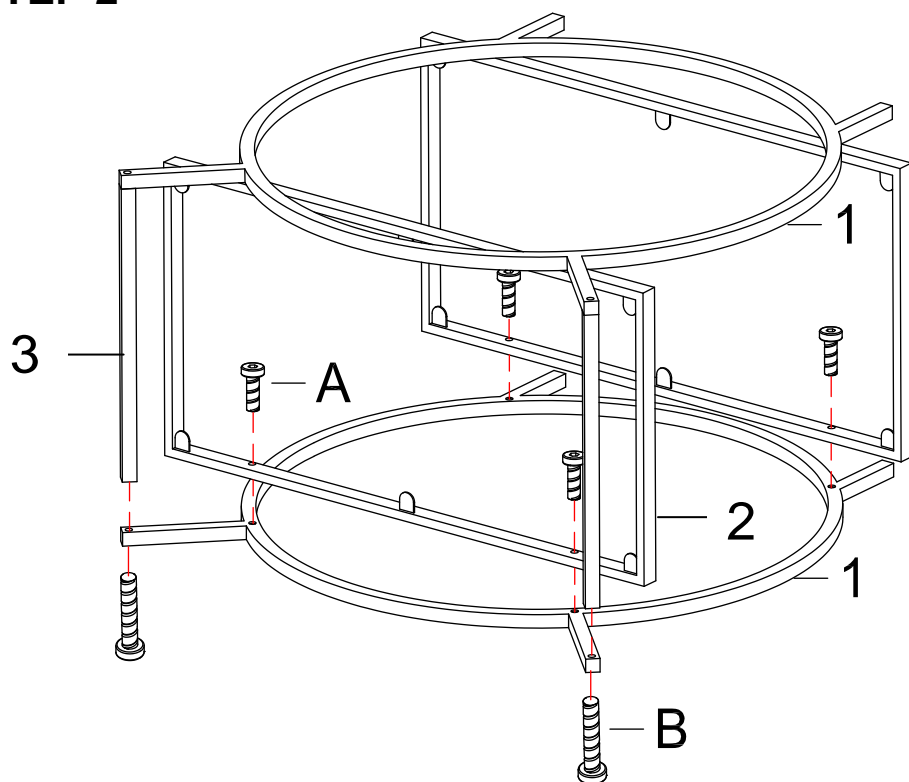

Attach the other side panel (1) to metal frame (2) using bolts (A), and also attach stretcher (3) to side panel (1) using bolt (B) as shown.


### STEP 3

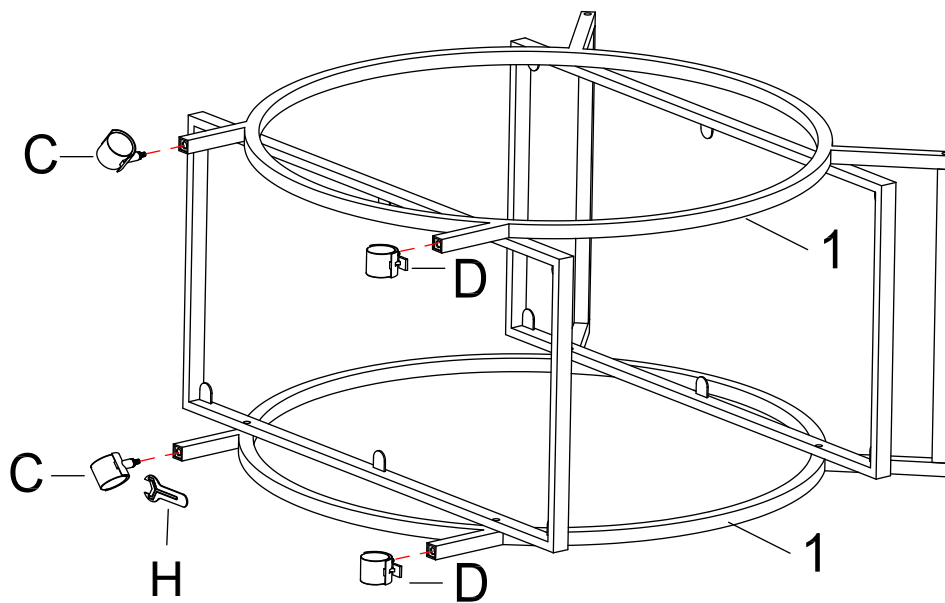

Attach caster (C) and caster with brake (D) to side panels by open wrench (H) as shown.

Tighten all bolts and carefully turn the assembled unit upright.

### STEP 4

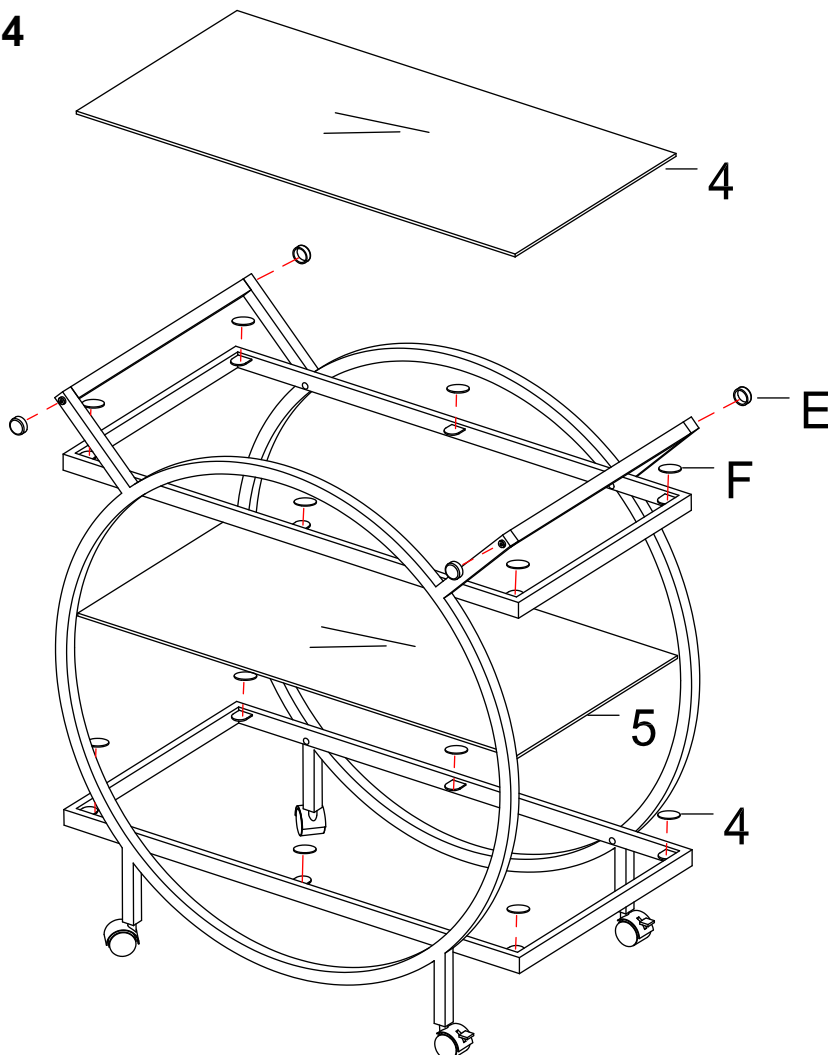

Use bolt covers cap (E) to cover the exposed bolts on side panels and attach glass pad (F) to metal frames.

Place glass top (4) onto top metal frame and mirror shelf (5) onto bottom metal frame as shown.

The bar cart is now completed.