
Assembly Instruction LSF RECLINING CHAIR ITEM NO.: 9509MGY-LR

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	LSF BACK REST
В		1 PC	LSF SEAT

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

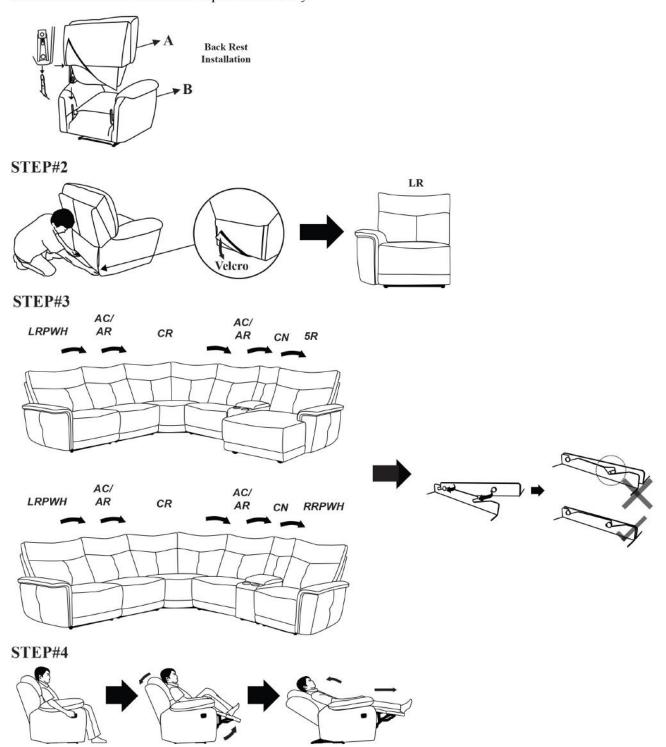

CARE INSTRUCTION FOR POLYESTER:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.


Assembly Instruction CONSOLE WITH STAINLESS STEEL CUPHOLDERS

ITEM NO.: 9509MGY-CN

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	CONSOLE

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

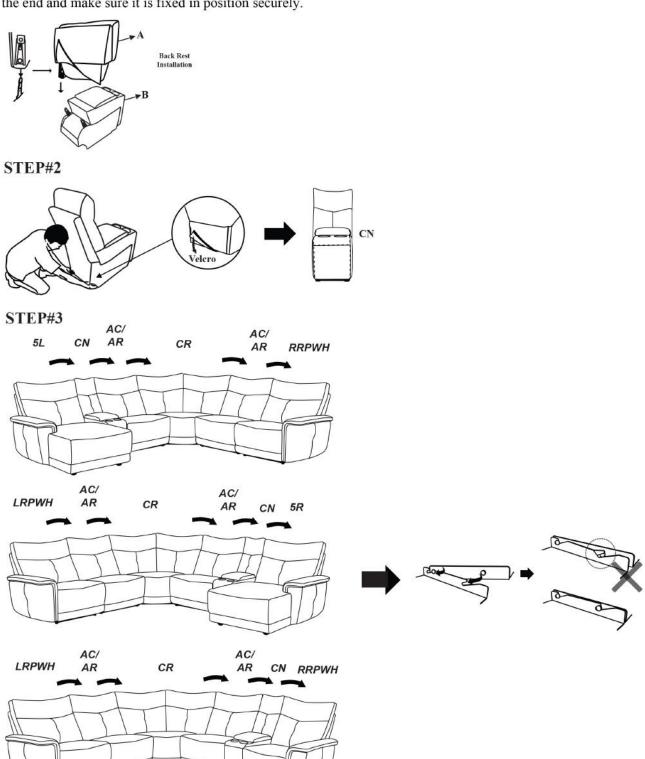

CARE INSTRUCTION FOR POLYESTER


- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.

Assembly Instruction ARMLESS CHAIR ITEM NO.: 9509MGY-AC

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	SEAT

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

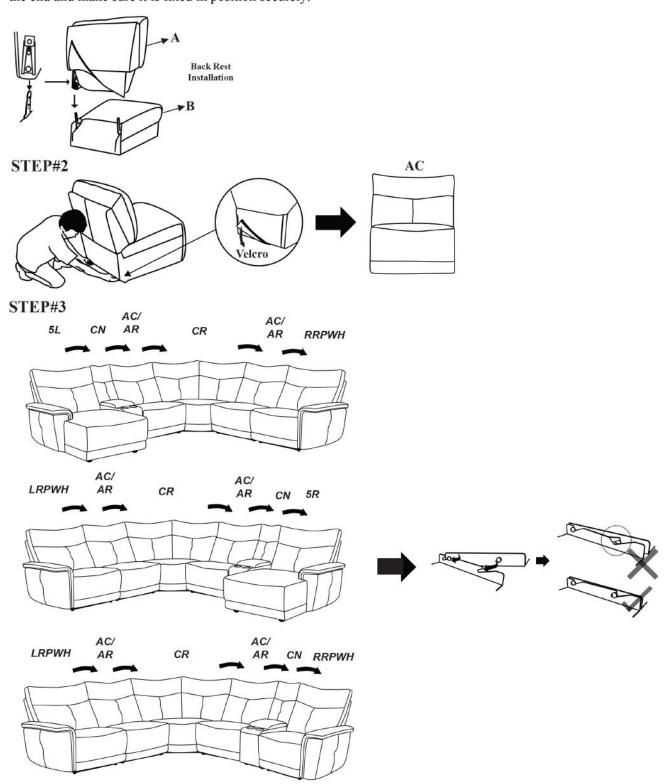

CARE INSTRUCTION FOR POLYESTER:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.

Assembly Instruction

CORNER SEAT ITEM NO.: 9509MGY-CR


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

COMPONENT LIST (CHAIR)

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	LSF CORNER BACK REST
В		1 PC	RSF CORNER BACK REST
C		1 PC	CORNER SEAT


HARDWARE LIST

NO.	DRAWING	QTY	DESCRIPTION
1		1 PC	EXTENSION CORD
2	1	1 PC	WRENCH
3		1 PC	ALLEN KEY

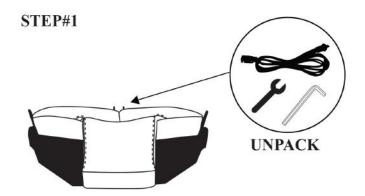





STEP#3

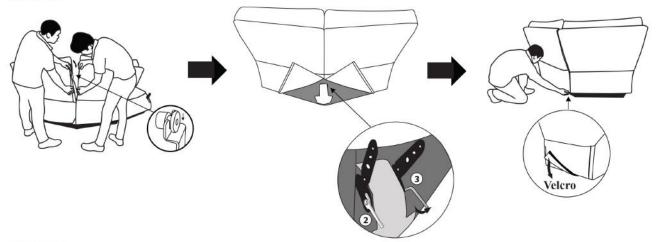


STEP#4

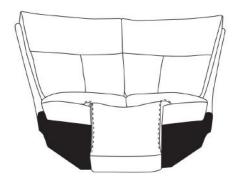




REMARK:

*Adaptor set is packed in 5L for sectional combination with RRPWH.




REMARK:

*Adaptor set and Y cable are packed in LRPWH for sectional combination with RRPWH.

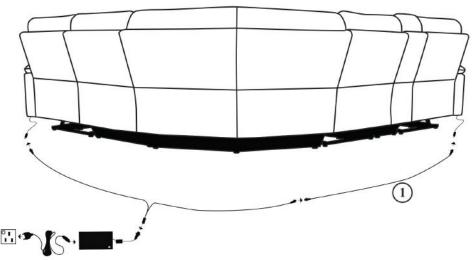

STEP#6

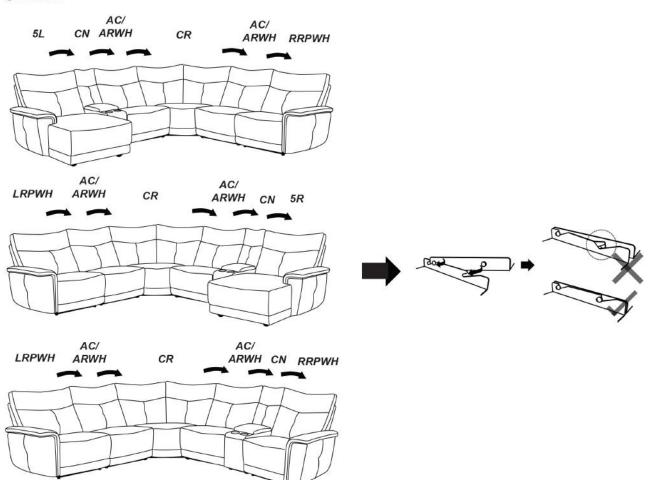

CARE INSTRUCTION FOR POLYESTER:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.


Assembly Instruction


ARMLESS RECLINING CHAIR ITEM NO.: 9509MGY-AR

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.


NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	SEAT WITH WIRE

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

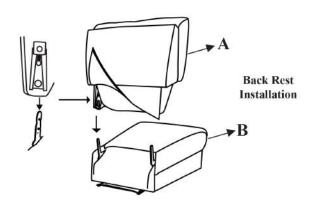

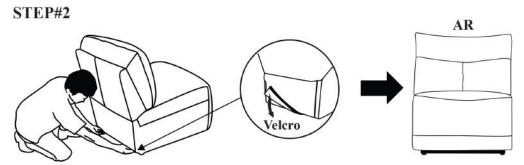

STEP#3

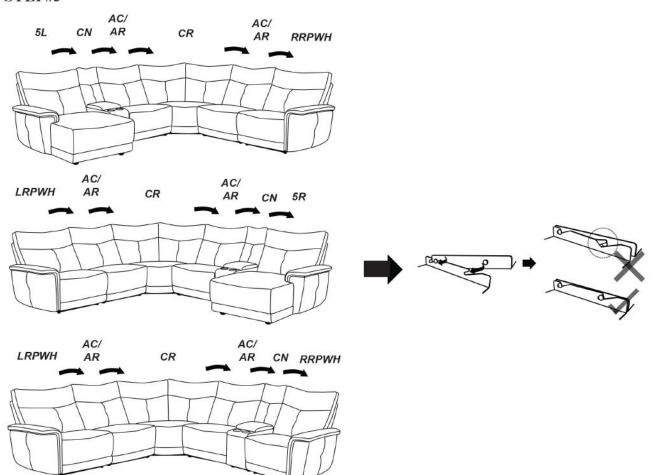



CARE INSTRUCTION FOR POLYESTER:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.


Assembly Instruction RSF CHAISE

ITEM NO.: 9509MGY-5R


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	SEAT

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

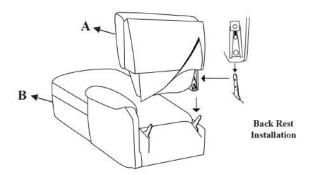

STEP#2

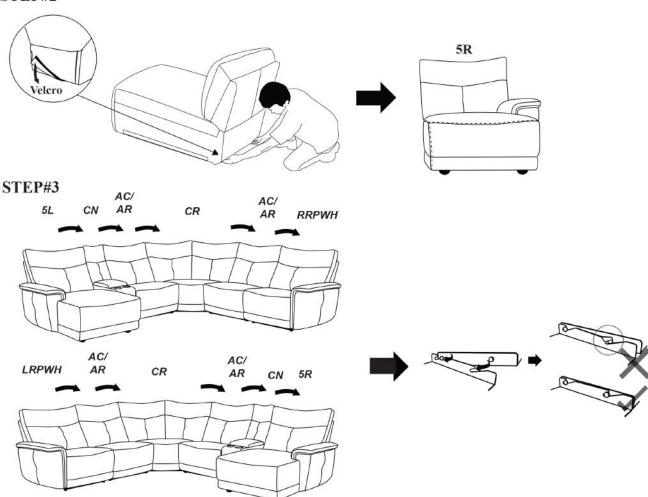

CARE INSTRUCTION FOR POLYESTER:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.