## Assembly Instruction Sheet #IS-1103P5-1 For Style 1103P5-1


raquired: Fished corewither, Philips sorewither, place, who culture, who shippers, electrical tops, safety glasses. Source: (1) 120V LED '2W DAMAASLE (4000K) wiled Assembly Time: 15-50 minutes

nated Assembly Time: 15-30 minutes unation: identify and inspect of parts before beginning installation. Check package content let and diagrams below to be sure of parts are nf. If any parts are missing or damaged, do not attempt to assemble, install, or operate the ficture. Contact customer service for replacement

## **▲Warnings and Cautions**

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal

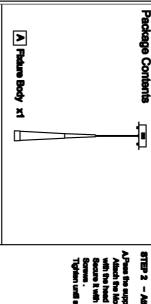

Hardware Contents

A.Pass the supply wires through the Mounting bracket (EE) tach the Mounting bracket (EE) to the Outlet Box Attach Mounting bracket to Outlet Box en Ground Screw facing you.

Supply Wires with
Outlet Box Screws Ground Wire Figure 2 **Juffet Box** 8

Fgus 4

A. Fit the bacipiate to Mounting Screws (DD) and secure with Decorative Cape (AA). Note: The baciplate should STEP 3 — Fit Backplate to Mounting bracket Assembly ng Screwe (DD) by (DD) in or out of the Decorative Cape (AA). B

A. Line up a set of holes on the and Hex Nuts to Mounting bracket STEP 1 — Attach Mounting Screws, Lock Washers nting bracket (EE). Page Lock there and thread Hex the holes on the id Mounting Screws (DD) (IEE) and Holes 11111 ng Canopy Ä ġ Mounting braclet (EE) until the correct length is achieved.
Once the Ceiling Canopy is accure, remove the en screwing Mounting nd Lock Weeher and

riand tighten until anug

and Calling Canopy and proceed to Step 4


Figure 3


Figure 1

ecorative Cape (AA) Ceiling Canop ⋛

A. Use standard who convendure to make all wire convendure. Twint convendure until whose are tightly joined together Whap each convendure with approved electrical tape and constudy staff all the convended whose into the Outlet Box.

STEP 4 - Wire Core



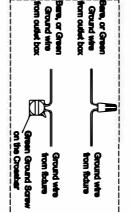

ACtivality tuck all whee into the culiet box and position the Calling Canopy of the Phaire Body (A) over the culiet box. Align the holes in the Calling Caropy with the Mounting Screws (DD).

Secure with Decurative Cape (AA) and hand fighten unit anug.

STEP 8 — Install Calling Canopy to Calling

